

HD5210





# **Contents**

1	Important	4
	Electromagnetic fields (EMF)	5
2	Your Rice cooker	6
	What's in the box	6
	Product overview	7
	Controls overview	8
	Supplementary guides: Tips for film	9
3	Using your rice cooker	10
	Before first use	10
	Cooking program	10
	Preparations before cooking	11
	Cooking rice	13
	Congee, Multigrain congee, Soup	14
	Reheat	14
	Steaming food	15
	Adjust the cooking time	16
	Adjust the preset time	16
4	Cleaning and Maintenance	17
	Inner lid	17
	Steam box	18
	Interior	19
	Exterior	19
	Accessories and inner pot	19
5	Recycling	19
6	Warranty and support	19
7	Specifications	20

8	Troubleshooting	21
_		
9	Protection code explanation	22

# 1 Important

Read this safety leaflet carefully before you use the appliance and save it for future reference.

#### Danger

• The appliance must not be immersed.

#### Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- Before using the appliance, please ensure that the surface is free of water and sufficiently dry.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Only connect the appliance to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.

- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- During and immediately after use, the steam valve, the liquid inside the valve, and the steam may be at high temperatures. Do not disassemble the steam valve during this period to avoid the risk of scald from the high temperature.

#### Caution

- Do not use any accessories or parts produced by other manufacturers or those not specifically recommended by Philips.
   Using such accessories or parts will void your warranty.
- Do not expose the appliance to high temperatures, and do not place the rice cooker on a working or still hot stove or hot appliance.
- Do not expose the appliance directly to sunlight.
- Place the appliance on a stable, level, and flat surface.
- Make sure to place the inner pot inside the appliance before plugging the power cord into the socket and turning it on.
- The inner lid of the top lid is not intended to contact with acidic foods pH<5.0 such as sauerkraut, pickles, jam, jellies, tomatoes, vinegar, lime or lemon, sour plum and coke.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Please be especially careful when handling the appliance.
- Do not cover the steam vent with a cloth while the appliance is in operation.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.

- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- The appliance should be cleaned after each use. For detailed cleaning instructions, please refer to "Cleaning and Maintenance." Do not wash the appliance in a dishwasher.
- When cleaning the inner pot, do not use abrasive cleaning tools such as scouring pads or steel wool to avoid damaging the pot's coating.
- If the appliance is not going to be used for an extended period, make sure to unplug it.
- When moving the appliance, make sure to hold it securely to prevent it from falling and causing injury.
- After opening the lid, do not touch the inner pot directly with your hands. Be careful to avoid burns from the high temperature.
- Do not open the lid while cooking to avoid scald from the high temperature.
- The operating altitude range of the appliance is 0 2000 meters.
- Improper use of the product or failure to follow the instructions in this user manual will void the warranty. Philips will not be responsible for any damage under such circumstances.

Visit https://www.philips.com to download the user manual.

# **Electromagnetic fields (EMF)**

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

### 2 Your Rice cooker

Congratulations on your purchase, and welcome to Philips!


To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### What's in the box

Main unit Inner Pot
Rice ladle Soup ladle
Measuring cup Power cord
Steaming basket Quick start guide




# **Product overview**

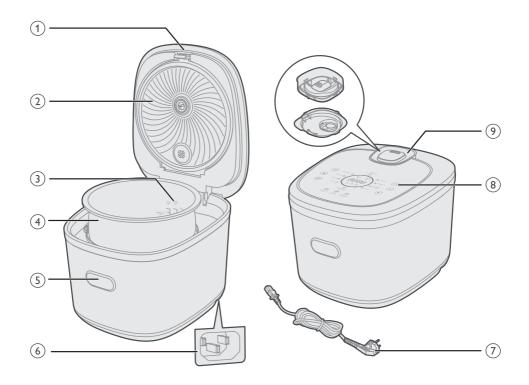


1	Top lid	6	Power socket
2	Detachable inner lid	7	Power plug
3	Water level indication	8	Control panel
4	Inner pot	9	Steam box
(5)	Lid open button		

# **Controls overview**

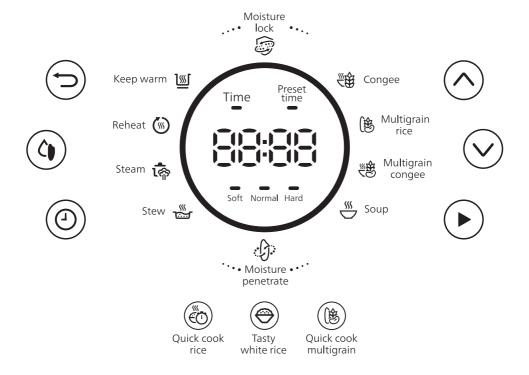

$\odot$	Cancel button	<b>(B)</b>	Quick cook multigrain button
<b>(4)</b>	Rice hardness selection button	Soft Normal Hard	Rice hardness indicator
<b>(</b>	Timer/preset timer button	•	Confirmation button
	Quick cook rice button	$\bigcirc$	Menu selection button
<b>(a)</b>	Tasty white rice button	$\Diamond$	Menu selection button

# Supplementary guides: Tips for film

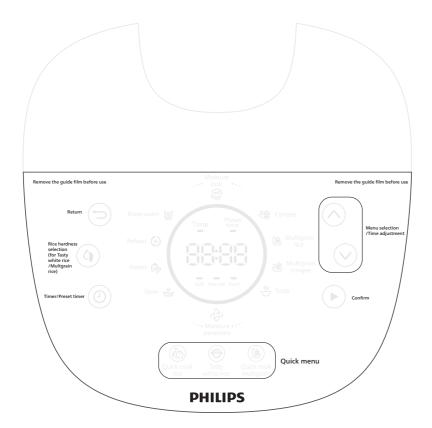

Note: Please remove the guide film before use.

# 3 Using your rice cooker

### Before first use

- 1 Remove all packaging materials from the appliance.
- 2 Take out all the accessories from the inner pot.
- 3 Clean the parts of the rice cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").



#### Note

- Make sure all parts are completely dry before you start using the rice cooker.
- Make sure the inner pot is in proper contact with the heating element.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the inside of the appliance.

## **Cooking program**

Cooking function	Default cooking time	Adjustable cooking time	Preset time	Rice hardness
Quick cook rice	25 minutes	NA	1-24 hours	NA
	50 minutes	NA	1-24 hours	Soft
Tasty white rice	45 minutes	NA	1-24 hours	Normal
	40 minutes	NA	1-24 hours	Hard
Quick cook multigrain	40 minutes	NA	1.5-24 hours	NA
Congee	60 minutes	1-2 hours	Preset cooking time-24 hours	NA
	65 minutes	NA	1.5-24 hours	Soft
Multigrain rice	60 minutes	NA	1.5-24 hours	Normal
	55 minutes	NA	1.5-24 hours	Hard
Multigrain congee	70 minutes	70 minutes-4 hours	Preset cooking time-24 hours	NA
Soup	2 hours	1.5-4 hours	Preset cooking time-24 hours	NA
Reheat	25 minutes	NA	NA	NA
Steam	30 minutes	1-60 minutes	1.5-24 hours	NA
Stew	2 hours	1-4 hours	NA	NA
Keep warm	2 hours	1 minute-12 hours	NA	NA



#### Note

- Default display time: this is the cooking time that appears on the screen when a specific mode is selected.
- Actual cooking times may vary based on factors such as the environment, type of rice, and water volume.
- The cooking time for the Quick cook rice may differ due to environmental conditions, rice type, and water volume. The actual completion time will be determined by when the machine finishes cooking.
- For cooking menus that allow time adjustments, the cooking time is saved once cooking begins. Similarly, for menus with a preset time feature, the cooking time is retained after cooking starts.
   Additionally, for menus that let you adjust rice hardness, the selected hardness level is remembered once cooking begins.
- Once cooking starts, the cooking menu has a memory function. If the appliance is powered off and then back on, it will revert to the last selected default menu.

# Preparations before cooking



### Warning

- Make sure that the detachable inner lid is properly installed.
- Make sure all parts are completed dry beofore use.



#### Note

- When you open the lid during cooking (especially if adding a large amount of water), close it slowly or wait 1-2 minutes to allow the internal steam to dissipate and the air pressure to decrease before securing the lid. This helps prevent liquid from the inner pot from splattering out of the steam vent.
- This appliance is designed for use at altitudes below 2000 meters.
- When cooking rice, please refer to the water level indications inside the inner pot. You can adjust the water level based on the type of rice and your personal preference, but do not exceed the maximum amount indicated.
- Once cooking begins, you can press the 
   button once within 30 seconds to stop the current process and return to the menu selection. If cooking has been underway for more than 30 seconds, press the 
   button twice within 3 seconds to terminate the process and return to the menu.
- After the rice cooker is powered on, it will enter standby mode if there is no activity for 5 minutes. You can press any button to wake it up and return to the menu selection.
- In the menu selection display, the selected menus are fully illuminated, while the unselected menus are dimly lit.

Before using the rice cooker to cook food, follow below preparation steps:

Measure the rice using the measuring cup provided.



Wash the rice thoroughly.



- Put the pre-washed rice in the inner pot.
- 4 Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface. For example, if you are cooking 4 cups of raw rice, add water up to the mark of "4".



Press the lid release button to open the lid.



Wipe the outside of the inner pot dry, then put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.



Close the lid of the rice cooker, put the plug in the power socket.







- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

## Cooking rice

You can use the below menus for cooking rice: Quick cook rice ( ♠ ), Taste white rice ( ♠ ), Quick cook multigrain () () and Multigrain rice () ().

- Follow the steps in "Preparations before cooking".
- Press the Quick menu (Quick cook rice, Tasty white rice, or Quick cook multigrain) buttons or press ⊘/⊘ button to choose a cooking function.



For Tasty white rice or Multigrain rice function, you can press (a) button to choose the hardness of the rice, there are three hardness available: **Soft**. **Normal** and **Hard**.



- Press the button to confirm, the rice cooker starts working in the selected mode.
  - → The remaining cooking time is displayed on the screen in a countdown format.
  - → The screen displays a dynamic circle.



- When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( @ ) lights up dynamically.
  - → The circle dispaly on the panel lights up.





#### Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- Do not open the lid right after the rice cooker enters the keep-warm mode and ensure that rice is in keep-warm mode for 15 minutes if you cook much rice.
- After cooking, please unplug the rice cooker from the electrical outlet.
- The keep warm time can last for up to 12 hours.

# Congee, Multigrain congee, Soup

You can use the below menus for cooking congee: Congee (電), Multigrain congee (電), and use Soup ( $\stackrel{\text{\tiny{M}}}{\smile}$ ) menu for cooking soup. For detailed time regulation range, please refer to the "Cooking program" section.

- Follow the steps in "Preparations before cooking".
- 2 Press ⊘/ ♠ button to choose the desired function



- Press the button to confirm, the Rice cooker starts working in the selected mode.
  - → The remaining cooking time is displayed on the screen in a countdown format
- 4 The screen displays a dynamic circle.



- When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( 🎯 ) lights up dvnamicallv.
  - → The circle dispaly on the panel lights up.





#### Note

- Select the appropriate function for cooking porridge, soup, or stew to prevent overflow, which could pose a safety hazard.
- Do not exceed the recommended amount or maximum water level, as this may lead to spills.
- After cooking, please unplug the rice cooker from the electrical outlet

### Reheat

- Use the **Reheat** function to reheat rice.
- 2 Loosen the cooled food and evenly distribute it in the inner pot.
- 3 Pour some water onto the food to prevent it from becoming too dry. The quantity of the water depends on the amount of food.
- Press ⊘/ ∧ button to choose **Reheat ( ( ( ( ( ) )**.



5 Press the 
 button to confirm, the Rice cooker starts working in the selected mode.



- 6 When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( ) lights up dynamically.
  - → The circle dispaly on the panel lights up.



# Steaming food

1 Use the Steam function to steam foods. For time regulation range, please refer to the "Cooking program" section.



#### Note

- The default cooking time is 30 minutes.
- To avoid dry boiling, please add two scales of water to the inner pot.
- 2 Pour the water into the inner pot.
- 3 Put the steam basket into the inner pot.
- 4 Put the food into the steam basket.
- 5 Follow the steps in "Preparations before cooking".
- 6 Press ⊘/⊘ button to choose **Steam (**♠).



- 7 Press the 

  button to confirm, the Rice cooker starts working in the selected mode.
  - → The remaining cooking time is displayed on the screen in a countdown format.
  - → The screen displays a dynamic circle.



- 8 When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( ) lights up dynamically.
  - → The circle dispaly on the panel lights up.



## Adjust the cooking time

You can set the cooking time for some menus including Congee ( ), Multigrain congee  $( \ \otimes \ )$ , Soup  $( \ \overset{\ \ \smile}{\smile} \ )$ , Stew  $( \ \overset{\ \ \smile}{\smile} \ )$  and keep warm ( w ) only. For time regulation range, please refer to the "Cooking program" section.

- After you choose a desired function, press the 🕘 button repeatedly until the time indicator displays on the screen.
  - → The cooking time blinks.



2 Press ⊘/ ♦ button to set the time.



Press the • button to confirm, the Rice cooker starts working in the selected mode.



- When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( ⓐ ) lights up dvnamically.
  - → The circle dispaly on the panel lights up.

## Adjust the preset time



#### Note

- The preset time refers to when the cooking will be completed. For example, if you set the cooker to finish at 6:00 PM, the preset time is 6 hours if you start at 12:00 noon.
- The preset time must be equal to or longer than the cooking time. If they are equal, cooking process will begin immediately.
- The Stew ( ), Reheat ( ), and keep warm ( w )functions cannot be reserved.
- You can set cooking preset time for certain menus, with a maximum time of up to 24 hours
- Follow the steps in "Preparations before cooking".
- Press ⊘/⊘ button to choose a desired function, press the (4) button repeatedly until the **Preset time** indicator displays on the screen.
  - → The cooking time blinks.



Press ⊘/ ♦ button to set the delayed cooking time.



Press the • button to confirm. The rice cooker will begin the countdown, and once it's finished, the cooking process will start immediately.



- When the cooking is finished, the rice cooker beeps and switches to the keep warm mode automatically.
  - → Moisture lock indicator ( ⓐ ) lights up dynamically.
  - → The circle dispaly on the panel lights up.

#### 4 Cleaning and Maintenance



#### Note

- Unplug the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down. sufficiently before cleaning it.
- When cleaning, do not merge the entire appliance in water, and avoid using harsh detergents or abrasive brushes.

### Inner lid

Pull the inner lid out outwards to remove it from the top lid for cleaning.



- Soak in hot water and clean with sponge.
- Make sure to remove all the food residues stuck to the Rice cooker.
- Re-install the inner lid back to the top lid.
- Soak in hot water and clean with a soft sponge brush.
- Ensure that any food residue stuck to the rice cooker is thoroughly removed.
- After cleaning, wipe off any water droplets from the outer surface of the inner lid. Align the detachable inner lid with the center opening and reassemble it.

Avoid pulling on the inner lid ring pad. At the end of each cooking session, or after using seasonings (such as for stew or steaming), wash and rinse the inner cover promptly to prevent odors and rust.




### Steam box

Disassemble the steam box from the top lid.




Follow the below illustration to disassemble the steam box for cleaning.

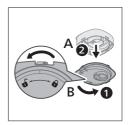




Soak all parts in water and clean with sponge. Make sure no food residue is left.



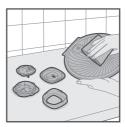

 Reassemble all the put the steam box to the inner lid after cleaning is completed.

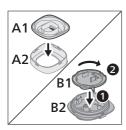



### Interior

Inside of the outer lid and the main body and the heating element:

- Wipe with damp cloth.
- Make sure to remove all the food residues stuck to the rice cooker

### **Exterior**

Surface of the outer lid and outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.

# Accessories and inner pot

Rice&soup ladle, steam basket and inner pot.

Soak in hot water and clean with sponge.

# 5 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health

# 6 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website

www.philips.com/support.

# 7 Specifications

Model Number	HD5210
Rated capacity	4.0L
Rice capacity	1.8L



### Note

• Unplug the rice cooker if not used for a long time.

# 8 Troubleshooting

If you encounter problems when using this appliance, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The lights on the buttons does not go on.	<ul> <li>There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.</li> <li>The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.</li> </ul>
The rice is too soft, too hard, or undercooked.	<ul> <li>If the appliance is placed on an unstable or slanted surface, the cooked rice may be too hard or too soft, as the water level may be uneven.</li> <li>The texture of the rice may vary depending on the brand, origin, and storage time of the rice (new or old rice).</li> <li>The texture of the rice may vary depending on the room temperature and water temperature.</li> <li>Check if the inner pot has become deformed.</li> <li>When adding water according to the water level markings in the inner pot, adjust the amount of water based on the type and quality of the rice. The water level markings are for reference only.</li> <li>Make sure that there are no foreign objects attached to the inside of the product or the outside of the inner pot before starting the product.</li> </ul>
The rice is scorched.	<ul> <li>Check if there is any food residue inside the product or on the outside of the inner pot. Remove any remaining food.</li> <li>The rice has not been rinsed properly. Please rinse the rice until the water runs clear.</li> <li>Check if the inner pot is deformed.</li> </ul>
Water spills out of the rice cooker during cooking.	<ul> <li>Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.</li> <li>Make sure the water does not exceed the maximum level on the scale, as this may cause the appliance to overflow during cooking.</li> </ul>
The display screen is not functioning.	The rice cooker is not connected to the power source.
Rice smells bad after cooking.	<ul> <li>Clean the inner pot with some washing detergent and warm water.</li> <li>After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.</li> </ul>
An error message (such as E1, E2, etc.) is displayed.	The product's sensor has malfunctioned. Please take the product to a Philips dealer or an authorized Philips service center.

# 9 Protection code explanation

If the following protection codes appear during normal use of a Philips product, customers can refer to the explanations below for troubleshooting. You may also call Philips customer service, and the aftersales team will provide professional service and assistance.

Kind reminder. These protection mechanisms are designed to prevent damage to the product from abnormal usage conditions, and are not indicative of a quality issue with the product.

Protection code	Protection details	Response methods
C2	Incorrect placement of the inner pot protection, recoverable.	First, disconnect the power, then check if the inner pot is properly placed. Reconnect the power. If the protection code C2 does not appear, you can continue using the product as usual. If the protection code C2 still appears, please call Philips customer service, and the after-sales team will provide professional service and assistance.
C1	Overheating protection of the electronic control mainboard (IGBT), recoverable.	Check if the air inlet and exhaust vents are blocked, ensure the airflow is unobstructed, and verify that the fan is rotating smoothly. Then, unplug and plug the product back in. If the protection code C1 does not appear, you can continue using the product as usual. If the protection code C1 still appears, please call Philips customer service, and the after-sales team will provide professional service and assistance.
EH	Overvoltage protection for input power supply, recoverable.	Please ensure that the power supply voltage is stable. Use the product only after the voltage is stable. If the issue persists despite the power supply voltage being stable, please call Philips customer service, and the after-sales team will provide professional service and assistance.
EL	Low input power supply voltage protection, recoverable.	Please ensure that the power supply voltage is stable. Use the product only after the voltage is stable. If the issue persists despite the power supply voltage being stable, please call Philips customer service, and the after-sales team will provide professional service and assistance.

# 目錄

1	重要事項	24
	電磁場 (EMF)	24
2	您的電飯煲	25
	包裝盒內容	25
	產品概要	26
	控制按鈕概覽	27
	補充指引:保護膜小貼士	28
3	使用電飯煲	29
	首次使用前	29
	烹調程序	29
	烹調前準備	30
	煲飯	31
	粥、雜糧粥、湯	32
	翻熱	32
	蒸煮食物	33
	調整烹調時間	34
	調整預設時間	34
4	清潔及保養	35
	內上蓋	35
	蒸汽盒	35
	內部	36
	外觀	36
	配件及內鍋	36
5	回收本產品	37
6	保養及支援	37

7	產品規格	37
8	疑難排解	38
9	保護代碼解釋	39

# 1 重要事項

使用本產品前請仔細閱讀本安全單張,並保管以 作將來參考。

#### 危險事項

不可浸泡本產品。

#### 警告

- 本產品並不適合身體、感覺或心智能力低下 人士(包括兒童),或缺乏知識及經驗人士 使用,除非該人士已受其他負責其安全之人 十就使用本產品的監督或指導。
- 兒童應受監督以確保他們不會視本產品為 玩具。
- 本產品應置於固定位置,把手應移至合適方 向(如有),以防止灼熱液體濺出。
- 此產品適用於家居及類似的場所,譬如:
  - 店鋪、辦公室和其他工作環境的員工 廚房;
  - 農舍;
  - 於酒店、汽車旅館及其它居所;
  - 民宿等環境下。
- 如電線損壞,必須以生產商提供的電線更換。
- 本電器不得以外部計時器或其他遙控系統 操作使用。
- 在連接本產品前,請檢查產品註明的指示電 壓與當地電源電壓是否對應。
- 僅將電飯煲連接上接地的電源插座。務必確保插頭已穩固插入電源插座。
- 如插頭、電源線、內鍋、密封圈或機身受損,切勿使用本產品。
- 請勿讓電源線懸掛於放置在本產品的桌面或 工作檯邊緣。
- 將插頭插入電源插座前,確保加熱元件、溫度感應器及內鍋外部清潔乾爽。
- 請勿用濕手插入本產品的電源,或按下控制 面板的任何按鈕。
- 在使用期間和使用後,蒸氣閥、閥門內的液體及蒸氣可會達至高溫。此期間請勿拆除蒸氣閥,以免被高溫燙傷。

#### 注意

- 請勿使用來自其他製造商生產或非 Philips 特別推薦的任何配件或部件。使用此類配件 或部件將使本產品保養失效。
- 請勿將本產品暴露於高溫之中,也不要將 電飯煲放置於正在使用或仍然燙熱的爐具 或廚具上。
- 請勿將本產品直接暴露於陽光下。
- 將本產品放置在穩定、平滑且平坦的表面上。

- 將電線插入插座並開啟本產品前,請確保將 內鍋放入本產品中。
- 頂蓋的內蓋不得與pH<5.0的酸性食物接觸,例如德式酸菜、醃菜、果醬、啫喱、番茄、醋、青檸或檸檬、酸梅及可樂。</li>
- 請勿將內鍋直接放置在開放火源上煮飯。
- 如內鍋變形,則請勿使用。
- 產品運作期間,可接觸的表面或會變熱。處理本產品時請特別小心。
- 當本產品運作時,請勿用布遮蓋蒸氣通氣孔。
- 烹調期間,應留意蒸氣通氣孔噴出的熱蒸 氣;開蓋時,亦應留意本產品噴出的熱蒸 氣。將雙手及臉部遠離本產品,以免受蒸 氣燙傷。
- 產品運作時,請勿將其抬起或移動。
- 請勿超出內鍋內部註明的最高水位,以防止 液體溢出,避免發生危險事故。
- 烹調、保溫或翻熱米飯期間,請勿將廚具 放入鍋內。
- 僅使用隨附的廚具。避免使用尖銳的廚具。
- 為了避免刮花,不建議連同甲殼類或貝類烹調材料。烹調前取下硬殼。
- 請勿將金屬物件或異物插入蒸氣通氣孔。
- 請勿將磁性物質放在蓋上。請勿在磁性物質 附近使用本產品。
- 清潔或移動本產品之前,務必讓本產品冷卻下來。
- 每次使用本產品後都應清潔。詳細的清潔指 示請參閱「清潔與保養」。請勿使用洗碗碟 機清洗本產品。
- 清潔內鍋時,請勿使用百潔布或鋼絲刷等磨蝕性清潔工具,以免損壞鍋的塗層。
- 如果長時間不使用本產品,請務必拔掉插頭。
- 在搬動本產品時,請務必緊握,以防止本產品掉落並造成傷害。
- 打開蓋後,請勿用手直接觸摸內鍋。請小心 以避免高溫燙傷。
- 烹調時請勿打開蓋,以免高溫燙傷。
- 本產品的運作海拔範圍為 0-2000 米。
- 不當使用本產品或未遵照本用戶手冊的指示 將導致保養失效。就此類情況造成的任何損害,Philips 將不承擔責任。

訪問 https://www.philips.com 以下載用戶手冊。

### 電磁場 (EMF)

這款產品符合有關電磁場暴露的適用安全標準 及條例。

# 2 您的電飯煲

感謝您購買 Philips 產品,同時歡迎您來到 Philips 世界!

要享受 Philips 為您提供的全面支援,請在 www.Philips.com/welcome 網站註冊您的產品。

# 包裝盒內容


主機 飯勺 湯勺

量杯電源線

蒸架 快速入門指南




# 產品概要

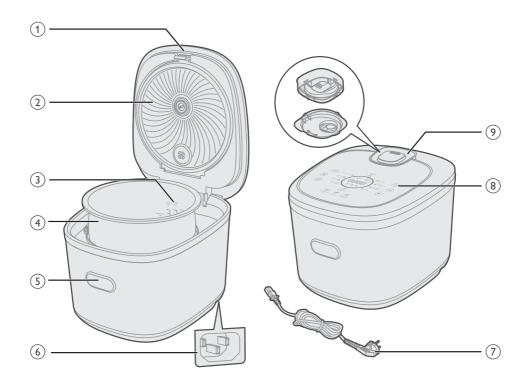


1	頂蓋	6	電源插座
2	分離式上蓋	7	電源插頭
3	水位顯示	8	控制面板
4	內鍋	9	蒸汽盒
5	開蓋按鈕		

# 控制按鈕概覽

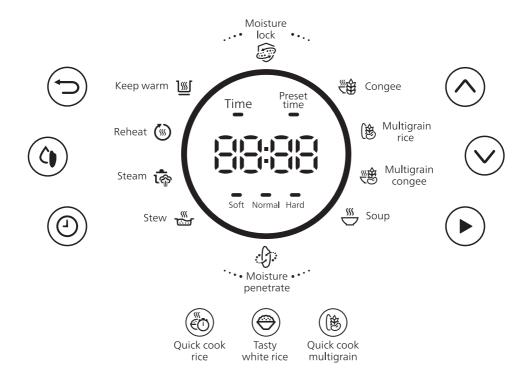

$\bigcirc$	取消按鈕	<b>(B)</b>	快速烹調多殼物按鈕
<b>(4)</b>	米飯硬度選擇按鈕	Soft Normal Hard	米飯硬度指示燈
<b>(2)</b>	定時功能/預設定時功能按鈕	•	確認按鈕
<b>6</b>	快速烹調米飯按鈕	$\bigcirc$	菜單選擇按鈕
<b>(a)</b>	美味白米飯按鈕	$\bigcirc$	菜單選擇按鈕

# 補充指引:保護膜小貼士

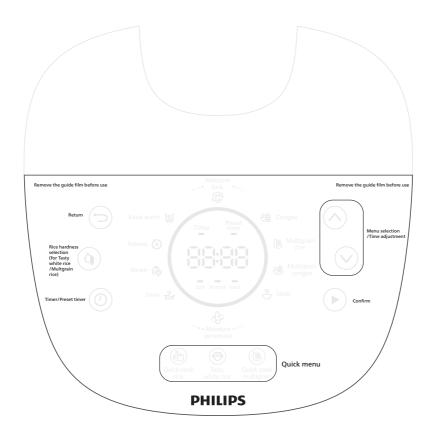

注意:使用前請移除保護膜。

# 3 使用電飯煲

### 首次使用前

- 1 除下產品的所有包裝。
- 2 從內鍋取出所有配件。
- 3 首次使用前,請徹底清潔電飯煲的各個部件(請參閱「清潔與保養」章節)。

## 備註

- 開始使用電飯煲前,確保所有部件完全乾透。
- 檢查內鍋與加熱元件適當接合。
- 確保內鍋外部乾爽清潔,產品內側沒有異物。

## 烹調程序

烹調功能	預設烹調時間	可調節的煮食時間	預設時間	米飯硬度
快速烹調米飯	25 分鐘	不適用	1-24 小時	不適用
	50 分鐘	不適用	1-24 小時	 柔軟
美味白米飯	45 分鐘	不適用	1-24 小時	—般
	40 分鐘	不適用	1-24 小時	硬
快速烹調多殼物	40 分鐘	不適用	1.5-24 小時	不適用
粥	60 分鐘	1-2 小時	預設烹調時間 -24 小時	不適用
	65 分鐘	不適用	1.5-24 小時	柔軟
多穀米	60 分鐘	不適用	1.5-24 小時	一般
	55 分鐘	不適用	1.5-24 小時	硬
雜糧粥	70 分鐘	70 分鐘 -4 小時	預設烹調時間 -24 小時	不適用
湯水	2 小時	1.5-4 小時	預設烹調時間 -24 小時	不適用
翻熱	25 分鐘	不適用	不適用	不適用
蒸氣	30 分鐘	1-60 分鐘	1.5-24 小時	不適用
燜煮	2 小時	1-4 小時	不適用	不適用
保溫	2 小時	1 分鐘 -12 小時	不適用	不適用

# 備註

- 預設顯示時間:選擇特定模式後,顯示器上 顯示的烹調時間。
- 實際烹調時間或因環境、米類和水量等因素 而有所不同。
- 快速烹調米飯的烹調時間或因環境條件、米類和水量等因素而有所不同。實際完成時間視乎機器完成烹調的時間而定。
- 如果烹調菜單可調整時間,一旦開始烹調, 裝置就會儲存烹調時間。同樣,對於支援 預設時間功能的菜單,烹調時間會在開始 烹調後儲存。此外,如果烹調菜單可調整 米飯硬度,一旦開始烹調,裝置就會記住 所選硬度。
- 開始烹調後,烹調菜單會啟用記憶功能。如果裝置關機後重新開啟,則會使用最後選擇的預設菜單。

### 烹調前準備

# 警告

- 確保分離式上蓋妥善安裝。
- 使用前,確保所有部件完全乾透。

# **一** 備註

- 在烹調期間打開蓋子後(尤其是加入大量清水時),請慢慢蓋上蓋子;或者等候1-2分鐘,讓內部蒸氣消散、氣壓降低後再蓋上蓋子。這有助防止內鍋中的液體濺出蒸氣通氣孔。
- 本產品設計適用於海拔 2000 米下的環境。
- 煮飯時,請參考內鍋內的水位顯示。您可根據米類和個人喜好調整水位,但不應超過指示的最高水位。
- 開始烹調後,您可以在30秒內按一下⑤按 鈕停止目前程序,並返回菜單選擇。如果烹 調程序已進行超過30秒,請在3秒內按兩下⑥按鈕,以終止程序並返回選單。
- 開啟電飯煲電源後,如果5分鐘內沒有操作,則會進入備用模式。您可以按下任何按鈕,以喚醒產品並返回菜單選擇。
- 在菜單選擇畫面,您選擇的菜單會完全亮 起,未有選擇的菜單則發出淡光。

使用電飯煲烹調食物前,請遵從以下準備步驟:

1 使用隨附的量杯量度米飯。



2 徹底洗米。



- 3 將事先洗好的米放入內鍋。
- 4 對應使用的杯數,將水加到內鍋刻度註明的水位。然後鋪平米的表面。例如,您要煮4杯生米,請加水至「4|水位線。



5 按下開蓋按鈕打開頂蓋。



6 查內鍋與加熱元件適當接合。



關上電飯煲蓋,將插頭插入電源插座。





## 備註

- 確保內鍋外部乾爽清潔,加熱元件上沒有 異物。
- 檢查內鍋與加熱元件適當接合。

# 煲飯

您可以使用以下菜單煮飯:快速烹調米飯(Ѿ)、 美味白米飯(♥)、快速烹調多殼物(腐)和多穀 米())。

1 遵照「烹調前準備」裡的步驟。

抹乾內鍋外部,然後將內鍋放入電飯煲。檢 **2** 按下快捷功能表(**快速烹調米飯、美味白米** 飯或快速烹調多殼物)按鈕,或按下 ⊘/△ 按鈕選擇烹調功能。



對於**美味白米飯**或**多穀米功能**,您可以按下 按鈕以選擇米飯的硬度,有三種硬度可 供選擇:柔軟、中等和硬)。



- 按下 按鈕進行確認,電飯煲會開始在所 選模式下運作。
  - → 剩餘烹調時間會以倒數形式顯示於螢 幕上。
  - → 螢幕會顯示一個動態圓圈。



- 5 烹調完畢後,電飯煲會發出嗶聲,並自動切換至保溫模式。
  - → **鎖住水分**指示燈(每)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。



### **一** 備註

- 請勿超出內鍋註明的最高水平,否則可能令 電飯煲溢出。
- 請勿在電飯煲進入保溫模式後立即打開頂蓋,如果您煮了很多飯,請確保米飯室在保溫模式中焗煮15分鐘。
- 烹調完畢後,請將電飯煲插頭從電源插座 拔出。
- 保溫時間可長達 12 小時。

### 粥、雜糧粥、湯

您可以使用以下菜單煲粥:粥(ು)及雜糧粥(戀); 並使用湯(苎)菜單煲湯。詳細的時間調節範圍可參閱「烹調程序」部分。

- 1 遵照「烹調前準備」裡的步驟。
- 2 按下 ∅/ ۉ 按鈕以選擇所需功能。



- 3 按下 ⊙ 按鈕進行確認,電飯煲會開始在所 選模式下運作。
  - → 剩餘烹調時間會以倒數形式顯示於螢 幕上。

4 螢幕會顯示一個動態圓圈。



- 5 烹調完畢後,電飯煲會發出嗶聲,並自動切換至保溫模式。
  - → **鎖住水分**指示燈(��)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。



### 備註

- 請選擇適當的功能來煲粥、煲湯或燉菜,以 防止液體溢出並產生安全風險。
- 食材不得超出建議份量或最高水位,否則可能會溢出。
- 烹調完畢後,請將電飯煲插頭從電源插座 拔出。

### 翻熱

- 1 使用翻熱功能翻熱米飯。
- 2 翻鬆冷的食物,均匀分佈在內鍋之中。
- 3 在食物上倒入一些水,以免食物變乾。水量 視平食物的總量而定。

4 按下 ∅/♠ 按鈕以選擇翻熱 (※)。



按下 • 按鈕進行確認,電飯煲會開始在所 選模式下運作。



- 6 烹調完畢後,電飯煲會發出嗶聲,並自動切 換至保溫模式。
  - → 鎖住水分指示燈(๑)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。



### 蒸煮食物

使用蒸煮功能蒸煮食物。時間調節範圍可參 閱「烹調程序」部分。



- 蒸煮的默認烹飪時間是30分鐘。
- 為防止乾燒,請向內鍋加入2刻度的水。

- 2 將水倒入內鍋。
- 3 將蒸架放入內鍋。
- 4 將食物放入蒸架。
- 5 遵照「烹調前準備」裡的步驟。
- 按下 ♡/ △ 按鈕以選擇蒸煮(♠)。



- 按下 🕑 按鈕進行確認,電飯煲會開始在所 選模式下運作。
  - → 剩餘烹調時間會以倒數形式顯示於螢 幕上。
  - → 螢幕會顯示一個動態圓圈。



- 烹調完畢後,電飯煲會發出嗶聲,並自動切 換至保溫模式。
  - → 鎖住水分指示燈(๑)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。



### 調整烹調時間

您可以設定部分菜單的烹調時間,僅支援 粥(铯)、雜糧粥(戀)、湯(亞)、燜燉(區)和 保溫(圖)。時間調節範圍可參閱「烹調程序」 部分。

- 1 選擇您需要的功能後,重複按下①按鈕直至時間指示燈顯示在螢幕上。
  - → 烹調時間將閃爍。



2 按下 ∅/ ۉ 按鈕以設定時間。



3 按下 ⊙ 按鈕進行確認,電飯煲會開始在所 選模式下運作。



- 4 烹調完畢後,電飯煲會發出嗶聲,並自動切換至保溫模式。
  - → **鎖住水分**指示燈(��)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。

### 調整預設時間

# =

#### 備註

- 預設時間指完成烹調的時間。例如,如果 您將電飯煲設定為下午6:00 完成烹調,並 由中午12:00 起開始烹調,則預設時間為 6 小時。
- 預設時間必須等於或長於烹調時間。如兩項時間相同,烹調程序會立即開始。
- 燜燉(≦)、翻熱(⑤)和保溫(☞)功能無法 預約進行。
- 您可以為部分菜單設定預設烹調時間,最長 為24小時。
- 遵照「烹調前準備」裡的步驟。
- 2 按下 ◎/◎ 按鈕來選擇您需要的功能,重 複按下 ② 按鈕直至預設時間指示燈顯示在 螢幕上。
  - → 烹調時間將閃爍。



3 按下 ∅/ ∅ 按鈕以設定延時烹調時間。



4 按下 ⊙ 按鈕進行確認。電飯煲會開始倒數, 倒數完畢後,烹調程序會立即開始。



- 烹調完畢後,電飯煲會發出嗶聲,並自動切 換至保溫模式。
  - → 鎖住水分指示燈(๑)會以動態方式 亮起。
  - → 面板上的圓形顯示會亮起。

#### 清潔及保養 4



#### 備註

- 開始清潔前,先拔除電飯煲的插頭。
- 等待電飯煲完全冷卻才清潔。
- 清潔時,切勿將整個產品浸入水中,並避免 使用刺激性洗滌劑或有磨料的刷子。


# 內卜蓋

拉出內上蓋,並從頂蓋將它移除進行 清潔。



- 放入熱水浸泡,用海綿清潔。
- 確保清除所有黏在電飯煲上的食物殘渣。
- 將內上蓋重新裝回頂蓋。
- 放入熱水浸泡,用軟海綿刷清潔。
- 確保徹底去除所有黏附在電飯煲上的食 物殘渣。

- 清潔完畢後,擦乾內上蓋表面的水滴。 對齊分離式內上蓋與中央開口並重新 組裝。
- 避免拉扯內上蓋環墊。每次烹調程序結 束或使用調味料(如燜燉或蒸煮)後, 應立即清洗並沖洗內上蓋,以防產生異 味及生鏽。

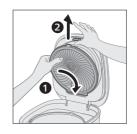


### 蒸汽盒

從頂蓋拆下蒸汽盒。




• 按照下圖拆卸蒸汽盒進行清潔。

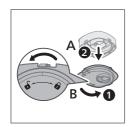




將所有部件浸入水中並用海綿清潔。確 保清除所有食物殘渣。



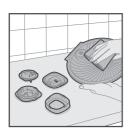

• 清潔完畢後,重新安裝所有部件,然後 將蒸汽盒裝回內上蓋。

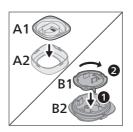



### 內部

外蓋的內部、主體及加熱元件。

- 請用濕布擦拭。
- 確保清除所有黏在電飯煲上的食物殘渣。

### 外觀

外蓋表面和機身外部:

- 用沾有皂水的濕布擦拭。
- 僅用乾透的軟布擦拭控制面板。

## 配件及內鍋

飯湯勺、蒸架及內鍋

• 放入熱水浸泡,用海綿清潔。

# 5 回收本產品

請勿在本產品使用壽命結束後當作一般家庭垃圾廢棄,應交給官方回收站作循環再用。這樣做有助保護 環境。

請遵守你所在國家/地區對電器和電子產品分類收集的法則。正確處理有助避免對環境和人體健康造成負面影響。

## 6 保養及支援

Versuni 為這款產品提供購買後兩年保養。此保養不適用於因不正確使用或維護不良而造成的損壞。我們的保養不會影響您作為消費者的法律權利。有關啟動保養的詳情,請瀏覽我們的網站:www.philips.com/support。

# 7 產品規格

型號	HD5210
標準容量	4.0L
米飯容量	1.8 公升



備註

• 若長時間不使用電飯煲,應拔除電源插頭。

#### 疑難排解 8

如果使用本產品時遇到任何問題,請在送往維修之前檢查下列事項。如果無法解決問題,請聯絡您所在 國家的 Philips 客戶服務中心。

問題	解決方案
按鈕的指示燈沒有亮起。	<ul> <li>連接有誤。檢查電源線已穩妥接上電飯煲,以及插頭已穩固插入電源插座。</li> <li>指示燈損壞。請攜帶本產品前往 Philips 經銷商或 Philips 認可的服務中心。</li> </ul>
飯太軟、太硬或未煮熟。	<ul> <li>如果將本產品放置在不穩定或傾斜的表面上時,煮熟的飯可能因為水位不均勻而太硬或太軟。</li> <li>飯的質地可能因米的品牌、產地和儲存時間(新米或舊米)而異。</li> <li>飯的質地可能會根據室溫和水溫而變化。</li> <li>檢查內鍋有否變形。</li> <li>依照內鍋的水位標記加水時,需根據米的種類和品質調整水量。水位標記僅供參考。</li> <li>開始使用本產品前,請確保本產品內部或內鍋外部沒有附著異物。</li> </ul>
米飯燒焦了。	<ul><li>檢查本產品內部或內鍋外部是否有食物殘渣。清除所有殘留的食物。</li><li>米沒有沖洗乾淨。請洗米直至水呈透明。</li><li>檢查內鍋有否變形。</li></ul>
烹調期間,水濺出電飯煲。	確保對應使用的杯數,將水加到內鍋刻度註明的水位。     確保水沒有超過刻度的最高水位,否則可能令本產品在烹調期間溢出水分。
米沒有沖洗乾淨。螢幕顯 示未能運作。	• 電飯煲沒有接上電源。
烹調後飯有異味。	<ul><li>用洗潔劑和溫水清潔內鍋。</li><li>烹調後,確保徹底清潔蒸氣通氣孔蓋、內蓋及內鍋。</li></ul>
顯示錯誤訊息(如 E1、E2 等)。	● 產品的感應器發生故障。請帶同產品前往 Philips 代理商或認可的 Philips 服務中心。

#### 保護代碼解釋 9

如果 Philips 產品在正常使用過程中出現以下保護代碼,顧客可參考以下的解釋以便進行疑難排解。您亦 可以致電 Philips 客戶服務,售後團隊將提供專業的服務和協助。

溫馨提示:這些保護機制是為了防止產品因異常使用條件而損壞,並不表示產品有品質問題。

保護代碼	保護詳情	回應方法
C2	內鍋放置不正確保 護,可恢復。	首先,中斷電源,然後檢查內鍋是否放置正確。重新連接電源。 如果沒有出現保護代碼 C2,您可以繼續照常使用本產品。如果仍 然顯示保護代碼 C2,請致電 Philips 客戶服務,售後團隊將提供 專業的服務和協助。
C1	電子控制主板 (IGBT) 過熱保護, 可恢復。	檢查進氣口和排氣口是否阻塞,確保氣流暢通無阻,以及風扇是 否順暢轉動。然後,拔下本產品電源插頭並重新插入。如果沒有 出現保護代碼 C1,您可以繼續照常使用產品。如果仍然顯示保 護代碼 C1,請致電 Philips 客戶服務,售後團隊將提供專業的服 務和協助。
EH	輸入功率過壓保 護,可恢復。	請確保電源電壓穩定。待電壓穩定後方可使用本產品。如果電源 電壓穩定後問題依然未解決,請致電 Philips 客戶服務,售後團隊 將提供專業的服務和協助。
E L	電源電壓輸入低保 護,可恢復。	請確保電源電壓穩定。待電壓穩定後方可使用本產品。如果電源電壓穩定後問題依然未解決,請致電 Philips 客戶服務,售後團隊將提供專業的服務和協助。

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2025 © Versuni Holding B.V.



