









EN User manual
KK Кондуктивный кулер

RU Руководство пользователя
UK Постройка користувача



© 2019 Koninklijke Philips N.V.
All rights reserved
HD2173_Russian_UM_v2.0

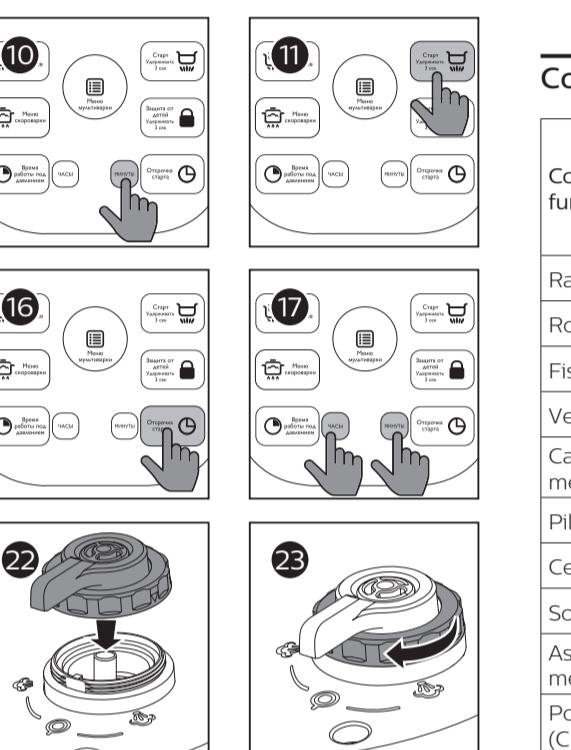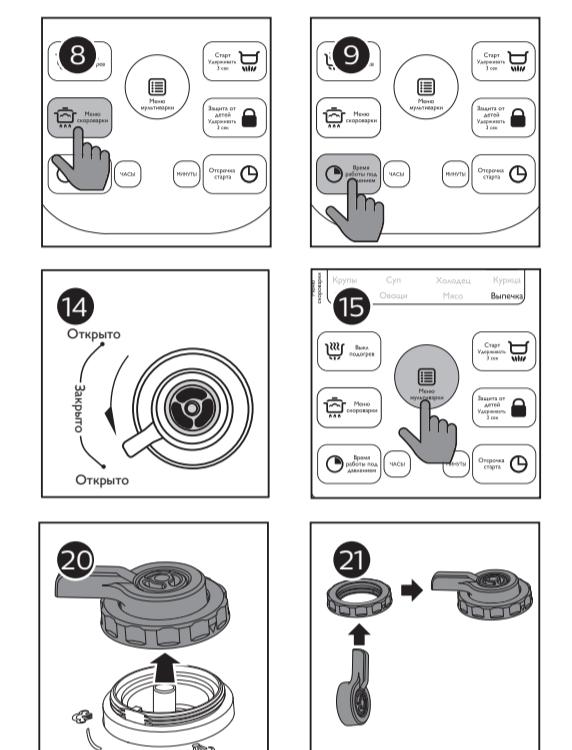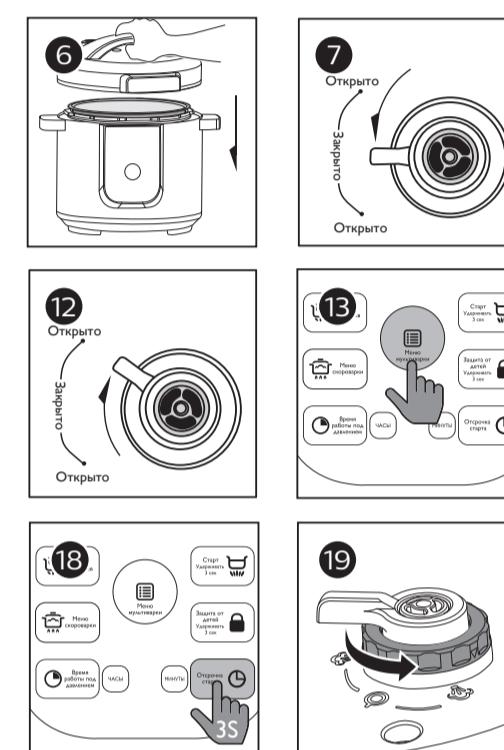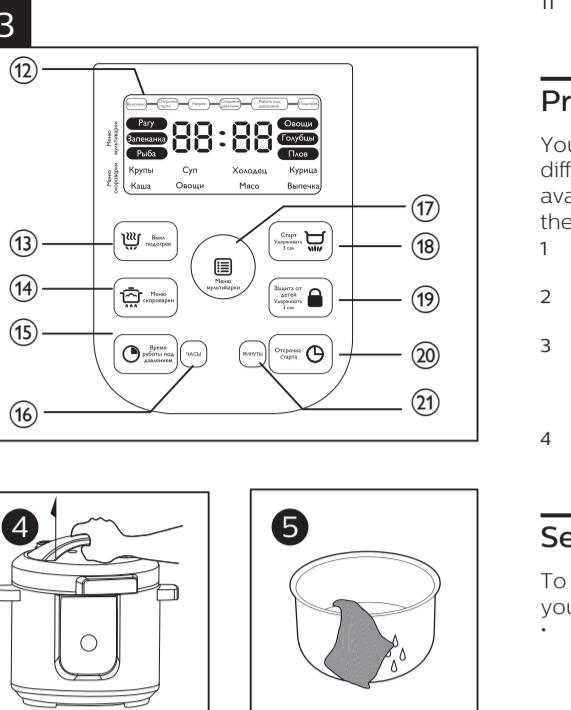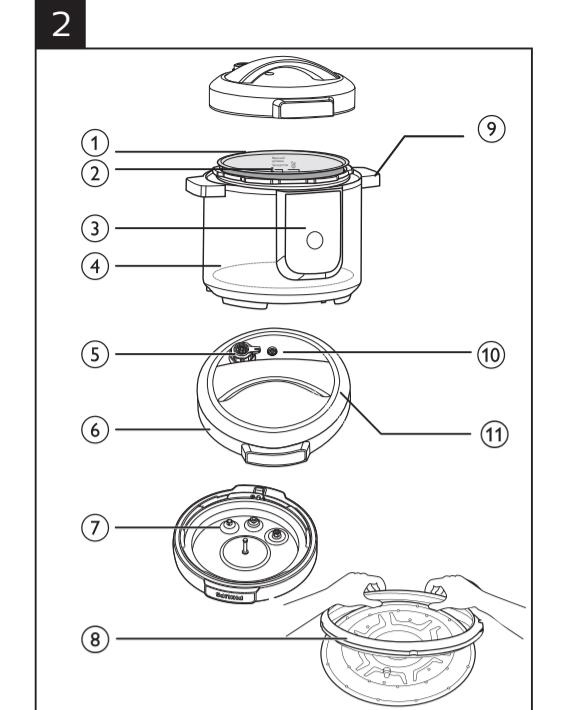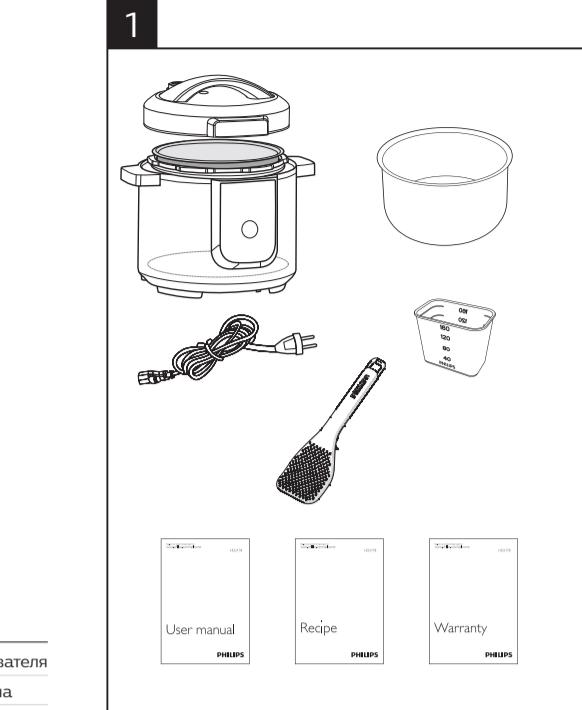

3 Using the electric pressure cooker

1 Your electric pressure cooker

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 What's in the box (fig. 1)

Electric pressure cooker main unit
Inner pot
Rice spoon
Measuring cup
Warranty card
Recipe

Overview (fig. 2)

① Inner pot	⑦ Safety valve
② Water level indication	⑧ Sealing ring
③ Control panel	⑨ Main unit handle
④ Heating element	⑩ Floating valve
⑤ Pressure regulator	⑪ Lid handle
⑥ Top lid	

Controls overview (fig. 3)

⑫ Display screen	⑯ Menu button (non-pressure cooking)
⑬ Warm/off button	⑰ Start button
⑭ Keep pressure time button	⑲ Child lock button
⑮ Hour button	⑳ Preset timer button
⑯ Minute button	㉑ Minute button

Before first use

- Remove all packaging materials from the inner pot.
- Take out all the accessories from the inner pot.
- Clean the parts of the electric pressure cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Note

- Make sure all parts are completely dry before you start using the electric pressure cooker.

Pressure cooking

Note

- Make sure the floater drops down before cooking.

- Follow the steps in "Preparations before cooking".
- Turn the pressure regulator to the seal position (fig. 7).
- Put the plug in the power socket.
- Press the **Меню мультиварки** button (☰) to choose a desired cooking mode by pressing the **Меню сковородки** button (☰) (fig. 13).
- The selected cooking mode indicator flashes.
- The default pressure keeping time is displayed on the screen.

Non-pressure cooking

- Follow the steps in "Preparations before cooking".
- Turn the pressure regulator to the seal position (fig. 12).
- Put the plug in the power socket.
- Press the **Меню сковородки** button (☰) to choose a desired non-pressure cooking function (fig. 13).
- The selected cooking mode indicator flashes.
- The default pressure keeping time is displayed on the screen.

11 Hold the top lid handle and turn the lid anti-clockwise until it cannot move any more, then lift it up (fig. 4).

Preset time for delayed cooking

You can preset the delayed cooking time for different cooking functions. The preset timer is available up to 24 hours, but is not applicable to the cake baking function.

- Choose the desired cooking mode, then press the preset timer button (⌚) (fig. 16).
- Press the hour button (Часы / Minutes) to choose the preset time (fig. 17).
- Once the preset time is set, press the start button (⟳) to enter preset mode (fig. 11).
- The remaining preset time is displayed on the screen.

4 When the preset time is elapsed, the electric pressure cooker starts working in the selected cooking mode automatically.

Setting up child lock

To protect your child from using the multicooker, you can set up the child lock function.

- Press and hold the **Защита от детей** button (🔒) for 3 seconds to enter the child lock mode (fig. 18).
- The child lock icon appears on the display screen.

- To unlock, press and hold the **Защита от детей** button (🔒) for 3 seconds again (fig. 18).
- The child lock icon disappears from the display screen.

Cooking time regulating range

Cooking function	Pressure keeping time	Default pressure keeping time (minute)	Cooking time (minute)
Ragout (Stew)	x	23	20-59
Roasting	x	18	18-59
Fish	x	15	15-59
Vegetables	x	3	1-59
Cabbage meatrolls	x	20	20-59
Pilaf	x	20	20-59
Cereals	✓	14	NA
Soup	✓	20	20-59
Aspic (gelly meat)	✓	30	20-59
Poultry (Chicken)	✓	30	25-59
Porridge	✓	13	1-59
Vegetables	✓	20	5-59
Meat	✓	30	30-59
Baking	✓	45	45-59

- If you want to set a different pressure keeping time, press the keep pressure time button (⌚) (fig. 9).
- The pressure keeping time flashes on the screen.

- Press the minute button (Min.) to set the minute (fig. 10).

- Press the **Справа** button (⌚) and the electric pressure cooker starts working in the selected mode (fig. 11).

- You will hear two beeps after you press the start button.

- When the cooking time has elapsed, you will hear two beeps and the electric pressure cooker switches to keep-warm mode automatically.

- The keep warm indicator lights up.

- Hold the top lid handle and turn the lid anti-clockwise until it cannot move any more, then lift it up (fig. 4).

- Wipe the outside of the inner pot dry (fig. 5) and put it back into the electric pressure cooker.

- Place the top lid onto the electric pressure cooker and turn it clockwise (fig. 6). You will hear a "click" sound when the top lid is properly locked.

Note

- Do not fill the inner pot with less than 1/3 or more than 2/3 full of food and liquid.
- For food that expands during cooking, do not fill the inner pot with more than 1/2 full of food and liquid.
- For rice cooking, follow the water level indications on the inside of the inner pot. You can adjust the water level for different types of rice and your own preference. Do not exceed the maximum water level indication.
- Make sure the floater falls down before cooking.

- Wipe the outside of the inner pot dry (fig. 5) and put it back into the electric pressure cooker.

- Place the top lid onto the electric pressure cooker and turn it clockwise (fig. 6). You will hear a "click" sound when the top lid is properly locked.

Note

- Make sure the sealing ring is properly assembled around the inside of the top lid.
- Make sure the pressure regulator and floating valve are clean and not blocked.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

Tip

- You can adjust the pressure keeping time for different types of food according to your preference.

Baking

You can cook food without adding water in the inner pot.

- Follow the steps in "Preparations before cooking".
- Turn the pressure regulator to the vent position (fig. 14).

- Put the plug in the power socket.

- Press the **Меню сковородки** button (☰) to choose a desired baking mode (fig. 15).

- The selected baking mode indicator flashes.

- The default baking time is displayed on the screen.

- If you want to set a different baking time, press the keep pressure time button (⌚) (fig. 9).

- The pressure keeping time flashes on the screen.

- Always unplug the appliance if not used for a longer period.

Pressure cooking

Note

- Make sure the floater drops down before cooking.

Non-pressure cooking

- Follow the steps in "Preparations before cooking".

- Turn the pressure regulator to the seal position (fig. 12).

- Put the plug in the power socket.

- Press the **Меню сковородки** button (☰) to choose a desired cooking mode by pressing the **Меню сковородки** button (☰) (fig. 13).

- The selected cooking mode indicator flashes.

- The default pressure keeping time is displayed on the screen.

- The pressure keeping time is displayed on the screen.

- The pressure keeping time is displayed on the screen.

11 Hold the top lid handle and turn the lid anti-clockwise until it cannot move any more, then lift it up (fig. 4).

Exterior

Surface of the outer lid and outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the pressure regulator and floating valve.

Pressure control valve and floating valve:

- Disassemble the pressure control valve, soak it in warm water, and clean with sponge.
- Remove food residues in the pressure control valve and floating valve with toothpicks.

Sealing ring:

- Soak in warm water and clean with sponge.

Accessories

Rice spoon, soup ladle, and inner pot:

- Soak in hot water and clean with sponge.

Setting up child lock

To protect your child from using the multicooker, you can set up the child lock function.

- Press and hold the **Защита от детей** button (🔒) for 3 seconds to enter the child lock mode (fig. 18).

- The child lock icon appears on the display screen.

- To unlock, press and hold the **Защита от детей** button (🔒) for 3 seconds again (fig. 18).

- The child lock icon disappears from the display screen.

Setting up child lock

To protect your child from using the multicooker, you can set up the child lock function.

- Press and hold the **Защита от детей** button (🔒) for 3 seconds to enter the child lock mode (fig. 18).

- The child lock icon appears on the display screen.

- To unlock, press and hold the **Защита от детей** button (🔒) for 3 seconds again (fig. 18).

- The child lock icon disappears from the display screen.

Setting up child lock

To protect your child from using the multicooker, you can set up the child lock function.

- Press and hold the **Защита от детей** button (🔒) for 3 seconds to enter the child lock mode (fig. 18).

- The child lock icon appears on the display screen.

- To unlock, press and hold the **Защита от детей** button (🔒) for 3 seconds again (fig. 18).

- The

