



EN	User manual
MS	Bahasa Malaysia

ZH-T 使用手册



PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product. 2023 © Versuni Holding B.V.

2220.301.7000.0 (17/08/2023)



English

1 Important

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- WARNING: Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.

Caution

- CAUTION: Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.

4 Overview

Product overview

A	Top lid	F	Control Panel
B	Detachable inner lid	G	Handle
C	Inner pot	H	Lid release button
D	Water level indications	I	Steam vent
E	Power socket	J	Steam valve

Controls overview

K	Choose menu button	N	Cooking time booking button
L	Cooking time button	O	Start/Cancel button
M	Time display		

- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- The operating altitude range of the appliance is 0-2000 meters.
- If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Power-failure memory function

This appliance features a power-failure memory function that save the status prior to the power loss.

- If a power outage occurs during cooking and power is restored within 2 hours, the cooking time countdown will resume from its previous point.
- If a power outage occurs while the product is in preset mode and power is restored within 2 hours, the preset time countdown will resume from its previous point.
- If power is not restored within 2 hours, the appliance may not resume its previous work process.


Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

2 Your Rice cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box

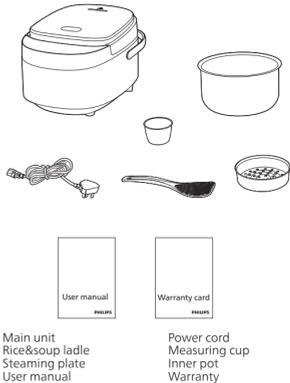

Main unit
Rice scoop
Ladle
Steaming plate
User manual

Power cord
Measuring cup
Inner pot
Warranty

Cooking programs

Cooking function	Default cooking time*	Adjustable time range
Fast cook	30 minutes**	N/A
White rice	50 minutes	N/A
Congee	90 minutes	1-2 hours
Soup	120 minutes	1.5-4 hours
Cake	50 minutes	N/A
Sticky rice	50 minutes	N/A
Steam	30 minutes	1minute-1 hour
Keep warm	0-12 hours	N/A

*The default cooking time refers to the default cooking time displayed on the screen when the corresponding function is selected. The appliance cannot adjust the cooking time manually. The actual cooking time may vary depending on the amount of ingredients used, amount of water used, the temperature of the water, and the cooking environment.
**The cooking time for the Fast cook function may vary depending on factors such as the amount of rice used, the quantity of water used, the temperature of the water, and the cooking environment. As a result, the cooking time will be adjusted, either increased or decreased.

5 Using your rice cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Before first use, boil water and clean the Rice cooker.
- Clean the parts of the Rice cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Notes

- Make sure all parts are completely dry before you start using the Rice cooker.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

Preparations before cooking


Warning

- Make sure the detachable inner lid and the steam valve are correctly installed.

Notes

- Make sure that the amount of food or liquid you add to the inner pot is within the range of the water level indication.
- For rice cooking, follow the water level indications on the inside of the inner pot. You can adjust the water level for different types of rice and to your own preference. Do not exceed the quantities indicated on the inside of the inner pot.
- After the cooking process starts, you can tap Start/Cancel to cancel the cooking, the rice cooker will go to standby mode.

Perform the following preparations before cooking with the rice cooker.

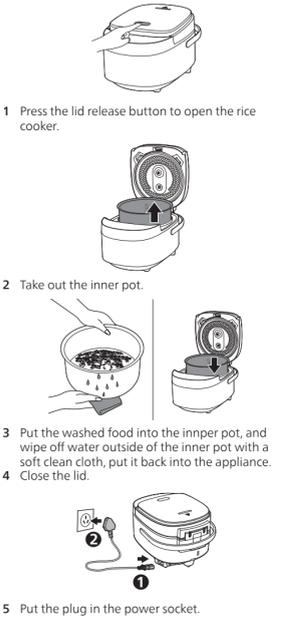

Notes

- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

Steam

- Add some water into the inner pot.
- Put the steam basket into the inner pot.
- Place foods on a food plate or directly on the steaming basket.



- Press Choose menu button to select the Steam function.
 - The indicator of chosen cooking function blinks.
 - The default cooking timer displays on the screen.

Notes

- You can press the Cooking time button to adjust the time, the cooking time after setting blinks on the screen.

5 Press Start to start the cooking process.

- When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep warm mode automatically.
 - The keep-warm indicator lights up.

Preset time for delayed cooking

Notes

- The preset function is not available for Cake and Keep warm. The preset time is up to 24 hours.
- The preset timer should be longer than cooking time.
- If you want to enjoy delicious rice after 8 hours, set the preset time to 8 hours.



- Choose a function you need, press the Cooking time booking button to set the preset time.
 - The cooking time booking indicator blinks.
 - The time on the screen blinks.



2 Press the Cooking time booking button to adjust the time.

- With each press, the time increases by 10 minutes. Long press the button to quickly adjust the time by 1 hour.
- Press Start to start the cooking process.
 - The rice cooker starts countdown until the cooking process is finished.

6 Cleaning and Maintenance

Notes

- Unplug the Rice cooker before starting to clean it.
- Wait until the appliance has cooled down sufficiently before cleaning.

9 Specifications

Model Number	HD3170
Rated power input	549-653W
Rated capacity	3.0L
Rice capacity	0.85L

10 Troubleshooting

If you encounter problems when using this appliance, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the rice cooker properly and if the plug is inserted firmly into the power outlet. The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked	There is not enough water. Add water according to the scale on the inside of the inner pot. Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on. The heating element is damaged, or the inner pot is deformed. Take the rice cooker to your Philips dealer or a service center authorized by Philips.
The rice is too hard, or not well cooked.	Add more water into the rice or cook longer.
The appliance does not switch to keep warm mode automatically.	The temperature control system has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
During cooking, There is water spilling in the rice cooker.	Based on the rice amount and different types of rice, add the appropriate amount of water according to the water level indication on the inner pot.
Rice smells bad after cooking	Use the cleaning agent and warm water to clean the inner pot. After cooking, make sure the steam vent cap, inner lid and inner pot are cleaned thoroughly. Clean the inner pot with some washing detergent and warm water.
E1, E2, E3 or E4 displays on the screen.	The sensor has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
E5 or E6 displays on the screen.	The voltage is too high or too low. Once the voltage in your area recovers, the error code will be disappeared from screen.

Inner lid




- Remove the inner lid that can be detached from the top lid and clean it.
- Soak the inner lid in warm water and wash it with a sponge.
- Remove all the food residues stuck to the appliance.
- Reattach the inner lid to the top lid.

Steam valve

- Remove the inner lid.
- Remove the steam valve from the top lid.



- Rinse the steam valve to remove any food residues. Once it has been cleaned, reattach the steam valve to the top lid.

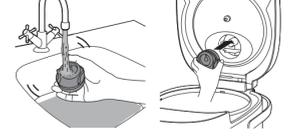

Interior

- Wipe with wrung out cloth.
- Remove all the food residues stuck to the appliance.
- Wipe with wrung out cloth.
- Remove all the food residues.

Exterior

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues.

Accessories

Rice scoop, steaming basket and inner pot.

- Soak in hot water and clean with sponge.

7 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

8 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Bahasa Malaysia

1 Penting

Baca manual pengguna ini dengan teliti sebelum anda menggunakan Pemasak nasi ini dan simpan untuk rujukan masa hadapan.

Bahaya

- Perkakas tidak boleh direndam.

Amaran

- Perkakas ini bukan dimaksudkan untuk kegunaan orang (termasuk kanak-kanak) yang kurang upaya dari segi fizikal, deria atau mental, atau kurang berpengalaman dan pengetahuan, kecuali mereka diawasi atau diberi arahan berkenaan penggunaan perkakas ini oleh orang yang bertanggungjawab atas keselamatan mereka.
- Kanak-kanak perlu diawasi untuk memastikan mereka tidak bermain dengan perkakas ini.
- Perkakas ini hendaklah diletakkan di tempat yang stabil iaitu pemegangnya (jika ada) diletakkan untuk mengelakkan tumpahan cecair yang panas.
- Perkakas ini dimaksudkan untuk digunakan di dalam rumah dan untuk penggunaan lain yang serupa seperti:
 - Kawasan dapur pekerja di kedai, pejabat dan persekitaran kerja yang lain;
 - Rumah ladang;
 - Oleh pelanggan di hotel, motel dan persekitaran tempat menginap yang lain;
 - Persekitaran jenis inap-sarapan.
- Jika set kord kuasa rosak, kord perlu digantikan dengan set kord daripada pengeluar.
- Perkakas ini tidak dimaksudkan untuk dikedirikan menggunakan pemasa luaran atau sistem kawalan jauh yang berasingan.
- Semak jika voltan yang ditunjukkan pada perkakas sepadan dengan voltan sesaluar kuasa tempatan sebelum anda menyambungny.
- Jangan biarkan kord kuasa terjuntai dari tepi meja atau permukaan ruang kerja tempat perkakas itu diletakkan.
- Pastikan elemen pemanasan, sensor suhu dan bahagian dalam mod pratetap dan kuasa dipulihkan sebelum anda memasukkan palam ke dalam saluran keluar kuasa.
- Jangan masukkan palam perkakas atau tekan sebarang butang pada panel kawalan dengan tangan yang basah.
- AMARAN: Pastikan anda mengelakkan tumpahan pada penyambung kuasa untuk mengelakkan kemungkinan bahaya.
- AMARAN: Sentiasa ikuti arahan dan menggunakan perkakas dengan betul untuk mengelakkan kemungkinan kecederaan.
- Mengikuti arahan yang dinyatakan dalam manual pengguna ini, gunakan kain lembut yang lembap untuk membersihkan permukaan yang bersentuhan dengan makanan dan pastikan sisa makanan yang melekat pada perkakas dibersihkan juga.
- Jangan letakkan kord kuasa di bawah perkakas semasa sedang digunakan.

Fungsi memori gangguan bekalan elektrik

Perkakas ini mempunyai fungsi memori gangguan bekalan elektrik yang menyimpan status sebelum terputusnya kuasa.

- Jika berlaku gangguan bekalan elektrik semasa memasak dan kuasa dipulihkan dalam masa 2 jam, kiran detik masa memasak akan bersambung semula dari masa sebelumnya.
- Jika berlaku gangguan bekalan elektrik semasa produk dalam mod pratetap dan kuasa dipulihkan dalam masa 2 jam, kiran detik masa pratetap akan bersambung semula dari masa sebelumnya.
- Jika kuasa tidak dipulihkan dalam masa 2 jam, perkakas mungkin tidak dapat menyambung semula proses kerja sebelumnya.


Medan elektromagnet (EMF)

Perkakas ini mematuhi piawaian dan peraturan berkaitan dengan pendedahan kepada medan elektromagnet.

2 Pemasak nasi anda

Tahniah atas pembelian anda dan selamat menggunakan Philips!
Untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

3 Apa yang terdapat di dalam kotak

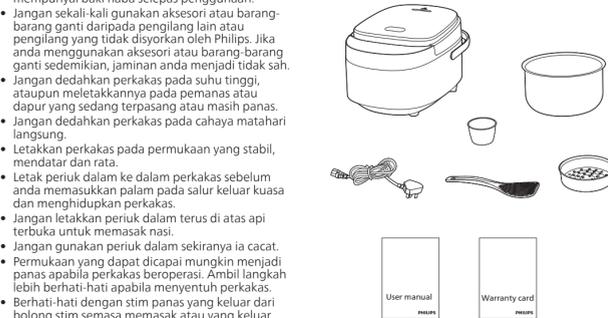

Unit utama
Senduk nasi&sup
Pinggang mengukus
Manual pengguna

Kord kuasa
Cawan penyukat
Peruk dalam
Jaminan

4 Gambaran keseluruhan

Gambaran keseluruhan produk

A	Penutup atas	F	Panel Kawalan
B	Tudung dalam boleh tanggal	G	Pemegang
C	Periuk dalam	H	Butang pelepas tudung
D	Penunjuk paras air	I	Bolong stim
E	Soket kuasa	J	Injap stim

