

使用手冊

EN User manual

功能選擇

空間

危險。

擺設床位與供應早餐的

務請將損壞的電線交由飛

利浦、飛利浦授權之服務

中心,或是具備相同資格

的技師進行更換,以免發

確保防止液體溢出到電源

連接器上,以免造成潛在

務必遵循使用說明正確使

用設備,避免潛在傷害

注意:使用后,加熱元件

本產品並非為透過外部定

時器或獨立遙控系統進行

在您連接電源之前,請檢

查本地的電源電壓是否與

微電腦迷你電子鍋所示的

微電腦迷你電子鍋僅可與

已接地的電源插座連接

如果插頭、電源線、內

鍋、密封環或主體有損

請勿讓電源線懸掛在微電

腦迷你電子鍋所在的餐桌

請先確定加熱板、溫度感

應器與內鍋外側是否清

壞,請勿使用產品。

或流理台邊緣。

務必確保插頭穩固插到電

操作而設計。

電壓相符。

源插座中。



©2018 Koninklijke Philips N.V All rights reserved. HD3060_UM_50_TW_V5.0

1 您的微電腦迷你電子鍋

感謝您購買本產品。歡迎來到飛利浦的世界 請至 www.Philips.com.tw/welcome 登錄您的產 品,以獲得飛利浦提供的完整支援。


2 重要事項

危險

使用微電腦迷你電子鍋前,請先仔細閱讀此安全 手冊,並保留說明以供日後參考。


· 請勿浸泡本產品

- 本產品不適合供下列人士 (包括小孩) 使用:身體官 能或心智能力退化者,或 是經驗與使用知識缺乏 者。他們需要有負責其安 全的人員在旁監督,或指 示產品的使用方法,方可 使用
- 請看管孩童,避免他們將 本產品當成玩具。
- 請平穩放置烹煮電器,並 注意把手 (如果有) 的位 置,避免熱燙液體溢漏
- 本產品為居家用途設計, 而類似的應用包含:
- · 店家的員工廚房、辦公 室與其他工作場所;
- . 農舍;
- 供住宿的飯店、汽車旅 館與其他居住場所;

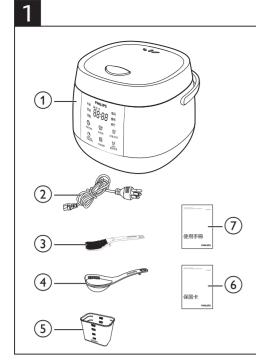

88:88



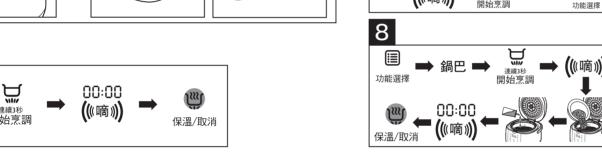

鈕時,請確保雙手乾燥

請勿使用其他製造商的任

何配件或零件,或非由飛

利浦建議之配件或零件

如果您使用此類配件或零

請勿將微電腦迷你電子鉛

暴露在高温下,也請勿放

請勿將微電腦迷你電子鍋

請將微電腦迷你電子鍋放

置在平穩的水平表面上。

請先將內鍋放在微電腦送

你電子鍋中,再將插頭插

請勿直接將內鍋置於爐火

入插座,並開啟電源。

內鍋若變形請勿使用。

使用微電腦迷你電子鍋

時,暴露在外的表面可能

會變熱。觸碰微電腦迷你

電子鍋時,請格外謹慎。

在烹煮過程中,熱氣可能

會從蒸氣通氣孔冒出;若

會從微電腦迷你電子鍋冒

您掀開鍋蓋,熱氣可能

上炊飯。

置於正在使用(或尚有餘

溫) 的爐子或廚具上。

直接曝曬在陽光下。

潔、乾燥,再將插頭插入 出。手和臉必須遠離微 電源插座 電腦迷你電子鍋以避免 連接微電腦迷你電子鍋電 在烹煮期間與結束後 源或按壓控制面板上的按

內鍋及蒸爐可能溫度很 高且重量很重。 請勿於微電腦迷你電子 鍋運作期間加以抬起或

功能選擇

燉品

保溫/取消 (((嘀)))

》 _{連續3秒} 開始烹調

請勿超過內鍋所指示的 最高水位,以免水溢 出,造成潛在危險


烹調、保溫或熱飯時 請勿在內鍋中放廚 請僅使用隨附廚具。避 免使用鋒利的廚具。


為避免刮痕,不建議直 接烹調含有甲殼類食材 的食物。烹飪前請先移 除其硬殼。

請勿將金屬製品或其他異 物插入蒸氣通氣孔內。 請勿將磁性物質放到蓋 子上。請勿將微電腦迷 你電子鍋放在磁性物質

附近使用。 清潔或移動微電腦迷你 電子鍋之前,請務必先 待其冷卻。

使用微電腦迷你電子鍋 後,請務必加以清潔。 請勿將微電腦迷你電子 鍋放入洗碗機內清洗。

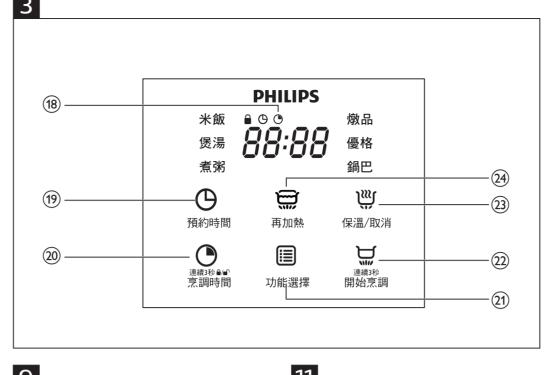

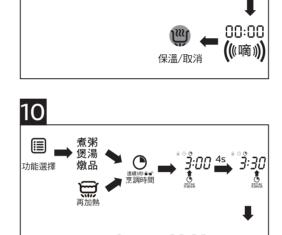

保溫/取消 (((嘀))) 如果有較長時間不使用

微電腦迷你電子鍋,請 務必拔下其插頭 如果不當使用微電腦迷 你電子鍋、作為(半)專 業用途,或未依照使 用手冊操作,保固將無

效,且飛利浦將不擔負

任何損壞賠償責任。

本產品具備備援功能,可記憶停電前的狀態

烹調過程中若發生停電的情形,而電源供應

於兩個小時內恢復,烹調時間將從先前停下

若本產品在預設模式中發生停電的情形,而

會繼續先前的工作,並會進入待機模式。

本飛利浦產品符合所有電磁波暴露的相關適用標

6 保固卡

) 加熱板

a) 電子鍋把手

15) 水位刻度標示

17) 拆卸式內鍋蓋

) 使用者手冊

電源供應於兩個小時內恢復,預設時間將從

停電備援功能

電磁場 (EMF)

|主機體

電源線

3) 飯匙

(4) 湯杓

4 概覽

產品概覽 (圖 2)

8 蒸氣閥

9 開蓋按鈕

10 控制面板

1 主機體

12 電源插座

準和法規。

的時間繼續倒數。

3 內容物(圖1)

微電腦迷你電子鍋 (5) 量杯

先前停下的時間繼續倒數。

若電源供應於兩個小時後恢復,

烹煮時間控制範圍

18 顯示畫面

控制項目概覽 (圖 3)

預約時間按鈕

烹煮時間按鈕

21 功能選單按鈕

(((嘀)))

米飯 燉品

➡ 煲湯

保温/取消

煮粥 鍋巴

(((「嘀」)) 連續3秒 開始烹調

開始烹飪按鈕

| 保溫/關閉按鈕

② | 再加熱按鈕

^{建積3秒} 開始烹調

編程	預設烹煮 時間	時間控制	預設時間
米飯	約 35 分鐘	n/a	24 小時
煲湯	2 小時	1-4 小時	24 小時
煮粥	2 小時	1-4 小時	24 小時
燉品	2 小時	1-4 小時	24 小時
優格	6 小時	4-12 小時	24 小時
再加熱	25 分鐘	25-59 分鐘	n/a
鍋巴飯	約1小時20 分鐘	n/a	24 小時
保溫	12小時	烹煮功能 (不 式) 結束後自	

5 使用微電腦迷你電子鍋



- 如果您按保溫/取消按鈕取消當前設定和終止正在 工作的功能,微電腦迷你電子鍋會進入待機狀態; 如果您在待機狀態下按保溫/取消按鍵,微電腦迷 你電子鍋則自動進入保溫狀態。
- 不使用產品時需拔出電源插頭才能徹底關閉機器 默認時間為從煮飯開始到進入保溫狀態所需的時 間。另外因電源、室溫、季節、米種、水量等而

第一次使用

- 1 從內鍋拿出所有配件。移除所有內鍋的包裝
- 2 第一次使用微電腦迷你電子鍋前,請先徹底 清洗微電腦迷你電子鍋的零件(請參閱「清 洗」單元)。

開始使用微電腦迷你電子鍋前,請確認所有零件都 已經完全乾燥。

炊飯 (圖 4 和 5)

- 1 使用隨附的量杯平口盛滿進行量取
- 2 將米徹底洗乾淨

· 洗米時,第一次放較多的水稍加混合,立即水倒 掉。水倒掉時,用手揉搓洗米。倒入大量的水再 倒凈。重複洗米和沖洗動作2~3次,直到水變半透 璃材質的容器

度的一半。

烹調鍋巴飯(圖8)

續亨者

再加熱 (圖 9)

煮功能燈將熄滅。

取決於米飯量

煮功能燈將熄滅。

上會顯示預設的烹煮時間

預約延遲烹調時間 (圖 12)

烹調功能為止

2 按下預約時間按鈕(〇)。

能的時間控制

2 將容器放入內鍋。確認容器已密封。

4 照「炊飯」中的步驟6和7操作

整烹煮時間」單元

聲,並自動切換至待機模式

1 照「炊飯」中的步驟1至7操作。

→ 保溫指示燈(**四**)會亮起。

1 將放涼的米飯翻鬆,均匀地鋪在內鍋中。

3 按照「炊飯」中的步驟6和7操作。

整烹煮時間」單元。

→ 保溫指示燈(♥)會亮起。

調整烹煮時間(圖10和11)

4 直接選擇再加熱功能()

2 在米飯上倒一些水,避免飯變得太乾。水量

→ 如欲設定不同的亨者時間,請參考「調

5 按住開始按鈕(≒)3秒鐘以開始烹調程序。

6 烹煮完成後,您將聽到4聲嗶聲,所選的烹

您可以調整再加熱、優格、煮粥、煲湯和燉品的

烹煮時間。請參考「功能概覽」表,瞭解每項功

在使用選單按鈕選擇想要的烹煮功能後,顯示幕

1 若要設定不同的烹煮時間,請按下烹煮時間

按鈕(〇),顯示幕上的時數單位會開始

時數單位設定完成後,請稍候幾秒鐘等待時

數單位確認,接著顯示幕上的分鐘單位會開

2 重複按烹煮時間按鈕,以設定時數單位。

4 重複按烹煮時間按鈕,以設定分鐘單位。

您可以在不同的烹調模式中預約延遲烹調時間。

3 重複按預約時間按鈕(**④**)以設定時數單位。

5 重複按預約時間按鈕(內)以設定分鐘單位。

6 分鐘單位設定完成後,請按住開始按鈕(♥)

→ 當預約定時器啟動時,預約指示燈會要

預設時間結束後即烹煮完畢。微電腦迷你電

子鍋會發出嗶聲,並自動切換至保溫或待機

如果預設時間比烹煮時間短,微電腦迷你電子鍋會

夏季室溫較高時,為防止白米過度浸泡而引起的變

預約時間設定完成後,您可以按下保溫/關閉按鈕,將預約功

為了保護您的孩子,避免其使用微電腦迷你電子

工作過程中,按住烹煮時間按鈕(內)3秒鐘

若要解鎖,請再次按住烹煮時間按鈕(●)

→ 顯示畫面上會出現兒童鎖圖示

→ 顯示畫面上的兒童鎖圖示會消失

黃燈。當預設時間結束時,其會改亮藍

3 秒鐘以確認預約定時器

立刻開始烹煮程序。

設定兒童鎖(圖13)

3 秒鐘。

鍋,您可以設定兒童鎖功能。

以進入兒童鎖模式。

質,請儘量設定在12小時以內。

時數單位設定完成時,請稍候幾秒鐘等待時

數單位確認,接著顯示幕上的分鐘單位會開

按下選單按鈕(圖),直到畫面上出現想要的

7 微電腦迷你電子鍋將自動進入保溫模式

3 在内鍋內倒入一些水。確認水位達到容器高

5 按下選單按鈕(■),直到選擇了優格功能。

6 按住開始按鈕(👿)3秒鐘以開始烹調程序

烹煮結束後,微電腦迷你電子鍋會發出嗶

2 按下選單按鈕(圖),直到選擇了鍋巴飯功

3 按住開始按鈕(♥)3秒鐘以開始烹調程序

4 一段時間后,微電腦迷你電子鍋會發出嗶聲

5 將鍋巴飯所需食材放在米飯上。蓋上蓋子繼

6 烹煮完成後,您將聽到4聲嗶聲,所選的烹

→ 如欲設定不同的烹煮時間,請參考「調

- 3 將洗好的米倒入內鍋中
- 應的刻度。然後讓米均勻攤平。 → 例如,如果您要煮 4 杯米,請將水加到 4杯的水位刻度。

- 如居住地區的電壓不穩定,微電腦迷你電子鍋可能 出現食物溢出的情況,這屬於正堂現象。 內鍋內側所標示的水位僅供參考;您可以隨時針對 不同的米以及自己的偏好來調整水位。 除了依照水位刻度標示,您也可以將米和水用 1:1 請勿超過指示的量或超過內鍋所標示的最高水位 否則可能使水溢出微電腦迷你電子鍋,造成潛在
- 5 按下開蓋按鈕,打開鍋蓋
- 6 將內鍋外部擦乾,然後將其放入微電腦迷你 7 微電腦迷你電子鍋將自動進入保溫模式。 電子鍋內。檢查內鍋是否與加熱板適當接

請確定內鍋外部乾燥、乾淨,且加熱板上沒有異 物殘留。

- 7 蓋上微電腦迷你電子鍋鍋蓋,並將插頭插入 電源插座
- 8 按下選單按鈕(圖),直到選擇了米飯功能。 9 按住開始按鈕(💆)3秒鐘以開始烹調程序
- 10 烹煮完成後,您將聽到4聲嗶聲,所選的烹 **煮功能燈將熄滅。**
- 11 微電腦迷你電子鍋將自動進入保溫模式 → 保溫指示燈(豐)會亮起。

烹煮結束後,請立即攪拌米飯將其翻鬆,以便讓多 餘的水氣散出,讓米飯更加鬆軟。 視烹煮條件而定,鍋底部分的米飯可能會呈現沒

煲湯 (圖 6)

- 1 將食材和水放入內鍋
- 2 照「炊飯」中的步驟6和7操作
- 3 按下選單按鈕(圓),直到選擇了煲湯功能。 → 如欲設定不同的烹煮時間,請參考「調 整烹煮時間」單元。
- 4 按住開始按鈕(♥)3秒鐘以開始烹調程序。 5 烹煮完成後,您將聽到4聲嗶聲,所選的烹
- 6 微電腦迷你電子鍋將自動進入保溫模式
- → 保溫指示燈(豐)會亮起。

煮粥 (圖 6)

1 照「炊飯」中的步驟1至7操作。

請勿超過內鍋所標示的最高水位,否則可能使水溢 出微電腦迷你電子鍋。

· 除了依照水位刻度標示,您也可以將米和水用 1:4 的比例來煮粥

- 2 按下選單按鈕(圖),直到選擇了煮粥功能。 → 如欲設定不同的烹煮時間,請參考「調 整烹煮時間」單元。
- 3 按住開始按鈕(♥)3秒鐘以開始烹調程序。 4 烹煮完成後,您將聽到4聲嗶聲,所選的烹 煮功能燈將熄滅。
- 5 微電腦迷你電子鍋將自動進入保溫模式。 → 保溫指示燈(**W**)會亮起。

- 1 將食物和食材放入內鍋。
- 2 照「炊飯」中的步驟6和7操作。
- 3 按下選單按鈕(層),直到選擇了燉品功能。 → 如欲設定不同的烹煮時間,請參考「調 整烹煮時間」單元。
- 4 按住開始按鈕(♥)3秒鐘以開始烹調程序。 5 烹煮完成後,您將聽到4聲嗶聲,所選的烹 煮功能燈將熄滅。
- 6 微電腦迷你電子鍋將自動進入保溫模式。 → 保溫指示燈(**四**)會亮起。

製作優格(圖7)

1 將製作優格的材料充分攪拌,然後倒入密封

保溫模式

- 微電腦迷你電子鍋可讓您輕鬆控制保溫功能。 使用帶密封功能的食品級塑料或耐熱80°C以上玻
 - 将米飯保存於內鍋中時,請務必使用保溫功 能,如不使用保溫功能將米飯保存於內鍋
 - 中,會導致米飯產生異味。 為防止米飯變得乾燥、變味、變色,避免在
 - 以下情況使用保溫功能
 - · 保溫12小時以上。
 - 加入剩飯。
 - 使用保溫功能來加熱冷飯。 · 加入配料及調味料烹煮的什錦飯、雜糧飯
 - 米飯以外的食品

等米飯。

• 飯勺放在鍋內

中央。

除了優格模式之外,所有其他的烹煮功能都能讓本 產品進入保溫模式

少量米飯保溫時,將米飯集中堆在內鍋

- 在待機模式中,您可以按下保溫按鈕(豐)以進 入保溫模式 在保溫模式中,您可以按下保溫按鈕(👑)以進
- 入待機模式 當保溫時長大於12小時,微電腦迷你電子鍋將自 動切換至待機模式

6 清潔與維護

開始清潔微電腦迷你電子鍋前,請先拔除插頭。 請先等到微電腦迷你電子鍋充分冷卻後再行清潔

外鍋蓋內部與主機體

- 使用擰乾的濕布擦拭
- 確定清掉所有黏在微電腦迷你電子鍋上的食 物殘渣

- 使用擰乾的濕布擦拭。
- 使用擰乾的濕布或牙籤清掉食物殘渣

- 使用沾肥皂水的濕布擦拭
- 只能使用軟的乾布擦拭控制面板 確定清掉所有黏在控制面板周圍的食物

飯匙、湯杓、內鍋、量杯及拆卸式內鍋蓋

浸泡在熱水裡,以海綿刷洗

7 回收

本產品使用壽命結束時,請勿與一般家庭廢棄物 一併丟棄。

請將該產品送至政府指定的回收點或進行回收。 此舉能為環保盡一份心力。 請遵循您所在國家/地區對電氣與電子產品分類

收集的規定。正確處理廢棄產品有助於避免對環 境和人類健康帶來負面影響。 → 畫面隨即顯示預約時間,且時數單位開

8 保固與服務

若您需要服務或資訊或是有任何問題,請前往飛 利浦網站 www.philips.com.tw,或聯絡您所在國 家/地區的飛利浦客戶服務中心。您可以在全球 保證書上找到其電話號碼。

產品送至飛利浦經銷商或飛利浦 現錯誤訊息 (E1 \ E2 \ |授權服務中心。 E3 或 E4)。 電子鍋沒有 温度控制功能故障。 請將產品送 自動切換至 至飛利浦經銷商或飛利浦授權服 |保溫模式。 | 務中心。

解決方法

顯示幕上出 烹煮期間發生停電的情形。 請將

10 規格

型號	HD3060
額定輸出功率	330 W
額定容量	2.0 L
尺寸	
(長x寬x高)	250mmx232mmx230mm
淨重	2.5 kg

設備名稱:飛利浦微電腦迷你電子鍋,型號(型式):HD3060 Equipment name Type designation (Type)

	限用物質及其化學符號 Restricted substances and its chemical symbols					pols
單元 Unit	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
電源線組	-	0	0	0	0	0
主機板及顯示板	-	0	-	0	0	0
主溫控器組件	-	0	0	0	0	0
感溫探頭	-	0	0	0	0	0
底座與頂蓋等外殼	0	0	0	0	0	0

- 備註1: "超出0.1 wt%"及"超出0.01 wt%"係指限用物質之百分比含量超出百分比
- lote 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition
- 備註2: "○"係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: "O" indicates that the percentage content of the restricted substance does not exceed the
- 備註3: "-"係指該項限用物質為排除項目。
- Note 3: The "-" indicates that the restricted substance corresponds to the exemption.

米飯口感會因為室溫和水溫而有 所不同。 米飯太軟 使用預約功能煮出來的米飯可能 太硬或沒 會比較軟。這是正常現象。 檢查內鍋是否變形

|水量不夠。根據內鍋的刻度加

您沒有按住開始按鈕 🗑 3 秒以開

在開啟微電腦迷你電子鍋電源

前,請確認加熱板上和內鍋外部

|檢查加熱板上或內鍋外側是否黏

|有食物殘渣。使用竹籤或筷子隊

您未徹底清洗生米。請清洗生

在內鍋中加水時,確認水位刻度

確認水並未超過刻度的最高水

位,否則烹煮時水可能溢出本產

|重複按選單按鈕(圖),以選擇顯

示畫面所示您想要的烹煮功能。

檢查電源線是否穩固連接電子

鍋,以及插頭是否穩固地插入電

| 鍋蓋和內鍋已徹底清洗。使用少

|電源連接有問題。檢查電源線長

否穩固連接電子鍋,以及插頭是

| 許洗碗精與溫水清潔內鍋。

否穩固地插入電源插座中。

如果微電腦迷你電子鍋是放置在

不平或傾斜的平面上,煮出來的

|米飯口感就有可能因為水量分佈

米飯口感會因為米的廠牌、產地

|及存放時間長短(新米或舊米)而

不平均而變得太硬或太軟。

如果您在使用此微電腦迷你電子鍋時發生任何問

題,送修前請先查看下列各項目。如果您不能解 決問題,請聯絡您所在國家/地區的飛利浦客戶

解決方法

|始烹煮。

|沒有異物殘留。

去食物殘渣。

米,直到水流清澈。

檢查內鍋是否變形

烹煮時水從 |應相當於內鍋中所指示使用的>

我無法選擇 |檢查保溫指示燈是否亮起。停用

米飯煮好後 烹煮後,確定蒸氣通氣孔蓋、內

| 想要的烹煮 | 保溫功能, 然後再試一次。

林士

微電腦迷你

電子鍋

溢出。

異味。

按鈕上的

指示燈不會

亮, 成顯示

幕無法

|運作。

9 疑難排解

服務中心。

English

1 Your rice cooker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.Philips.com.tw/welcome.

2 Important

Please read this safety leaflet carefully before you use the rice cooker and save it for future

Danger

 The appliance must not be immersed.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;

· by clients in hotels

- farm houses;
- motels and other residential type environments;
- bed and breakfast type environments.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

- Make sure to avoid spillage on the power connector to avoid a potential hazard.
- Always follow the instructions and use the appliance properly to avoid potential injury.
- Caution: Surface of the heating element is subject to residual heat after use.
- · The appliance is not intended to be operated by means of an external timer or a separate remote-
- control system. Check if the voltage indicated on the rice cooker corresponds to the local power voltage before you connect it. Only connect the rice cooker to a grounded power outlet. Always
- make sure that the plug is inserted firmly into the power outlet. Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body
- is damaged. Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the rice cooker or press any of the buttons on the control panel with wet hands.

Caution

- Never use anv accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the rice cooker to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the rice cooker to direct sunlight.
- Place the rice cooker on a stable, horizontal and level surface.
- Always put the inner pot in the rice cooker before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice. Do not use the inner
- pot if it is deformed. The accessible surfaces may become hot when the rice cooker is operating. Take extra caution when touching the rice
- cooker. Beware of hot steam coming out of the steam vent during cooking or out of the rice cooker when you open the lid. Keep hands and face away from the rice cooker to
- avoid the steam. The inner pot and steamer during and after cooking process, may be hot and heavy. Do not lift and move
- is operating. Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.

the rice cooker while it

- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the rice cooker near a magnetic substance
- Always let the rice cooker cool down before you clean or move it.
- Always clean the rice cooker after use. Do not clean the rice cooker in dishwasher.
- Always unplug the rice cooker if not used for a longer period.
- If the rice cooker is used improperly or for professional or semiprofessional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Power failure backup function

This appliance has a backup function that remembers the status before a power failure.

- If the power failure occurs during a cooking process, and the power supply is resumed within two hours, the countdown of the cooking time continues where it left off.
- If the power failure occurs when the appliance is at preset mode, and the power supply is resumed within two continues where it left off.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

3 What's in the box (fig. 1)

1	Rice cooker main unit	5	Measuring cup
2	Power cord	6	Warranty card
3	Rice scoop	7	User manual
4	Soup ladle		

4 Overview

Product overview (fig. 2)

8	Steam valve	13)	Heating element
9	Lid release button	14)	Cooker handle
10	Control panel	15)	Water level indications
11)	Main unit	16)	Inner pot
12	Power socket	17)	Detachable inner lid

Controls overview (fig. 3)

18	Display screen	22	Menu button
19	Preset button	23)	Warm/Off buttor
20	Cooking time button	24)	Start button
21)	Reheat button		

Cooking time regulating range

Program	Default	Time	Prese
	cooking time	regulation	time
Rice	about 35 min	N/A	24 hr
Soup	2 hr	1-4 hr	24 hr
Congee	2 hr	1-4 hr	24 hr
Stew	2 hr	1-4 hr	24 hr
Yogurt	6 hr	4-12 hr	24 hr
Reheat	25 min	25-59 min	N/A
Claypot rice	about 1 hr 20 min	N/A	24 hr
Warm	12 hr	Activated automatica cooking fur are finished (excluding)	nctions d

5 Using the rice cooker



If you press the keep-warm/off button () function, the rice cooker enters into the standby mode; if you press the keep-warm/

- To switch off, you need to unplug the

2 Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter 'Cleaning').

you start using the rice cooker.

- accuracy.
- hours, the countdown of the preset time
- If the power supply is resumed after two hours, the appliance will not resume the previous work, but be in standby mode.

Note

It it normal that rice overflows due to unstable

The level marked inside the inner pot is just

an indication; you can always adjust the water

level for different types of rice and your own

Besides following the water level indications,

exceed the maximum water level indicated in

the inner pot, as this may cause the rice cooker

then put it in the rice cooker. Check if the

inner pot is in proper contact with the

Make sure that the outside of the inner pot

is dry and clean, and that there is no foreign

7 Close the lid of the rice cooker, and put

9 Press and hold the start button () for

10 When the cooking is finished, you will

11 The rice cooker will be in keep-warm

Press the menu button () until the rice

near 4 beeps and the selected cooking

→ The keep-warm indicator (") lights

After the cooking is finished, stir the rice and

loosen it immediately to release excessive

Depending on the cooking conditions, the

bottom portion of the rice may become slightly

Put ingredients and water into the inner

2 Follow steps 6 and 7 in "Cooking rice".

3 Press the menu button () until the

3 seconds to start cooking

function light will be off.

mode automatically.

Cooking congee (fig. 6)

the rice cooker to overflow.

congee cooking

soup cooking function is selected.

→ To set a different cooking time, refer

Press and hold the start button () for

When the cooking is finished, you will

6 The rice cooker will be in keep-warm

1 Follow steps 1 to 7 in "Cooking rice".

Do not exceed the maximum water level

indicated in the inner pot, as this may cause

Besides following the water level indications

congee cooking function is selected.

3 Press and hold the start button () for

When the cooking is finished, you will

The rice cooker will be in keep-warm

near 4 beeps and the selected cooking

→ The keep-warm indicator (**w**) lights

3 seconds to start cooking.

function light will be off.

mode automatically.

→ To set a different cooking time, refer

to chapter "Adjusting the cooking

2 Press the menu button () until the

you may also add rice and water at 1:4 ratio for

near 4 beeps and the selected cooking

→ The keep-warm indicator () lights

to chapter "Adjusting the cooking

residue on the heating element

the plug in the power socket.

cooking function is selected

3 seconds to start cooking

function light will be off

moisture for fluffy rice.

Making soup (fig. 6)

Do not exceed the volume indicated nor

to overflow and cause potential hazard.

6 Wipe the outside of the inner pot dry,

5 Press the lid release button to open the

for rice cooking.

heating element.

Note

Note

you may also add rice and water at 1:1-1.2 ratio

ker	5	Measuring cup
rd	6	Warranty card
р	7	User manual
.e		

18	Display screen	22	Menu button
19	Preset button	23	Warm/Off button
20	Cooking time button	24)	Start button
21)	Reheat button		

s time reg 35 min N// 1-4 1-4	hr	24 hr 24 hr 24 hr
1-4	hr	24 hr
1-4	hr	
		24 hr
1_4	1	
1 -	hr	24 hr
4-1	2 hr	24 hr
25-	-59 min	N/A
hr N/	A	24 hr
aut	finished	ictions
	are	cooking fun are finished (excluding y



to cancel the current setting and the existing off button (\(\mathbb{W}\)) in the standby mode, the rice cooker automatically enters the keep-warm

- The cooking time begins once the rice cooking function starts and ends when the rice cooker enters into the keep-warm mode.

Before first use

- Take out all the accessories from the inner pot. Remove all packaging materials of the inner pot.

Note

Make sure all parts are completely dry before

Cooking rice (fig. 4 & 5)

- 1 Measure the rice accurately by using the measuring cup provided; level the rice off at the top of the cup to maintain
- 2 Rinse the rice thoroughly.



The first rinse should be done quickly, swishing and stirring the rice by hand with plenty of water. Drain the water immediately afterwards. Then rinse the rice 2-3 times with fresh water

- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
- → For instance, if you cook 4 cups of rice, add water up to the 4-cup level indicated on the scale.

Stewing (fig. 6)

- 1 Put the food and ingredients in the inner
- 2 Follow steps 6 and 7 in "Cooking rice".
- 3 Press the menu button () until the stewing function is selected
- → To set a different cooking time, refer to chapter "Adjusting the cooking
- 4 Press and hold the start button () for seconds to start cooking. 5 When the cooking is finished, you will
- hear 4 beeps and the selected cooking function light will be off. The rice cooker will be in keep-warm
- mode automatically → The keep-warm indicator (") lights

Making yogurt (fig. 7)

1 Whisk the ingredients for the yogurt well and put them in the sealed containers.



Use sealed containers which are made of food-grade plastics or glass that can bear temperature more than 80° C.

- 2 Put the containers in the inner pot. Make sure that containers sealed.
- 3 Pour some water in the inner pot. Make sure that half of the containers are immersed in water.
- 4 Follow steps 6 and 7 in "Cooking rice". 5 Press the menu button () until the yogurt making function is selected. → To set a different cooking time, refer to chapter "Adjusting the cooking
- 6 Press and hold the start button () for 3 seconds to start cooking.
- 7 When the cooking is finished, the rice cooker beeps and switches to stand by mode automatically.

Cooking claypot rice (fig. 8)

Follow steps 1 to 7 in "Cooking rice". 2 Press the menu button () until the claypot rice cooking function is selected. 3 Press and hold the start button () for

rice cooker beeps for a while

- 3 seconds to start cooking 4 After the rice is cooked for some time, the
- 5 Add the ingredients for the claypot rice by placing them on top of the rice. Close the lid to resume the cooking process
- 6 When the cooking is finished, you will near 4 beeps and the selected cooking function light will be off.
- mode automatically → The keep-warm indicator (\(\mathbb{\text{\ti}\text{\texi}\text{\text{\text{\texi}\text{\text{\texi{\text{\texi}\text{\text{\texi}\\\ \\\\ \ti}\tittt{\text{\texit{\text{\texi}\text{\texi}\text{\t

Reheating (fig. 9)

- Loosen the cooled rice and evenly distribute it in the inner pot.
- the water depends on the amount of rice.

to chapter "Adjusting the cooking

- → To set a different cooking time, refer
- 6 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- → The keep-warm indicator () lights

Adjusting the cooking time (fig. 10

After you have selected the desired cooking

- To set a different cooking time, press the cooking time button (), and the hour
- Press the cooking time button repeatedly
- After the hour unit is set, wait for a few seconds before the hour unit is confirmed, and the minute unit starts
- to set the minute unit.

Preset time for delayed cooking (fig. 12)

Press the menu button () until the

- the screen Press the preset time button (().
- → The preset time is displayed on the screen, and the hour unit starts
- 3 Press the preset time button (() repeatedly to set the hour unit. 4 When the hour unit is set, wait for a
- repeatedly to set the minute unit. 6 After the minute unit is set, press and hold the start button () for 3 seconds
- → The preset indicator lights up in yellow when the preset timer is activated. It turns blue when the
- The cooking will be finished when the beeps and switches to keep-warm or standby mode automatically.

- The rice cooker will be in keep warm

- 2 Pour some water onto the rice to prevent it from becoming too dry. The quantity of
- Follow steps 6 and 7 in "Cooking rice". 4 Press the reheating button ().
- 5 Press and hold the start button () for 3 seconds to start cooking.
- 7 The rice cooker will be in keep warm mode automatically.

You can adjust the cooking time for reheat, yogurt, congee, soup and stew. Refer to the "Functions overview" table for the time regulation of each functior

- function using the menu button, the default cooking time will be displayed on the screen.
- unit starts flashing on the display.
- to set the hour unit
- flashing on the display 4 Press the cooking time button repeatedly

You can preset the delayed cooking time in different cooking modes.

- desired cooking function is displayed on residues stuck to the rice cooker.
- few seconds before the hour unit is confirmed, and the minute unit starts flashing on the display
- 5 Press the preset time button (()
- to confirm the preset timer.
- preset time has elapsed. preset time has elapsed. The rice cooker
- If the preset time is shorter than the cooking time, the rice cooker will start the cooking process immediately
- When the room temperature is high in summe set the time for delay cooking for the rice function within 12 hours to prevent the soaked rice from spoilage

After the preset time is set, you can press the Warm/Off button to deactivate the preset

Setting up child lock (fig. 13)

- To protect your child from using the rice cooker, you can set up the child lock function. During the process, press and hold the cooking time button () for 3 seconds to enter the child lock mode
- → The child lock icon appears on the display screen To unlock, press and hole time button () for 3 seconds again.

→ The child lock icon disappears from

the display screen.

Keep-warm mode The rice cooker provides you with easy control over the keep-warm function.

· To keep rice in the rice cooker for later consumption, use the keep-warm mode; otherwise, the rice may develop a foul

Do not use the keep-warm mode in the

- below situations: · Keeping rice warm for more than
- Keeping rice warm with leftovers. Reheating the cooled rice. • Keeping rice warm when it contains

additional ingredients and seasonings.

warm, gather the rice towards the center

Keeping food other than rice warm.

· Keeping rice warm when rice scoop has been left in the inner pot. When keeping a small amount of rice

of the inner pot to prevent drying.

- warm button () to enter the keep-warm
 - In keep-warm mode, you can press the keepwarm button (👑) to enter the standby mode When the keep-warm time is longer than 12 hours, the rice cooker will automatically

Except for yogurt, all other cooking functions

will allow the product to go into the keep-

In standby mode, you can press the keep-

Cleaning and Maintenance

switch to the standby mode

- Unplug the rice cooker before starting to clean
- Wait until the rice cooker has cooled down sufficiently before cleaning it

Interior

Inside of the outer lid and the main body

Wipe with wrung out and damp cloth Make sure to remove all the food

Heating element

Outside of the main body:

 Wipe with wrung out and damp cloth. Remove food residues with wrung out

and damp cloth or toothpicks.

 Wipe with a cloth damped with soap Only use soft and dry cloth to wipe the

Make sure to remove all the food

residues around the control panel

Accessories

and human health.

Exterior

Soak in hot water and clean with sponge. 7 Recycling

cup, and detachable inner lid:

recycling. By doing this, you help to preserve the environment Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent

Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com.tw or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips

If you encounter problems when using this

rice cooker, check the following points before

problem, contact the Philips Consumer Care

9 Troubleshooting

Center in your country.

too hard, or not well cooked

There is not enough water. Add water according to the

You did not press and hold the start button (a) for 3 seconds to start cooking. Make sure that there is no foreign residue on the heating element and the outside of

the rice cooker on Check if there are food residue on the heating plate or outside of the inner pot. Remove the food residue with a bamboo stick or a chopstick The rice is scorched. You have not rinse the rice properly. Rinse the rice unti the water runs clear.

scale inside the inner pot that Water spills corresponds to the number of out of the ups of rice used rice cooke Make sure the water does not during exceed the maximum level or the scale, as this may cause

Press the menu button () repeatedly to select the desired cooking function as shown by the display screen Do not throw away the product with the Check if the keep-warm normal household waste at the end of its life, get to the indicator is on. Deactivate but hand it in at an official collection point for keep-warm and try again.

After cooking, make sure the steam vent cap, inner lid

and warm water. The light on here is a connection problem the button Check if the power cord is does not connected to the cooker properly and if the plug is the display

Solution message (E1, | failure during cooking. Take E2, E3, or E4) | the appliance to your Philips appears on dea ler or a service center the display. authorized by Philips. The cooker The temperature control is defective. Take the appliance does not to your Philips dealer or a service center authorized by keep warm

Modelivallibei	1103000
Rated power	330 W
output	
Rated capacity	2.0 L
Dimension	
(LxWxH)	250mmx232mmx230mm
Net Weight	2.5 kg

depending on the brand of rice, where it was harvested and how long it was stored (new crop or old crop). The texture of rice varies water temperatures. result in softer rice. This is

If the rice cooker is positioned

may be too hard or too soft as

the amount of water becomes

The texture of rice varies

on an uneven or tilted surface

the texture of the cooked rice

Solution

inconsistent

depending on the room and The rice is Using the preset function may too soft. Check if the inner pot is

scale on the inside of the inner

the inner pot before switching

Check if the inner pot is leformed Make sure that you add water to the level indicated on the

Rice scoop, soup ladle, inner pot, measuring the appliance to overflow during cooking.

Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power negative consequences for the environment

> and inner pot are cleaned bad after thoroughly. Clean the inner pot with some washing detergent

inserted firmly into the power does not outlet. function.

automatically.

Model Number HD3060

10 Specifications