



EN User manual

PT-BR Manual do Usuário




PHILIPS
WALITA

CIC Centro de Informações
ao Consumidor

Grande SP: (11) 2121 0203
Demais localidades: 0800 701 0203

Specifications are subject to change without notice.
© 2014 Koninklijke Philips N.V.
All rights reserved.

RI3105_UM_PT-BR_V2.0_140925

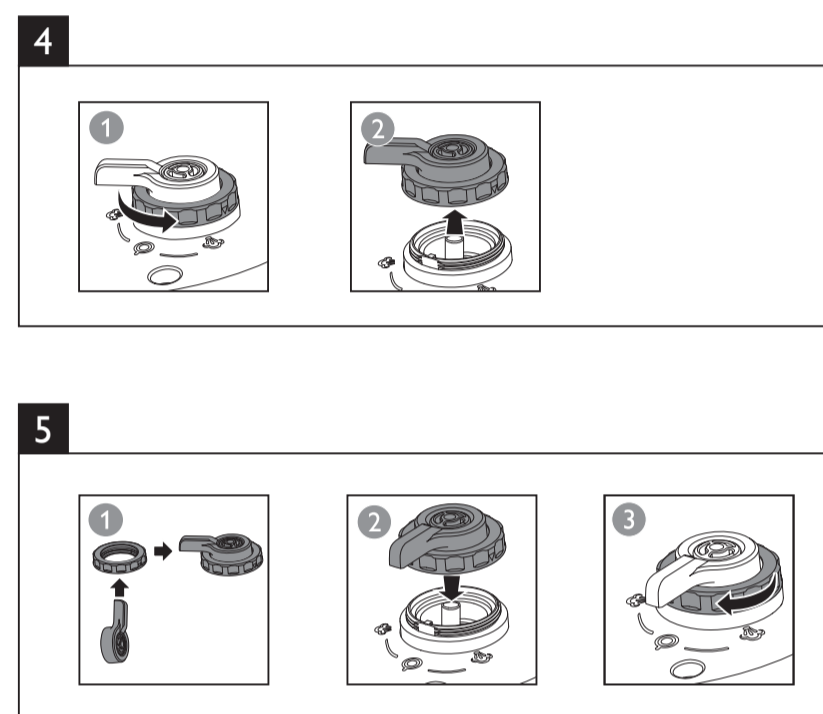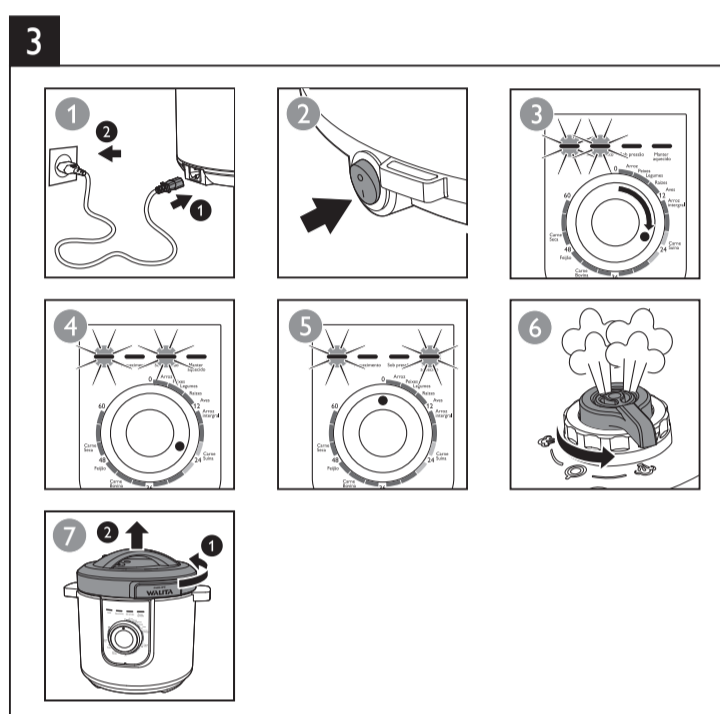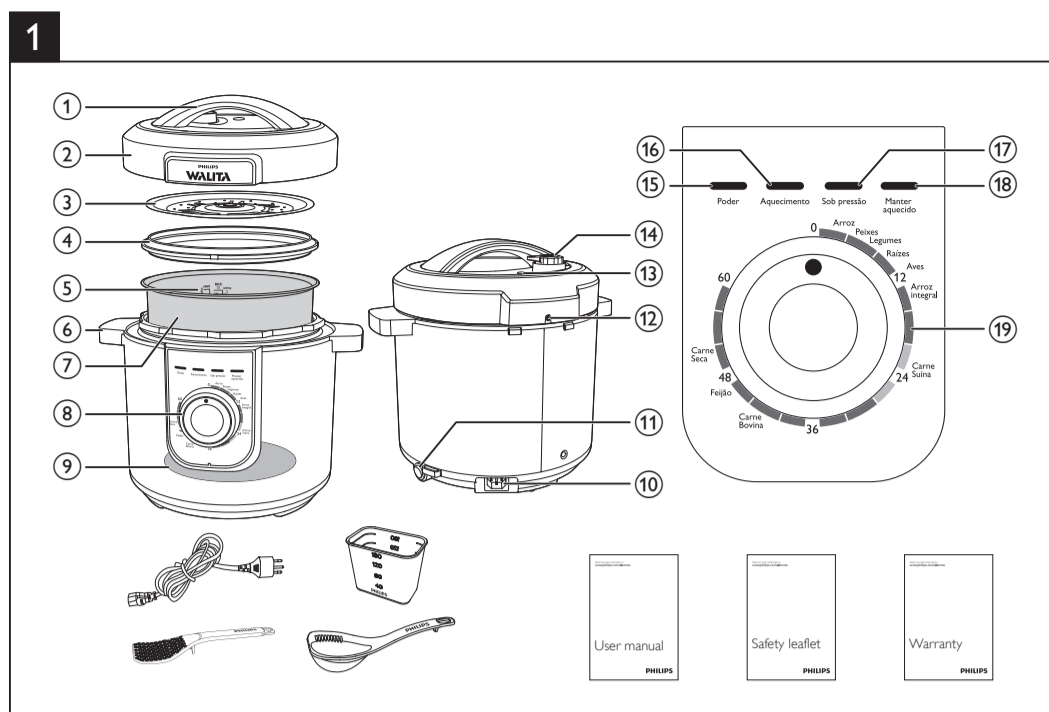

English

1 Your electric pressure cooker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 What's in the box (fig.1)

Electric pressure cooker main unit	Rice spoon
Soup ladle	Measuring cup
User manual	Safety leaflet
Warranty card	Power cord
Service list	

3 Overview

① Lid handle	⑧ Control knob
② Top lid	⑨ Heating element
③ Detachable inner lid	⑩ Power socket
④ Sealing ring	⑪ On/Off switch
⑤ Water level indication	⑫ Locking pin
⑥ Side handle	⑬ Floating valve
⑦ Inner pot	⑭ Pressure regulator valve

Controls overview

⑮ Power indicator	⑱ Keep warm indicator
⑯ Heating indicator	⑲ Pressure keeping time settings
⑰ Pressure keeping indicator	

4 Using the electric pressure cooker

Before first use

- Remove all packaging materials from the appliance.
- Take out all the accessories from the inner pot.
- Clean the parts of the electric pressure cooker thoroughly before using it for the first time (see chapter 'Cleaning').

Note

- Make sure all parts are completely dry before you start using the electric pressure cooker.

Preparations before cooking (fig.2)

Before using the electric pressure cooker to cook food, you need to follow below preparations:

- Hold the lid handle and turn it anti-clockwise until the top lid cannot move any more, then lift up the top lid.
- Take out the inner pot from the electric pressure cooker and put the pre-washed food in the inner pot.
- Put the inner pot back into the electric pressure cooker.
- Place the top lid onto the electric pressure cooker and turn it clockwise. You will hear a "click" sound when the top lid is properly locked.
- Turn the pressure regulator to the "cooking with pressure" position (**Cozinhar com pressão**).

Note

- Make sure the sealing ring is properly assembled around the inner lid.
- Make sure the pressure regulator valve and floating valve are clean and not blocked.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

Cooking food (fig.3)

Note

- Do not fill the inner pot with less than 1/3 or more than 2/3 full of food and liquid.
- For food that expands during cooking, do not fill the inner pot with more than 1/2 full of food and liquid.
- For rice cooking, follow the water level indications on the inside of the inner pot. You may also adjust the water level for different types of rice and your own preference. Do not exceed the maximum quantities indicated on the inside of the inner pot.
- Before cooking, make sure that the floater falls down naturally.

- Follow the steps in "preparations before cooking".
- Put the plug in the power socket, then turn the power switch to the ON position (I).
↳ The power indicator (**Poder**) lights up.
- Turn the control knob clockwise to choose the desired pressure keeping time.
↳ The heating indicator (**Aquecimento**) lights up.
↳ The electric pressure cooker starts heating and pressurizing.
- When the electric pressure cooker reaches the working pressure:
↳ the pressure keeping indicator (**Sob pressão**) lights up.
↳ the electric pressure cooker enters pressure keeping mode.
- When the pressure keeping time has elapsed, the electric pressure cooker automatically switches to keep warm mode.
↳ The keep warm indicator (**Manter aquecido**) lights up.
- Turn the pressure regulator to the pressure releasing position (**Liberar pressão**).
↳ The electric pressure cooker starts releasing pressure.
↳ The floater drops when the pressure is released sufficiently.
- After the pressure has been released sufficiently, hold the top lid handle and turn it anti-clockwise until it cannot move any more, then lift it up.

Note

- When cooking soup or viscous liquid, do not release pressure by turning the pressure regulator to the steam vent position, otherwise liquid might spurt from the pressure regulator valve. Wait until the pressure is naturally released and the floater has dropped to open the top lid.
- The pressure keeping timer will start counting down when the working pressure has been reached.
- You can use the electric pressure cooker to bake food or cook food without adding water in the inner pot. When doing so, make sure to turn the pressure regulator to the "cooking without pressure" position (**Cozinhar sem pressão**).
- After the cooking is finished and the pressure is released, turn the power switch to the off position "O" and unplug the electric pressure cooker to turn off the keep warm function or when not in use.

Tip

- Choose the desired pressure keeping time according to the time indicated around the control knob. You can also adjust the pressure keeping time for different types of food and your own preference.

Assembling and disassembling the pressure regulator (fig.4 & 5)

Warning

- Do not disassemble the pressure regulator valve during cooking. Always unplug the electric pressure cooker and wait until the pressure has been released sufficiently to do so.

To disassemble the pressure regulator:

- Turn the lower screw anticlockwise until it becomes loose.
- Pull it up and take out the pressure regulator.

To assemble the pressure regulator:

- Assemble the lower screw back to the regulator.
- Make sure the regulator points at the sealed position (⊙) and put it back to the steam valve.
- Turn the screw clockwise until it is fastened.

Recommended pressure keeping time

Cooking function	Adjustable pressure keeping time (minute)
Rice (Arroz)	3
Fish (Peixes)	4
Vegetables (Legumes)	3-5
Roots (Raízes)	4-7
Poultry (Aves)	10-15
Brown rice (Arroz integral)	15
Pork (Carne Suína)	20-25
Beans (Feijão)	45
Beef (Carne Bovina)	40-60
Dry meat (Carne Seca)	50-60

5 Cleaning and Maintenance

Note

- Unplug the electric pressure cooker before starting to clean it.
- Wait until the electric pressure cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the outer lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the electric pressure cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.
- Sealing ring and inner lid:
• Soak in warm water and clean with sponge.
- Inner lid:
• Remove the detachable inner lid. Soak it in warm water and clean with sponge.

Exterior

Surface of the outer lid and outside of the main body:

- Wipe with a cloth dampened with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the pressure regulator valve and floating valve.

Pressure control valve and floating valve:

- Disassemble the pressure control valve, soak it in warm water, and clean with sponge.
- Remove food residues in the pressure control valve and floating valve with toothpicks.

Accessories

Rice spoon, soup ladle, and inner pot:

- Soak in hot water and clean with sponge.

6 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.



7 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

