

PHILIPS

HD3075
HD3077



EN	User manual	TH	คู่มือผู้ใช้
HI	उपयोगकर्ता मैनुअल	VI	Hướng dẫn sử dụng
MS	Manual pengguna	ZH-S	用户手册



©2017 Koninklijke Philips N.V.
All rights reserved.
HD3075_HD3077_UM_V3.0



EN

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 What's in the box

Fuzzy rice cooker main unit	Steam basket
Rice scoop	Soup ladle
Measuring cup	User manual
Safety	Warranty card

Overview

① Sealing ring	⑦ Power plug
② Detachable steam vent	⑧ Heating element
③ Inner pot	⑨ Cooker handle
④ Lid release button	⑩ Water level indications
⑤ Control panel	⑪ Detachable inner lid
⑥ Main body	⑫ Outer lid

Controls overview

⑬ Keep warm/ Off button	⑬ Child lock
⑭ Hour button	⑭ Menu button
⑮ Minute button	⑮ Start button
⑯ Cooking time button	⑯ Control panel
⑰ Preset time button	

Specifications

Model	Capacity
HD3075	4.0L
HD3077	5.0L

Before first use

1 Take out all the accessories from the inner pot. Remove the sheet between the inner pot and the heating element.

2 Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter 'Cleaning').

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot. 1 cup of rice is approximately 180ml.
- Use a separate container to wash the rice to avoid damaging the non-stick coating of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- After you press the menu button (ⓘ) and left it in idle for 15 seconds, your rice cooker will sound and return to waiting mode automatically.
- Once the timer button enters preset mode, the preset time button will not respond.
- The default preset time is 4 hours.
- Press the hour button (⌚) once to increase the timer by 1 hour. Press and hold the minute button (⌚) to fast forward the timer by 10 minutes.
- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

Rice cooking

There are three rice cooking functions for HD3075 and HD3077.

Cooking function	Estimated cooking time for 8 cups of rice (HD3075) and 10 cups of rice (HD3077)
Normal rice cooking (ⓘ)	45 minutes
Express rice cooking (ⓘ)	40 minutes
Small amount of rice cooking (ⓘ)	35 minutes

Clay pot rice cooking

Cooking function	Estimated cooking time for 2 - 4 cups of rice (HD3075 and HD3077)
Clay pot rice cooking (ⓘ)	1 hour 20 minutes

Cooking function	Estimated cooking time
Cooking congee (ⓘ)	1 hour (for 1 cups of rice for both HD3075 and HD3077)
Making soup (ⓘ)	1 hour

Making soup with rice

Cooking function	Estimated cooking time for 8 cups of rice (HD3075) and 10 cups of rice (HD3077)
Soup with rice (ⓘ)	35 minutes

Tip

- Press the minute button (⌚) once to increase the timer by 1 minute. Press and hold the minute button (⌚) to fast forward the timer by 10 minutes.
- You can select the cooking time between 25 to 59 minutes.

Baking cake

Cooking function	Estimated cooking time
Baking cake (ⓘ)	45 minutes


Note

- After you press the menu button (ⓘ) and left it in idle for 15 seconds, your rice cooker will sound and return to waiting mode automatically.
- Use a kitchen glove or a cloth, as the inner pot will be very hot.
- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

What's in the box
बॉक्स में क्या है

ภายในกล่องมีอะไรบ้าง
Trong hộp có gì

Apa dalam kotak ini
包裝盒內物品

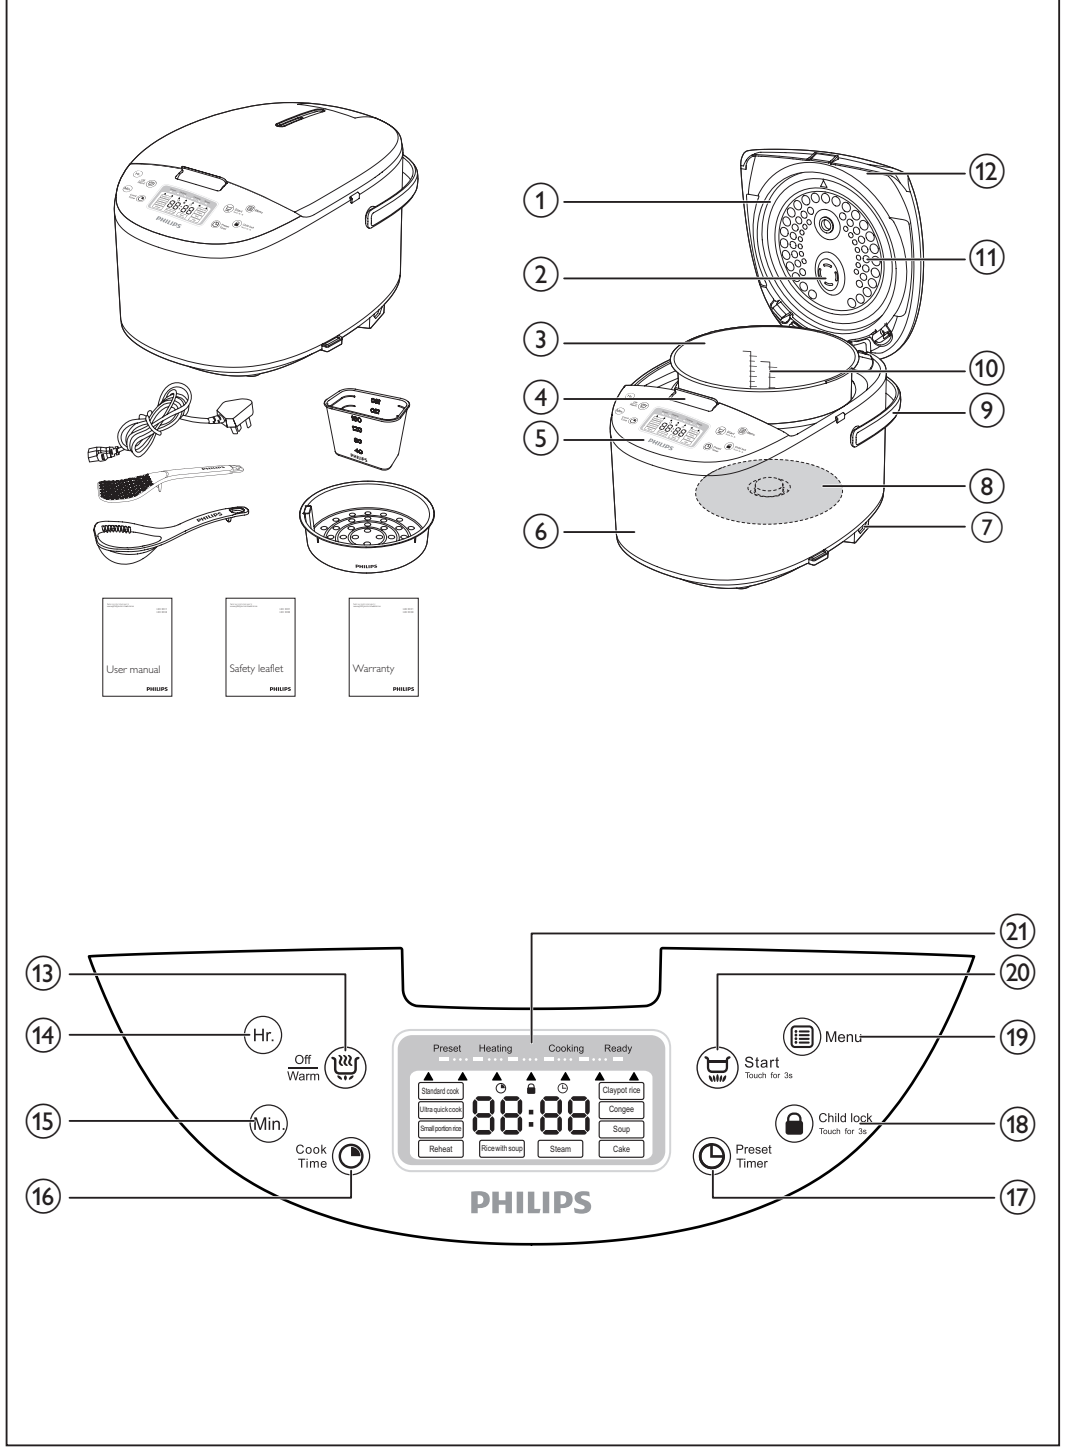

Tip

- Press the minute button (⌚) once to increase the timer by 1 minute. Press and hold the minute button (⌚) to fast forward the timer by 10 minutes.

Steaming

Cooking function	Estimated cooking time
Steaming (ⓘ)	20 minutes

Note

- Use a kitchen glove or a cloth, as the plate and steam basket will be very hot.
- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- You can adjust the water level as needed.
- After you press the menu button (ⓘ) and left it in idle for 15 seconds, your rice cooker will sound and return to waiting mode automatically.
- You can select the cooking time between 10 to 40 minutes.
- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

Tip

- Press the minute button (⌚) once to increase the timer by 1 minute. Press and hold the minute button (⌚) to fast forward in adjusting the minute unit.
- You can select the cooking time between 10 to 40 minutes.

Reheating

Cooking function	Estimated cooking time
Reheating (ⓘ)	25 minutes

Note

- After you press the menu button (ⓘ) and left it in idle for 15 seconds, your rice cooker will sound and return to waiting mode automatically.
- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

Tip

- Press the minute button (⌚) once to increase the timer by 1 minute. Press and hold the minute button (⌚) to fast forward in adjusting the minute unit.
- You can select the cooking time between 25 to 59 minutes.

Preset time for delayed cooking

You can preset the delayed cooking time for different cooking functions. The preset timer is available up to 24 hours, and is not applicable to cake baking, steaming and reheating functions.

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- After you press the menu button (ⓘ) and left it in idle for 15 seconds, your rice cooker will sound and return to waiting mode automatically.
- Once the timer button enters preset mode, the preset time button will not respond.
- The default preset time is 4 hours.
- Press the hour button (⌚) once to increase the timer by 1 hour. Press and hold the minute button (⌚) to fast forward the timer by 10 minutes.
- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

Tip

- You can press the off button (⏻) or unplug the rice cooker to turn off the keep warm function or when not in use.

Setting up child lock

To protect your child from starting the rice cooker, you may set up the child lock function.

2 Cleaning and Maintenance

Note

- Wipe the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the outer lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the rice cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.

Exterior

Surface of the outer lid and outside of the main body:

- Wipe with a cloth dampened with soap water.
- ONLY use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control buttons.

Accessories

Rice scoop, soup ladle, inner pot, power cord holder, scoop holder, steam basket, steam vent cap, and inner lid:

- Soak in hot water and clean with sponge.

3 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.

4 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

5 Troubleshooting

If you encounter problems when using this rice cooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The lights on the buttons do not go on.	There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.
The display does not function.	The rice cooker is not connected to the power supply. If there is no power supply, the power failure backup function does not work and the display does not function.

The battery for the display runs out of power. Take the appliance to your Philips dealer or a service center authorized by Philips to have the battery replaced.

There is not enough water. Add water according to the scale on the inside of the inner pot.

You did not press the cooking button (ⓘ).

The heating element is damaged, or the inner pot is deformed. Take the cooker to your Philips dealer or a service center authorized by Philips.

Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on.

The rice is scorched.

You have not rinsed the rice properly. Rinse the rice until the water runs clear.

Water spills out of the inner pot during cooking.

Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.

The cake result is too hard.

Please use cake mix and follow the instructions provided in the user manual.

I cannot get to the desired cooking function.

Press the menu button (ⓘ) repeatedly to select the desired menu as shown by the LED indicator.

Rice smells bad after cooking.

Clean the inner pot with some washing detergent and warm water.

Error message (E1, E2, E3, or E4) appears on the display.

There has been a power failure during cooking. Take the appliance to your Philips dealer or a service center authorized by Philips.

ZH-S

感谢您的惠顾，欢迎光临飞利浦！
为了您能充分享受飞利浦提供的支持，请在 www.Phillips.com/welcome 上注册您的产品。

1 包装盒内物品

模糊控制电饭煲主装置
飯勺
湯勺
量杯
用戶手冊
安全指南
保修卡

概述

① 密封圈	⑦ 电源插头
② 可分离式蒸汽孔帽	⑧ 加热元件
③ 内胆	⑨ 电饭煲把手
④ 锅盖打开键	⑩ 水位指示
⑤ 控制面板	⑪ 可拆卸内盖
⑥ 机身	⑫ 外盖

控件概述

⑬ 菜单按钮	⑬ 烹饪按钮
⑭ 小时按钮	⑭ 菜单按钮
⑮ 分钟按钮	⑮ 开始按钮
⑯ 预设时间按钮	⑯ 控制面板
⑰ 保温/关闭按钮	

规格

型号	容量
HD3075	4.0 升
HD3077	5.0 升

首次使用之前

1 从内锅中取出所有附件。取出内锅和加热元件之间的隔板。

2 首次使用前，请彻底清洗电饭煲的部件（请参阅“清洁”一章）。

注意

- 开始使用前，确保所有电饭煲部件均已完全干燥。


注意

- 每次煮米通常可以煮 2 碗米饭。不要超过锅内标示的量。1 杯米约为 180 毫升。
- 为避免损伤内锅的不粘涂层，应使用另外的餐具淘米。
- 内锅的水位标记只是一个参考。您始终可以根据米的品种及个人喜好调整水位。
- 请确保内锅的外表面是清洁且干燥的，并且没有其他杂物黏附在加热元件及保温壁上。

注意

- 请勿超过内锅中标示的量，也不要超过最高水位指示，否则可能导致电饭煲溢出。
- 按菜单按钮 (ⓘ) 后，将其闲置 15 秒钟，电饭煲将发出声音并自动返回等待模式。
- 取以预设时间为 4 小时。
- 按一次小时按钮 (⌚) 可使计时器增加 1 小时。按分钟按钮 (⌚) 可使计时器快速 10 分钟。

Sử dụng nồi cơm điện
Menggunakan pemasak nasi fuzzy
使用模糊控制电饭煲

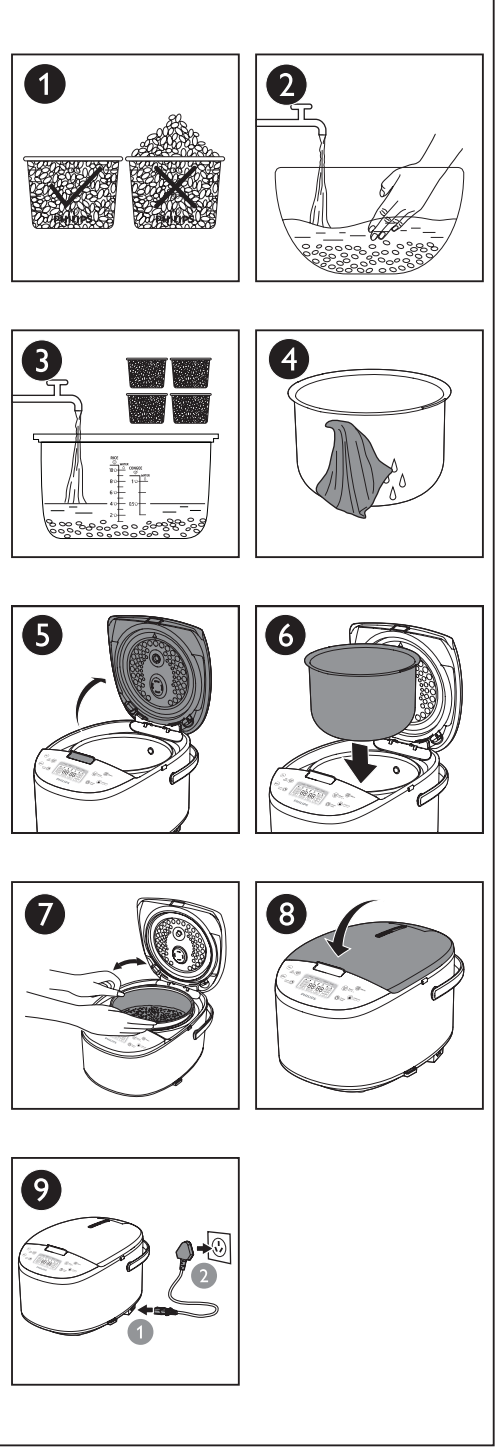

煮饭

HD3075 和 HD3077 有三种煮饭功能。

烹饪功能	8 杯米 (HD3075) 和 10 杯米 (HD3077) 的估计烹饪时间
正常煮饭 (ⓘ)	45 分钟
快速煮饭 (ⓘ)	40 分钟
烹饪少量米饭 (ⓘ)	35 分钟

煲仔饭

烹饪功能	2 - 4 杯米的估计烹饪时间 (HD3075 和 HD3077)
煲仔饭 (ⓘ)	1 小时 20 分钟

煮粥和做汤

烹饪功能	估计的烹饪时间
煮粥 (ⓘ)	1 小时 (1 杯米，适用于 HD3075 和 HD3077)
做汤 (ⓘ)	1 小时

制作泡饭

烹饪功能	8 杯米 (HD3075) 和 10 杯米 (HD3077) 的估计烹饪时间
泡饭 (ⓘ)	35 分钟

提示

- 按一次分钟按钮 (⌚) 可使计时器增加 1 分钟。按分钟按钮 (⌚) 可使计时器快速 10 分钟。
- 您可以选择 25 至 59 分钟之间的烹饪时间。

烘焙蛋糕

烹饪功能	估计的烹饪时间
烘焙蛋糕 (ⓘ)	45 分钟

注

- 按菜单按钮 (ⓘ) 后，将其闲置 15 秒钟，电饭煲将发出声音并自动返回等待模式。
- 按快速按钮 (ⓘ) 后，将其闲置 15 秒钟，电饭煲将发出声音并自动返回等待模式。
- 请使用厨房手套或抹布，因为内锅会非常烫。
- 不用时，您可以按关闭按钮 (⏻) 或拔掉电饭煲的电源插头以关闭保温功能。

提示

- 按一次分钟按钮 (⌚) 可使计时器增加 1 分钟。按分钟按钮 (⌚) 可使计时器快速 10 分钟。

蒸食品

烹饪功能	估计的烹饪时间
蒸食品 (ⓘ)	20 分钟

注

- 请勿用厨房手套或抹布，因为盘子和蒸篮会非常烫。
- 请勿超过内锅中标示的量，也不要超过最高水位指示，否则可能导致电饭煲溢出。
- 您可以根据需求调整水位。
- 电饭煲进入煲煲模式后，预设时间按钮将不会起作用。
- 默认预设时间为 4 小时。
- 不用时，您可以按关闭按钮 (⏻) 或拔掉电饭煲的电源插头以关闭保温功能。

提示

- 按一次分钟按钮 (⌚) 可使计时器增加 1 分钟。按分钟按钮 (⌚) 可以快进方式调整分钟单位。
- 您可以选择 10 至 40 分钟之间的烹饪时间。

加热

烹饪功能	估计的烹饪时间
加热 (ⓘ)	25 分钟

注

- 按菜单按钮 (ⓘ) 后，将其闲置 15 秒钟，电饭煲将发出声音并自动返回等待模式。
- 不用时，您可以按关闭按钮 (⏻) 或拔掉电饭煲的电源插头以关闭保温功能。

提示

- 按一次分钟按钮 (⌚) 可使计时器增加 1 分钟。按分钟按钮 (⌚) 可以快进方式调整分钟单位。
- 您可以选择 25 至 59 分钟之间的烹饪时间。

预约烹饪

您可以为不同的烹饪功能预设延迟烹饪时间。预设计时器最长可达 24 小时，但不适用于烘焙蛋糕、蒸食品和加热功能。

注意

- 请勿超过内锅中标示的量，也不要超过最高水位指示，否则可能导致电饭煲溢出。
- 按菜单按钮 (ⓘ) 后，将其闲置 15 秒钟，电饭煲将发出声音并自动返回等待模式。
- 默认以预设时间为 4 小时。
- 按一次小时按钮 (⌚) 可使计时器增加 1 小时。按分钟按钮 (⌚) 可使计时器快速 10 分钟。

提示

- 不用时，您可以按关闭按钮 (⏻) 或拔掉电饭煲的电源插头以关闭保温功能。

设置儿童锁


为防止儿童启动电饭煲，可以设置儿童锁功能。

2 清洁和保养


注意

- 在开始清洗之前，请拔掉电饭煲的电源插头。
- 等到电饭煲完全冷却后再开始清洗。



Rice cooking
ข้าวสวย
飯
Nấu cơm
Apa dalam kotak ini
煮飯
飯盒內物品

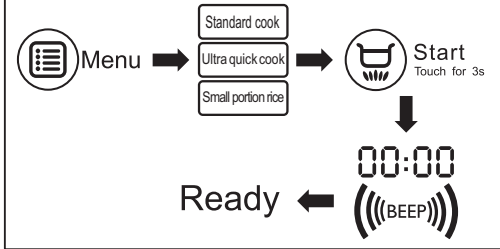

Clay pot rice cooking
砂鍋飯
飯
Nấu cơm bằng nồi đất
Masakan nasi merendih
煲仔飯

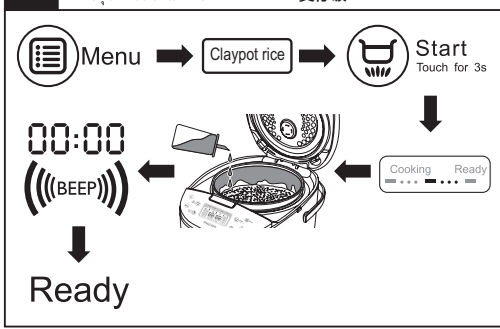

Baking cake
เค้ก
蛋糕
Nướng bánh
Mem bakar kek
烘焙蛋糕

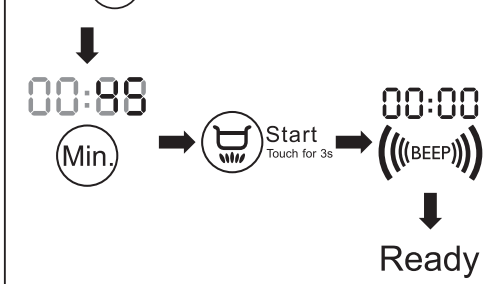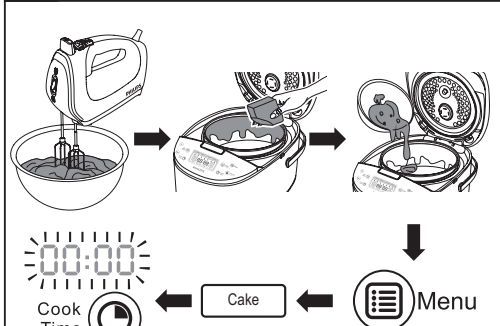

内部

- 用干净的湿布进行擦拭。
- 确保清理掉粘在电饭煲上的所有食物残渣。

加热元件:

- 用干净的湿布进行擦拭。
- 用干净的湿布或牙签清理食物残渣。

外部

- 用湿布或毛巾的水布进行擦拭。
- 只能使用柔软的干布擦拭控制面板。
- 确保清理掉控制按钮周围的所有食物残渣。

饭勺、汤勺、内锅、电线插头、饭勺支架、蒸篮、蒸汽孔帽和内壁:

- 浸泡到热水中并用海绵清洗。

3 环境

弃置产品时，请不要将其与一般生活垃圾放在一起，应将其交官方法指定的回收中心，这样有利于环保。

4 保修与服务

如果需要服务或信息，或有任何疑问，请访问飞利浦网站：www.philips.com，或联系所在国家/地区的飞利浦客户服务中心。可在全球保修卡中找到其电话号码。如果您所在的

