



EN	User manual	SV	Användarhandbok
DE	Benutzerhandbuch	NL	Gebruiksaanwijzing
DA	Brugervejledning	IT	Manuale utente
EL	Εγχειρίδιο χρήσης	PT	Manual do utilizador
FI	Käyttöohje	TR	Kullanım kılavuzu
ES	Manual del usuario	AR	دليل المستخدم
NO	Brukerhåndbok	FA	راهنمای کاربر
FR	Mode d'emploi		

**PHILIPS**



Specifications are subject to change without notice.  
© 2016 Koninklijke Philips N.V.  
All rights reserved.

4241 210 20302

## English

### 1 Your slow juicer

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome). Read this user manual carefully before you install and use the unit. Save it for future reference.

### 2 Important

Read this user manual carefully before you use the appliance, and save it for future reference.


### Danger

- Do not immerse the main unit of the slow juicer in water, any other fluid, nor rinse it under the tap. Use only a moist cloth to clean.


### Warning

- Check if the voltage indicated on the slow juicer corresponds to the local power voltage before you connect it.
- Do not connect the appliance to an external timer to prevent danger.
- Only connect the slow juicer to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- If you detect cracks in the sieve, the driving shaft, or any accessories is damaged in any way, do not use the appliance anymore and contact the nearest Philips service center. Do not replace parts of the appliance yourself.
- This appliance shall not be used by children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards.
- For their safety, do not allow children to play with the appliance.
- Keep the appliance and its power cord out of the reach of children. Do not hang the power cord over the desk or table edge, where you place the appliance.
- To prevent a short circuit or an electric shock, make sure that your hands are dry before you insert the plug into the power outlet and switch on the appliance.
- Never let the appliance run unattended.
- Never reach into the feeding tube and the main unit with your fingers or an object while the slow juicer is running. Never use any objects to replace the pusher. Keep your eyes from the feeding tube to avoid accidents.

1

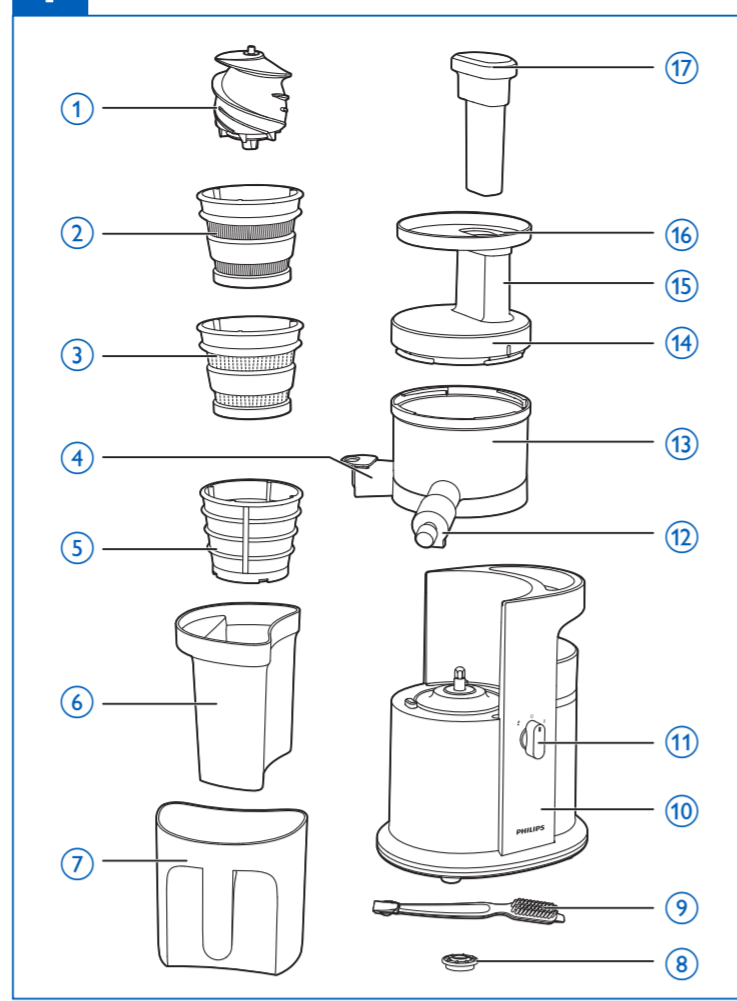

4

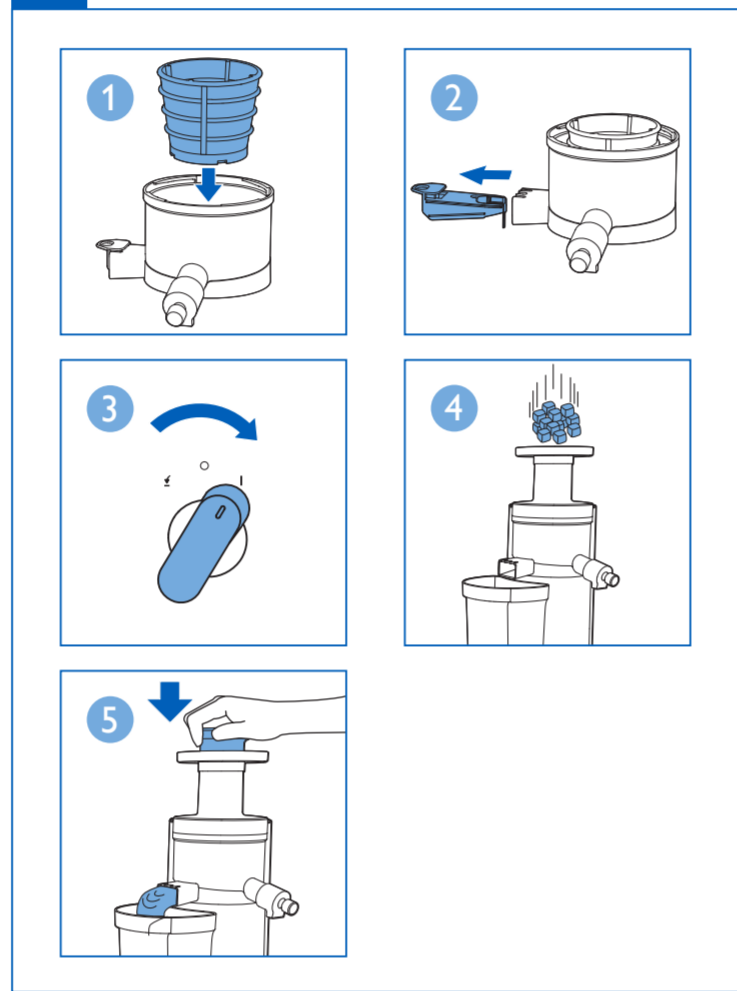

### Caution

- This appliance is intended for household use only.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not use this appliance on an unstable or uneven surface.
- Before you insert the plug into the power outlet, make sure that the appliance is assembled correctly.
- Unplug the appliance immediately after use.
- Switch off and unplug the appliance from the power outlet after use. Wait till the main unit and the driving shaft stop turning, then you can take out any accessories from the main unit.
- Cut large ingredients into pieces that fit into the feeding tube. Remove stones, cores, seeds, and thick peels in fruits or vegetables before juicing.
- Do not exert too much pressure on the pusher, since this would affect the quality of the end result and it could even cause the driving shaft to come to a halt.
- Food coloring can discolor components. This is normal and has no impact on use.
- Do not use the appliance continuously for more than 30 minutes. This is to protect the lifetime of the appliance.
- When the appliance is stopped and cannot automatically reverse, turn the control knob to OFF. Then, turn the control knob to the REV position to clear the ingredients from the appliance. Turn the control knob to ON again to use the appliance. If it is still blocked, clean the driving shaft before you re-use again. This is to protect the appliance.
- To prevent damages due to heat deformation, never use water with a temperature of over 60°C or a sterilizer to clean all components.
- Do not use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol, alcohol or acetone to clean the appliance.


### EMF

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.


### 3 Overview (fig. 1)

① Driving shaft	⑩ Main unit
② Fine sieve	⑪ Control knob
③ Coarse sieve (HR1884 only)	⑫ Detachable juice spout
④ Detachable pulp spout	⑬ Juice collector
⑤ Sorbet sieve	⑭ Lid
⑥ Pulp container	⑮ Feeding tube
⑦ Juice jug	⑯ Tray
⑧ Backup sealing ring	⑰ Pusher
⑨ Cleaning brush	

2

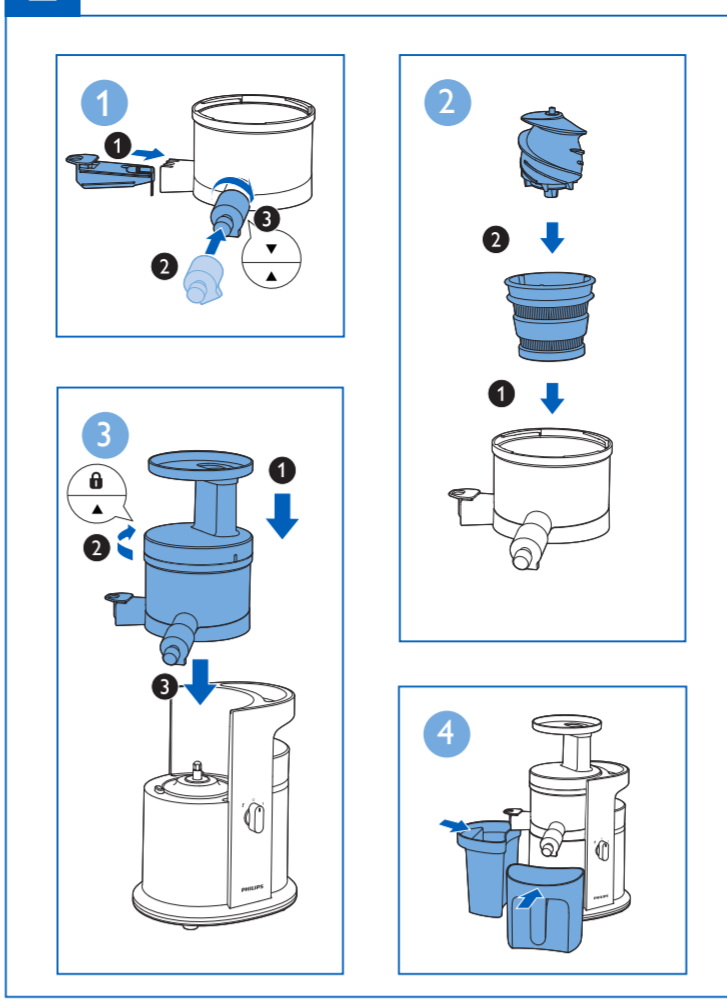

5

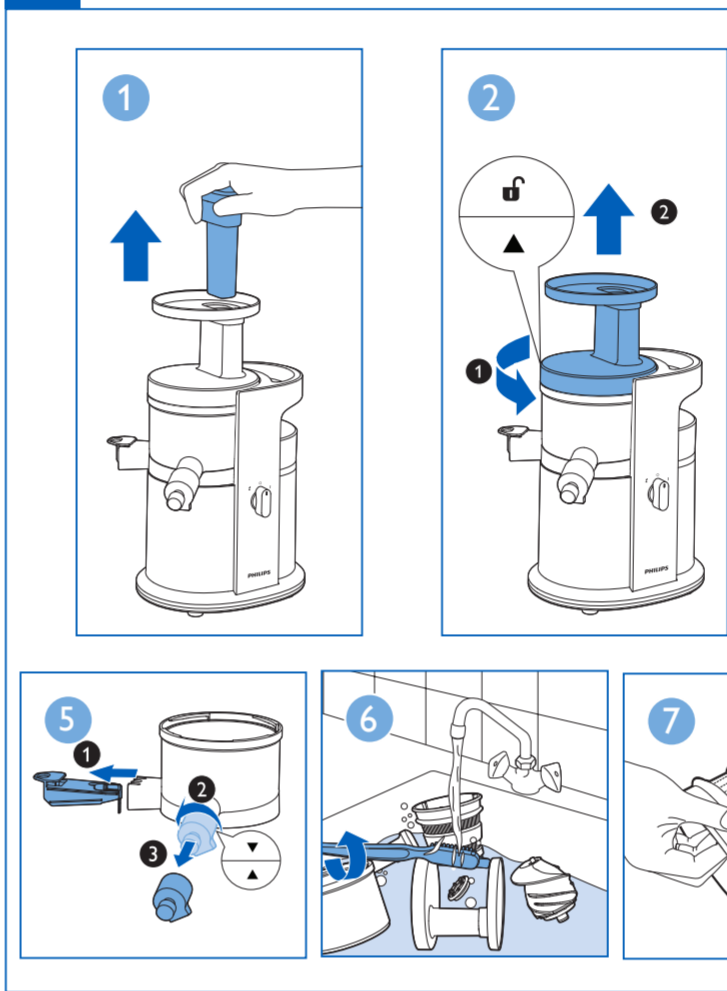


### 4 Before first use

Take out all the accessories and clean the parts of the slow juicer thoroughly before using it for the first time (see chapter "Cleaning"). Make sure all parts are completely dry before you start using the slow juicer.

### 5 Assembling the slow juicer (fig. 2)

#### Note

- Make sure the sealing ring is firmly inserted into the juice collector before using the appliance.
- If the sealing ring on the juice collector is aging or damaged, replace it with the backup sealing ring.
- There is a switch on the juice spout. Pull it outward to open the spout, and push it inward to close the spout.

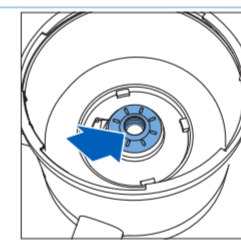

- Insert the detachable pulp spout into the pulp outlet. Insert the detachable juice spout into the juice outlet, turn the spout clockwise until the ▲ icon on the spout and the ▼ icon on the outlet are aligned.
- Put the sieve into the juice collector first, and then place the driving shaft into the sieve.
- Place the lid onto the juice collector. Turn the lid clockwise until the lock icon on the lid and the ▲ icon on the juice collector are aligned.
- Align the ▼ icon on the juice collector and the ▲ icon on the main unit, and then insert the juice collector into the main unit.
- Put the pulp container and juice jug under the outlets respectively.

### 6 Using the slow juicer (fig. 3)

#### Caution

- Never insert your fingers or an object into the feeding tube.
- When the appliance is stopped and cannot automatically reverse, turn the control knob to the off position "0". Then, turn the control knob to the reverse position "4" to clear the ingredients from the appliance. Turn the control knob to "1" again to use the appliance. If it is still blocked, clean the driving shaft and remove food residues in it before you re-use again. This is to protect the appliance.
- Do not exert too much pressure on the pusher, as this could affect the quality of the end result and it could even cause the driving shaft to come to a halt.

#### Note

- The appliance will only function if all parts have been properly assembled and the lid has been properly locked in place with the juice collector.
- Before juicing, make sure that the detachable pulp spout is assembled properly, and the juice jug and pulp container are put under the corresponding spouts.
- Cut the ingredients into pieces that fit into the feeding tube.
- The coarse sieve is more suitable to juice soft fruits or vegetables such as tomatoes and berries.
- During processing, the appliance may vibrate slightly. This is normal.
- To prevent juice from dripping onto the table, push the spout switch inward to close the spout before moving the juice jug from under the juice outlet.
- Drink the juice immediately after you have extracted it. If it is exposed to air for some time, the juice loses its taste and nutritional value.

#### Tip


- Use fresh fruit and vegetables, as they contain more juice. Fruits like apples, pears, pineapples, grapes, pomegranates, oranges and melons, and vegetables like carrots, cucumbers, tomatoes, celery stalks are suitable for processing in the slow juicer.
- When juicing a large amount of hard fruits or vegetables such as carrots, celery stalks and spinach, the rubber pad on the juice collector might be pushed open, and the appliance might be blocked. To help avoid the situation, cut the fruits or vegetables into small cubes or pieces.
- Remove thick peels, e.g. those of pineapples, oranges and pomegranates. You do not have to remove thin peels or skins.
- If you want to juice fruits with stones, such as peach, plum or cherry, remove the stone before juicing.
- The slow juicer is not suitable for processing very hard and/or fibrous fruits or vegetables such as sugar cane. Very soft and/or starchy fruits, such as bananas, papayas, avocados, figs and mangoes are also not suitable for processing in the slow juicer. For very soft fruits, you can freeze them in the refrigerator and use the sorbet sieve to make sorbet.

### Using the sorbet sieve (fig. 4)

#### Note

- Replace the fine/coarse sieve with the sorbet sieve before use.
- Make sure to remove the detachable pulp spout before use.
- Peel fruits and remove the cores. Cut them into small cubes first (around 2cm x 2cm), and then put them in the refrigerator. Freeze the fruits in the refrigerator for at least 10 hours before making sorbet in the slow juicer.
- Push the switch inward to close the juice spout when using the sorbet sieve.

3

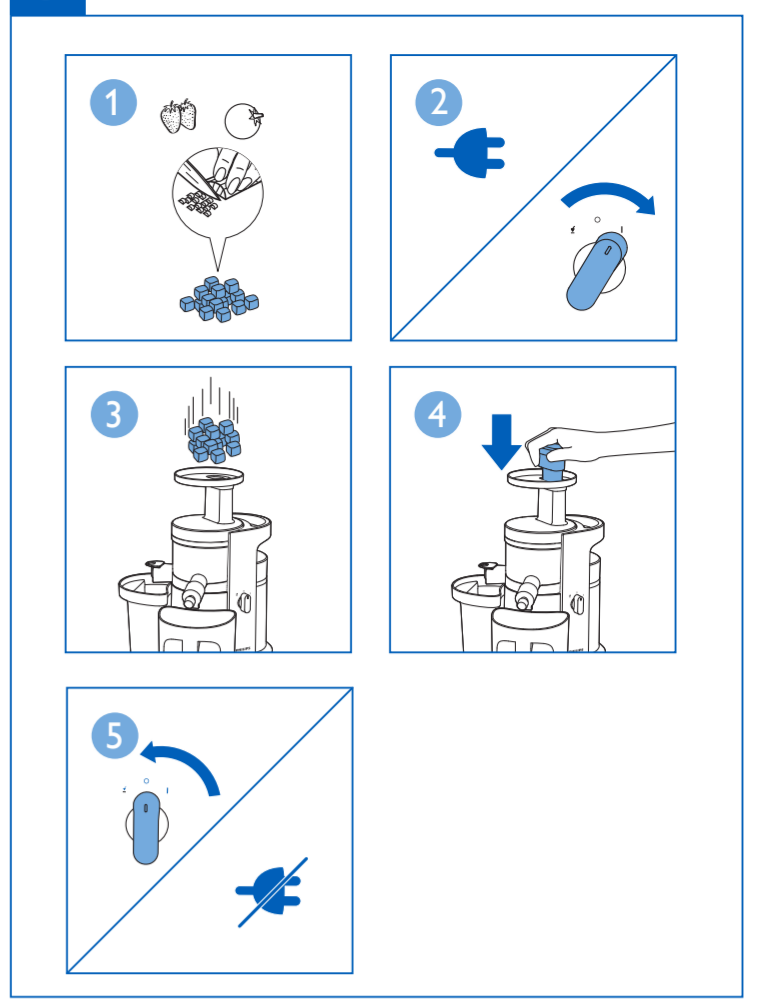

### 7 Cleaning (fig. 5)

#### ! Cautions

- Before cleaning, make sure the appliance is switched off and the sieve has stopped rotating.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol, petrol or acetone to clean the appliance.
- Never immerse the motor unit in water nor rinse it under the tap.
- Do not clean the sieve with your hands to avoid getting cut. Use the provided brush for this matter.

#### Note

- Apart from the main unit, lid, pusher, and the brush, all the other parts are dishwasher proof.
- Wipe the appliance with a soft cloth and make sure the appliance is clean and dry before storage.


#### \* Tip

- The appliance is easier to clean if you do so immediately after use.
- Use both ends of the cleaning brush to poke out the pulp stuck in the detachable parts.

- Switch off the appliance and unplug it. Wait until the sieve has stopped rotating.
- Take out the pusher.
- Turn the lid anti-clockwise until the lock icon on the lid aligns with the ▲ icon on the juice collector, and then remove the lid.
- Remove the juice collector from the main unit.
- Take out the driving shaft, sieve and sealing ring.
- Pull out the detachable pulp spout; turn the detachable juice spout anti-clockwise until the ▲ icon on the spout and the ▼ icon on the outlet are aligned, then pull it out.

#### \* Tip

- To detach the rubber pad on the detachable pulp spout, pull the pad out of the two retaining slots first, and then take the other side of the rubber pad out. To reattach it, fix the rubber pad into the retaining slots first, and then insert the other side into the spout.

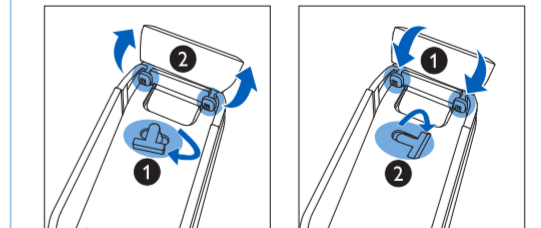

- Clean the detachable parts with the provided cleaning brush in warm water with some washing-up liquid and rinse them under the tap.
- Use the silicone end of the cleaning brush to wipe off the pulp on the sieve, and then brush away the pulp stuck in the holes.
- Wipe the main unit with a damp cloth.

### 8 Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

### 9 Guarantee and service

If you have a problem, need service or need information, see [www.philips.com/support](http://www.philips.com/support) or contact the Philips Consumer Care Center in your country.













