

EN User manual
MS-MY Manual pengguna


VI Hướng dẫn sử dụng
ZH-HK 使用手冊



PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2023 © Versuni Holding B.V.

6608.000.08.18.5 (27/04/2023)

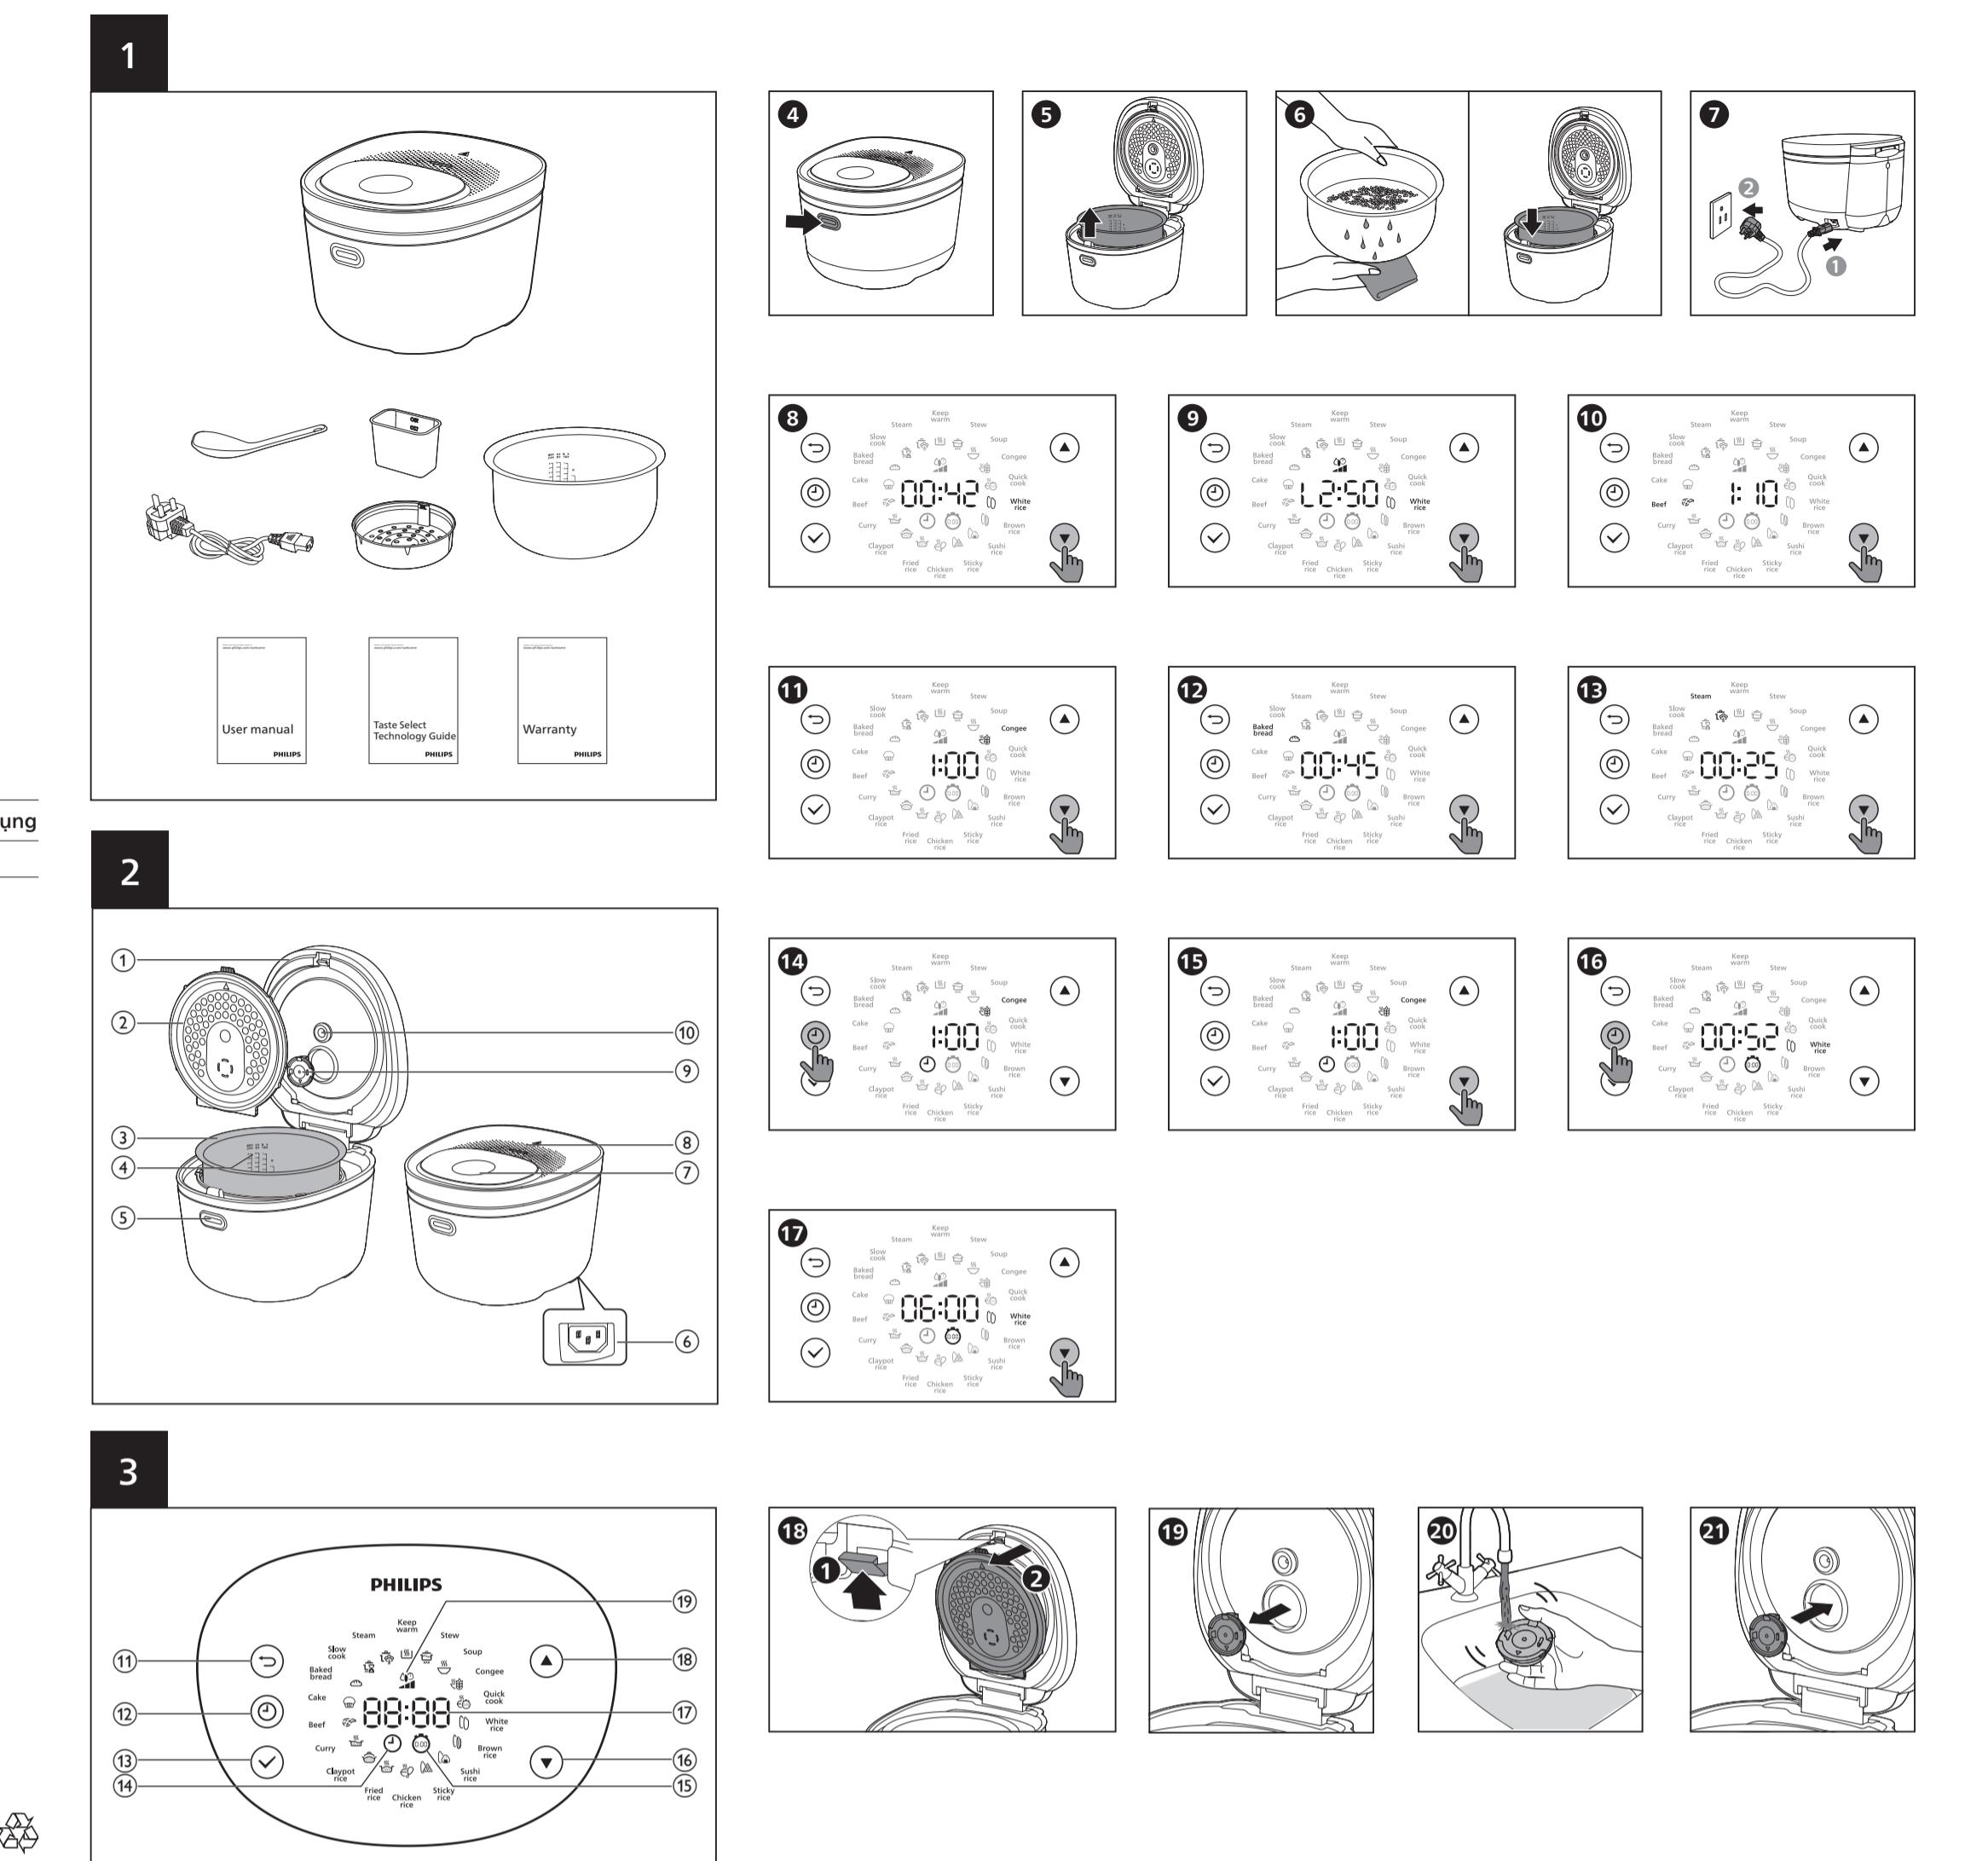

English

1 Important

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

• The appliance must not be immersed.

Warning

• This appliance shall not be used by children from 0 year to 8 years.
• This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• Children should be supervised to ensure that they do not play with the appliance.

• Keep the appliance and its cord out of reach of children aged less than 8 years.

• Cleaning and user maintenance shall not be made by children.

• This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.

• This appliance is intended to be used in household and similar applications such as:

• Staff kitchen areas in shops, offices and other working environments;
• Farm houses;

• By clients in hotels, motels and other residential type environments;

• Bed and breakfast type environments.

• If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.

• Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.

The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

• Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.

• Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.

• Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the power outlet.

• Do not plug in the appliance or press any of the buttons on the control panel with wet hands.

• WARNING: Make sure to avoid spillage on the power connector to avoid potential hazard.

• WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.

• According to the instructions prescribed in this user manual, use a soft cloth to clean the rice after cooking, remove all the food and make sure to remove all the food residues stuck to the appliance.

• Do not place the power cord under the appliance when in use.

• When placing the steaming basket, avoid touching the side wall of the inner pot, otherwise it may cause deformation due to high temperature.

Caution

• CAUTION: Surface of the heating element is subject to residual heat after use.
• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not expose the appliance to high temperatures, nor place it on a working or a hot stove or cooker.

• Place the appliance on a stable, horizontal, and level surface.

• Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.

• Do not place the inner pot directly over an open fire to cook rice.

• Do not use the inner pot if it is deformed.

• The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.

• Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.

• Do not lift and move the appliance while it is operating.

• Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.

• Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.

• Only use the cooking utensils provided. Avoid using sharp utensils.

• To avoid scratches, it is not recommended to cook ingredients with crustaceous shells. Remove the hard shells before cooking.

• Do not insert metallic objects or alien substances into the steam vent.

• Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.

• Always let the appliance cool down before you clean or move it.

- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

2 Your Rice cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box (fig. 1)

Rice cooker main unit	Measuring cup
Rice and soup 2 in 1 spoon	Power cord
Steaming basket	User manual
Warranty card	Taste Select Technology Guide

4 Overview

Product overview (fig. 2)

① Top lid	⑥ Power socket
② Detachable inner lid	⑦ Control panel
③ Inner pot	⑧ Steam vent
④ Water level indications	⑨ Steam vent cap
⑤ Lid release button	⑩ Steam valve

Controls overview (fig. 3)

⑪ Cancel button	⑯ Menu/Time selection button
⑫ Timer	⑰ Time display
⑬ Confirmation/Start button	⑯ Menu/Time selection button
⑭ Timer indicator	⑯ Rice hardness indicator
⑮ Preset time indicator	

Cooking program

Cooking function	Default cooking time	Adjustable cooking time
Steam	25 minutes	25-59 minutes
Slow cook	4 hours	3-10 hours
Baked bread	45 minutes	30 minutes- 2 hours
Cake	45 minutes	NA
Beef	90 minutes	1-4 hours
Curry	60 minutes	1-2 hours
Claypot rice	60 minutes	NA
Fried rice	25 minutes	NA
Chicken rice	50 minutes	NA
Sticky rice	70 minutes	NA
Sushi rice	48 minutes	NA
Brown rice	52 minutes	NA
	42 minutes/L1	NA
White rice*	50 minutes/L2	NA
	35 minutes/L3	NA
	25 minutes/L4	NA
Quick cook	25 minutes	NA
Congee	60 minutes	1-3 hours
Soup	2 hours	1-4 hours
Stew	2 hours	2-8 hours
Keep warm	12 hours	NA

*L1=Soft, L2=Medium-Soft, L3=Medium, L4=Hard

Rice cooking

There are 8 cooking function: Claypot rice, Fried rice, Chicken rice, Sticky rice, Quick cook, White rice, Brown rice, Sushi rice.

Follow the steps in "Preparations before cooking".

2 Press ⑯ or ⑰ to select one of the cooking menus (fig. 8).

↳ The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

3 Press ⑯ or ⑰ to confirm, the Rice cooker starts working in the selected mode.

When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.

6 The Rice cooker will be in keep-warm mode automatically.

↳ The keep-warm indicator lights up.

7 After cooking, make sure the steam vent, inner lid and inner pot is cleaned thoroughly.

8 Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

9 Make sure the inner pot is in proper contact with the heating element.

10 The keep-warm indicator lights up.

11 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

12 Press ⑯ or ⑰ to confirm, the Rice cooker starts working in the selected mode.

13 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.

14 The Rice cooker will be in keep-warm mode automatically.

15 After cooking, make sure the steam vent, inner lid and inner pot is cleaned thoroughly.

16 Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

17 Make sure the inner pot is in proper contact with the heating element.

18 The keep-warm indicator lights up.

19 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

20 Press ⑯ or ⑰ to confirm, the Rice cooker starts working in the selected mode.

21 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.

22 The Rice cooker will be in keep-warm mode automatically.

23 After cooking, make sure the steam vent, inner lid and inner pot is cleaned thoroughly.

24 Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

25 Make sure the inner pot is in proper contact with the heating element.

26 The keep-warm indicator lights up.

27 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

28 Press ⑯ or ⑰ to confirm, the Rice cooker starts working in the selected mode.

29 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.

30 The Rice cooker will be in keep-warm mode automatically.

31 After cooking, make sure the steam vent, inner lid and inner pot is cleaned thoroughly.

32 Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

33 Make sure the inner pot is in proper contact with the heating element.

34 The keep-warm indicator lights up.

35 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

36 Press ⑯ or ⑰ to confirm, the Rice cooker starts working in the selected mode.

37 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.

38 The Rice cooker will be in keep-warm mode automatically.

39 After cooking, make sure the steam vent, inner lid and inner pot is cleaned thoroughly.

40 Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

41 Make sure the inner pot is in proper contact with the heating element.

42 The keep-warm indicator lights up.

43 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.

Nota

- Anda boleh menambahkan lebih banyak bahan mengikut resipi untuk menu nasi yang berbeza.
- Paras atau peralatan dalam perik dalam hanyalah penunjuk. Anda boleh mengalaskan atau aras untuk jenis bijiran yang berlainan mengikut pilihan anda.
- Selain mengikut penjurian para, anda juga boleh menambahkan beras dan air pada nisbah 1:1.3 untuk memasak nasi.
- Jangan melebihi isipadu yang ditunjukkan mahupun melebihi paras air maksimum kerani ini boleh menyebabkan perkakas melimpah.
- Selesaikan proses memasak dilakukan, anda boleh memekan **Untuk memuliharkan proses semasa dan perkakas akan berlaku kepada mod pemilihan menu.**

Daging lembu/Kari

- Masukkan semua ramuan mengikut resipi.
- Ikuti langkah dalam "Persediaan sebelum memasak".
- Tekan **④** atau **⑤** untuk memilih fungsi yang anda inginkan (raj. 10).
 - Penanda fungsi memasak yang dipilih menyalia, masa memasak laju akan dipaparkan pada skrin.
- Tekan **④** untuk mengesahkan, Pemasak nasi akan mula beroperasi dalam mod yang dipilih.
- Pemasak nasi akan berada dalam mod simpan panas secara automatik.
- Penunjuk simpan panas menyalia.

Nota

- Dengan program ini, anda boleh melayukan sayuran atau melayurkan daging selama 10 minit sebelum memasak.

Bubur, Sup dan Stew

- Masukkan ramuan dan air ke dalam perik dalam.
- Ikuti langkah dalam "Persediaan sebelum memasak".
- Tekan **④** atau **⑤** untuk memilih fungsi yang anda inginkan (raj. 11).
 - Penanda fungsi memasak yang dipilih menyalia, masa memasak laju akan dipaparkan pada skrin.
- Tekan **④** untuk mengesahkan, Pemasak nasi akan mula beroperasi dalam mod yang dipilih.
- Apabila selesai memasak, anda akan dengar bunyi bip 4 kali dan lampu fungsi memasak yang dipilih akan mati.
- Pemasak nasi akan berada dalam mod simpan panas secara automatik.
- Penunjuk simpan panas menyalia.

Nota

- Jangan melebihi paras air maksimum yang ditandakan pada perik dalam kerana ini boleh menyebabkan Pemasak nasi melimpah.

Membakar kek atau roti

- Campurkan semua bahan sehingga sebati dan masukkan ke dalam perik dalam.
- Ikuti langkah dalam "Persediaan sebelum memasak".
- Tekan **④** atau **⑤** untuk memilih Kek atau Roti bakar (raj. 12).
- Tekan **④** untuk mengesahkan, Pemasak nasi akan mula beroperasi dalam mod yang dipilih.
- Apabila selesai memasak, anda akan dengar bunyi bip 4 kali dan lampu fungsi memasak yang dipilih akan mati.
- Pemasak nasi akan berada dalam mod simpan panas secara automatik.
- Penunjuk simpan panas menyalia.

Nota

- Jangan melebihi paras air maksimum yang ditandakan pada perik dalam kerana ini boleh menyebabkan Pemasak nasi melimpah.

- ## Mengukur makanan
- Sukat beberapa cawan air dengan cawan penyukat.
 - Tuang air ke dalam perik dalam.
 - Letakkan bakul kukus di dalam perik dalam.
 - Letakkan makanan ke dalam bakul mengukur.
 - Ikuti langkah dalam "Persediaan sebelum memasak".
 - Tuang sedikit air ke dalam makanan agar makanan tidak menjadi terlalu kering. Jumlah air bergantung pada jumlah makanan.
 - Tekan **④** atau **⑤** untuk Kukus (raj. 13).
 - Tekan **④** untuk mengesahkan, Pemasak nasi akan mula beroperasi dalam mod yang dipilih.
 - Apabila selesai memasak, anda akan dengar bunyi bip 4 kali dan lampu fungsi memasak yang dipilih akan mati.
 - Pemasak nasi akan berada dalam mod simpan panas secara automatik.
 - Penunjuk simpan panas menyalia.

Laraskan masa memasak

Nota

- Sila rujuk bahagian "Program memasak" untuk menyemak program yang tidak boleh melarasakan masa memasak.
- Anda boleh menetapkan masa mulai tertunda dari 1-24 jam untuk semua fungsi memasak.

1 Pilah program memasak yang diinginkan.

- Tekan **④** untuk mengakses tetapan masa memasak (raj. 14).
 - Penanda masa memasak **②** dipaparkan pada skrin.
- Tekan **④** atau **⑤** untuk melarasakan masa memasak yang anda kehendaki (raj. 15).
- Tekan **④** untuk mengesahkan, Pemasak nasi mula beroperasi dalam mod yang dipilih.

Laraskan masa pratetap

Nota

- Masa yang diperlukan tidak tersedia untuk Kek, Roti bakar dan Kukus.
- Proses memasak akan selesai sebelum masa pratetap berlaku. Jika masa pratetap yang anda tetapkan lebih singkat daripada masa memasak, perkakas akan memulakan proses memasak dengan segera.

Pemasak boleh dipratetap dari 1 jam sehingga 24 jam.

- Pilih fungsi yang dikehendaki.
- Tekan **④** untuk mengakses tetapan masa pratetap (raj. 16).
 - Penanda masa memasak **②** dipaparkan pada skrin.
- Tekan **④** atau **⑤** untuk menetapkan masa memasak yang anda kehendaki (raj. 17).
- Tekan **④** untuk mengesahkan, Pemasak nasi akan mula beroperasi dalam mod yang dipilih.

6 Pembersihan dan Penyelenggaraan

Nota

- Cabut palam Pemasak nasi setiap kali sebelum anda mula membersikannya.
- Tunggu sehingga Pemasak nasi telah sejuk sekutupnya sebelum membersikannya.

Tudung dalam

- Tarik tudung dalam ke kuar untuk menanggalkan tudung dalam daripada tudung atas untuk dibersihkan (raj. 18).
- Rendam di dalam air panas dan bersihkan dengan span.
- Pastikan semua sisa makanan yang melekat pada Pemasak nasi dibuang.
- Pasang semula tudung dalam pada tudung atas.

Tukup bolong stim

- Ikuti langkah di atas untuk menanggalkan tudung dalam.
- Tanggalkan tukup bolong stim daripada tudung dalam (raj. 19).
- Bersihkan tukup bolong stim dengan air paip (raj. 20). Pastikan tiada sisa makanan tertinggal. Pasang semula kotak stim pada tudung dalam selepas pembersihan selesai (raj. 21).

Dalaman

- Di bahagian dalam tudung atas dan badan utama:
- Lap dengan kain lembap.
 - Pastikan semua sisa makanan yang melekat pada Pemasak nasi dibuang.

Luaran

- Permuak tudung atas dan bahagian luar badan utama:
- Lap dengan kain lembap.
 - Bersihkan sisa makanan dengan span.
 - Pasang semula tudung dalam pada tudung atas.

Aksesori

- Spatul dan perut dalam:
- Rendam di dalam air panas dan bersihkan dengan span.

7 Kitar Semula

- Jangan buang produk dengan sampah rumah biasa di akhir hayatnya. Sebaliknya, bawa perkakas ini pusat pengurusan kerasan yang diebabkan oleh pihak ketiga. Untuk maklumat lanjut tentang bagaimana mengikuti petua, sila lawati web kami www.philips.com/support.

8 Jaminan dan sokongan

- Versuni mewarawarkan jaminan dua tahun selepas pembelian produk ini. Jaminan ini tidak sah jika terdapat kerasan yang diebabkan oleh pihak ketiga atau kerasan yang tidak dilakukan dengan baik. Jaminan kami tidak menjenayah hak anda menurut undang-undang sebagai pengguna. Untuk maklumat lanjut atau mengunkanan jaminan, sila lawati web kami www.philips.com/support.

9 Spesifikasi

Nombor Model	HD4539
Output kuasa yang ditarafkan	1250W
Kapasiti bertaraf	4.0L
Kapasiti bersar	1.5L

10 Penyelesaian masalah

Jika anda menghadapi masalah semasa menggunakan Pemasak nasi ini, periksa perkara-perkara berikut sebelum meminta servis. Jika anda tidak dapat menyelesaikan masalah ini, hubungi Pusat Layanan Pelanggan Philips di negara anda.

Masalah	Penyelesaian
Lampu pada butang tidak menyala.	Terdapat masalah sambungan. Periksa sama ada kord kuasa telah disambungkan pada Pemasak nasi dengan betul dan sama ada palam telah dimasukkan dengan kukuh pada salur keluar kuasa.
Lampu rosak. Bawa perkakas ke penjual Philips anda atau pusat servis yang disahkan oleh Philips.	Air tidak mengukupi. Tambah air mengikut skala pada bahagian perut dalam.
Nasi masih mentah.	Pastikan tiada sisa asing pada elemen pemasan dan bahagian luar perik dalam sebelum menghidupkan Pemasak nasi.
Nasi terlalu kering dan tidak cukup masak.	Elemen pemasan rosak, atau perik dalam cacat. Bawa Pemasak nasi ke penjual Philips anda atau pusat servis yang diluluskan oleh Philips.
Pemasak nasi tidak berlaku kepada mod simpan panas secara automatik.	Anda mungkin telah menekan butang simpan panas sebelum menekan butang mulanya. Dalam keadaan ini, anda boleh mendapat bunyi bip 4 kali dan lampu fungsi memasak yang dipilih akan mati.
Pemasak nasi akan berada dalam mod simpan panas secara automatik.	Penunjuk simpan panas menyalia.

11 Nút Hủy

Untuk menghentikan proses memasak.

12 Bô hen giò

Untuk menghentikan proses memasak.

13 Nút Xác nhận/Bát đầu

Untuk mengesahkan pilihan menu.

14 Chi bão hen giò

Untuk menghentikan proses memasak.

15 Chi bão thời gian cài đặt

Untuk mengatur masa untuk menyala.

16 Nút Menu/Chọn thời gian

Untuk mengakses menu.

Tổng quan các nút điều khiển (hình 3)

⑪ Nút Hủy	⑯ Nút Menu/Chọn thời gian
⑫ Bô hen giò	⑰ Màn hình thời gian
⑬ Nút Xác nhận/Bát đầu	⑯ Nút Menu/Chọn thời gian
⑭ Chi bão hen giò	⑯ Chi bão độ cứng của cơm
⑮ Chi bão thời gian cài đặt	⑯ Chi bão thời gian cài đặt

Chương trình nấu ăn

Chức năng nấu Thời gian nấu mặc định Thời gian nấu có thể điều chỉnh

Hấp	25 phút	25-59 phút
Nấu chậm	4 giờ	3-10 giờ
Bánh mì nướng	45 phút	30 phút - 2 giờ
Bánh ngọt	45 phút	Không áp dụng
Thịt bò	90 phút	1-4 giờ
Cà ri	60 phút	1-2 giờ
Cơm niêu	60 phút	Không áp dụng
Cơm chiên	25 phút	Không áp dụng
Cơm gà	50 phút	Không áp dụng
Cơm nếp/xôi	70 phút	Không áp dụng
Cơm sushi	48 phút	Không áp dụng
Gạo lứt	52 phút	Không áp dụng
42 phút/L1	Không áp dụng	
50 phút/L2	Không áp dụng	
35 phút/L3	Không áp dụng	
25 phút/L4	Không áp dụng	
45 phút/L5	Không áp dụng	
50 phút/L6	Không áp dụng	
55 phút/L7	Không áp dụng	
60 phút/L8	Không áp dụng	
65 phút/L9	Không áp dụng	
70 phút/L10	Không áp dụng	
75 phút/L11	Không áp dụng	
80 phút/L12	Không áp dụng	
85 phút/L13	Không áp dụng	
90 phút/L14	Không áp dụng	
95 phút/L15	Không áp dụng	
100 phút/L16	Không áp dụng	
105 phút/L17	Không áp dụng	
110 phút/L18	Không áp dụng	
115 phút/L19	Không áp dụng	
120 phút/L20	Không áp dụng	
125 phút/L21	Không áp dụng	
130 phút/L22	Không áp dụng	
135 phút/L23	Không áp dụng	
140 phút/L24	Không áp dụng	
145 phút/L25	Không áp dụng	
150 phút/L26	Không áp dụng	
155 phút/L27	Không áp dụng	
160 phút/L28	Không áp dụng	
165 phút/L29	Không áp dụng	
170 phút/L30	Không áp dụng	
175 phút/L31	Không áp dụng	
180 phút/L32	Không áp dụng	
185 phút/L33	Không áp dụng	
190 phút/L34	Không áp dụng	
195 phút/L35	Không áp dụng	
200 phút/L36	Không áp dụng	
205 phút/L37	Không áp dụng	
210 phút/L38	Không áp dụng	
215 phút/L39	Không áp dụng</	