




EN User manual ZH-T 使用手冊


PHILIPS




Overview 概覽

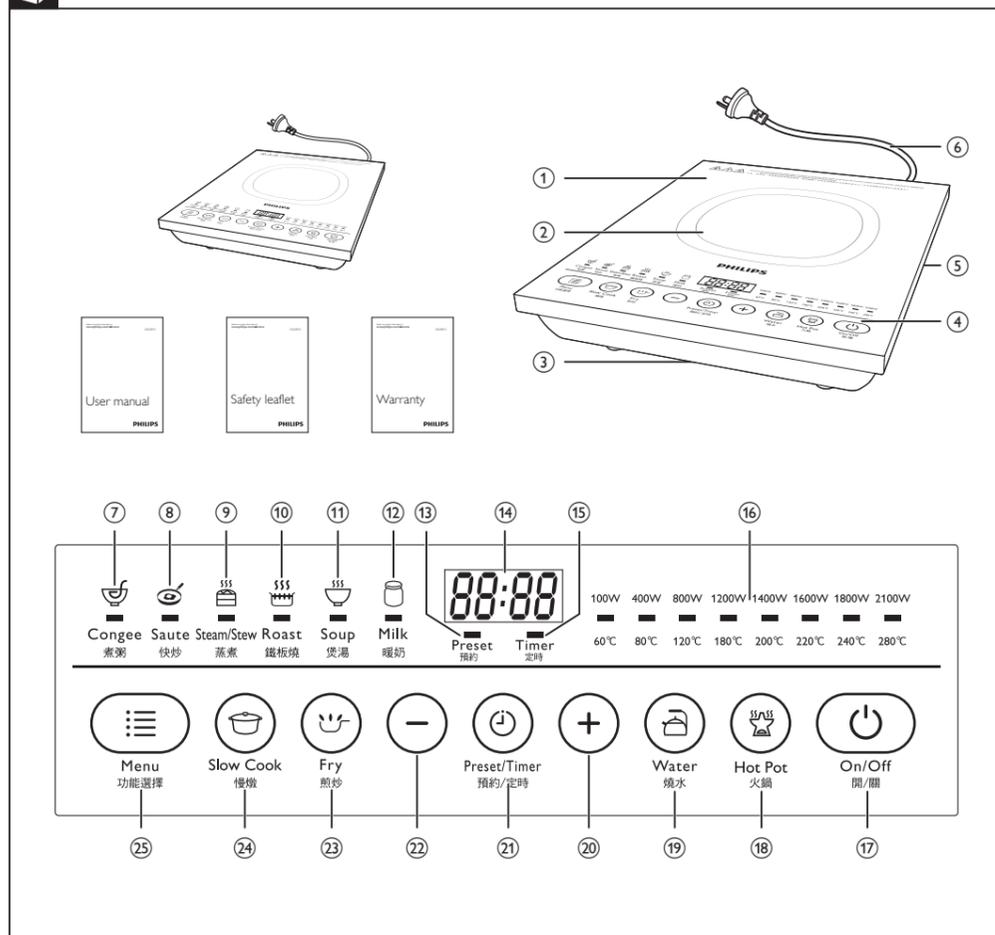


Recommended types and sizes of cookware 建議的廚具種類和大小

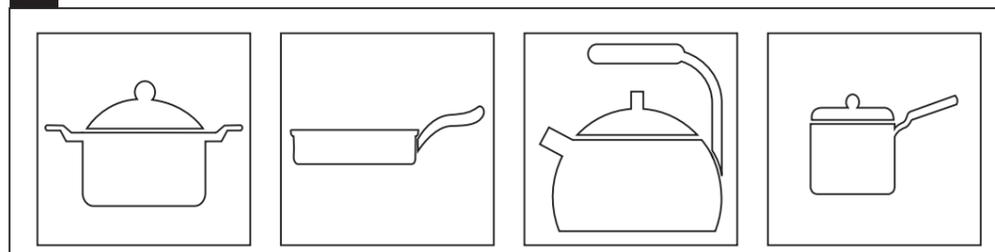


Preparing for use 準備使用

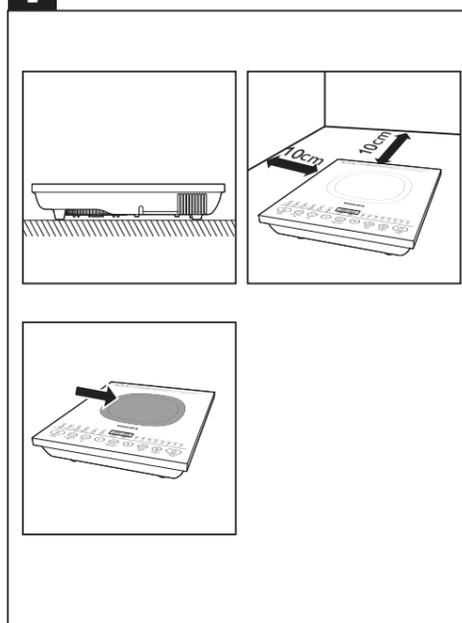


Using the induction cooker 使用電磁爐

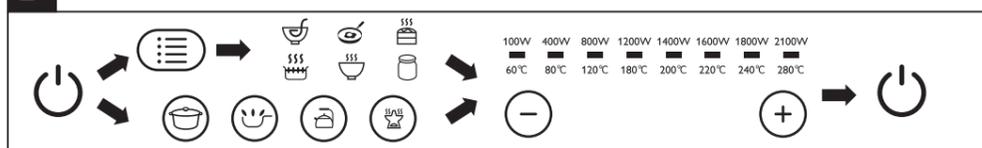


Using the timer 使用定時功能

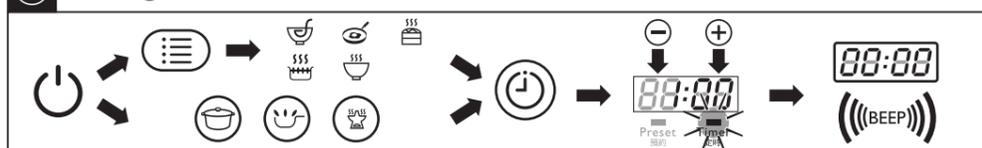

Preset time for delayed cooking 預約時間延時烹飪

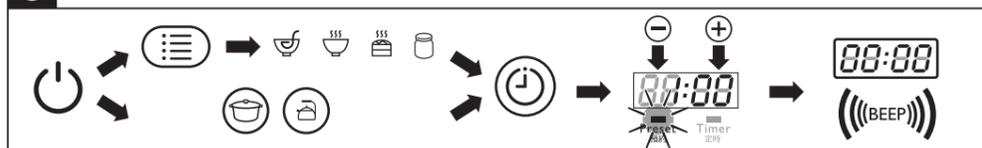

Cleaning 清潔

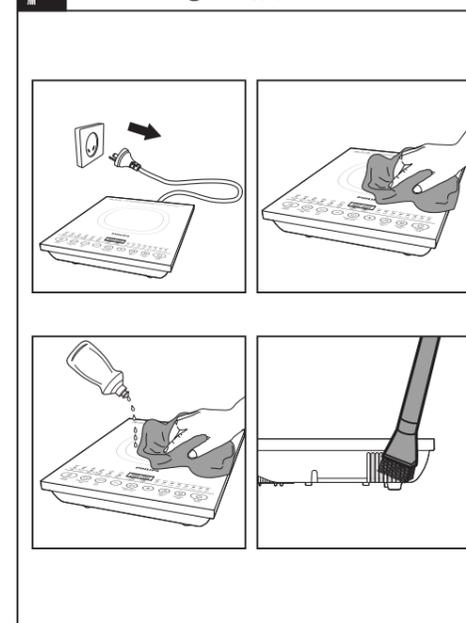

English

1 Your induction cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 What's in the box

Induction cooker main unit Warranty card  
Important information leaflet User manual

Overview

|                 |                 |
|-----------------|-----------------|
| ① Cooking plate | ④ Control panel |
| ② Cooking zone  | ⑤ Air outlets   |
| ③ Air inlet     | ⑥ Power cord    |

Controls overview

|                                 |                       |
|---------------------------------|-----------------------|
| ⑦ Congee button                 | ⑰ On/Off button       |
| ⑧ Saute button                  | ⑱ Hot Pot button      |
| ⑨ Steam/Stew button             | ⑲ Water button        |
| ⑩ Roast button                  | ⑳ Increase button     |
| ⑪ Soup button                   | ㉑ Preset/Timer button |
| ⑫ Milk button                   | ㉒ Decrease button     |
| ⑬ Preset indicator              | ㉓ Fry button          |
| ⑭ Display screen                | ㉔ Slow Cook button    |
| ⑮ Timer indicator               | ㉕ Menu button         |
| ⑯ Cooking power and temperature |                       |

3 Before first use

Remove all packaging materials from the induction cooker.

Preparing for use

- Place the appliance on a dry, stable and level surface.
- Make sure there is at least 10cm free space around the appliance to prevent overheating.
- Always place the cookware on the cooking zone during cooking.
- Make sure you use cookware of the correct types and sizes (see the table below).

Recommended types and sizes of cookware

|          |   |
|----------|---|
| Material | Cookware with a bottom made of iron or magnetic stainless steel           |
| Shape    | Cookware with a flat bottom   |
| Size     | Cookware with a bottom diameter of 12-23cm, depending on the cooking mode |

4 Using the induction cooker

There are ten cooking modes: Congee (☞), Saute (☞), Steam/Stew (☞), Roast (☞), Soup (☞), Milk (☞), Slow Cook (☞), Fry (☞), Water (☞) and Hot Pot (☞).

- Follow the steps in "Preparing for use".
- Press the On/Off button (⏻), the On/Off indicator lights up.
- Press the cooking buttons or the Menu button to choose the desired cooking mode. The corresponding indicator lights up and the induction cooker starts working in the selected mode.
- When the cooking is finished, press the On/Off button (⏻) to switch off the appliance.
- Unplug the induction cooker after the fan stops working.

Note

- During cooking, you can change the power level by pressing the Increase (+) or Decrease (-) button.
- In Water (☞), Soup (☞), Steam/Stew (☞), Congee (☞) and Milk (☞) modes, the cooking power automatically changes for better cooking result.

Default cooking time and temperature

Refer to below table for the default cooking time and temperature of different cooking modes.

| Cooking mode   | Cooking temperature | Default cooking power   |
|----------------|---------------------|-------------------------|
| Congee (☞)     | 100°C               | 1400W (0-2 mins)        |
|                |                     | 1600W (3-15 mins)       |
|                |                     | 1400W (16-25 mins)      |
|                |                     | 400W (26-60 mins)       |
|                |                     | 100W (60 mins onwards)  |
| Saute (☞)      | 200 (±20)°C         | 1200W                   |
| Steam/Stew (☞) | 100°C               | 1800W (0-5 mins)        |
|                |                     | 1400W (6-15 mins)       |
|                |                     | 1200W (15 mins onwards) |
| Roast (☞)      | 200 (±20)°C         | 1200W                   |

| Cooking mode  | Cooking temperature | Default cooking power   |
|---------------|---------------------|---|
| Soup (☞)      | 100°C               | 1400W (0-2 mins)  |
|               |                     | 1600W (3-15 mins)   |
|               |                     | 1400W (16-25 mins)  |
|               |                     | 400W (26-60 mins)   |
|               |                     | 100W (60 mins onwards)  |
| Milk (☞)      | 60 (±20)°C          | 800W  |
| Slow Cook (☞) | 85-100°C            | 1800W (0-2 mins)  |
|               |                     | 1600W (3-15 mins)   |
|               |                     | 1400W (16-25 mins)  |
|               |                     | 400W (26 mins onwards)  |
| Fry (☞)       | 200 (±20)°C         | 1200W   |
| Water (☞)     | 100°C               | Starts with 1800W. When water is brought to boil, the power drops to 800W and the appliance keeps the water at boiling temperature for another 3 minutes. After that the appliance turns off automatically. |
|               |                     | 100°C   |

| Cooking mode   | Default cooking time | Timer      | Ideas for Use  |
|----------------|----------------------|------------|--|
| Congee (☞)     | 3 hrs                | 1-180 mins | Lentils, Legumes, Beans  |
| Saute (☞)      | 2 hrs                | 1-120 mins | /  |
| Steam/Stew (☞) | 1 hr                 | 1-120 mins | Casseroles, Stewing Fruit  |
| Roast (☞)      | 2 hrs                | 1-120 mins | /  |
| Soup (☞)       | 3 hrs                | 1-180 mins | /  |
| Milk (☞)       | 20 mins              | /          | Good for Dairy Chocolate/ Cheese Fondue  |
| Slow Cook (☞)  | 6 hrs                | 1-600 mins | Lamb Shanks  |
| Fry (☞)        | 2 hrs                | 1-120 mins | Boiling water and leaving it on boil for your Pasta & Noodle Maker Dem-onstrations |

| Cooking mode              | Default cooking time | Timer      | Ideas for Use  |
|---------------------------|----------------------|------------|--|
| Water ( <span></span> )   | 20 mins              | /          | <b>Bring water to boil for a cuppa</b>   |
| Hot Pot ( <span></span> ) | 2 hrs                | 1-120 mins | <b>It's recomanded to use it as Manual mode, as you can change the power manually.</b> |

| <span></span> Note  |
|---|
| <ul style="list-style-type: none"><li>Depending on the cookware being used or the ingredients in the cookware, the actual cooking temperature may be different.</li></ul> |

| <span></span> Note |
|--------------------|
|--------------------|

You can use the Preset/Timer button to decide how much time you want the appliance to work at different cooking modes (not applicable in Water (  ) and Milk (  ) modes).

- Follow the steps in “Preparing for use”.
- Press the On/Off (  ) button, the On/Off (  ) indicator lights up.
- Choose the desired cooking mode.
- Press the Preset/Timer button (  ) once or more times until the timer indicator lights up.
- Press the Increase (  ) or Decrease (  ) button to adjust the time.
- When the time has elapsed, the induction cooker turns off automatically.

| <span></span> Note  |
|---|
| <ul style="list-style-type: none"><li>After you have selected the cooking time, wait for a few seconds before the induction cooker automatically confirms it.</li> <li>After the timer is set, you can press the Preset/Timer button ( <span></span> ) again to cancel the timer.</li></ul> |

### Preset time for delayed cooking

You can use the Preset/Timer button (  ) to set the time at which you want the appliance to start cooking. The preset timer is available up to 24 hours.

- Follow the steps in “Preparing for use”.
- Press the On/Off button (  ), the On/Off indicator lights up.

- Choose the desired cooking mode.
- Press the Preset/Timer button (  ) once or more times until the preset indicator lights up.
- Press the Increase (  ) or the Decrease (  ) button to choose the desired preset time.
- When the preset time has elapsed, you will hear a few beeps and the induction cooker starts working automatically.

| <span></span> Note   |
|--|
| <ul style="list-style-type: none"><li>The preset timer is available in the following cooking modes: Congee ( <span></span> ), Steam/Stew ( <span></span> ), Soup ( <span></span> ), Milk ( <span></span> ), Slow Cook ( <span></span> ) and Water ( <span></span> ).</li> <li>After you have selected the preset time, wait for a few seconds before the induction cooker automatically confirms it.</li> <li>When the induction cooker is at preset mode, you can press the Preset/Timer buton ( <span></span> ) again to cancel the preset time.</li></ul> |

## Cleaning

- Unplug the appliance after the fan stops working and let it cool down.
- Clean the appliance with a damp cloth and, if necessary, with some mild cleaning agent.

## Recycling

Do not throw away the product with the normal ousehold waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

## Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## Troubleshooting

If your induction cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service centre or the Consumer Care Centre in your country.

| Problem   | Solution   |
|---|--|
| The On/Off button ( <span></span> ) does not respond. | There is a connection problem. Check if the induction cooker is connected to the mains and if the plug is inserted firmly into the wall socket |

| Problem  | Solution   |
|--|--|
| The appliance beeps continuously and then stops working. | You may have put unsuitable cookware on the cooking plate or you may have removed the cookware from the cooking plate during cooking. Make sure the cookware is made of steel, iron or aluminum with stainless steel cladding base and has a base diameter larger than 12cm. |
|  | You may have placed the cookware outside of the cooking zone.  |

The cookware does not heat up to the required temperature.

The appliance stops working suddenly.

The cooking temperature of the preset modes are too high or too low.

When I press one of the cooking mode buttons, the light of the selected mode does not go on.

The cooking temperature automatically changes in some preset modes.

Error code E1, E2, E3, E4, or E7 is displayed on the screen.

Error code E5 or E6 is displayed on the screen.

### 繁體中文

### 屬於您的電磁爐

恭喜你購買 Philips 產品，歡迎來到 Philips 世界！要享受 Philips 為您提供的全面支援，請在以下網站 www.philips.com/welcome 註冊您的產品。

## 包裝盒內含物件

電磁爐主裝置  
重要資訊單張

保用證  
用戶手冊

| 概覽   |  |
|--|--|
| <div><span>①</span> 電磁爐板</div> <div><span>②</span> 烹飪區</div> <div><span>③</span> 進氣口</div> | <div><span>④</span> 控制面板</div> <div><span>⑤</span> 排氣口</div> <div><span>⑥</span> 電源線</div> |

| 控制鍵概覽   |  |
|---|--|
| <div><span>⑦</span> 煮粥按鈕</div> <div><span>⑧</span> 快炒按鈕</div> <div><span>⑨</span> 蒸煮按鈕</div> <div><span>⑩</span> 鐵板燒按鈕</div> <div><span>⑪</span> 煲湯按鈕</div> <div><span>⑫</span> 暖奶按鈕</div> <div><span>⑬</span> 預約功能指示燈</div> <div><span>⑭</span> 屏幕</div> <div><span>⑮</span> 定時功能指示燈</div> <div><span>⑯</span> 烹飪火力和溫度</div> | <div><span>⑰</span> 開/關按鈕</div> <div><span>⑱</span> 火鍋按鈕</div> <div><span>⑲</span> 燒水按鈕</div> <div><span>⑳</span> 增加按鈕</div> <div><span>㉑</span> 預約/定時按鈕</div> <div><span>㉒</span> 減少按鈕</div> <div><span>㉓</span> 煎炒按鈕</div> <div><span>㉔</span> 慢燉按鈕</div> <div><span>㉕</span> 功能選擇按鈕</div> |

## 首次使用前

拆去電磁爐的所有包裝材料。

### 準備使用

- 將電磁爐放置於穩固、平坦的水平表面上。
- 確保機器周圍10公分內沒有其他物體，以防機器過熱。
- 烹飪時請將廚具放置在烹飪區內。
- 確保您使用的廚具種類和大小正確。（請見下表）

### 建議的廚具種類和大小

|    |                           |
|----|---------------------------|
| 材質 | 底部使用鐵或電磁不鏽鋼製做的廚具          |
| 外形 | 有平底廚具                     |
| 大小 | 底部直徑介於10至23公分的廚具，依烹飪模式而定。 |

### 4 使用電磁爐

本產品共有十種烹調模式：煮粥 (  )、快炒 (  )、蒸煮 (  )、鐵板燒 (  )、煲湯 (  )、暖奶 (  )、慢燉 (  )、煎炒 (  )、燒水 (  )和火鍋 (  )。

- 遵照「準備使用」裡的步驟。
- 按下開/關按鈕 (  )，開/關指示燈便會亮起。
- 按下烹飪按鈕或功能選擇按鈕，即可選擇所要的烹飪模式。相應的指示燈會亮起，而電磁爐會開始以所選烹飪模式運作。
- 烹飪完畢後，按開/關按鈕 (  )關閉本產品。
- 等風扇停止運轉後，拔除電磁爐的插頭。

| <span></span> 提示  |
|---|
| <ul style="list-style-type: none"><li>烹飪時，您可以按增加按鈕 ( <span></span> )或減少按鈕 ( <span></span> )，更改火力等級。</li> <li>在燒水 ( <span></span> )、煲湯 ( <span></span> )、蒸煮 ( <span></span> )、煮粥 ( <span></span> )和暖奶 ( <span></span> )模式中，烹調火力會自動按照最好的烹飪成果進行變更。</li></ul> |

#### 預設烹飪時間和溫度

請參照下表，查看不同烹飪模式的預設烹飪時間和火力。

| 烹飪模式                   | 烹飪溫度        | 預設烹飪功率           |
|------------------------|-------------|------------------|
| 煮粥 ( <span></span> )   | 100°C       | 1400W (0-2 分鐘)   |
|                        |             | 1600W (3-15 分鐘)  |
|                        |             | 1400W (16-25 分鐘) |
|                        |             | 400W (26-60 分鐘)  |
|                        |             | 100W (60 分鐘之後)   |
| 快炒 ( <span></span> )   | 200 (±20)°C | 1200W            |
| 蒸煮模式 ( <span></span> ) | 100°C       | 1800W (0-5 分鐘)   |
|                        |             | 1400W (6-15 分鐘)  |
|                        |             | 1200W (15 分鐘之後)  |
| 鐵板燒 ( <span></span> )  | 200 (±20)°C | 1200W            |
| 煲湯 ( <span></span> )   | 100°C       | 1400W (0-2 分鐘)   |
|                        |             | 1600W (3-15 分鐘)  |
|                        |             | 1400W (16-25 分鐘) |
|                        |             | 400W (26-60 分鐘)  |
|                        |             | 100W (60 分鐘之後)   |
| 暖奶 ( <span></span> )   | 60 (±20)°C  | 800W             |
| 慢燉 ( <span></span> )   | 85-100°C    | 1800W (0-2 分鐘)   |
|                        |             | 1600W (3-15 分鐘)  |
|                        |             | 1400W (16-25 分鐘) |
|                        |             | 400W (26 分鐘之後)   |
| 煎炒 ( <span></span> )   | 200 (±20)°C | 1200W            |

| 烹飪模式                 | 烹飪溫度  | 預設烹飪功率  |
|----------------------|-------|---|
| 燒水 ( <span></span> ) | 100°C | 起始功率為 1800W。水煮沸之後功率降為 800W。 產品繼續工作 3 分鐘， 保持水為沸騰狀態。 之後產品將自動關閉。 |
| 火鍋 ( <span></span> ) | 100°C | 100°C   |

| 烹飪模式                   | 預設烹飪時間 | 定時時間     |
|------------------------|--------|----------|
| 煮粥 ( <span></span> )   | 3 小時   | 1-180 分鐘 |
| 快炒 ( <span></span> )   | 2 小時   | 1-120 分鐘 |
| 蒸煮模式 ( <span></span> ) | 1 小時   | 1-120 分鐘 |
| 鐵板燒 ( <span></span> )  | 2 小時   | 1-120 分鐘 |
| 煲湯 ( <span></span> )   | 3 小時   | 1-180 分鐘 |
| 暖奶 ( <span></span> )   | 20 分鐘  | /        |
| 慢燉 ( <span></span> )   | 6 小時   | 1-600 分鐘 |
| 煎炒 ( <span></span> )   | 2 小時   | 1-120 分鐘 |
| 燒水 ( <span></span> )   | 20 分鐘  | /        |
| 火鍋 ( <span></span> )   | 2 小時   | 1-120 分鐘 |

#### 使用定時功能

您可以使用預約/定時功能按鈕，選擇不同烹飪模式下使用產品的時間（不適用於燒水 (  )和暖奶 (  )模式）。

- 遵照「準備使用」裡的步驟。
- 按下開/關 (  )按鈕，開/關 (  )指示燈便會亮起。
- 選擇所需烹飪模式。
- 按下預約/定時功能按鈕 (  )一次或多次，直到定時功能指示燈亮起為止。
- 按下增加 (  )或減少 (  )按鈕可調整時間。
- 時間過去之後，電磁爐會自動關閉。

| <span></span> 提示   |
|--|
| <ul style="list-style-type: none"><li>選好烹飪時間後，靜候數秒，電磁爐將會自動確認。</li> <li>設定定時功能後，您可再次按下預約/定時功能按鈕 ( <span></span> )以取消定時功能。</li></ul> |

#### 預約時間延時烹飪

您可以利用預約/定時功能按鈕 (  )設定您想讓電磁爐開始烹飪的時間。預約定時最長可達 24 小時。

- 遵照「準備使用」裡的步驟。
- 按下開/關按鈕 (  )，開/關指示燈便會亮起。
- 選擇所需烹飪模式。
- 按下預約/定時功能按鈕 (  )一次或多次，直到預約指示燈亮起為止。
- 按下增加 (  )或減少 (  )按鈕，選擇所要的預設時間。
- 預設時間到時，您會聽到幾下嗶聲，電磁爐會自動開始運作。

| <span></span> 提示   |
|--|
| <ul style="list-style-type: none"><li>您只能在以下模式中使用預約定時功能：燒水 ( <span></span> )、煮粥 ( <span></span> )、蒸煮 ( <span></span> )、煲湯 ( <span></span> )和暖奶 ( <span></span> )。</li> <li>選好預設時間後，靜候數秒，電磁爐將會自動確認。</li> <li>當電磁爐在預約模式中時，您可以再次按下預約/定時功能按鈕 ( <span></span> )以取消預約時間。</li></ul> |

## 清潔

風扇停止運轉後，拔除本產品的插頭，讓產品冷卻。用濕布清潔本產品，必要時請使用溫和的清潔劑。

## 回收

請勿在本產品使用壽命結束後當作一般家庭垃圾廢棄，應交給官方回收站作循環再用。這樣做有助保護環境。

## 保障及服務

如果您需要資料或有疑問，請前往 Philips 網站 www.philips.com，或聯絡您的國家的 Philips 顧客服務中心（您會在全球保障小冊子上找到其電話號碼）。如果您的國家沒有顧客服務中心，請前往當地的 Philips 經銷商。

## 疑難排解

若電磁爐無法正確運作，或電磁爐烹飪效率不佳，請參照下表。若您無法解決問題，請聯絡飛利浦服務中心或您所在國家的顧客服務中心。

| 問題                              | 解決方案   |
|---------------------------------|--|
| 開 / 關按鈕 ( <span></span> ) 沒有反應。 | 連接有誤。檢查電磁爐是否有連接主電源，插頭和插座是否有鬆脫。   |
| 產品持續發出嗶聲，然後停止運作。                | 您可能在電磁爐板上放置不適合的廚具，或者您在烹飪期間從電磁爐板移走了廚具。確保廚具使用鋼、鐵或鋁製成，備有不鏽鋼電鍍的底部，而底部直徑超過 10 公分。您或許將廚具放在烹飪區之外。 |
| 廚具沒有加熱到所需溫度。                    | 廚具底部或許並不平坦。使用有平底的廚具。如果問題仍然持續，請將產品拿至飛利浦經銷商或飛利浦認可的服務中心。                                      |
| 產品突然停止運作。                       | 廚具溫度可能過高。讓廚具冷卻一會。  |
| 預設模式的烹飪溫度過高或過低。                 | 烹飪時，您可以按增加按鈕 ( <span></span> )或減少按鈕 ( <span></span> )，更改火力等級。                              |
| 按下其中一個烹飪模式按鈕後，已選模式的燈沒有亮起。       | 指示燈損壞。請將產品拿至飛利浦經銷商或飛利浦認可的服務中心。   |

| 問題                          | 解決方案   |
|-----------------------------|--|
| 在部分預設模式中，烹飪溫度會自動變更。         | 在燒水 ( <span></span> )、煲湯 ( <span></span> )、蒸煮 ( <span></span> )、煮粥 ( <span></span> )和暖奶 ( <span></span> )模式中，烹調溫度會自動按照最好的烹飪成果進行變更。 |
| 螢幕上顯示錯誤代碼 E1、E2、E3、E4 或 E7。 | 電磁爐出現故障。請將產品拿至飛利浦經銷商或飛利浦認可的服務中心。   |
| 屏幕顯示錯誤代碼 E5 或 E6。           | 電壓過高或過低。檢查家中的電壓是否適合電磁爐。  |