

PHILIPS

Humidifier

HU5710



English 4
한국어 26

Important

Read this important information booklet carefully before you use the appliance, and save it for future reference.

To ensure the best performance, kindly suggest the firmware of your appliance is upgraded to the latest version. You can do this upgrade via the Air+ app.

Danger

- Do not spray any flammable materials such as insecticides or fragrance around the appliance.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.
- The water in the water tank is not suitable for drinking. Do not drink this water and do not use it to feed animals or to water plants. When you empty the water tank, pour the water down the drain.

Warning

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the supply cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.
- Make sure that foreign objects do not fall into the appliance through the air outlet.
- Standard WiFi interface based on 802.11b/g/n/ax at 2.4GHz with a maximum output power of 64mW EIRP.
- Bluetooth version 5.2 (LE) at frequency 2.4GHz with RF output less than 10mW EIRP.

Caution

- The appliance is only to be used with the power supply unit provided with the appliance.
- The appliance is only intended for household use under normal operating conditions.
- Always place and use the appliance on a dry, stable, flat and horizontal surface.
- Do not block the air inlet and outlet.
- Do not place anything on top of the appliance and do not sit or stand on the appliance.
- Only use the original Philips filter specially intended for this appliance. Do not use any other filter.
- Do not fill water from the air outlets on top of the appliance.
- Only fill the water tank with cold tap water. Do not use ground water or hot water.
- Do not put any substance other than water in the water tank. Do not add essential oils or chemical substances into the water. Use only water (tap, purified, mineral, any sort of potable water).
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen, or in a room with major temperature changes.
- Always unplug the appliance when you want to move, clean appliance, fill the water, replace the filter or carry out maintenance.
- Do not wash the filter in a washing machine or dish washer, otherwise the filter will be deformed.
- When the appliance is not used for a long time, bacteria and mold may grow on the filter. Clean the water tank and dry the humidification filter. Check the filter before you start using the appliance again. If the filter is very dirty with dark spots, replace it.
- The essential oils are not included with the product. Please purchase and use the essential oils if needed.
- Make sure the product is disconnected with power before dropping essential oils into the aroma box.
- Do not add use substances other than essential oils to the aroma box.
- Read and follow the safety and use instruction of the essential oil carefully before using it.
- Check the ingredients information of the essential oil versus your known allergies and exclude it from use when necessary.
- Consult and follow doctor recommendation before using the essential oil for infants, pregnant women or women in the lactation period or if you have respiratory issues

- If you feel unwell, irritation or discomfort during the use of the essential oil, please stop using it.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.


Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Your humidifier

Product overview

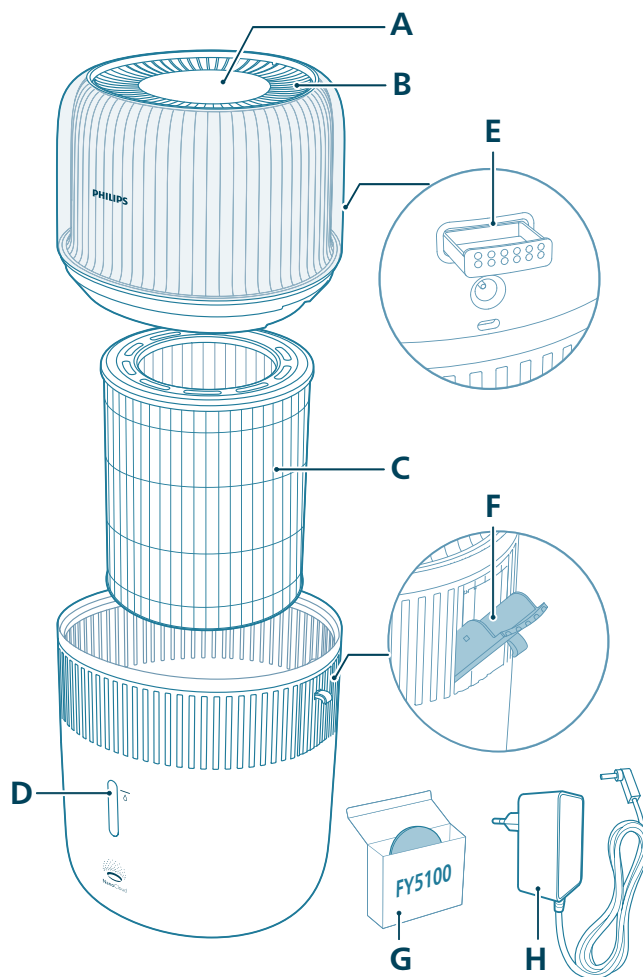

A	Control panel	E	Aroma box
B	Air outlet	F	Side water-filling inlet
C	Humidification filter (FY5030)	G	Aroma pads (FY5100)
D	Water level window	H	Adapter (KA12H-1201000KRA)

Controls overview



Control buttons:

	Power on/off button		Light function button
	Humidity setting button		Mode switch
	Timer button		

Long press the button(s) for 3 seconds:

	Child lock		Filter reset
	Wi-Fi reset		

Display panel:


	Auto mode		Sleep mode
	WiFi indicator		Child lock indicator
	Timer indicator		Medium mode
	High mode		Filter replacement alert
	Water refill indicator		

Getting started


Installing the filter

Remove all packaging of the filter before use.


Note: Make sure the humidifier is unplugged from the electrical outlet before installing the filter.




1 Remove the upper unit of the humidifier.

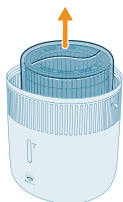


2 Pull the filter from the appliance.

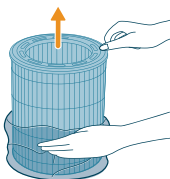


3 Remove all packaging materials of the filter.

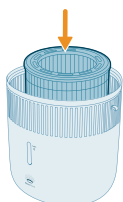

4 Put the filter back into the appliance, ensuring that the side with the logo is facing upward.



5 Put the upper unit back onto the water tank.

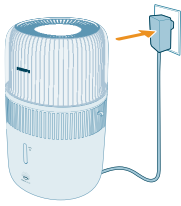

- 6 Put the adapter to the power socket.

Using the aroma function

Notes:

The essential oils are not included with the product. Please purchase and use the prescribed essential oils if needed.

Read the user manual of essential oils carefully before using the aroma function.

Make sure the product is disconnected with power before dropping essential oils into the aroma box.

Do not use substances other than essential oils.

Read and follow the safety and use instruction of the essential oil carefully before using it.


Check the ingredient information of the essential oil against your known allergies and exclude it from use when necessary.

Consult and follow your doctor's recommendation before using essential oils for infants, pregnant women, women in the lactation period, or if you have respiratory issues.


If you feel unwell, experience irritation or discomfort during the use of essential oils, please discontinue use.

Do not use the aroma function of essential oils for infants, pregnant women, or women in the lactation period.


Only add essential oils directly to the aroma pad. Don't add essential oils to other parts, otherwise the parts will be damaged by the oil.

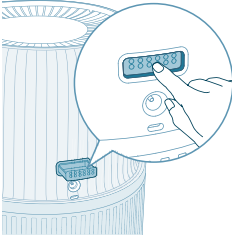

1 Push the aroma box to automatically eject it.

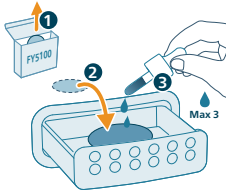

2 Drop in 2-3 drops of essential oils to the supplied aroma pad.

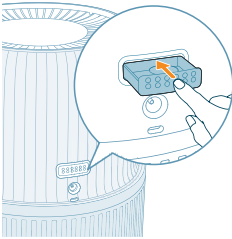

3 Push the aroma box to back into the appliance.

Understanding Wi-Fi indicator

Wi-Fi icon status

Blink in orange

Stable in orange

Blink in white

Stable in white

Off

Wi-Fi connection status

Connecting to the smart phone

Connected to the smart phone

Connecting to the server

Connected to the server

Wi-Fi function disabled or device lights are off

Wi-Fi connection



Setting up the Wi-Fi connection for the first time

- 1 Download and install the Philips "Air+" app from the App Store or Google Play.



- 2 Put the plug of the humidifier in the power socket and press the power button to turn on the humidifier.
 - The Wi-Fi indicator  blinks orange for the first time.



- 3 Make sure that your smart phone or tablet is successfully connected to your Wi-Fi network.

Note:

Enable Bluetooth feature on your smart phone to ensure the smooth pairing.

Please ensure your smartphone is connected to a 2.4GHz (home) Wi-Fi network instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.



- 4 Launch the Philips "Air+" app and click on "Add a device" or press the "+" button on the screen. Follow the on-screen instructions to connect the air purifier to your network.
 - After a successful connection, the Wi-Fi indicator remains steady in white.


Note:

This instruction is only valid when the humidifier is being set up for the first time. If the network has changed or the setup needs to be performed again.


If you want to connect more than one humidifier to your smart phone or tablet, you can add the humidifier in the app on additional smart phones without doing the Wi-Fi connection reset on the device.

Make sure that the distance between your smart phone or tablet and the humidifier is less than 10 m without any obstructions.

Reset the Wi-Fi connection

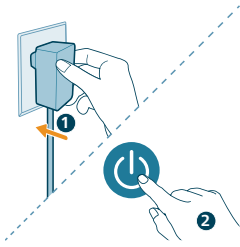

- 1 Put the plug of the humidifier in the power socket and press  to turn on the air humidifier.

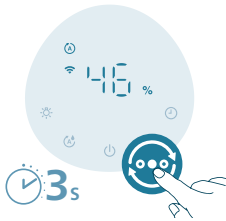


- 2 Long press  button at the same time for 3 seconds until you hear a beep.
 - The humidifier goes to pairing mode.
 - The Wi-Fi indicator  blinks orange.
- 3 Follow the steps 3-4 in "Setting up the Wi-Fi connection for the first time" section.

Using the humidifier

Understanding the humidity light

Relative humidity represents the amount of water vapor in the atmosphere. The humidification indicator has four status levels:

The humidification light has three colors:

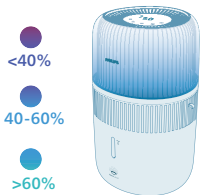

Humidification light color	Current humidity	What does it mean?
Purple	<40%	Dry
Blue	40-60%	Comfortable humidity
Green	>60%	Too humidity

Note: The default target humidity is 50%RH, you can set the desired target humidity by pressing the humidity setting button.

Water level

When there is not enough water in the water tank, the  indicator is on, the humidifier will start Auto QuickDry mode by default. During this period, the humidification amount may decrease until you refill water into the water tank.

Auto QuickDry mode

The humidifier will turn on auto wick dry function by default when the  indicator on to accelerate filter drying after usage , promoting hygienic maintenance , and prolonging the filter's lifespan. The process of drying can take around 4 hours depending on the conditions of the room. You can turn off this function in the Air+ app.

Manual QuickDry mode

You can use this setting to accelerate drying the filter before you store it. You need to empty the water tank first before start this function. You can only use this function in the Air+ app.

Refilling water

Note:


When filling water, do not exceed the maximum water level, or water might leak from the air inlets.


Do not shake the water tank when moving it, or water might leak from the air inlets.

Do not fill water through the air outlets on top of the humidifier.

There are two methods for refilling water: directly refilling water or refilling water through the side water-filling inlet.

- Directly refilling water using a water tap

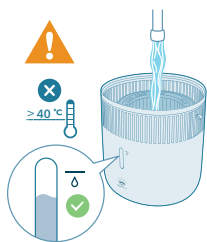

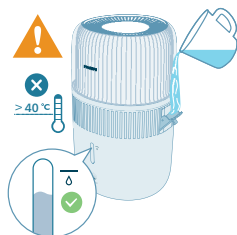

- Refilling water through the side water-filling inlet


Turning on and off

Note:

For optimum humidification performance, close doors and windows.

Keep curtains away from the air inlet or air outlet.

- 1 Put the adapter of the humidifier into the power socket.

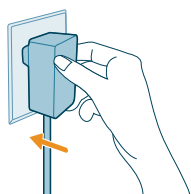


- 2 Press the power button to switch on the humidifier.
 - The humidifier beeps.
 - The humidity light chooses the appropriate color to match the surrounding humidity level.
 - The humidifier operates in the Auto mode with current humidity level displayed on the screen.



- 3 Press the power button again to switch off the humidifier.

Note: If the humidifier stays connected to the electrical outlet after turning OFF, it will operate under the previous settings when turned ON again.

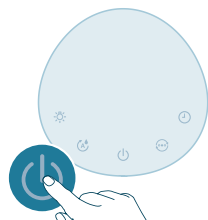

Changing the mode setting

You can choose the **Auto mode**, the **Sleep mode**, the **Medium mode**, or the **High mode** by pressing the mode switch button.

Auto mode (A): The humidifier automatically adjusts the fan speed in accordance with the ambient air humidity.



Sleep mode (C): The humidifier operates quietly at a low speed. After 3 seconds, the screen lights turn off.



Medium mode (M): The humidifier operates on the medium speed.



High mode (H): The humidifier operates on the highest speed.




Setting humidity level

Note:

The default humidity level is 50%RH.

The humidifier will change to Auto mode automatically when you set target humidity level in other modes.


You can adjust the humidity level by pressing the humidity setting button to choose from 30%, 40%, 50%, 60%, or 70%. More options are available in the Air+ app.

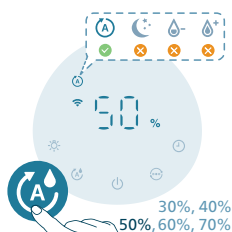


Using the light function

You can press the button to turn on humidity light, ambient light or turn off all lights and the control panel.


- The humidifier will turn on the humidity light by default.

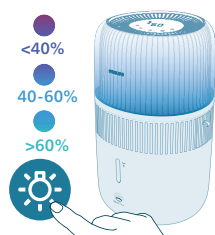

- You can press the light function button to switch to ambient light mode. Tailor the brightness and the color in the Air+ app.

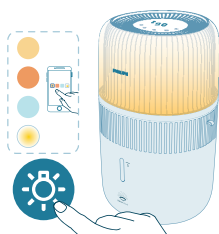


You can press the light button to turn off all lights and the control panel. Press any button to wake up the panel first, and press the light button again to set the light mode you want in 3 seconds.

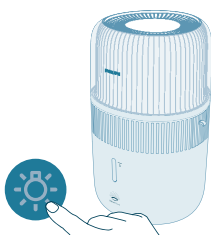

Setting the child lock



- 1 Press the  button for 3 seconds to activate the child lock.
 - The  displays on the screen.

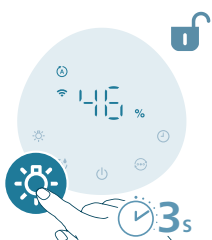

- 2 Press the  button for 3 seconds again to deactivate the child lock.
 - The  disappears from the screen.

Setting the timer



Press the timer button repeatedly to choose from 1, 2, 4, 8 or 12 hours. Once the timer ends, the humidifier will stop operating automatically.

Cleaning and maintenance

Note:

Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.

Avoid pouring water through the air inlets and outlets.

Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Cleaning the body of the humidifier

Regularly clean the inside and outside of the humidifier to prevent dust from collecting.

- 1 Wipe away dust with a soft dry cloth from the body of the humidifier.
- 2 Clean the air inlet and the air outlet with a soft dry cloth.


Cleaning the water tank

- 1 Clean the water tank every weeks to keep it hygienic.
- 2 Take out the humidification filter.
- 3 Add some mild washing-up liquid mixed with water in the water tank.
- 4 Clean the inside of the water tank with a soft clean cloth.
- 5 Empty the water tank into a sink.
- 6 Put the humidification filter back into the water tank.


Cleaning the humidification filter

Clean the humidification filter every week to keep it hygienic.


- 1 Switch off the appliance and unplug from the power socket.

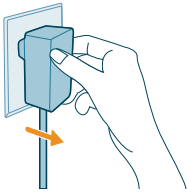


- 2 Remove the upper unit from the water tank.

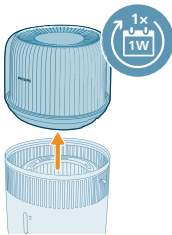


- 3 Take out the humidification filter from the water tank.

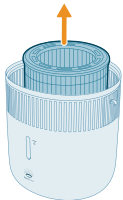


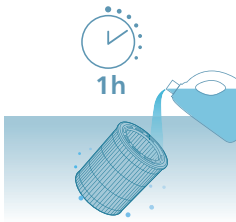

- 4 Soak the humidification filter in cleansing agent (e.g diluted citric acid solution) for one hour.

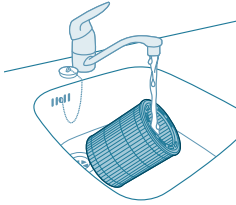

- 5 Rinse the humidification filter under a slowly running tap. Do not squeeze or wring the filter when cleaning.
- 6 Let excess water drip off the humidification filter.





- 7 Put the humidification filter back into the water tank. Put the upper unit back onto the water tank.

Cleaning the aroma and box


For effective aromatherapy, the aroma pad should always be cleaned before using a new essential oil blend. Do not mix essential oil blends.

- 1 Remove the aroma box by pressing it in, then pulling it out.

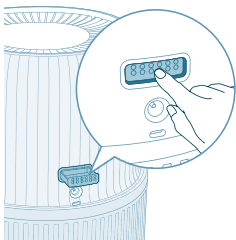


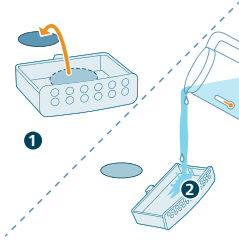

- 2 Remove the aroma pad and rinse the pad and the box under warm, running water.

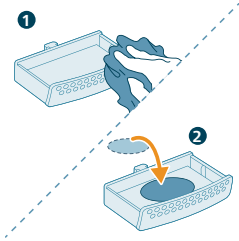

- 3 Dry with a clean cloth and place the pad back into the aroma box.

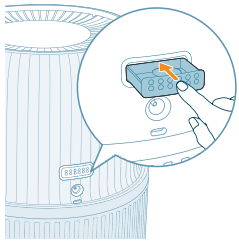

- 4 Place the aroma box back inside the air humidifier

Note: Do not pour liquid cleaners or detergents into the aroma pad or box.

Replacing the filter

Note:


Use only Philips original humidification filter FY5030.

Always unplug the humidifier before you replace the humidification filter.


Replace the humidification filter when the  indicator is on.




- 1 Switch off the appliance and unplug from the power socket.

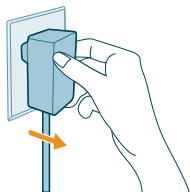


- 2 Remove the upper unit from the water tank. Take out the humidification filter from the water tank.



- 3 Remove the packaging material of the new filter. Discard the used filter.

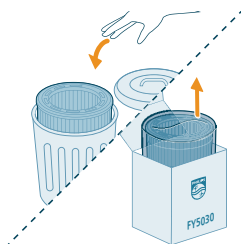

- 4 Put the humidification filter back into the water tank. Put the upper unit back onto the water tank.



Replacing the Aroma Pad

If the aroma pad becomes deformed or damaged after repeated washing, it may need to be replaced. To maintain the performance of your air humidifier, only use official Philips aroma pads.

Storage

- 1 Turn off the humidifier and unplug from the power socket.
- 2 Clean the humidifier (see Chapter "**Cleaning and Maintenance**").
- 3 Let all parts air dry thoroughly before storing.

- 4 Store the humidifier in a cool, dry location.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The humidifier does not work.	Make sure that there is power supply to the humidifier.
	Make sure that the water tank is filled with water and the upper unit is placed properly onto the water tank.
There is no air humidification.	Make sure that the water tank is filled with water and the upper unit is placed properly onto the water tank.
	It may have achieved your target humidity rate.
I do not see the humidity level change.	Your room might have too much ventilation. Please close doors and windows.
	Make sure that you have assembled the humidification filter.
	Your room size is too big. This humidifier is suitable for room size $\leq 56\text{m}^2$.
	Turn the mist level to a higher setting.
	When used in a dry environment, the moisture will be absorbed surrounding objects such as walls and furniture, which can prolong the humidification time.
	The humidification filter is dirty. Rinse and/or descale the humidification filter (see the chapter 'Clean the humidification filter').
The humidifier stops even when I feel quite dry.	The water tank is empty, please refill with water.
	The humidity level around product has been achieved to target setting in auto mode, it will restart automatically once the humidity level lower than target setting.
	Our device will stop working when the humidity level around product is higher than 70% because it may lead to diversity fungi mold growth.
There are some white deposits on the humidification filter.	The white deposits are called scale and they consist of minerals from the water. Scale on the humidification filter affects the humidifying performance, however it does not harm your health. Please follow the cleaning instructions in the user manual.
The water tank leaks.	Make sure that the humidifier is not overfilled with water.

	Make sure that the humidifier is well assembled/ connected every time after you clean it or after you remove the upper unit and/or water tank for refilling.
	Make sure that the water tank is properly placed. If the problem persists, contact the Consumer Care Center in your country.
The filter discolours after some time.	The deposit is a natural effect of the filter material, and it has no impact on humidification performance. Clean the humidification filter frequently to remove the scale, and replace the humidification filter every 6 months.
Water refill indicator lights up sometimes even there is still water.	Make sure the filter with the logo is facing upward.
	There may be still little water left when the indicator lights up, so that you can refill water in time.
There is unpleasant smell coming out from the humidifier.	The first few times you use your air humidifier, it may produce a plastic smell. This is normal and will fully disappear within a few days.
	Clean the filter and water tank(see the chapter 'Cleaning and maintenance')
My aroma function doesn't work well(too weak or strong).	Use proper 2-3 drops essential oil.
	Different essential oil may has different perceived intensity.
	It need take sometime to evaporate the smell to whole room.
No air comes out of the air outlet.	Put the plug of the humidifier into the power socket and switch on the humidifier.
I do not see visible mist coming out of the humidifier. Is it working?	When mist is very fine, it is invisible. This humidifier has a NanoCloud humidification technology, which produces healthy humid air from the outlet area without formation of water mist. Therefore, you cannot see the mist.
The humidifier keep working even it is out of water.	The humidifier will turn on auto wick dry function by default to accelerate filter drying after usage, promoting hygienic maintenance, and prolonging the filter's lifespan. You can turn this function off in the Air+ app.
If the humidifier is not used for a long time, How to store and reuse it?	When the humidifier is not used for a long time, bacteria and mold may grow on the filters. please follow below steps for storage and reuse.
	Clean the water tank thoroughly and dry the humidification filter before storage.
	Check the filter before you start using the humidifier again. If the filter is very dirty with dark spots, replace it (Please refer to the chapter "Replacing the filter" in User manual).

The appliance still indicates that I need to replace filter, but I already did.	Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then press and hold the  and  simultaneously for 3 seconds.
The Wi-Fi setup is not successful.	Please ensure your smart phone is connected to a 2.4GHz (home) Wi-Fi network instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.
	Ensure to enable the following permissions: "Location", "Storage", "Bluetooth", and "Local Network" on your smart phone. After a successful Wi-Fi setup, you can change permission settings as desired.
	Please verify that you have entered the correct Wi-Fi password. The password is case-sensitive, has a limit of 63 characters. Special symbols are not accepted.
	Ensure the network name of your home Wi-Fi is correct. The network name is case-sensitive.
	If you are using a VPN on your smart phone, please turn it off before starting the pairing process.
	If your router has a whitelist set up to block pairing, please disable the whitelist to ensure successful connection.
	Please ensure that both your device and smart phone are within 10 meters of the router.
	Ensure the app has been updated to the latest version.
	To ensure a strong Wi-Fi connection, avoid placing your device near other electronic devices, bright light sources, or signal stations that may cause interference. If you experience connectivity issues, move the device away from these sources and attempt to reconnect it to the Wi-Fi network.
	Consult the help section in the app for extensive and up-to-date troubleshooting tips.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website **www.philips.com/support**.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit **www.philips.com/support**.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country.

주의 사항

본 제품을 사용하기 전에 이 중요 정보 책자를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

최고의 성능을 위해 제품의 펌웨어를 최신 버전으로 업그레이드하는 것이 좋습니다. 이 업그레이드는 Air+ 앱을 통해 가능합니다.

위험

- 살충제나 방향제 같은 가연성 소재를 제품 주변에 분사하지 마십시오.
- 물, 기타 액체 또는 (가연성) 세제로 제품을 청소하지 마십시오. 감전 또는 화재의 위험이 있습니다.
- 물탱크의 물은 음용에 적합하지 않습니다. 이 물을 마시지 마십시오. 다른 동물이나 식물에 물을 주는 데 사용하지 마십시오. 물탱크를 비울 때 물탱크 내부의 물을 하수구에 따라 버립니다.

경고

- 습도가 높으면 실내에서 미생물이 증식할 수 있습니다.
- 가습기 주변이 축축하거나 젖지 않도록 하십시오. 가습기 주변이 축축하면 가습기의 가습량이 떨어질 수 있습니다. 만약 가습량을 낮출 수 없는 경우, 가습기를 간헐적으로 사용하세요. 카펫, 커튼, 휘장 또는 테이블보와 같이 물기를 흡수할 수 있는 물건이 젖지 않도록 합니다.
- 제품을 사용하지 않을 때는 절대 물통에 물을 남기지 마십시오.
- 가습기를 보관하기 전 물을 비우고 청소하십시오. 다음 번 제품 사용을 위해 가습기를 청소하십시오.
- 제품에 전원을 연결하기 전에, 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 공인 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체합니다.
- 만약 플러그나 전원 코드 또는 제품이 손상되었을 경우에는 제품을 사용하지 마십시오.
- 8세 이상의 어린이와 신체적, 정신적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용할 때에는 안전한 사용을 위해 제품 사용과 관련하여 지시사항을 충분히 숙지하고 관련된 위험을 이해한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.
- 공기 배출구 또는 흡입구에 손가락을 넣지 마십시오. 부상을 입거나 제품이 오작동할 수 있습니다.
- 이물질이 공기 배출구를 통해 제품 안으로 들어가지 않도록 하십시오.
- 최대 출력 전력이 64mW EIRP인 2.4GHz에서 802.11b/g/n/ax 기반의 표준 WiFi 인터페이스.
- RF 출력이 10mW EIRP 미만인 주파수 2.4GHz의 Bluetooth 버전 5.2(LE).

주의

- 제품과 함께 제공된 전원 공급 장치만 사용하십시오.
- 이 제품은 일반적인 작동 환경에서 가정용으로 사용하는 제품입니다.
- 제품을 항상 물기가 없고 안정적이고 평평하며 수평인 곳에 놓고 사용하십시오.
- 공기 유입구 및 배출구를 막지 마십시오.
- 제품 위에 물건을 올려 놓지 마십시오. 제품 위에 앉거나 서지 마십시오.

- 이 제품을 위해 특별 설계된 정품 필립스 필터만 사용하십시오. 다른 필터는 사용하지 마십시오.
- 제품 상단에 있는 공기 배출구에 물을 넣지 마십시오.
- 물탱크에는 차가운 물만 채우십시오. 지하수 또는 뜨거운 물을 사용하지 마십시오.
- 물탱크에는 물 이외의 다른 물질을 넣지 마십시오. 에센셜 오일 또는 화학 물질을 물 속에 넣지 마십시오. 물만 사용하십시오(수돗물, 정화된 물, 미네랄 워터, 기타 식수).
- 제품, 특히 공기 흡입구 및 배출구를 단단한 물건으로 두드리지 마십시오.
- 가스 제품, 난방기 및 벽난로 근처에서 제품을 사용하지 마십시오.
- 제품에 응축된 물이 떨어지지 않도록 제품을 에어컨 바로 아래 두지 마십시오.
- 연막 살충제, 화학성 기름, 향료 및 기타 화학 성분의 가스가 있는 곳에서는 이 제품을 사용하지 마십시오.
- 욕실, 화장실이나 주방 또는 온도 차이가 큰 방과 같이 지나치게 주변 온도가 높은 곳에서는 제품을 사용하지 마십시오.
- 제품을 옮기거나, 청소하거나, 물을 채우거나, 필터를 교체하거나 기타 유지보수를 수행할 경우 항상 제품을 전원에서 분리하십시오.
- 필터를 세탁기 또는 식기 세척기에 넣어 세척하지 마십시오. 필터가 변형될 수 있습니다.
- 장기간 제품을 사용하지 않는 경우, 박테리아와 곰팡이가 필터에 증식할 수 있습니다. 물탱크를 청소하고 가습 필터를 건조하십시오. 제품을 다시 사용하기 전 필터를 점검하십시오. 필터가 검은 얼룩으로 뒤덮여 있으면 교체하십시오.
- 에센셜 오일은 제품에 포함되지 않습니다. 필요한 경우 에센셜 오일을 구매하여 사용하시기 바랍니다.
- 에센셜 오일을 아로마 박스에 넣기 전에 반드시 제품의 전원을 꺼야 합니다.
- 아로마 박스에는 에센셜 오일 이외의 물질은 첨가하지 마십시오.
- 에센셜 오일을 사용하기 전에는 안전 및 사용 지침을 주의 깊게 읽고 따르십시오.
- 에센셜 오일의 성분 정보를 보고 자신의 알레르기 여부를 확인하고 해당하는 경우에는 사용하지 마십시오.
- 호흡기 문제가 있거나 수유 중인 여성, 임산부 또는 영아에게 에센셜 오일을 사용하기 전에 의사와 상의하고 권고 사항을 따르시기 바랍니다.
- 에센셜 오일을 사용하는 동안 불편함을 느끼거나 자극이 있다면 사용을 중단하십시오.

EMF(전자기장)

이 제품은 EMF(전자기장) 노출과 관련된 해당 표준 및 규정을 준수합니다.


재활용

수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 재활용품 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다.

해당 국가의 전기/전자 제품 분리수거 규칙에 따라 버리십시오. 올바른 제품 폐기를 통해 환경 및 인류의 건강을 유해한 영향으로부터 보호할 수 있습니다.

여러분을 위한 가습기

제품 개요

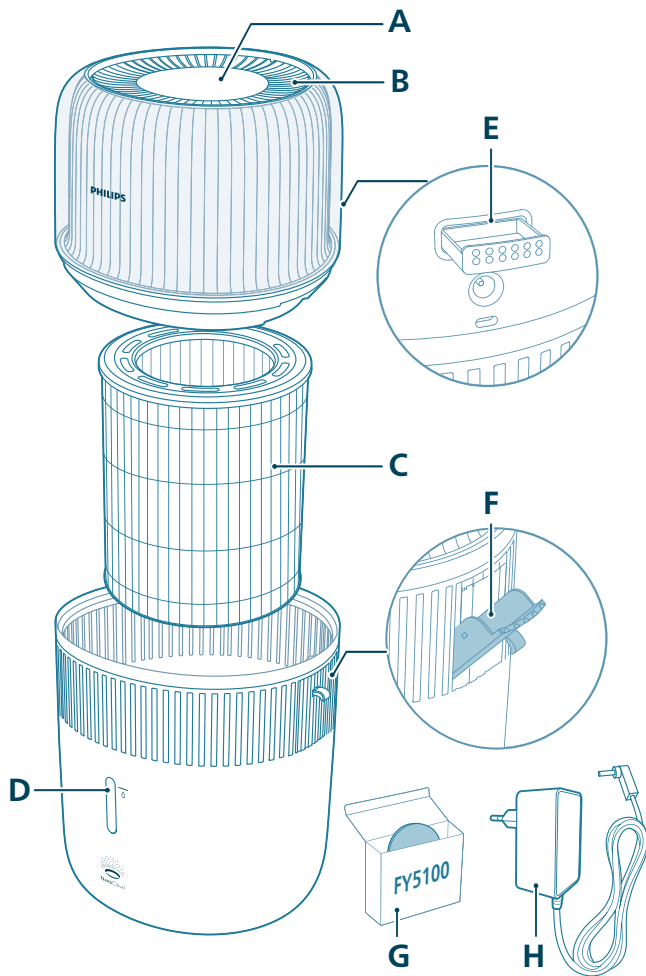

A 제어판

B 공기 배출구

C 가습 필터(FY5030)

D 수위 표시창


E 아로마 박스

F 측면 물 보충 주입구

G 아로마 패드(FY5100)

H 어댑터(KA12H-1201000KRA)

조절 장치 개요

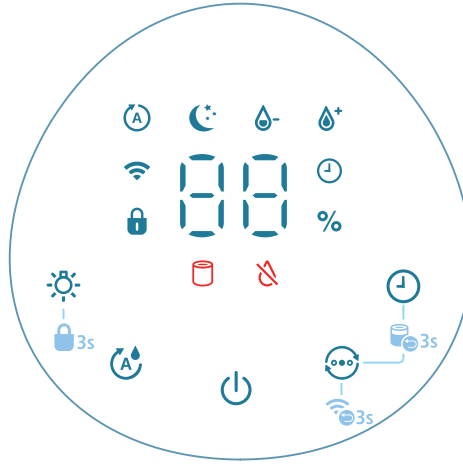

컨트롤 버튼:

	전원 버튼		조명 기능 버튼
	습도 설정 버튼		모드 전환
	타이머 버튼		

다음 버튼을 3초간 길게 누릅니다.

	아동 보호용 잠금		필터 재설정
	Wi-Fi 재설정		

디스플레이 패널:

	자동 모드		취침 모드
	WiFi 표시등		아동 보호용 잠금 표시등
	타이머 표시등		중간 모드
	고성능 모드		필터 교체 경고등
	물 보충 표시등		


시작하기

필터 설치하기

사용하기 전 필터의 포장재를 모두 제거하십시오.

참고: 필터를 설치하기 전에 가습기가 전원 콘센트에서 분리되어야 합니다.


- 1 가습기의 상단 유닛을 제거합니다.




- 2 제품에서 필터를 당겨 꺼내십시오.




- 3 필터의 모든 포장재를 제거하십시오.

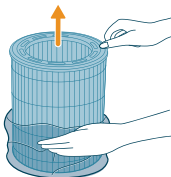


- 4 필터를 다시 제품에 장착하고 이때 측면의 로고가 위쪽을 향하도록 합니다.

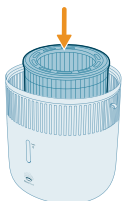

- 5 물탱크의 상단 유닛을 다시 장착합니다.



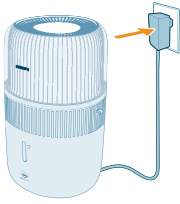

6 어댑터를 전원 콘센트에 연결합니다.

아로마 기능 사용

참고:

에센셜 오일은 제품에 포함되지 않습니다. 필요한 경우 규정된 에센셜 오일을 구매하여 사용하시기 바랍니다.

아로마 기능을 사용하기 전에는 에센셜 오일 사용 설명서를 주의 깊게 읽으십시오.

에센셜 오일을 아로마 박스에 넣기 전에 반드시 제품의 전원을 꺼야 합니다.

에센셜 오일 이외의 물질은 사용하지 마세요.

에센셜 오일을 사용하기 전에는 안전 및 사용 지침을 주의 깊게 읽고 따르십시오.

에센셜 오일의 성분 정보를 보고 자신의 알레르기 여부를 확인하고 해당하는 경우에는 사용하지 마십시오.


영아, 임산부, 수유 중인 여성 또는 호흡기 문제가 있는 경우에는 에센셜 오일을 사용하기 전에 의사와 상의하고 권고 사항을 따르시기 바랍니다.


에센셜 오일을 사용하는 동안 불편함을 느끼거나 자극이 있다면 사용을 중단하십시오.

영아, 임산부 또는 수유 중인 여성에게 에센셜 오일의 아로마 기능을 사용하지 마십시오.


아로마 패드에 에센셜 오일을 직접 뿌립니다. 다른 부품에는 에센셜 오일을 넣지 마십시오. 그렇지 않으면 해당 부품이 오일로 손상될 수 있습니다.

1 아로마 박스를 누르면 자동으로 빠져 나옵니다.

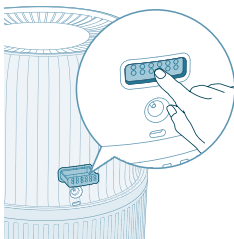

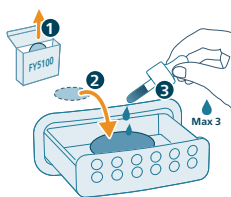

2 제공된 아로마 패드에 에센셜 오일을 2~3 방울 떨어뜨립니다.

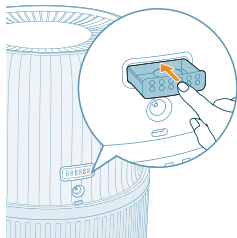

3 아로마 박스를 제품에 다시 장착합니다.

Wi-Fi 표시등 이해하기


Wi-Fi 아이콘 상태	Wi-Fi 연결 상태
주황색으로 깜박임	스마트폰에 연결 중
주황색으로 켜짐	스마트폰에 연결됨
하얀색으로 깜박임	서버에 연결 중
하얀색으로 켜짐	서버에 연결됨
끄기	Wi-Fi 기능이 비활성화되었거나 장치 조명이 꺼져 있음

Wi-Fi 연결


최초로 Wi-Fi 연결 설정

1 필립스 "Air+" 앱을 App Store 또는 Google Play에서 다운로드하고 설치하십시오.



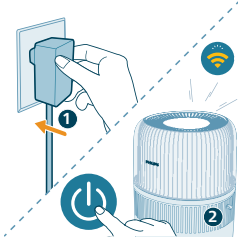

- 2 가습기를 전원 콘센트에 연결하고 전원 버튼을 눌러 가습기를 켭니다.
- Wi-Fi 표시등 이 처음에 주황색으로 깜박입니다.

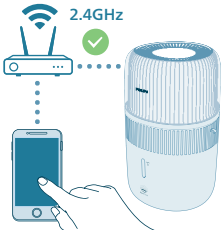

- 3 스마트폰 또는 태블릿이 Wi-Fi 네트워크에 연결되어 있는지 확인하십시오.

참고:

원활한 페어링을 위해 스마트폰의 Bluetooth 기능을 활성화하십시오.

스마트폰이 5GHz Wi-Fi 네트워크 또는 공용 Wi-Fi가 아닌 2.4GHz(홈) Wi-Fi 네트워크에 연결되어 있는지 확인하십시오. 성공적으로 페어링하려면 페어링 프로세스를 시작하기 전에 모바일 데이터를 끄는 것이 좋습니다.



- 4 필립스 "Air+" 앱을 실행하고 "장치 추가"를 클릭하거나 화면의 "+" 버튼을 누르십시오. 화면의 지침에 따라 공기 청정기를 네트워크에 연결하십시오.
- 연결에 성공하면 Wi-Fi 표시등이 흰색으로 계속 켜져 있습니다.

참고:


이 지침은 가습기를 처음으로 설정할 때에만 유효합니다. 네트워크가 변경되었거나 설정을 다시 수행해야 하는 경우


스마트폰 또는 태블릿에 두 대 이상의 가습기를 연결하려는 경우, 장치에서 Wi-Fi 연결을 재설정하지 않고도 다른 스마트폰의 앱에서 가습기를 추가할 수 있습니다.

스마트폰 또는 태블릿과 가습기 사이의 거리가 장애물 없이 10m 이내여야 합니다.

Wi-Fi 연결 재설정

- 1 가습기를 전원 콘센트에 연결하고  버튼을 눌러 가습기를 켜십시오.

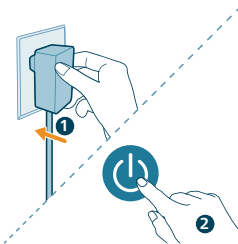


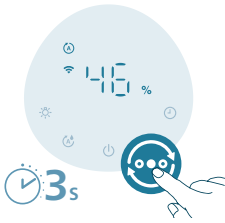

- 2 신호음이 들릴 때까지 버튼을 동시에 3초간 길게 누릅니다.
 - 가습기가 페어링 모드로 전환됩니다.
 - Wi-Fi 표시등 이 주황색으로 깜박입니다.
- 3 "처음으로 Wi-Fi 연결 설정" 섹션의 3~4단계를 따르십시오.

가습기 사용

습도 표시등 확인

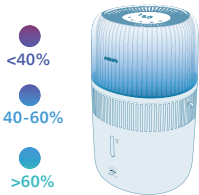

상대 습도는 대기에 있는 수증기의 양을 나타냅니다. 가습 표시등은 다음과 같이 4개의 상태를 나타냅니다.

가습 표시등은 3가지 색상이 있습니다.

가습 표시등 색상	현재 습도	의미
자주색	< 40%	건조
파란색	40~60%	편안한 습도
녹색	> 60%	높은 습도

참고: 기본 습도는 50%Rh입니다. 습도 설정 버튼을 눌러 원하는 습도를 설정할 수 있습니다.

물 높이

물탱크에 물이 충분하지 않으면 표시등이 켜지고 가습기는 기본적으로 자동 빠른 건조 모드를 시작합니다. 이 모드에서는 물탱크에 물을 보충하기 전까지 가습량이 감소할 수 있습니다.

자동 빠른 건조 모드

사용 후 표시등이 켜져 필터를 신속하게 건조할 때 가습기는 기본적으로 자동 빠른 건조 기능을 켜서 위생적인 유지관리를 촉진하고 필터의 사용 수명을 연장합니다. 건조 과정은 실내 조건에 따라 약 4시간가량 소요됩니다. Air+ 앱에서 이 기능을 끌 수 있습니다.

수동 빠른 건조 모드

가습기를 보관하기 전에 이 설정을 통해 필터를 신속하게 건조할 수 있습니다. 이 기능을 사용하기 전에 먼저 물탱크를 비워야 합니다. Air+ 앱으로만 이 기능을 사용할 수 있습니다.

물 보충

참고:


물을 보충할 때 물의 최대 높이를 초과하지 마십시오. 그렇지 않으면 공기 흡입구에서 누수가 발생할 수 있습니다.

가습기를 이동시킬 때 물탱크를 흔들지 마십시오. 그렇지 않으면 공기 흡입구에서 누수가 발생할 수 있습니다.


가습기 상단에 있는 공기 배출구로 물을 넣지 마십시오.

물을 보충하는 방법에는 측면 물보충 주입구를 통해 물을 보충하거나 물탱크에 직접 물을 넣는 두 가지 방법이 있습니다.

- 수도꼭지로 물을 직접 보충

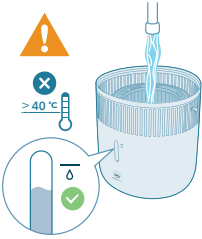

- 측면 물보충 주입구로 물 보충

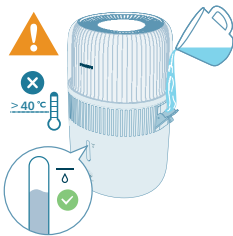


커기 및 끄기

참고:

최적의 가습 성능을 위해 문과 창문을 닫으십시오.

커튼을 공기 흡입구 또는 공기 배출구에서 멀리 두십시오.

- 1 가습기의 어댑터를 전원 콘센트에 연결하십시오.

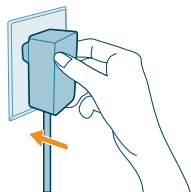


- 2 가습기의 전원 버튼을 눌러 제품을 켭니다.
 - 가습기에서 신호음이 들립니다.
 - 가습 표시등에 주변 습도에 맞는 색상이 표시됩니다.
 - 가습기가 자동 모드로 동작하여 화면에 현재 습도가 표시됩니다.



- 3 전원 버튼을 다시 누르면 가습기가 꺼집니다.

참고: 가습기를 끈 후에도 가습기가 전기 콘센트에 연결되어 있으면 다시 켜를 때 이전 설정으로 작동합니다.

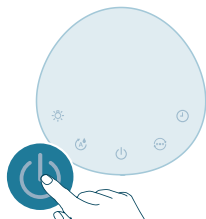


모드 설정 변경

모드 전환 버튼을 눌러 **자동 모드**, **취침 모드**, **중간 모드** 또는 **고성능 모드** 중에서 선택할 수 있습니다.

자동 모드(☺): 가습기가 주변 습도에 따라 팬 속도를 자동으로 조정합니다.



취침 모드(☾): 가습기가 낮은 속도로 조용히 작동합니다. 3초 후 화면 조명이 꺼집니다.

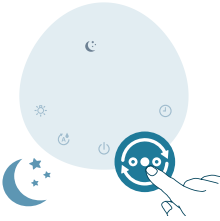

중간 모드(☁): 가습기가 중간 속도로 작동합니다.



고성능 모드(☀): 가습기가 최고 속도로 작동합니다.



습도 레벨 설정

참고:


기본 습도는 50%RH입니다.

다른 모드에서 원하는 습도를 설정하면 가습기가 자동으로 자동 모드로 전환합니다.

습도 설정 버튼을 눌러 30%, 40%, 50%, 60% 또는 70% 사이에서 습도를 조정할 수 있습니다. Air+ 앱에 더 많은 옵션이 있습니다.




조명 기능 사용

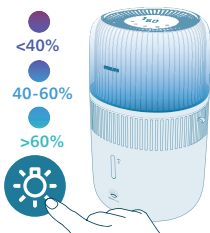

버튼을 눌러 습도 표시등, 주변광을 켜거나 모든 조명과 제어판을 끌 수 있습니다.
- 가습기는 기본적으로 습도 표시등을 켭니다.



- 조명 기능 버튼을 눌러 주변광 모드로 전환할 수 있습니다. Air+ 앱에서 밝기와 색상을 조절할 수 있습니다.

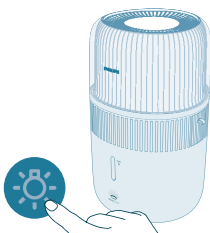

조명 버튼을 눌러 모든 조명과 제어판을 끌 수 있습니다. 아무 버튼을 눌러 먼저 패널을 동작시킨 다음 조명 버튼을 다시 눌러 3초 내에 원하는 조명 모드를 설정합니다.

아동 보호용 잠금 설정



1 ☀ 버튼을 3초간 누르면 아동 보호용 잠금 기능이 활성화됩니다.
- 🔒이 화면에 표시됩니다.



- 2 ☀ 버튼을 다시 3초간 누르면 아동 보호용 잠금 기능이 해제됩니다.
 - 🔒이 화면에서 사라집니다.

타이머 설정



타이머 버튼을 반복해서 눌러 1시간, 2시간, 4시간, 8시간 또는 12시간 중에서 선택할 수 있습니다. 타이머가 끝나면 가습기가 자동으로 작동이 멈춥니다.

청소 및 유지관리

참고:

제품을 청소하기 전에는 항상 제품의 전원 코드를 뽑으십시오.

제품을 절대로 물 또는 기타 액체에 담그지 마십시오.

공기 흡입구 및 배출구를 통해 물을 붓지 마십시오.

표백제나 알코올과 같은 연마성, 강력 또는 가연성 세제를 제품 청소에 사용하지 마십시오.

가습기 본체 청소

먼지가 쌓이지 않도록 정기적으로 가습기의 안팎을 청소하십시오.

- 1 부드러운 마른 천으로 가습기 본체의 먼지를 닦아 냅니다.
- 2 부드러운 마른 천으로 공기 흡입구 및 배출구를 청소합니다.

물탱크 청소


- 1 위생을 유지하기 위해 매주 물탱크를 청소합니다.
- 2 가습 필터를 꺼냅니다.
- 3 물을 섞은 순한 세제를 물탱크에 조금 넣습니다.
- 4 물탱크 내부를 부드러운 청소용 천으로 닦으십시오.
- 5 싱크대에서 물탱크를 비웁니다.

가습 필터 청소


6 가습 필터를 물탱크에 다시 장착합니다.

위생을 유지하기 위해 가습 필터를 매주 청소합니다.


1 제품을 끄고 전원 콘센트에서 분리하십시오.

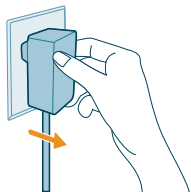


2 물탱크에서 상단 유닛을 제거합니다.

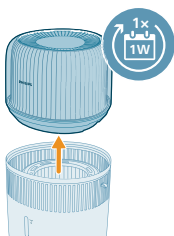


3 물탱크에서 가습 필터를 꺼냅니다.

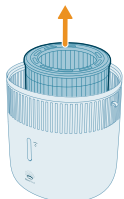


4 가습 필터를 청소용 세제(예: 희석시킨 구연산 용액)에 한 시간가량 담가 둡니다.

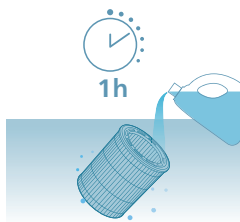

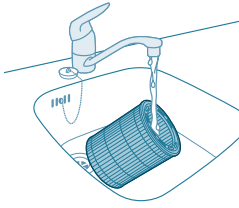


- 5 가습 필터를 천천히 흐르는 수돗물에 행굽니다. 세척할 때 필터를 짜거나 비틀지 마십시오.
- 6 남은 물을 가습 필터에서 떨어지도록 합니다.




- 7 가습 필터를 물탱크에 다시 장착합니다. 물탱크의 상단 유닛을 다시 장착합니다.

아로마 박스 청소

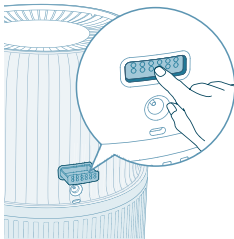


효과적인 아로마테라피를 위해 새 에센셜 오일 블렌드를 사용하기 전에 항상 아로마 패드를 청소해야 합니다. 에센셜 오일 블렌드를 섞지 마십시오.


- 1 아로마 박스를 눌러 밖으로 꺼냅니다.

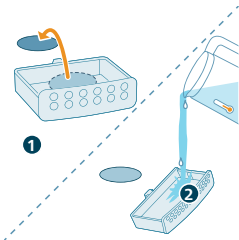

- 2 아로마 패드와 박스를 꺼내 따뜻한 흐르는 물에 행굽니다.

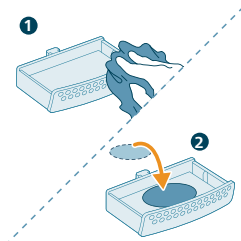

3 아로마 패드를 청소용 천으로 닦아 물기를 없애고 다시 아로마 박스에 넣습니다.

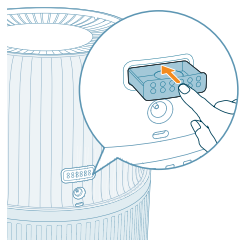

4 아로마 박스를 가습기 안에 다시 넣습니다.

참고: 아로마 패드 또는 아로마 박스에 액체 클리너 또는 세제를 넣지 마십시오.

필터 교체

참고:


필립스 정품 가습 필터 FY5030만 사용하십시오.


가습 필터를 교체하기 전에 항상 가습기의 케이블을 콘센트에서 분리합니다.

☐ 표시등이 켜지면 가습 필터를 교체합니다.




1 제품을 끄고 전원 콘센트에서 분리하십시오.

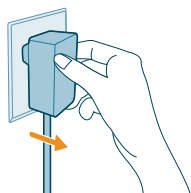




- 2 물탱크에서 상단 유닛을 제거합니다. 물탱크에서 가습 필터를 꺼냅니다.

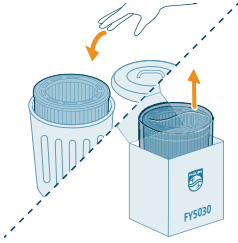

- 3 새 필터의 포장재를 제거하십시오. 사용한 필터를 폐기하십시오.



- 4 가습 필터를 물탱크에 다시 장착합니다. 물탱크의 상단 유닛을 다시 장착합니다.

아로마 패드 교체

반복된 세척 후 아로마 패드가 변형되거나 손상되면 교체해야 할 수 있습니다. 가습기의 성능을 유지하려면 필립스 공식 아로마 패드만 사용하십시오.

보관

- 1 가습기를 끄고 전원 콘센트에서 분리하십시오.
- 2 가습기를 청소합니다("청소 및 유지관리" 챕터 참조).
- 3 보관하기 전에 모든 부품을 자연 건조하십시오.
- 4 가습기를 서늘하고 건조한 장소에 보관하십시오.

문제 해결

이 장은 제품을 사용하면서 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 아래의 정보를 참조해도 문제를 해결할 수 없는 경우에는 해당 지역 고객 상담실로 문의하십시오.

문제점

가습기가 작동하지 않습니다.

가능한 해결책

가습기에 전원이 들어 오는지 확인하십시오.

	물탱크에 물이 채워져 있으며 상단 유닛이 물탱크에 적절하게 장착되어 있는지 확인합니다.
가습이 되지 않습니다.	물탱크에 물이 채워져 있으며 상단 유닛이 물탱크에 적절하게 장착되어 있는지 확인합니다.
	원하는 습도 수준에 도달했습니다.
습도 레벨이 변하지 않습니다.	실내를 너무 많이 환기시켰기 때문일 수 있습니다. 문과 창문을 닫으십시오.
	가습 필터를 제대로 조립했는지 확인하십시오.
	방 크기가 너무 큼니다. 이 가습기를 사용하기에 적절한 방의 크기는 $\leq 56\text{m}^2$ 입니다.
	미스트 수준을 더 높이 설정해 보십시오.
	건조한 환경에서 사용하는 경우 수분이 벽과 가구 등과 같은 주변 물체에 흡수될 수 있어 가습 시간이 더 오래 걸릴 수 있습니다.
	가습 필터가 더럽습니다. 가습 필터를 행구거나 이물질 제거하십시오('가습 필터 청소' 챕터 참조).
매우 건조하게 느껴질 때도 가습기가 멈춥니다.	물탱크가 비어 있습니다. 물을 보충해 주십시오.
	자동 모드에서 제품 주변 습도가 설정된 수준에 도달했습니다. 습도가 설정된 수준보다 낮아지면 자동으로 다시 작동합니다.
	제품 주변 습도가 70%보다 높아지면 곰팡이가 생길 수 있기 때문에 장치가 작동을 멈춥니다.
가습 필터에 하얀 침전물이 쌓여 있습니다.	하얀 침전물은 물때입니다. 물에 포함된 광물질에서 생긴 것입니다. 가습 필터에 생긴 물때는 가습 성능에 영향을 주지만, 건강에 해를 끼치지 않습니다. 사용 설명서의 청소 지침을 따릅니다.
물탱크가 썩습니다.	가습기에 물이 넘치지 않는지 확인하십시오.
	가습기를 청소한 후 또는 상단 유닛을 제거한 후 및 물탱크를 보충한 후 항상 가습기가 제대로 조립 및 연결되어 있는지 확인하십시오.
	물 탱크가 올바르게 설치되었는지 확인하십시오. 문제가 지속되면 거주하고 계신 국가의 필립스 서비스 센터에 문의하십시오.
일정한 시간이 지난 후 필터가 변색되었습니다.	침전물은 필터에 있는 광물질에 대한 자연스러운 반응으로, 가습 성능에 영향을 주지 않습니다. 가습 필터를 정기적으로 청소하여 물때를 제거합니다. 가습 필터는 6개월 한 번씩 교체하십시오.
경우에 따라 물에 있을 때에도 물 보충 표시등이 켜질 때가 있습니다.	필터의 로고가 위를 향하도록 합니다.
	물이 조금 남아 있더라도 표시등이 켜져 제때 물을 보충할 수 있도록 합니다.
가습기에서 불쾌한 냄새가 납니다.	가습기를 처음 몇 차례 사용할 때는 플라스틱 냄새가 날 수 있습니다. 이는 정상이며 수 일 내에 완전히 사라집니다.

	필터와 물탱크를 세척합니다('청소 및 유지관리' 챕터 참조).
아로마 기능이 제대로 작동하지 않습니다(향이 너무 약하거나 너무 강합니다).	에센셜 오일을 2~3 방울 사용합니다.
	서로 다른 에센셜 오일에서 나는 향은 그 강도가 서로 다르게 느껴질 수 있습니다.
	향이 방 전체에 퍼지는 데 시간이 걸립니다.
공기 배출구에서 공기가 배출되지 않습니다.	가습기를 전원 콘센트에 연결하고 가습기를 켭니다.
가습기에서 미스트가 나오는 것이 보이지 않습니다. 작동하는 것일까요?	미스트가 매우 미세할 때는 보이지 않습니다. 본 가습기는 NanoCloud 가습 기술을 사용하고 있으므로 물기가 많은 미스트가 생성되지 않고도 몸에 좋은 미스트를 생성합니다. 따라서 미스트를 눈으로 볼 수 없습니다.
물이 다 떨어졌는데도 가습기가 계속 작동합니다.	가습기는 기본적으로 자동 빠른 건조 기능을 작동시켜 사용 후 필터를 급속하게 건조하여 위생적인 유지관리와 필터의 사용 수명을 연장합니다. Air+ 앱에서 이 기능을 끌 수 있습니다.
가습기를 오랫동안 사용하지 않으면 어떻게 보관하고 재사용할 수 있습니까?	가습기를 오랫동안 사용하지 않으면 필터에 박테리아와 곰팡이가 자랄 수 있습니다. 보관 및 재사용에 관한 아래의 단계를 따르십시오.
	보관하기 전에 물탱크를 꼼꼼히 청소하고 가습 필터를 건조하십시오.
	가습기를 다시 사용하기 전 필터를 점검하십시오. 필터에 어두운 반점이 생겨 더러워지면 교체하십시오(사용 설명서의 "필터 교체" 챕터 참조).
필터를 이미 교체했는데 계속 교체 경고등이 표시됩니다.	필터 수명 카운터를 재설정하지 않았을 수 있습니다. 제품을 켜십시오. 그런 다음  을 동시에 3초 동안 길게 누릅니다.
Wi-Fi 설정이 되지 않습니다.	스마트폰이 5GHz Wi-Fi 네트워크 또는 공용 Wi-Fi가 아닌 2.4GHz(홈) Wi-Fi 네트워크에 연결되어 있는지 확인하십시오. 성공적으로 페어링하려면 페어링 프로세스를 시작하기 전에 모바일 데이터를 끄는 것이 좋습니다.
	다음 권한을 활성화해야 합니다. 스마트폰의 "위치", "보관", "Bluetooth" 및 "로컬 네트워크". Wi-Fi 설정이 성공적으로 완료되면 권한 설정을 원하는 대로 변경할 수 있습니다.
	올바른 Wi-Fi 암호를 입력했는지 확인하십시오. 암호는 대소문자를 구분하며 63자 이내로 제한됩니다. 특수 기호는 사용할 수 없습니다.
	홈 Wi-Fi의 네트워크 이름이 올바른지 확인합니다. 네트워크 이름은 대소문자를 구분합니다.
	스마트폰에서 VPN을 사용하는 경우 페어링 프로세스를 시작하기 전에 VPN을 끄십시오.
	라우터에 페어링을 차단하도록 설정된 화이트리스트가 있는 경우 성공적으로 연결되도록 화이트리스트를 비활성화하십시오.
	장치와 스마트폰이 모두 라우터에서 10미터 이내에 있는지 확인하십시오.

앱이 최신 버전으로 업데이트되었는지 확인합니다.

강력한 Wi-Fi 연결을 유지하려면 간섭을 일으킬 수 있는 다른 전자 장치, 밝은 조명 또는 신호 스테이션 근처에 제품을 두지 마십시오. 연결 문제가 발생하는 경우 제품을 이러한 소스에서 멀리 옮기고 Wi-Fi 네트워크에 다시 연결해 봅니다.

자세한 최신 문제해결 팁은 앱의 도움말을 참조하십시오.

품질 보증 및 지원

Versuni는 이 제품에 대해 구매 시점으로부터 2년간 보증을 제공합니다. 제품을 잘못된 방법으로 사용하거나 부실한 유지관리로 인해 결함이 발생한 경우 이 보증은 유효하지 않습니다. 당사의 보증은 법에서 정하는 소비자로서 귀하의 권리에 영향을 미치지 않습니다. 보다 자세한 정보가 필요하거나 보증을 적용 받으려면 당사 웹사이트 **www.philips.com/support**를 방문해 주시기 바랍니다.

부품 또는 액세서리 주문

부품을 교체해야 하거나 추가 부품을 구입하려는 경우 필립스 대리점을 방문하시거나 **www.philips.com/support**를 방문하십시오.

부품을 구입하는 데 문제가 있는 경우 해당 지역의 필립스 고객 상담실로 문의하십시오.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2024 © Versuni Holding B.V.

