

PHILIPS

HD3170



EN

User manual

3

KO

사용 설명서

14

Contents

1 Important 4

- Power-failure memory function 5
- Electromagnetic fields (EMF) 5

2 Your Rice cooker 6

- What's in the box 6
- Product overview 7
- Controls overview 7
- Cooking programs 8

3 Using your rice cooker 8

- Before first use 8
- Preparations before cooking 8
- Cooking rice 9
- Porridge and soup 10
- Baking cake 10
- Preset timer for delayed cooking 10

4 Cleaning and Maintenance 11

- Inner lid 11
- Steam valve 11
- Interior 12
- Exterior 12
- Accessories 12

5 Recycling 12

6 Warranty and support 12

7 Specifications 12

8 Troubleshooting 13

1 Important

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- **WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- **WARNING:** Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.

Caution

- The symbol marked on the appliance means "Caution, Hot surfaces", do not touch the hot surface in order to avoid scald.
- **CAUTION:** Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- The aluminum board of the top lid is not intended to contact with acidic foods pH \leq 5.0 such as sauerkraut, pickles, jam, jellies, tomatoes, vinegar, lime or lemon, sour plum and coke.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- The operating altitude range of the appliance is 0 -2000 meters.



- If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Power-failure memory function

This appliance features a power-failure memory function that save the status prior to the power loss.

- If a power outage occurs during cooking and power is restored within 2 hours, the cooking time countdown will resume from its previous point.
- If a power outage occurs while the product is in preset mode and power is restored within 2 hours, the preset time countdown will resume from its previous point.
- If power is not restored within 2 hours, the appliance may not resume its previous work process.

Electromagnetic fields (EMF)


This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

2 Your Rice cooker

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


What's in the box

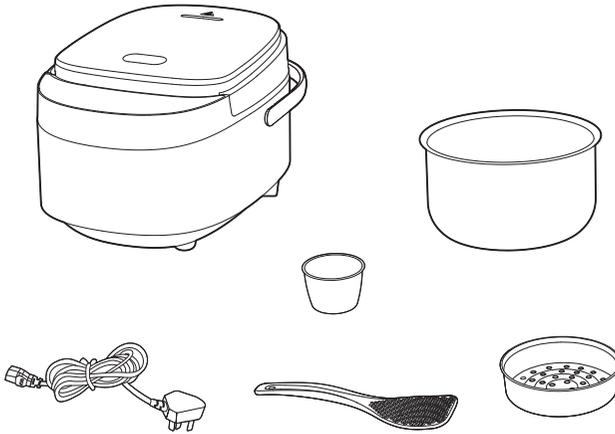

Main unit
Rice&soup ladle
Steaming plate
Quick start guide

Power cord
Measuring cup
Inner pot
Important information leaflet

Product overview

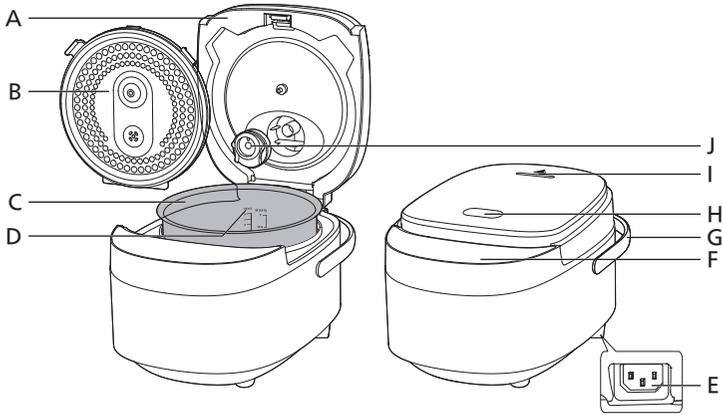

A	Top lid	F	Control Panel
B	Detachable inner lid	G	Handle
C	Inner pot	H	Lid release button
D	Water level indications	I	Steam vent
E	Power socket	J	Steam valve

Controls overview



K	Choose menu button	N	Cooking time booking button
L	Cooking time button	O	Start/Cancel button
M	Time display		

Cooking programs

Cooking function	Default cooking time*	Adjustable time range
Fast cook	30 minutes**	N/A
White rice	50 minutes	N/A
Brown rice	60 minutes	N/A
Sushi rice	50 minutes	N/A
Porridge	90 minutes	1-2 hours
Soup	2 hours	1.5-4 hours
Cake	50 minutes	N/A
Keep warm	6 hours	N/A

*The default cooking time refers to the default cooking time displayed on the screen when the corresponding function is selected. The appliance cannot adjust the cooking time manually. The actual cooking time may vary depending on the amount of ingredients used, amount of water used, the temperature of the water, and the cooking environment.

**The cooking time for the Fast cook function may vary depending on factors such as the amount of rice used, the quantity of water used, the temperature of the water, and the cooking environment. As a result, the cooking time will be adjusted, either increased or decreased.

As a reference, the cooking time is approximately 30 minutes for cooking 1 cup of short-grain rice.

3 Using your rice cooker

Before first use

- 1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- 2 Before first use, boil water and clean the Rice cooker.
- 3 Clean the parts of the Rice cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Notes

- Make sure all parts are completely dry before you start using the Rice cooker.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

Preparations before cooking

Warning

- Make sure the detachable inner lid and the steam valve are correctly installed.

Notes

- Make sure that the amount of food or liquid you add to the inner pot is within the range of the water level indication.
- For rice cooking, follow the water level indications on the inside of the inner pot. You can adjust the water level for different types of rice and your own preference. Do not exceed the quantities indicated on the inside of the inner pot.
- To cook **Brown rice** or **Sushi rice**, you can use the same water level indication of **White rice**.
- After the cooking process starts, you can press **Start/Cancel** to cancel the cooking, the rice cooker will go to standby mode.

Perform the following preparations before cooking with the rice cooker:


- 1 Press the lid release button to open the rice cooker.




- 2 Take out the inner pot.



- 3 Put the washed food into the inner pot, and wipe off water outside of the inner pot with a soft clean cloth, put it back into the appliance.

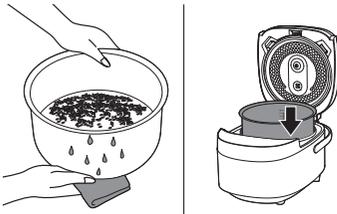

- 4 Close the lid.
- 5 Put the plug in the power socket.

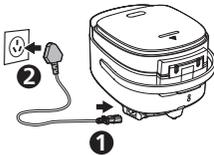

Notes

- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

Cooking rice

- 1 Follow the steps in "Preparations before cooking".



- 2 Press **Choose menu** button to select **Fast cook, White rice, Brown rice, or Sushi rice**.
 - ↳ The indicator of chosen cooking function blinks.
 - ↳ The default cooking timer displays on the screen.
- 3 Press **Start** to start the cooking process.
- 4 When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- 5 The rice cooker will be in keep warm mode automatically.
 - ↳ The keep-warm indicator lights up.

Notes

- Press **Start/Cancel** to terminate the current cooking process.
- The level marked inside the inner pot is just an indication; you can always adjust the water level for different types of rice and your own preference.
- Besides following the water level indications, you may also add rice and water at 1:(1.3-1.6) ratio for rice cooking
- To prevent the rice from clumping, loosen the rice within 30 minutes.
- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow and cause potential hazard.

Porridge and soup

- Put all ingredients into the inner pot.
- Follow the steps in "Preparations before cooking".



- Press **Choose menu** button to select the **Porridge** or **Soup** function.
 - ↳ The indicator of chosen cooking function blinks.
 - ↳ The default cooking timer displays on the screen.

Notes

- You can press the **Cooking time** button to adjust the time, the cooking time blinks on the screen.

- Press **Start** to start the cooking process.
- When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep warm mode automatically.
 - ↳ The keep-warm indicator lights up.

Baking cake

- Whisk the ingredients for cake well.
- Coat the inner pot with some butter or cooking oil, and then pour the ingredients into it.
- Follow the steps in "Preparations before cooking".



- Press **Choose menu** button to select **Cake** function.
- Press **Start** to start the cooking process.
- When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
 - ↳ The keep-warm indicator lights up.
- Open the lid and carefully take out the inner pot to cool down.
- After the inner pot is cool down, put a plate or cake rack on top of the pot, and then flip over to take the cake out.

Preset timer for delayed cooking

Notes

- The preset function is not available for **Cake** and **Keep warm**. The preset time is up to 24 hours.
- The preset timer should be longer than cooking time.
- If you want to enjoy delicious rice after 8 hours, set the preset time to 8 hours.
- Beware of setting this for too long in the future if there are perishable foods among the contents of the dish you are cooking.



- Choose a function you need, press the **Cooking time booking** button to set the preset time.
 - ↳ The cooking time booking indicator blinks
 - ↳ The time on the screen blinks.



- 2 Press the **Cooking time booking** button to adjust the time.
 - ↳ With each press, the time increases by 10 minutes. Long press the button to quickly adjust the time by 1 hour.
- 3 Press **Start** to start the cooking process.
 - ↳ The rice cooker starts countdown until the cooking process is finished.

4 Cleaning and Maintenance

Notes

- Unplug the Rice cooker before starting to clean it.
- Wait until the appliance has cooled down sufficiently before cleaning.


Inner lid





- Remove the inner lid that can be detached from the top lid and clean it.
- Soak the inner lid in warm water and wash it with a sponge.
- Remove all the food residues stuck to the appliance.
- Reattach the inner lid to the top lid.

Steam valve

- Remove the inner lid.
- Remove the steam valve from the top lid.

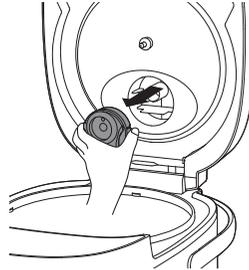

- Rinse the steam valve to remove any food residues. Once it has been cleaned, reattach the steam valve to the top lid.

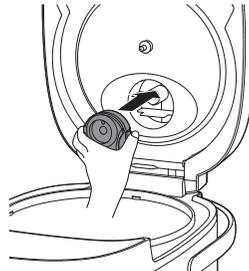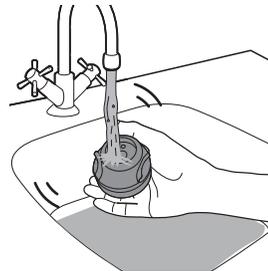

Interior

Top lid and inside of the appliance:

- Wipe with wrung out cloth.
- Remove all the food residues stuck to the appliance.

Heating element:

- Wipe with wrung out cloth.
- Remove all the food residues.

Exterior

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues.

Accessories

Rice scoop, steaming basket and inner pot.

- Soak in hot water and clean with sponge.

5 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

6 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

7 Specifications

Model Number	HD3170
Rated power input	549-653W
Rated capacity	3.0L
Rice capacity	0.85L

8 Troubleshooting

If you encounter problems when using this appliance, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the rice cooker properly and if the plug is inserted firmly into the power outlet.
	The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked	There is not enough water. Add water according to the scale on the inside of the inner pot.
	Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on.
	The heating element is damaged, or the inner pot is deformed. Take the rice cooker to your Philips dealer or a service center authorized by Philips.
The rice is too hard, or not well cooked.	Add more water into the rice or cook longer.
The appliance does not switch to keep warm mode automatically.	The temperature control system has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
During cooking, There is water spilling in the rice cooker.	Based on the rice amount and different types of rice, add the appropriate amount of water according to the water level indication on the inner pot.
Rice smells bad after cooking.	Use the cleaning agent and warm water to clean the inner pot.
	After cooking, make sure the steam vent cap, inner lid and inner pot are cleaned thoroughly. Clean the inner pot with some washing detergent and warm water.
E1, E2, E3 or E4 displays on the screen.	The sensor has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
E5 or E6 displays on the screen.	The voltage is too high or too low. Once the voltage in your area recovers, the error code will be disappeared from screen.

콘텐츠

1	중요 사항	15	5	재활용	21
	전원 고장 메모리 기능	15			
	EMF(전자기장)	15	6	보증 및 지원	22
2	밥솥	16	7	사양	22
	구성품	16			
	제품 개요	17	8	문제 해결	22
	조절 장치 개요	17			
	조리 프로그램	18			
3	밥솥 사용	18			
	최초 사용 전	18			
	조리 전 준비	18			
	밥 짓기	19			
	죽 및 수프	19			
	케이크 굽기	20			
	나중에 조리하기 위한 타이머 프리셋	20			
4	청소 및 유지관리	21			
	속뚜껑	21			
	스팀 밸브	21			
	내부	21			
	외부	21			
	액세서리	21			

1 중요 사항

밥솥을 사용하기 전에는 본 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

위험

- 제품을 액체에 담그지 마십시오.

경고

- 신체적인 감각 및 정신적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인 및 어린이는 혼자 칫솔을 사용하지 말고 제품 사용과 관련하여 안전에 책임 질 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받으십시오.
- 어린이가 제품을 가지고 놀지 않도록 보호자의 감독이 필요합니다.
- 뜨거운 액체가 흘러 나오지 않도록 이 제품과 핸들(있는 경우)을 안정적인 위치에 두십시오.
- 본 제품은 가정 및 다음과 같은 유사 환경에서 사용하도록 설계되었습니다.
 - 매장, 사무실 및 기타 작업 환경 내 직원용 탕비실
 - 주거 시설
 - 호텔 및 기타 숙박 시설
 - 민박 시설
- 전원 코드 세트가 손상된 경우 제조업체에서 제공하는 코드 세트로 교체해야 합니다.
- 본 제품은 외부 타이머나 별도의 리모콘 시스템으로 작동하지 않습니다.
- 전원을 연결하기 전에 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 제품이 올려져 있는 식탁이나 조리대의 가장자리로 전원 코드가 흘러내리지 않도록 하십시오.
- 플러그를 전원 콘센트에 꽂기 전에 열판, 온도 센서, 내솥 결면을 깨끗이 닦고 물기를 말리십시오.
- 젖은 손으로 제품 플러그를 꽂거나 제어판의 버튼을 누르지 않도록 하십시오.
- 경고: 잠재적인 위험을 방지하기 위해 전원 커넥터에 물을 쏟지 않도록 하십시오.
- 경고: 잠재적인 부상을 방지하기 위해 항상 지침을 따르고 제품을 적절하게 사용하십시오.
- 사용 설명서의 지침에 따라 음식과 닿는 표면을 물에 적신 부드러운 천으로 닦고 제품에 붙은 음식 찌꺼기를 모두 제거했는지 확인하십시오.
- 사용 중 제품 아래에 전원 코드를 두지 마십시오.

주의

- 제품에 표시된 기호는 "주의, 뜨거운 표면"을 의미하며 화상을 방지하기 위해 제품이 뜨거울 때 만지지 마십시오.
- 주의: 사용 후 열판 표면에 잔열이 있으므로 주의하십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 상단 뚜껑의 알루미늄 보드는 양배추절임, 피클, 잼, 젤리, 토마토, 식초, 라임 또는 레몬, 신 자두 및 콜라와 같은 pH 5.0 이하의 산성 식품과 접촉하도록 설계되지 않았습니다.



- 제품을 고온에 노출하지 마십시오. 작동중이거나 뜨거운 상태의 전기 또는 가스 레인지에 밥솥을 올려 놓지 마십시오.
- 제품을 직사광선에 노출하지 마십시오.
- 제품을 안정하고 평평한 장소에 두십시오.
- 항상 제품 안에 내솥은 넣은 후 전원 콘센트에 꽂고 스위치를 켜십시오.
- 내솥을 볼 위에 직접 올려 놓고 밥을 짓지 마십시오.
- 내솥이 변형된 경우에는 사용하지 마십시오.
- 제품이 작동 중일 경우 손이 닿는 표면이 뜨거울 수 있습니다. 제품을 만질 때는 각별히 주의하십시오.
- 취사 시 증기 배출구나 제품 뚜껑을 열면 나오는 증기는 매우 뜨거우므로 주의하십시오. 증기가 닿지 않도록 손과 얼굴을 제품에 가까이 대지 마십시오.
- 작동 중에는 제품을 들거나 옮기지 마십시오.
- 내솥에 표시된 최고 수위선을 넘지 마십시오. 내용물이 넘쳐 위험할 수 있습니다.
- 취사, 보온 또는 재보온 중에는 솥 내부에 조리 기구를 넣지 마십시오.
- 제품된 조리 기구만 사용하십시오. 날카로운 기구는 사용하지 마십시오.
- 급힘을 방지하기 위해 감자류 및 조개류를 포함하는 음식은 조리하지 않도록 하십시오. 조리하기 전에 딱딱한 껍질을 제거하십시오.
- 증기 배출구로 금속성 물체나 이물질질을 넣지 마십시오.
- 뚜껑에 자석 물질을 부착하지 마십시오. 자석 물질 가까이에서 밥솥을 사용하지 마십시오.
- 밥솥을 충분히 식힌 후 세척하거나 이동하십시오.
- 사용 후 반드시 제품을 청소하십시오. 제품을 식기 세척기에서 세척하지 마십시오.
- 장시간 사용하지 않을 경우에는 전원 플러그를 뽑으십시오.
- 제품의 작동 고도 범위는 0~2,000미터입니다.
- 제품을 부적절하게 사용하거나 사업장 또는 준사업장에서 사용하는 경우, 또는 사용 설명서에 따라 이용하지 않는 경우, 보증 서비스를 받을 수 없으며 필립스는 이로 인해 발생한 피해에 대해 책임을 지지 않습니다.

전원 고장 메모리 기능

이 제품은 정전 전의 상태를 저장하는 전원 고장 메모리 기능을 갖추고 있습니다.

- 조리 중에 정전이 발생하고 2시간 이내에 전원이 복구되면 조리 시간 카운트다운이 이전 지점에서 다시 시작됩니다.
- 제품이 프리셋 모드일 때 정전이 발생하고 2시간 이내에 전원이 복구되면 프리셋 시간 카운트다운이 이전 지점에서 다시 시작됩니다.
- 2시간 이내에 전원이 복구되지 않으면 제품이 이전 작업을 다시 시작하지 못할 수 있습니다.

EMF(전자기장)


이 제품은 EMF(전자기장) 노출과 관련된 해당 표준 및 규정을 준수합니다.

2 밥솥

필립스 제품을 구입해 주셔서 감사합니다!

필립스가 드리는 지원 혜택을 받으실 수 있도록 www.philips.com/welcome 에서 제품을 등록하십시오.


구성품

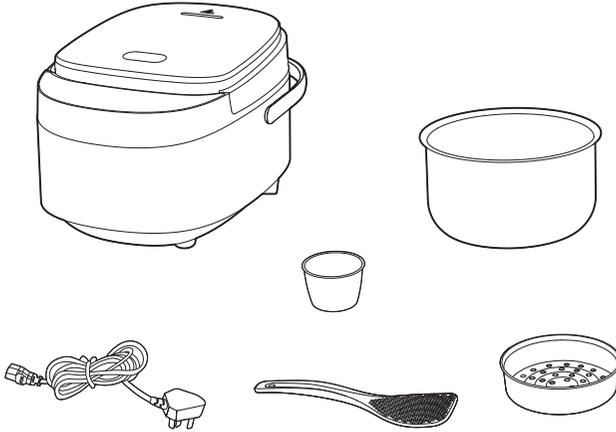

본체
주걱 겸 국자
찜판
정보 책자

전선
계량컵
내솥
중요 정보 설명서

제품 개요

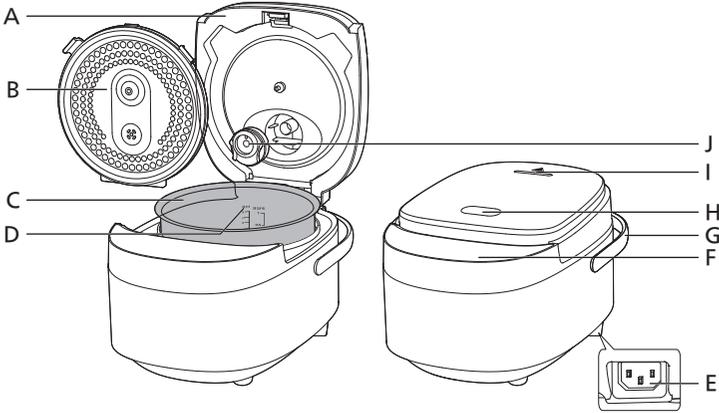

A	상단 뚜껑	F	제어판
B	분리형 내부 뚜껑	G	핸들
C	내솥	H	뚜껑 열림 버튼
D	물높이 표시	I	증기 배출구
E	전원 콘센트	J	스팀 밸브

조절 장치 개요



K	메뉴 선택 버튼	N	조리 시간 예약 버튼
L	조리 시간 버튼	O	시작/취소 버튼
M	시간 표시		

조리 프로그램

조리 기능	기본 조리 시간*	조정 가능 시간 범위
빠른 요리	30 분 **	N/A
백미	50 분	N/A
현미	60 분	N/A
초밥용 밥	50 분	N/A
죽	90 분	1~2 시간
수프	2 시간	1.5~4 시간
케이크	50 분	N/A
보온	6 시간	N/A

*기본 조리 시간은 해당 기능이 선택되었을 때 화면에 표시되는 기본 조리 시간을 의미합니다. 이 제품은 조리 시간을 수동으로 조절할 수 없습니다. 실제 조리 시간은 사용한 재료 또는 물의 양, 물 온도, 조리 환경에 따라 달라질 수 있습니다.

**빠른 조리의 조리 시간은 사용한 쌀의 양, 사용한 물의 양, 물 온도, 조리 환경 등의 요인에 따라 달라질 수 있습니다. 따라서 조리 시간은 늘어나거나 줄어드는 방식으로 조정됩니다.

참고로 단립종 쌀 1컵을 조리하는 데 소요되는 조리 시간은 약 30분입니다.

3 밥솥 사용

최초 사용 전

- 1 내솥에서 모든 액세서리를 분리하십시오. 내솥의 포장재를 제거하십시오.
- 2 처음 사용하기 전에 물을 끓여서 밥솥을 청소하십시오.
- 3 밥솥을 처음 사용하기 전에 부품을 깨끗이 세척하십시오("세척 및 유지관리"란 참조).

참고

- 밥솥을 사용하기 전에 모든 부품의 물기를 완전히 말리십시오.
- 내솥 겉면에 물기가 없이 깨끗하고 열판에 이물질이 끼어 있지 않은지 확인하십시오.

조리 전 준비

! 경고

- 분리형 속뚜껑과 스팀 밸브가 올바르게 장착되었는지 확인하십시오.

☰ 참고

- 내솥에 넣는 음식물이나 액체의 양이 물높이 표시 범위 내에 있는지 확인하십시오.
- 밥을 조리하려면 내솥 안쪽의 물높이 표시를 지키십시오. 쌀의 종류나 개인 취향에 따라 물 높이를 조절할 수 있습니다. 내솥 안쪽에 표시된 양을 초과하지 마십시오.
- **현미나 초밥용 밥**을 조리할 때는 **백미**와 동일한 물높이 표시를 따르십시오.
- 취사가 시작되면 **시작/취소**를 눌러 취사를 취소할 수 있습니다. 그러면 밥솥이 대기 모드로 전환됩니다.

밥솥으로 밥을 짓기 전에 다음 준비를 수행하십시오.


- 1 밥솥 열림 버튼을 눌러 뚜껑을 여십시오.




- 2 내솥을 꺼냅니다.



- 3 손질한 음식을 내솥에 넣고 부드럽고 깨끗한 천으로 내솥 바깥의 물을 닦은 다음 제품에 다시 넣으십시오.

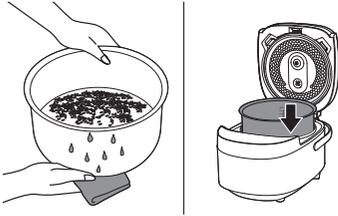

- 4 뚜껑을 닫으십시오.
- 5 플러그를 전원 콘센트에 꽂으십시오.

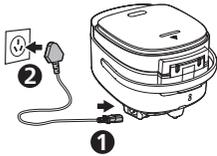

참고

- 내솥 겉면에 물기가 없이 깨끗하고 열판에 이물질이 끼어 있지 않은지 확인하십시오.
- 내솥이 열판에 제대로 접촉되는지 확인하십시오.

밥 짓기

- 1 "조리 전 준비" 단계를 따르십시오.



- 2 메뉴 선택 버튼을 눌러 빠른 요리, 백미, 현미 또는 초밥용 밥을 선택합니다.
 - ↳ 선택한 조리 기능의 표시등이 깜박입니다.
 - ↳ 기본 취사 타이머가 화면에 표시됩니다.
- 3 시작을 눌러 취사를 시작하십시오.
- 4 조리가 완료되면 신호음이 6번 울리고 선택한 조리 기능의 불이 꺼집니다.
- 5 밥솥은 자동으로 보온 모드가 됩니다.
 - ↳ 보온 표시등이 켜집니다.

참고

- 시작/취소를 눌러 현재 조리 과정을 종료하십시오.
- 내솥 안쪽의 표시는 일반적인 권장 사항입니다. 쌀의 종류나 식성에 따라 물의 양을 조절할 수 있습니다.
- 쌀로 취사할 때는 물 높이 표시선을 넘어서 쌀과 물을 1:(1.3~1.6) 비율로 추가할 수도 있습니다.
- 쌀이 덩어리지는 것을 방지하려면 30분 이내에 쌀을 풀어 줘야 합니다.
- 내솥에 표시된 최고 물 높이 표시선과 쌀 양을 초과하지 마십시오. 밥솥 밖으로 내용물이 넘쳐 위험할 수 있습니다.

죽 및 수프

- 1 내솥에 모든 재료를 넣으십시오.
- 2 "조리 전 준비" 단계를 따르십시오.



- 3 메뉴 선택 버튼을 눌러 죽이나 수프 기능을 선택하십시오.
 - ↳ 선택한 조리 기능의 표시등이 깜박입니다.
 - ↳ 기본 취사 타이머가 화면에 표시됩니다.


참고

- 조리 시간 버튼을 눌러 시간을 조절할 수 있으며, 조리 시간이 화면에 깜박입니다.

- 4 시작을 눌러 취사를 시작하십시오.
- 5 조리가 완료되면 신호음이 6번 울리고 선택한 조리 기능의 불이 꺼집니다.
- 6 밥솥은 자동으로 보온 모드가 됩니다.
 - ↳ 보온 표시등이 켜집니다.

케이크 굽기

- 1 케이크 재료를 잘 저어줍니다.
- 2 내솥에 버터나 식용유를 약간 바르고 재료를 넣으십시오.
- 3 "조리 전 준비" 단계를 따르십시오.

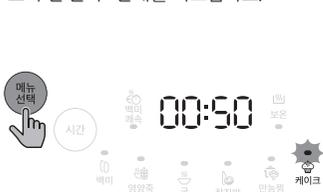

- 4 메뉴 선택 버튼을 눌러 케이크 기능을 선택하십시오.
- 5 시작을 눌러 취사를 시작하십시오.
- 6 조리가 완료되면 신호음이 6번 울리고 선택한 조리 기능의 불이 꺼집니다.
↳ 보온 표시등이 켜집니다.
- 7 뚜껑을 열고 내솥을 조심스럽게 꺼내 식힙니다.
- 8 내솥이 식으면 접시나 케이크 받침대를 용기 위에 놓고 뒤집어서 케이크를 꺼냅니다.

나중에 조리하기 위한 타이머 프리셋

참고

- 프리셋 기능은 케이크 및 보온 기능에 사용할 수 없습니다. 프리셋 시간은 24시간까지 설정이 가능합니다.
- 프리셋 타이머는 조리 시간보다 길어야 합니다.
- 8시간 후에 맛있는 밥을 맛보고 싶다면 프리셋 시간을 8시간으로 설정하십시오.
- 조리하는 음식의 내용물 중에 상하기 쉬운 재료가 들어 있는 경우, 나중에 이 시간을 너무 길게 설정하지 않도록 주의하십시오.



- 1 필요한 기능을 선택하고, **조리 시간 예약** 버튼을 눌러 프리셋 시간을 설정합니다.
↳ 조리 시간 예약 표시등이 깜박입니다.
↳ 화면의 시간이 깜박입니다.



- 2 **조리 시간 예약** 버튼을 눌러 시간을 조정합니다.
↳ 누를 때마다 시간이 10 분씩 증가합니다. 버튼을 길게 누르면 시간을 1 시간 단위로 빠르게 조절할 수 있습니다.
- 3 시작을 눌러 취사를 시작하십시오.
↳ 취사가 완료될 때까지 밥솥이 카운트다운을 시작합니다.

4 청소 및 유지관리

참고

- 밥솥을 청소하려면 먼저 플러그를 뽑으십시오.
- 제품 열기가 충분히 식으면 청소하십시오.


속뚜껑





- 상단 뚜껑에서 분리할 수 있는 속뚜껑을 제거하여 세척하십시오.
- 속뚜껑을 따뜻한 물에 불린 다음 스펀지로 세척하십시오.
- 제품에 붙어 있는 음식물 찌꺼기를 모두 제거하십시오.
- 속뚜껑을 상단 뚜껑에 다시 부착하십시오.

스팀 밸브

- 속뚜껑을 엽니다.
- 스팀 밸브를 상단 뚜껑에서 분리합니다.

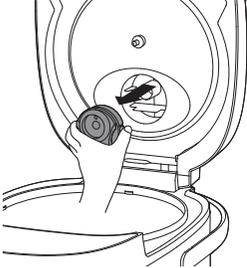

- 스팀 밸브를 헹구 남아 있는 모든 음식물 찌꺼기를 제거합니다. 세척이 끝나면 스팀 밸브를 상단 뚜껑에 다시 부착합니다.

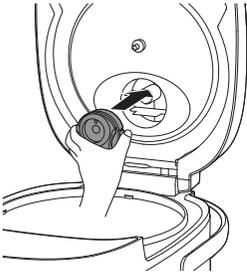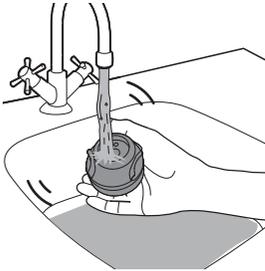

내부

상단 뚜껑 및 제품 내부:

- 축축하게 짠 천으로 닦으십시오.
- 제품에 붙어 있는 음식물 찌꺼기를 모두 제거하십시오.

열판:

- 축축하게 짠 천으로 닦으십시오.
- 음식물 찌꺼기를 모두 제거하십시오.

외부

- 비눗물로 적신 천으로 닦아줍니다.
- 제어판은 부드러운 마른 천으로만 닦아줍니다.
- 음식을 찌꺼기를 모두 제거했는지 확인하십시오.

액세서리

밥주걱, 찜용 바스켓 및 내솔

- 뜨거운 물에 담갔다가 스폰지로 닦아줍니다.

5 재활용

수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 재활용품 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다.

해당 국가의 전기/전자 제품 분리수거 규칙에 따라 버리십시오. 올바른 제품 폐기를 통해 환경 및 인류의 건강을 유해한 영향으로부터 보호할 수 있습니다.

6 보증 및 지원

Versuni는 제품 구매 후 2년간 보증을 제공합니다. 제품의 결함이 올바르지 못한 사용 또는 잘못된 유지 관리로 인한 것인 경우 보증은 무효합니다. 당사의 보증은 소비자로서 법에 따른 귀하의 권리에 영향을 미치지 않습니다. 자세한 내용을 확인하거나 보증을 청구하려면 www.philips.com/support를 방문하십시오.

7 사양

모델번호	HD3170
정격 전원 입력	549~653W
정격 용량	3.0L
쌀 용량	0.85L

8 문제 해결

제품 사용 시 문제가 발생하면 서비스를 요청하기 전에 다음과 같은 항목을 확인해 보십시오. 문제를 해결할 수 없는 경우 필립스 고객 지원 센터로 문의하십시오.

문제점	해결책
버튼의 표시등이 계속 켜져 있지 않습니다.	전원 연결에 문제가 있습니다. 전원 코드가 밥솥에 제대로 연결되어 있는지 플러그가 전원 콘센트에 단단히 꽂혀 있는지 확인하십시오.
	표시등에 결함이 있습니다. 필립스 판매점이나 필립스 지정 서비스 센터에서 제품을 수리하십시오.
밥이 지어지지 않습니다.	물이 부족합니다. 내솥 안쪽의 눈금에 맞춰 물을 넣으십시오.
	취사 스위치를 켜기 전에 열판 및 내솥 바깥쪽에 이물질이 없는지 확인하십시오.
	열판이 손상되었거나 내솥이 변형되었습니다. 필립스 판매점이나 필립스 지정 서비스 센터에서 밥솥을 수리하십시오.
밥이 너무 되거나 제대로 조리되지 않습니다.	쌀에 물을 더 넣거나 더 오래 조리하십시오.
제품이 보온 모드로 자동으로 바뀌지 않습니다.	온도 제어 시스템에 결함이 있습니다. 필립스 판매점이나 필립스 지정 서비스 센터에서 제품을 수리하십시오.
조리 중 밥솥 안에서 물이 흐릅니다.	쌀의 양과 종류에 따라 내솥의 물 높이 표시선을 따라 적정량의 물을 부으십시오.
취사 후에 밥에서 냄새가 납니다.	세제와 따뜻한 물을 사용하여 내솥을 세척하십시오.
	취사 후에 증기 배출구 뚜껑, 속뚜껑 및 내솥을 잘 세척하십시오. 세제와 온수로 내솥을 잘 세척하십시오.
화면에 E1, E2, E3 또는 E4 가 표시됩니다.	센서 고장입니다. 필립스 판매점이나 필립스 지정 서비스 센터에서 제품을 수리하십시오.
E5 또는 E6 이 화면에 표시됩니다.	전압이 너무 높거나 너무 낮습니다. 해당 지역의 전압이 회복되면 화면의 오류 코드가 사라집니다.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.
2024 © Versuni Holding B.V.

