


PHILIPS

Fully automatic
espresso machine

4400 series
5500 series

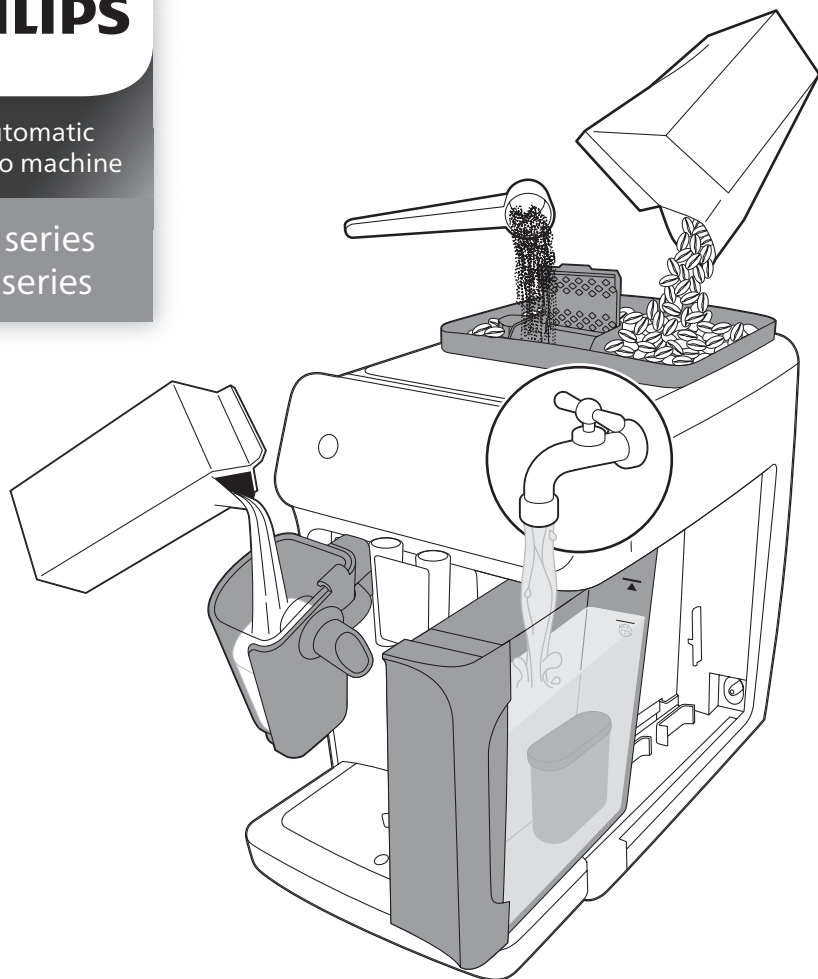

EN USER MANUAL
TH คู่มือผู้ใช้



www.home.id

EP4400




EP5500









A

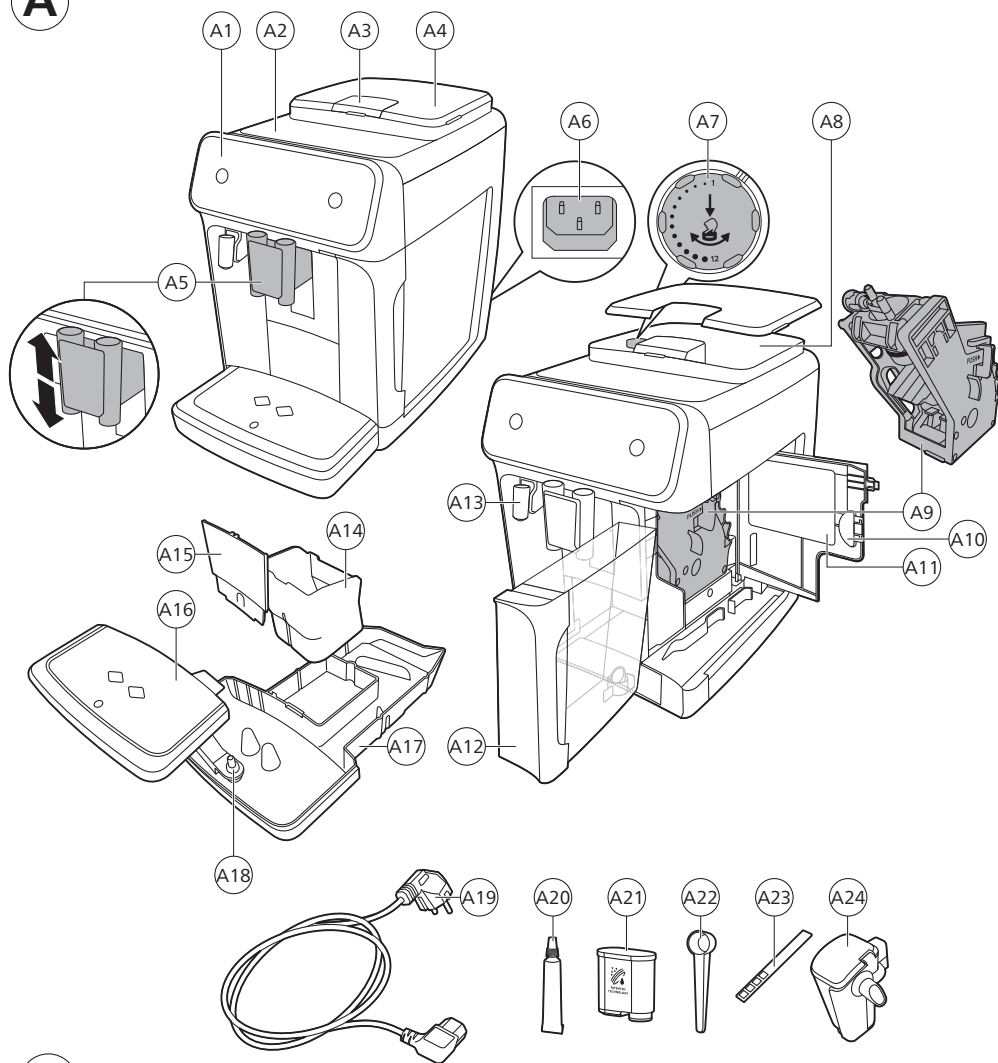

B

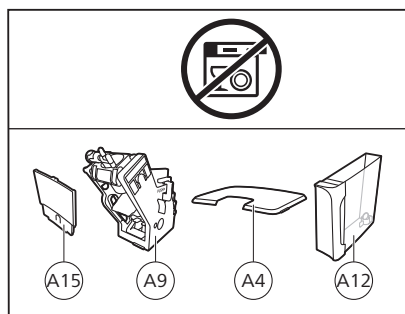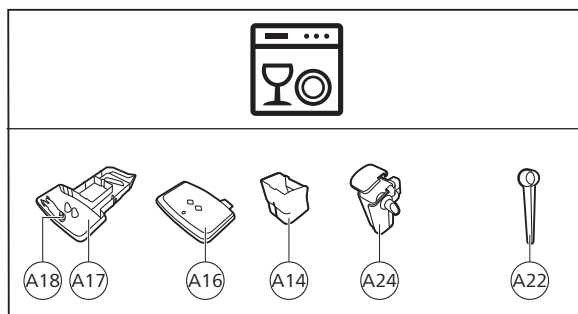

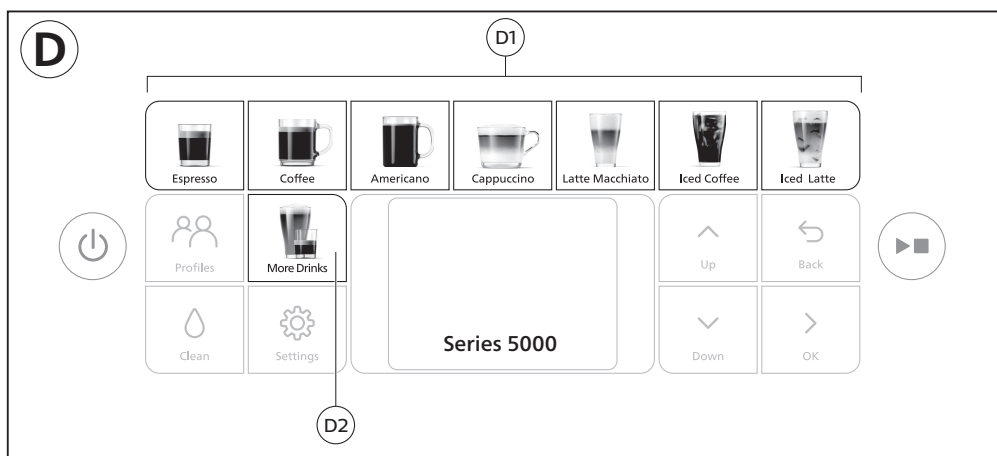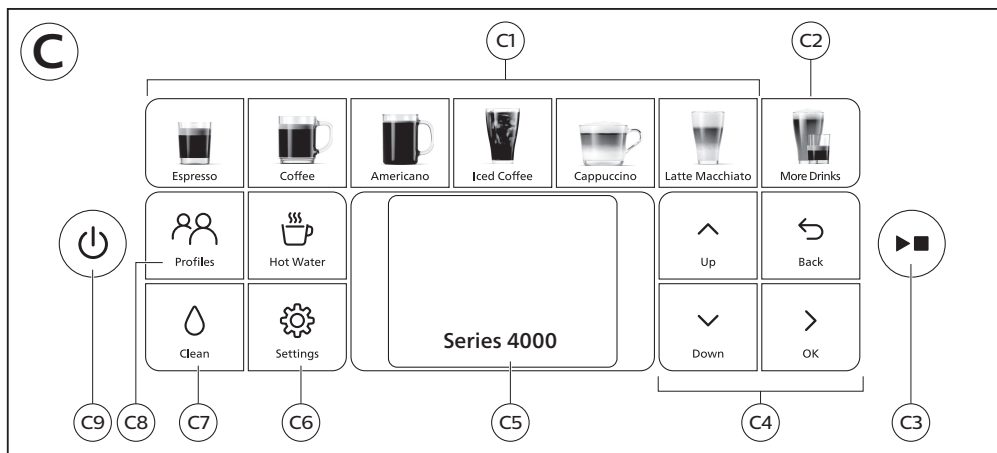

E

Series 4400 Series 5500	A20 	A21 	A22 	A23 	A24 
LatteGo  EP4441 EP4443 EP4444 EP4446 EP4447 EP4449 EP5541 EP5543 EP5544 EP5545 EP5546 EP5547 EP5549	✓	✓	✓	✓	✓

Contents

Machine overview (Fig. A)	4
Control panel	4
Introduction	5
Before first use	6
Brewing drinks	7
Personalizing drinks	9
Adjusting machine settings	9
Removing and inserting the brew group	11
Cleaning and maintenance	11
AquaClean water filter	13
Descaling procedure (30 min.)	14
Ordering accessories	15
Troubleshooting	15
Technical specifications	21

Machine overview (Fig. A)

A1	Control panel	A10	Service door
A2	Cup holder	A11	Data label with type number
A3	Pre-ground coffee compartment	A12	Water tank
A4	Lid of bean hopper	A13	Hot water spout
A5	Adjustable coffee spout	A14	Coffee grounds container
A6	Socket for power cord	A15	Front panel of coffee grounds container
A7	Grind setting knob	A16	Drip tray cover
A8	Coffee bean hopper	A17	Drip tray
A9	Brew Group	A18	'Drip tray full' indicator

Accessories

A19	Power cord	A22	Measuring scoop
A20	Grease tube	A23	Water hardness test strip
A21	AquaClean water filter	A24	LatteGo (milk container)

Control panel

There are multiple versions of this espresso machine, with different control panels. Each version has its own type number. You can find the type number on the data label on the inside of the service door (Fig. A11). You can also find the type number by tapping the Settings ⚙ icon and selecting 'Support'. Refer to figure C and D for an overview of all buttons and icons. Below you find the description.

Use the up and down arrows to scroll through the display and tap the OK icon to select or confirm your choices.

All types (Fig. C/D)

C1/D1 One-touch drink icons	C4. Navigation icons (up, down, back, ok)	C7. Cleaning menu 
C2/D2. Menu with More Drinks	C5. Display	C8. Personal profiles 
C3 Start/stop  button	C6. Machine settings 	C9. On/off button

4000 Series only (Fig. C)

C1 One-touch drink icons: Espresso, Coffee, Americano, Iced Coffee, Cappuccino, Latte Macchiato

5000 Series only (Fig. D)

D1 One-touch drink icons: Espresso, Coffee, Americano, Cappuccino, Latte Macchiato, Iced Coffee, Iced Latte

Introduction

Congratulations on your purchase of a Philips fully automatic coffee machine! To fully benefit from the support that we offer, please register your product at www.philips.com/welcome.

Read the separate safety booklet carefully before you use the machine for the first time and save it for future reference.

To help you get started and to get the best out of your machine, we offer support in multiple ways. In the box you can find:

- 1 The quick start guide with picture-based usage instructions and information on cleaning and maintenance.
- 2 The separate safety booklet with instructions on how to use the machine in a safe way.
- 3 For online support (this extended user manual, frequently asked questions, videos, etc.), scan the QR code on the cover of this booklet to download the app, or visit www.philips.com/coffee-care.


i There are multiple versions of this espresso machine, which all have different features. Each version has its own type number. You can find the type number on the data label on the inside of the service door (see fig A11).

i This machine has been tested with coffee. Although it has been carefully cleaned, there may be some coffee residues left. We guarantee, however, that the machine is absolutely new.

The machine automatically adjusts the amount of ground coffee that is used to make the best-tasting coffee. You should brew 5 coffees initially to allow the machine to complete its self-adjustment.

Make sure you rinse the LatteGo (milk container) before first use.

Before first use

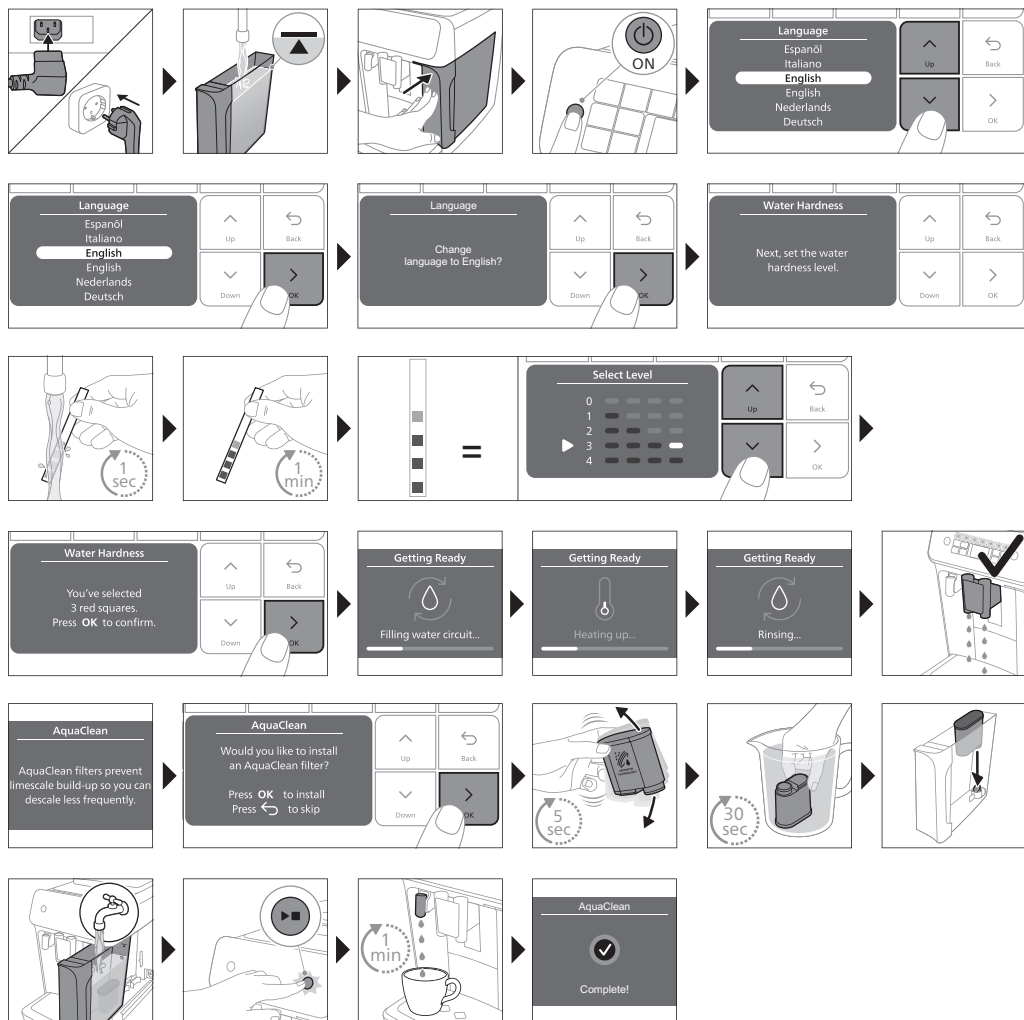

Assembling LatteGo



Brewing drinks

General steps

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 Insert the small plug into the socket located on the back of the machine. Insert the mains plug into the wall socket.
- 3 Press the on/off button to switch on the machine.
 - When all lights in the drink icons light up continuously, the machine is ready for use.
- 4 Place a cup under the coffee dispensing spout. Slide the coffee dispensing spout up or down to adjust its height to the size of the cup or glass you are using (Fig. 2).

Brewing coffee with beans

- 1 To brew a coffee, tap the drink icon of your choice or tap the 'More Drinks' icon.
 - You can now adjust the drink to your personal taste. Use the up and down arrows to adjust the coffee strength. Tap the OK icon if you want to adjust more settings.
- 2 Press the start/stop ► button at any time to start brewing the selected drink.
- 3 To stop dispensing coffee before the machine is finished, press the start/stop ► button again.

i To brew 2 coffees at the same time, tap the drink icon twice or select the 2x icon scrolling the dedicated bar.

⚠ Do not use caramelized or flavored coffee beans.

Brewing milk-based drinks with LatteGo (milk container)

⚠ LatteGo consists of a milk container, a frame and a storage lid. To avoid leakage, make sure the frame and the milk container are properly assembled before you fill the milk container.

- 1 To assemble LatteGo, first insert the top of the milk container under the hook at the top of the frame (Fig. 8). Then press home the bottom part of the milk container. You hear a click when it locks into place (Fig. 9).

Note: Make sure that the milk container and the frame are clean before you connect them.

- 2 Slightly tilt LatteGo and put it on the hot water spout (Fig. 10). Then press it home until it locks into place (Fig. 11).
- 3 Fill LatteGo with milk (Fig. 12). Do not fill the milk container beyond the maximum indication.

i If you have personalized the milk quantity, you may need to fill the milk container with more or less milk than indicated for this drink on LatteGo.

🔥 Always use milk coming directly from the fridge for optimal results.

- 4 Place a cup on the drip tray.
- 5 Tap the milk-based drink icon of your choice or tap the 'More Drinks' icon to select a different drink
 - You can now adjust the drink to your own preference.
- 6 Press the start/stop ► button.
 - When you brew cappuccino, flat white, latte macchiato, iced cappuccino or iced latte, the machine first dispenses milk and then coffee. When you brew caffè latte, café au lait, iced caffè latte, or iced café au lait, the machine first dispenses coffee and then milk.

8 English

- To stop dispensing milk before the machine has dispensed the preset amount, press the start/stop ► button.
- 7 To stop dispensing the complete drink (milk and coffee) before the machine is finished, press and hold the start/stop ► button.

Brewing iced drinks

i The coffee is brewed with warm water. Brew over ice cubes for optimal results.

- 1 Take a glass and fill it two-thirds with ice cubes.
- 2 Place the glass under the coffee dispensing spout.
- 3 Tap the iced coffee icon.
 - You can now adjust the drink to your preferred taste.

i We recommend using aroma strength 3.

- 4 Press the start/stop ► button.
- 5 To stop dispensing coffee before the machine is finished, press the start/stop ► button again.
- 6 For a special iced coffee treat, top it up with cold milk.

Extra shot (ExtraShot)

Your machine offers you the possibility to add an extra shot of Ristretto to your coffee and milk drinks, for example if you want to have a stronger coffee.

- 1 Place a cup under the spout
- 2 Tap one of the one-touch drinks icons to select a drink or tap the 'More Drinks' icon to select a drink.
- 3 Use the up arrow to set the strength to the top level and then select the ExtraShot function.
- 4 Tap the OK icon if you want to personalize the other settings. Then press the start/stop ► icon to start brewing the drink.
- 5 To stop dispensing the drink before the machine has finished, press the start/stop ► icon again.

i When you have selected the ExtraShot function, you can only brew one coffee at the time.

Brewing coffee with pre-ground coffee

You can choose to use pre-ground coffee instead of beans, for example if you prefer a different coffee variety or decaffeinated coffee.

- 1 Open the lid of the pre-ground coffee compartment and pour one leveled measuring scoop of pre-ground coffee into it (Fig. 14). Then close the lid.
- 2 Tap one of the one-touch drink icons or tap the 'More Drinks' icon to select another drink.
- 3 Select the pre-ground coffee function. You can do this in 2 different ways:
 - use the down arrow to set the strength to the lowest level and then select the pre-ground function.
 - press the Settings ⚙ icon and use the down arrow to select the pre-ground function.
- 4 To stop dispensing coffee before the machine has finished, press the start/stop ► button again.

i When you select the pre-ground coffee function:

- it is automatically stored.
- you can only brew one coffee at a time.
- you cannot select a different aroma strength.

Dispensing hot water

- 1 If attached, remove LatteGo.
- 2 Place a cup under the hot water spout.
- 3 Tap the 'More Drinks' icon and use the up and down arrows to select hot water.
- 4 Use the up and down arrows to adjust the hot water quantity and/or temperature to your preference.
- 5 Press the start/stop ► button.
 - Hot water is dispensed from the hot water spout (Fig. 15).
- 6 To stop dispensing hot water before the machine is finished, press the start/stop ► button again.

Personalizing drinks

The machine allows you to adjust the settings of a drink to your own preference and to store the adjusted drink in a personal profile. The different profiles have different colors.

After selecting a drink by tapping one of the one-touch drink icons or by tapping the 'More Drinks' icon, you can do the following things:

- 1 adjust the aroma strength with the up and down icons (Fig. 5). There are 5 strengths, the lowest is the mildest and the highest is the strongest.
- 2 adjust the coffee quantity (Fig. 16) and/or the milk quantity with the up and down icons. There are 5 quantities for each of the settings.

i As soon as the machine has finished brewing, the settings you selected will be stored automatically in the profile you chose.

Select a profile

You can select a profile and store a recipe using My coffee choice profiles (My Coffee Choice Profiles).

- 1 Tap the profiles icon repeatedly to select one of the colored profiles. All profiles have a different color.
- 2 Select a drink by tapping one of the one-touch drink icons or by tapping the 'More Drinks' icon.
- 3 Adjust the drink settings to your favorite taste.
- 4 Press start/stop ► button to brew the drink you selected
 - Your new settings have now been stored in the colored profile you selected.

i You can always restore the factory settings of the machine (see 'Restoring factory settings').

Guest profile

Your machine is equipped with a guest profile. When the guest profile is selected, the profile icon is off. When you select this profile, you can still personalize the settings to your own preference but the recipes you brew will not be stored.

Adjusting machine settings

Setting the water hardness

i We advise you to adjust the water hardness setting to the water hardness level in your region for optimal performance and a longer lifetime of the machine. This also prevents you from having to descale the machine too often. The default water hardness setting is 4: hard water.

Use the water hardness test strip supplied in the box to determine the water hardness in your region:

- 1 Immerse the water hardness test strip in tap water or hold it under the tap for 1 second (Fig. 17).
- 2 Wait 1 minute. The number of squares on the test strip that turn red indicate the water hardness (Fig. 18).

Set the machine to the correct water hardness:

- 1 Tap the Settings  icon and use the up and down arrows to select 'Water hardness'. Then press the OK icon to confirm.
- 2 Use the up and down arrows to select the water hardness level. The number of red squares selected on the display should be the same as the number of red squares on the test strip (Fig. 19).
- 3 When you have set the correct water hardness, tap the OK icon to confirm.

Adjusting grinder settings

You can change the coffee strength with the grind setting knob inside the bean container. The lower the grind setting, the finer the coffee beans are ground and the stronger the coffee. There are 12 different grind settings you can choose from.

The machine has been set up to get the best taste out of your coffee beans. Therefore we advise you not to adjust the grind setting until you have brewed 100-150 cups (approx. 1 month of use).

i You can only adjust the grind settings when the machine is grinding coffee beans. You need to brew 2 to 3 drinks before you can taste the full difference.

A Do not turn the grind setting knob more than one notch at a time to prevent damage to the grinder.

- 1 Place a cup under the coffee dispensing spout.
- 2 Open the lid of the coffee bean hopper.
- 3 Tap the espresso icon and then press the start/stop  button.
- 4 When the grinder starts grinding, press down the grind setting knob and turn it to the left or right. (Fig. 20)

Adjusting other machine settings

By tapping the Settings  icon you can adjust the following machine settings:

- Water hardness: you can select between 5 levels according to the water hardness in your region;
- Standby time: you can select 15, 30, 60 or 180 min
- Display brightness: you can select low, medium and high.
- Language
- Sound: you can activate or deactivate the beeping sound of the machine
- Temperature: you can choose between 3 brewing temperatures for your coffee
- Front illumination (5500 series only): you can choose 'always on', 'on during brewing' or 'always off'.
- Measuring unit: you can choose between ml. or oz.
- Profile activation: you can activate or deactivate profiles.
- Rinsing on start-up: you can activate or deactivate an automatic rinsing cycle when you switch on the machine.
- Display backlight: you can activate or deactivate the backlight in the drink buttons.

Restoring factory settings

The machine offers you the possibility to restore the factory settings at any moment.

- 1 Tap the Settings  icon.
- 2 Use the up and down icons to select 'Factory settings'. Confirm by tapping the OK icon.
- 3 Press the start/stop  button to confirm you want to restore the settings.
 - The settings are now being restored.

i The following factory settings are restored to default: water hardness, standby time, brightness, display backlight, start-up rinsing, sound, temperature, front illumination, profiles.

Removing and inserting the brew group

Go to www.philips.com/coffee-care for detailed video instructions on how to remove, insert and clean the brew group.

Removing the brew group from the machine

- 1 Switch off the machine.
- 2 Remove the water tank and open the service door (Fig. 21).
- 3 Press the PUSH handle (Fig. 22) and pull at the grip of the brew group to remove it from the machine (Fig. 23).

Reinserting the brew group

i Before you slide the brew group back into the machine, make sure it is in the correct position.

- 1 Check if the brew group is in the correct position. The arrow on the yellow cylinder on the side of the brew group has to be aligned with the black arrow and N (Fig. 24).
 - If they are not aligned, push down the lever until it is in contact with the base of the brew group (Fig. 25).
- 2 Slide the brew group back into the machine along the guiding rails on the sides (Fig. 26) until it locks into position with a click (Fig. 27). Do not press the PUSH button.
- 3 Close the service door and place back the water tank.

Cleaning and maintenance

Regular cleaning and maintenance keeps your machine in top condition and ensures good-tasting coffee for a long time with a steady coffee flow.

Consult the table below for a detailed description on when and how to clean all detachable parts of the machine. You can find more detailed information and video instructions on www.philips.com/coffee-care. See figure B for an overview of which parts can be cleaned in the dishwasher.

Detachable parts	When to clean	How to clean
Brew group	Weekly	Remove the brew group from the machine (see 'Removing and inserting the brew group'). Rinse it under the tap (see 'Cleaning the brew group under the tap').
	Monthly	Clean the brew group with the Philips coffee oil remover tablet (see 'Cleaning the brew group with the coffee oil remover tablets').

Detachable parts	When to clean	How to clean
Pre-ground coffee compartment	Check the pre-ground coffee compartment weekly to see if it is clogged.	Unplug the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into it. Move the handle up and down until the clogged ground coffee falls down (Fig. 28). Go to www.philips.com/coffee-care for detailed video instructions.
Coffee grounds container	Empty the coffee grounds container when prompted by the machine. Clean it weekly.	Remove the coffee grounds container while the machine is switched on. Rinse it under the tap with some washing-up liquid or clean it in the dishwasher. The front panel of the coffee grounds container (Fig. A15) is not dishwasher-safe.
Drip tray	Empty the drip tray daily or as soon as the red 'drip tray full' indicator pops up through the drip tray (Fig. 29). Clean the drip tray weekly.	Remove the drip tray (Fig. 30) and rinse it under the tap with some washing-up liquid. You can also clean the drip tray in the dishwasher. The front panel of the coffee grounds container (Fig. A15) is not dishwasher-safe.
LatteGo	After every use	First clean LatteGo while it is attached to the machine by using the 'Quick milk clean' program (see 'Quick cleaning LatteGo'). Then remove it from the machine and rinse it under the tap or clean it in the dishwasher.
Lubrication of the brew group	Every 2 months	Consult the lubrication table and lubricate the brew group with the Philips grease (see 'Lubricating the brew group').
Water tank	Weekly	Rinse the water tank under the tap
Machine front	Weekly	Clean with a non-abrasive cloth

Cleaning the brew group

Regular cleaning of the brew group prevents coffee residues from clogging up the internal circuits. Visit www.philips.com/coffee-care for support videos on how to remove, insert and clean the brew group.

Cleaning the brew group under the tap

- 1 Remove the brew group (see 'Removing and inserting the brew group').
- 2 Rinse the brew group thoroughly with water. Carefully clean the upper filter (Fig. 31) of the brew group.
- 3 Let the brew group air-dry before you place it back. Do not dry the brew group with a cloth to prevent fibers from collecting inside the brew group.

Cleaning the brew group with the coffee oil remover tablets

Only use Philips coffee oil remover tablets.

- 1 Tap the Clean  icon and use the up and down arrows to select 'Brew group clean'.
- 2 Tap the OK icon to confirm and then follow the instructions on the screen.

Lubricating the brew group

To improve your machine's performance, we suggest that you lubricate the brew group every 2 months, to ensure that the moving parts continue to move smoothly.

- 1 Apply a thin layer of grease on the piston (grey part) of the brew group (Fig. 32).
- 2 Apply a thin layer of grease around the shaft (grey part) in the bottom of the brew group (Fig. 33).
- 3 Apply a thin layer of grease to the guiding rails on both sides (Fig. 34).

Cleaning LatteGo (milk container)

Quick cleaning LatteGo

- 1 Make sure LatteGo is properly attached to the machine (Fig. 10).
- 2 Place a cup under the spout.
- 3 Tap the Clean  icon and use the up and down arrows to select the 'Quick milk clean' program.
- 4 Tap the OK icon to confirm and then follow the instructions on the screen to remove any milk that may be left inside the milk system.
 - Small jets of hot water will be dispensed by the milk system.
- 5 Store LatteGo with the remaining milk in the fridge.

Thoroughly cleaning LatteGo

- 1 Remove LatteGo from the machine (Fig. 35).
- 2 Pour out any remaining milk.
- 3 Press the release button and remove the milk container from the frame of LatteGo (Fig. 36).
- 4 Clean all parts in the dishwasher or under the tap with lukewarm water and some washing-up liquid.

AquaClean water filter

Your machine is AquaClean enabled. You can place the AquaClean water filter in the water tank to preserve the taste of your coffee. It also diminishes the need for descaling by reducing limescale build-up in your machine. You can purchase an AquaClean water filter from your local retailer, from authorized service centers or online at www.philips.com/parts-and-accessories.

AquaClean filter status indication

When the AquaClean is active, the status of the AquaClean filter is always visible on the screen as a percentage.

- If the status of the AquaClean filter is 10% or less, the screen shows a message for 2 seconds each time you switch on the machine. This message advises you to buy a new filter.
- If the status of the filter is 0%, the machine asks you to replace the AquaClean filter every time you switch on the machine.

Activating the AquaClean water filter (5 min.)

i The machine does not automatically detect that a filter has been placed in the water tank. Therefore you need to activate each new AquaClean water filter that you install in the 'Clean' menu.

When the machine stops showing the filter activation message, you can still activate an AquaClean water filter, but you will need to descale the machine first.

i Your machine has to be completely limescale-free before you start using the AquaClean water filter.

Before activating the AquaClean water filter, it has to be prepared by soaking it in water as described below. If you don't do this, air might be drawn into the machine instead of water, which makes a lot of noise and prevents the machine from being able to brew coffee.

- 1 Tap the 'Clean'  icon and use the up and down arrows to select 'AquaClean'.
- 2 Tap the OK icon to confirm.
- 3 Tap the OK icon again when the activation screen appears. Follow the instructions on the screen.
- 4 Shake the filter for about 5 seconds (Fig. 37).
- 5 Immerse the filter upside down in a jug with cold water and shake/press it (Fig. 38).
- 6 Insert the filter vertically onto the filter connection in the water tank. Press it down to the lowest possible point (Fig. 39).
- 7 Fill the water tank with fresh water and place it back into the machine.
- 8 If attached, remove the LatteGo.
- 9 Place a bowl under the hot water spout.
- 10 Press the start/stop  button to start the activation process.
- 11 Hot water will be dispensed from the hot water spout during 1 minute.
- 12 The filter is now successfully activated.

Replacing the AquaClean water filter (5 min.)

After 95 liters of water have flowed through the filter, the filter will cease to work. The AquaClean status indicator drops to 0% to remind you to replace the filter. As long as the AquaClean status indicator is shown on the display, you can replace the filter without having to descale the machine first. If you do not replace the AquaClean water filter in time, the AquaClean indicator goes out after some time. In that case you can still replace the filter but you first need to descale the machine.

When the AquaClean status indicator drops to 0% or when the machine reminds you to replace the AquaClean filter:

- 1 take out the old AquaClean water filter.
- 2 install a new filter and activate it as described in chapter 'Activating the AquaClean water filter (5 min.)'.

i Replace the AquaClean water filter at least every 3 months, even if the machine does not yet indicate that replacement is required.

Descaling procedure (30 min.)

Please use Philips descaler only. Under no circumstances should you use a descaler based on sulfuric acid, hydrochloric acid, sulfamic or acetic acid (vinegar) as this may damage the water circuit in your machine and not dissolve the limescale properly. Not using the Philips descaler will void your warranty. Failure to descale the appliance will also void your warranty. You can buy Philips descaling solution in the online shop at

www.philips.com/coffee-care.

When the machine needs descaling, a message appears on the display.

- 1 Touch the clean  icon on the user interface and select 'Descaling' in the menu.
- 2 Follow the instructions on the screen.
- 3 If attached, remove LatteGo.
- 4 Remove the drip tray and the coffee grounds container, empty them and put them back into place.
- 5 Remove the water tank and empty it. Then remove the AquaClean water filter.
- 6 Pour the whole bottle of Philips descaler in the water tank and then fill it with water up to the Calc / Clean indication (Fig. 40). Then place it back into the machine.
- 7 Place a large container (1.5 l) under the coffee dispensing spout and the water spout.

- 8 Press the start/stop ► button to start the descaling procedure. The descaling procedure lasts approximately 30 minutes and consists of a descaling cycle and a rinsing cycle.
- 9 Wait until the machine stops dispensing water. Refill the water tank when the message appears on the display. The descaling procedure is finished when the machine stops dispensing water.
- 10 Install and activate a new AquaClean water filter in the water tank.
 - When the descaling procedure is finished, the machine reminds you to install the new AquaClean filter (see 'Replacing the AquaClean water filter (5 min.)').

 **Tip:** Using the AquaClean filter reduces the need for descaling!

What to do if the descaling procedure is interrupted

You can exit the descaling procedure by pressing the on/off button on the control panel. If the descaling procedure is interrupted before it is completely finished, do the following:

- 1 Empty and rinse the water tank thoroughly.
- 2 Fill the water tank with fresh water up to the Calc / Clean level indication and switch the machine back on.
- 3 Before brewing any drinks, perform a manual rinsing cycle. To perform a manual rinsing cycle, first dispense half a water tank of hot water by repeatedly selecting the hot water function and then brew 2 cups of pre-ground coffee without adding ground coffee.

 If the descaling procedure was not completed, the machine will require another descaling procedure as soon as possible.

Ordering accessories

To clean and descale the machine, only use the Philips maintenance products. These products can be purchased from your local retailer, from the authorized service centers or online at **www.philips.com/parts-and-accessories**. To find a full list of spare parts online, enter the model number of your machine. You can find the model number on the inside of the service door.

Maintenance products and type numbers:

- Descaling solution CA6700
- AquaClean water filter CA6903
- Brew group grease HD5061
- Coffee oil remover tablets CA6704

 Brita-filters are not compatible with this machine.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on **www.philips.com/coffee-care**. If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.

Warning icons

Warning icon	Solution
	The 'water tank empty' icon pops up on the display. - The water tank is almost empty. Fill the water tank with fresh water to the maximum level indication. - The water tank is not in place. Place back the water tank.
	The 'add beans' icons pops up on the display. - Fill the bean hopper with coffee beans.
	The 'empty coffee ground container' icon pops up on the display. - The coffee grounds container is full. Remove and empty the coffee grounds container while the machine is switched on. Wait 5 seconds before you place it back.
	The 'insert brew group' icon pops up on the display. - The brew group is not in place or not placed correctly. Remove the brew group and make sure it is locked into place. See chapter 'Removing and inserting the brew group' for step-by-step instructions.

Error codes

Below you find a list of the error codes showing problems that you can solve yourself. Video instructions are available on www.philips.com/coffee-care. If another error code appears, please contact the Philips Consumer Care Center in your country. For contact details, see the warranty leaflet.

Error code	Problem	Possible solution
01	The coffee funnel is clogged.	Switch off the machine and unplug it. Remove the brew group. Then open the lid of the pre-ground coffee compartment and insert the spoon handle. Move the handle up and down until the clogged ground coffee falls down. Visit www.philips.com/coffee-care for detailed video instructions.
03	The brew group is dirty or not well-greased.	Switch off the machine. Rinse the brew group with fresh water, let it air-dry and then lubricate it. Consult chapter 'Cleaning the brew group' or visit www.philips.com/coffee-care for detailed video instructions. Then switch the machine on again.
04	The brew group is not positioned correctly.	Switch off the machine. Remove the brew group and reinsert it. Make sure that the brew group is in the correct position before you insert it. Consult chapter 'Handling the brew group or visit www.philips.com/coffee-care for detailed video instructions. Then switch the machine on again.
05	There is air in the water circuit.	Restart the machine by switching it off and on again. If this works, dispense 2-3 cups of hot water. Descale the machine if you have not done so for a longer period of time.
	The AquaClean filter was not prepared properly before installation or it is clogged.	Remove the AquaClean filter and try again to brew a coffee. If this works, make sure that the AquaClean filter is prepared properly before you place it back. Put the AquaClean filter back into the water tank. If this still does not work, the filter might be clogged and needs to be replaced.

Error code	Problem	Possible solution
11	Machine needs to adjust to room temperature	Allow some time for the machine to adjust from transport/outdoor temperature to room temperature. Switch off the machine for 30 minutes and switch it on again. If this does not work, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.
14	The machine is overheated.	Switch the machine off and switch it back on again after 30 minutes.
19	The machine is not connected to the wall socket properly.	Make sure that the small plug of the power cord is properly connected to the socket on the back of the machine.

Troubleshooting table

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on www.philips.com/coffee-care. If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.

Problem	Cause	Solution
There are some coffee residues inside my new coffee machine.	This machine has been tested with coffee.	Although it has been carefully cleaned, there may be some coffee residues left. However, the machine is absolutely new.
The drip tray fills up quickly / there is always some water in the drip tray.	This is normal. The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray.	Empty the drip tray daily or as soon as the red 'drip tray full' indicator pops up through the drip tray cover. Tip: place a cup under the dispensing spout to collect rinsing water that comes out of it.
The 'empty coffee grounds container' icon remains on.	You emptied the coffee grounds container while the machine was switched off, or placed it back too fast.	Always empty the coffee grounds container while the machine is switched on. Remove the coffee grounds container, wait at least 5 sec. and then insert it again.
The machine prompts to empty the coffee grounds container even though the container is not full.	The machine did not reset the counter the last time you emptied the coffee grounds container.	Always wait approx. 5 seconds when you place back the coffee grounds container. In this way the coffee grounds counter will be reset to zero and the number of coffee pucks is counted correctly.
		Always empty the coffee grounds container while the machine is switched on. If you empty the coffee grounds container when the machine is switched off, the coffee grounds counter won't reset.

Problem	Cause	Solution
The coffee grounds container is too full and the 'empty coffee grounds container' icon did not appear on the display.	You removed the drip tray without emptying the grounds container.	When you remove the drip tray, also empty the coffee grounds container even if it contains only a few coffee pucks. This ensures that the coffee pucks counter is reset to zero and that the number of coffee pucks is counted correctly.
I cannot remove the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: close the service door and place back the water tank. Switch the machine off and back on again and wait for the lights in the drinks icons to come on. Try again to remove the brew group. See chapter 'Removing and inserting the brew group' for step by step instructions.
I cannot insert the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: close the service door and place back the water tank. Leave the brew group out. Switch the machine off and unplug it. Wait for 30 sec. and then plug the machine back in and switch it on and wait for the lights in the drinks icons to come on. Then put the brew group in the correct position and reinsert it into the machine. See chapter 'Removing and inserting the brew group' for step by step instructions.
The coffee is watery.	The brew group is dirty or needs to be lubricated.	Remove the brew group (see 'Removing the brew group from the machine'), rinse it under the tap and leave it to dry. Then lubricate the moving parts (see 'Lubricating the brew group').
	The machine is performing its self-adjustment procedure. This procedure is started automatically when you use the machine for the first time, when you change to another type of coffee beans or after a long period of non-use.	Brew 5 cups of coffee initially to allow the machine to complete its self-adjustment procedure.
	The grinder is set to a too coarse setting.	Set the grinder to a finer (lower) setting. Brew 2 to 3 drinks to be able to before taste the full difference.
The coffee is not hot enough.	The temperature is set too low.	Set the temperature to the maximum setting. To adjust the temperature, press the 'Settings'  icon.

Problem	Cause	Solution
	The automatic rinsing cycle is disabled.	Activate the automatic rinsing cycle by pressing press the 'Settings'  icon. When this setting is activated, the machine will heat up and perform an automatic rinsing cycle when you turn on the machine.
	A cold cup reduces the temperature of the drink.	Preheat the cups by rinsing them with hot water.
	Adding milk reduces the temperature of the drink.	Regardless of whether you add hot or cold milk, adding milk always reduces the temperature of the coffee. Preheat the cups by rinsing them with hot water.
Coffee does not come out or coffee comes out slowly.	The AquaClean water filter was not prepared properly for installation.	Remove the AquaClean filter and dispense some hot water. If this works, the AquaClean filter was not installed properly. Reinstall and activate the AquaClean filter and follow all steps in chapter 'AquaClean water filter'.
		After a long period of non-use, you need to prepare the AquaClean water filter for use again and dispense 2-3 cups of hot water.
	The AquaClean water filter is clogged.	Replace the AquaClean water filter every 3 months. A filter that is older than 3 months can become clogged.
	The grinder is set to a too fine setting.	Set the grinder to a coarser (higher) setting. Note that this will impact the coffee taste.
	The brew group is dirty.	Remove the brew group and rinse it under the tap (see 'Cleaning the brew group under the tap').
	The coffee dispensing spout is dirty.	Clean the coffee dispensing spout and its holes with a pipe cleaner or needle.
	The pre-ground coffee compartment is clogged	Switch off the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into it. Move the handle up and down until the clogged ground coffee falls down (Fig. 28).
	The machine circuit is blocked by limescale.	Descale the machine with Philips descaler. Always descale when the machine prompts you.
The milk does not froth.	LatteGo is assembled incorrectly.	Make sure that the milk container is properly assembled to the frame of LatteGo ('click') (see 'Assembling LatteGo').

Problem	Cause	Solution
	The milk container and/or frame of LatteGo are dirty.	Disassemble LatteGo and rinse both parts under the tap or clean them in the dishwasher.
	The type of milk used is not suitable for frothing.	Different types of milk result in different amounts of froth and different froth qualities. We have tested the following milk types which proved to deliver a good milk froth result: semi-skimmed or full-fat cow's milk and lactose-free milk.
Milk is leaking from the bottom of the LatteGo milk container.	The frame and the milk container are not assembled properly.	First insert the top of the milk container under the hook at the top of the frame. Then press home the bottom part of the milk container. You hear a click when it locks into place.
	The milk container and/or frame of LatteGo are dirty.	Disassemble LatteGo and rinse both parts under the tap or clean them in the dishwasher.
The machine seems to be leaking.	The machine uses water to rinse the internal circuit and brew group. This water flows through the internal system directly into the drip tray. This is normal.	Empty the drip tray every day or as soon as the 'drip tray full' indicator pops up through the drip tray cover. Tip: place a cup under the dispensing spout to collect rinsing water and reduce the amount of water in the drip tray.
	The drip tray is too full and has overflowed which makes it look like the machine is leaking.	Empty the drip tray every day or as soon as the 'drip tray full' indicator pops up through the drip tray cover.
	The water tank is not fully inserted, some water is leaking out of the water tank and air is drawn into the machine.	Make sure the water tank is in the correct position: remove it and insert it again pushing it as far as possible.
	The brew group is dirty/clogged.	Rinse the brew group.
	The machine is not placed on a horizontal surface.	Place the machine on a horizontal surface so that the drip tray does not overflow and the 'drip tray full' indicator works properly.
I cannot activate the AquaClean water filter and the machine asks for descaling.	The filter has not been installed or replaced in time after the screen shows the AquaClean reminder. This means your machine is not anymore completely limescale free.	Descale your machine first and then install the AquaClean water filter.
The new water filter does not fit.	You are trying to install another filter than the Philips AquaClean water filter.	Only the Philips AquaClean water filter fits into the machine.

Problem	Cause	Solution
	The rubber ring on the AquaClean water filter is not in place.	Place back the rubber ring on the AquaClean water filter.
The machine is making a loud noise.	It is normal that your machine makes some noise during use.	If the machine starts to make a different kind of noise, clean the brew group and lubricate it (see 'Lubricating the brew group').
	The AquaClean water filter was not prepared properly and air is now drawn into the machine.	Remove the AquaClean water filter from the water tank and properly prepare it for use before you place it back. See chapter 'AquaClean water filter' for step-by-step instructions.
	The water tank is not fully inserted and air is drawn into the machine.	Make sure the water tank is in the correct position: remove it and insert it again pushing it as far as possible.

Technical specifications

The manufacturer reserves the right to improve the technical specifications of the product. All the preset quantities are approximate.

Description	Value
Size (w x h x d)	246 x 377 x 434 mm
Weight	7.5 - 8 kg
Power cord length	1200 mm
Water tank	1.8 litres
Coffee bean hopper capacity	275 g
Coffee grounds container capacity	12 pucks
LatteGo (milk container) capacity	250 ml
Adjustable spout height	88-145 mm
Nominal voltage - Power rating - Power supply	See data label on inside of service door (Fig. A11)

สารบัญ

ภาพรวมของเครื่อง (รูป A)	22
แผงควบคุม	23
ข้อมูลเบื้องต้น	23
ก่อนใช้งานครั้งแรก	24
การชงเครื่องดื่ม	25
การปรับแต่งเครื่องดื่ม	28
การปรับการตั้งค่าเครื่อง	29
การถอดและใส่ห้วชง	30
การทำความสะอาดและบำรุงรักษา	31
ตัวกรองน้ำ AquaClean	34
ขั้นตอนการขจัดคราบตะกรัน (30 นาที)	35
การสั่งซื้ออุปกรณ์เสริม	36
การแก้ปัญหา	37
ข้อมูลทางเทคนิค	44

ภาพรวมของเครื่อง (รูป A)

A1	แผงควบคุม	A10	ฝาเครื่อง
A2	ช่องใส่ถ้วย	A11	ป้ายข้อมูลพร้อมหมายเลขรุ่น
A3	ช่องใส่กาแฟที่บดไว้ล่วงหน้า	A12	แท่งคั้นน้ำ
A4	ฝาที่ใส่เมล็ดกาแฟ	A13	ห้วจ่ายน้ำร้อน
A5	ปากพวยรินกาแฟแบบปรับได้	A14	ที่ใส่กากกาแฟ
A6	ช่องสำหรับสายไฟ	A15	แผงด้านหน้าของที่ใส่กากกาแฟ
A7	ปุ่มการตั้งค่าการบด	A16	ฝาปิดถาดรองน้ำ
A8	ที่ใส่เมล็ดกาแฟ	A17	ถาดรองน้ำ
A9	ห้วชง	A18	สัญลักษณ์ 'ถาดรองน้ำเต็ม'
อุปกรณ์เสริม			
A19	สายไฟ	A22	ทัพพีตวง
A20	หลอดน้ำมัน	A23	แผ่นทดสอบความกระด้างของน้ำ
A21	ตัวกรองน้ำ AquaClean	A24	LatteGo (ภาชนะเก็บนํ้านม)

แผงควบคุม

เครื่องชงกาแฟนี้มีหลายรุ่นโดยมีแผงควบคุมที่แตกต่างกันไป แต่ละรุ่นจะมีหมายเลขรุ่นเฉพาะ คุณสามารถดูหมายเลขรุ่นได้บนป้ายข้อมูลที่อยู่ด้านในของฝาเครื่อง (รูป A11) นอกจากนี้ คุณยังสามารถดูหมายเลขรุ่นได้โดยแตะไอคอน Settings  และเลือก 'Support' โปรดดูภาพรวมของปุ่มและไอคอนทั้งหมดในรูป C และ D คุณสามารถดูคำอธิบายได้ที่ด้านล่าง ใช้ลูกศรขึ้นและลงเลื่อนไปมาในจอภาพ แล้วแตะไอคอน OK เพื่อเลือกหรือยืนยันตัวเลือกของคุณ

ทุกรุ่น (รูป C/D)

ไอคอน One-touch Drink C1/D1	C4. ไอคอนสำหรับการนำทาง (ขึ้น ลง กลับ OK)	C7. เมนูการทำความสะอาด 
C2/D2 เมนูพร้อมเครื่องดื่มเพิ่มเติม	C5. หน้าจอแสดงผล	C8. โปรไฟล์ส่วนตัว 
C3 เริ่ม/หยุด  ปุ่ม	C6. การตั้งค่าเครื่อง 	C9. ปุ่มเปิด/ปิด

เฉพาะ 4000 Series (รูป C)

ไอคอน One-touch Drink C1: Espresso, Coffee, Americano, Iced Coffee, Cappuccino, Latte Macchiato

เฉพาะ 5000 Series (รูป D)

ไอคอน One-touch Drink D1: Espresso, Coffee, Americano, Cappuccino, Latte Macchiato, Iced Coffee, Iced Latte

ข้อมูลเบื้องต้น

ขอแสดงความยินดีที่คุณได้เป็นเจ้าของเครื่องชงกาแฟอัตโนมัติอย่างเต็มรูปแบบของ Philips! เพื่อให้คุณได้รับประโยชน์อย่างเต็มที่จากบริการที่เรามอบให้ โปรดลงทะเบียนผลิตภัณฑ์ของคุณได้ที่ www.philips.com/welcome

โปรดอ่านคู่มือความปลอดภัยแยกต่างหากอย่างละเอียดก่อนใช้เครื่องเป็นครั้งแรก และเก็บไว้เพื่ออ้างอิงต่อไป

เราให้การสนับสนุนในหลายๆ ด้าน เพื่อช่วยให้คุณเริ่มต้นใช้งานและใช้เครื่องให้เกิดประโยชน์สูงสุด ภายในกล่อง คุณจะพบสิ่งต่อไปนี้


- 1 คู่มือการใช้งานฉบับย่อพร้อมรูปภาพประกอบและข้อมูลเพิ่มเติมโดยละเอียดเกี่ยวกับการทำความสะอาดและการบำรุงรักษา
- 2 คู่มือความปลอดภัยแยกต่างหากที่มีคำแนะนำเกี่ยวกับวิธีการใช้งานเครื่องอย่างปลอดภัย
- 3 หากต้องการรับการสนับสนุนทางออนไลน์ (คู่มือการใช้งานโดยละเอียด คำถามที่พบบ่อย วิดีโอ ฯลฯ) โปรดสแกนรหัส QR ที่อยู่บนหน้าปกของคู่มือฉบับนี้เพื่อดาวน์โหลดแอป หรือไปที่ www.philips.com/coffee-care


i เครื่องชงกาแฟนี้มีหลายรุ่น และมีคุณสมบัติแตกต่างกันไป แต่ละรุ่นจะมีหมายเลขรุ่นเฉพาะ คุณสามารถดูหมายเลขรุ่นได้บนป้ายข้อมูลที่อยู่ด้านในของฝาเครื่อง (ดูรูป A11)

i เครื่องนี้ได้รับการทดสอบด้วยกาแฟแล้ว แม้ว่าจะได้รับการทำความสะอาดเป็นอย่างดี แต่อาจมีกากกาแฟที่ตกค้างหลงเหลืออยู่ อย่างไรก็ตาม เราขอรับประกันว่าเครื่องนี้เป็นเครื่องใหม่


เครื่องจะปรับปริมาณกาแฟบดที่ใช้โดยอัตโนมัติเพื่อทำให้กาแฟมีรสชาติที่ดีที่สุด คุณควรชงกาแฟ 5 ถ้วยในการใช้งานครั้งแรก เพื่อให้เครื่องได้ทำการปรับแต่งโดยอัตโนมัติจนเสร็จสมบูรณ์ ตรวจสอบว่าคุณได้ล้าง LatteGo (ภาชนะเก็บน้ำนม) ก่อนใช้งานครั้งแรก

ก่อนใช้งานครั้งแรก

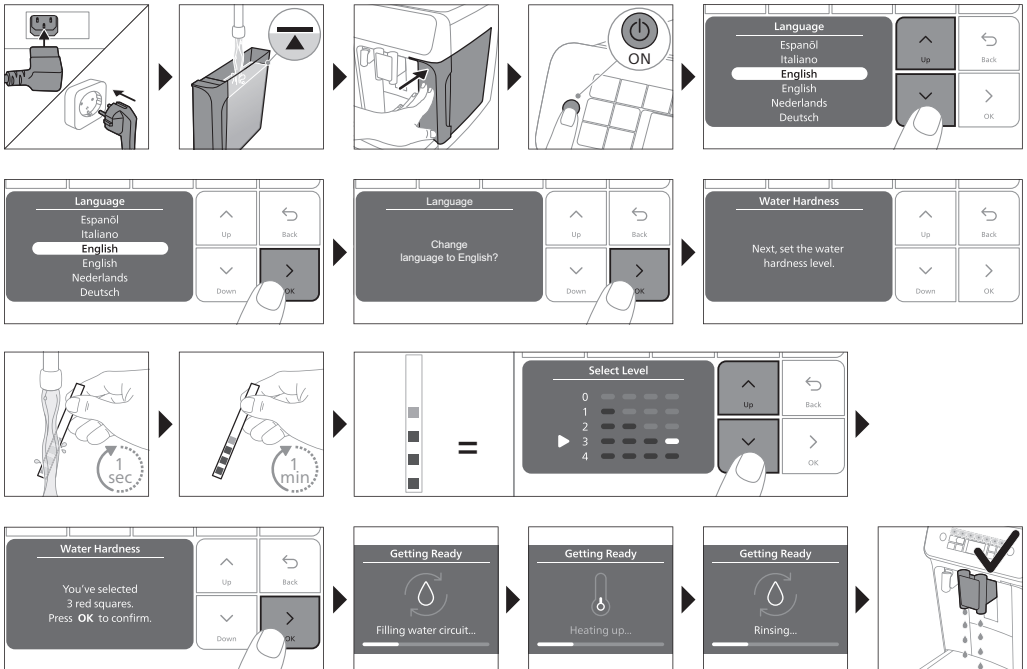

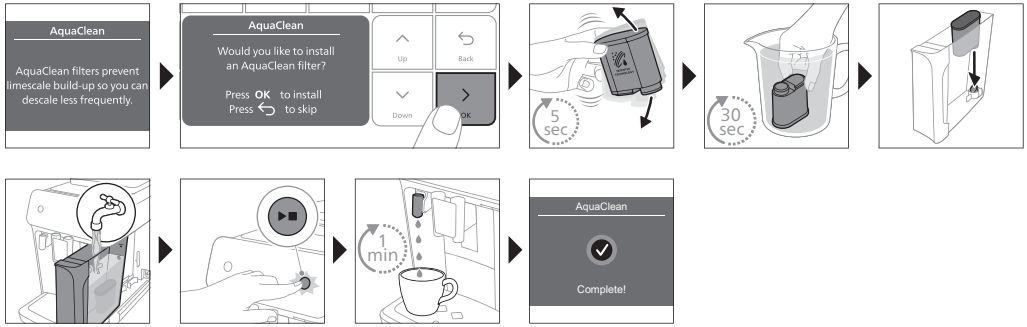

การประกอบ LatteGo

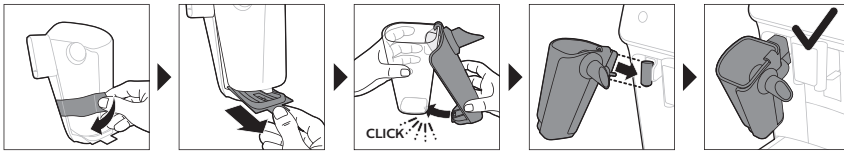

การชงเครื่องดื่ม

ขั้นตอนทั่วไป

- 1 เติมน้ำดื่มสะอาดลงในแท็งก์น้ำและเติมเมล็ดกาแฟลงในที่ใส่เมล็ดกาแฟ
- 2 เสียบปลั๊กขนาดเล็กเข้ากับช่องเสียบที่อยู่ตรงด้านหลังของเครื่อง
เสียบปลั๊กไฟเข้ากับเต้ารับบนผนัง
- 3 กดปุ่มเปิด/ปิดเพื่อเปิดเครื่อง
 - เมื่อไฟทั้งหมดในไอคอนเครื่องดื่มสว่างขึ้นอย่างต่อเนื่อง แสดงว่าเครื่องพร้อมใช้งาน
- 4 วางถ้วยไว้ใต้ปากพวยรินกาแฟ
เลื่อนปากพวยรินกาแฟขึ้นหรือลงเพื่อปรับความสูงให้เหมาะกับขนาดของถ้วยหรือแก้วที่คุณใช้ (รูปที่ 2)

การชงกาแฟด้วยเมล็ดกาแฟ

- 1 หากต้องการชงกาแฟ แตะไอคอนเครื่องดื่ม ที่คุณเลือก หรือแตะไอคอน 'More Drinks' (เฉพาะบางรุ่นเท่านั้น)
 - จากนั้นคุณสามารถปรับเครื่องดื่มให้เข้ากับรสชาติ ส่วนตัวของคุณ ใช้ลูกศรขึ้นและลงเพื่อปรับความเข้มของกาแฟ แตะไอคอน OK หากต้องการปรับการตั้งค่าเพิ่มเติม
- 2 กดปุ่มเริ่ม/หยุด ► เมื่อใดก็ได้เพื่อเริ่มชงเครื่องดื่มที่เลือก
- 3 หากต้องการหยุดการจ่ายกาแฟก่อนที่เครื่องจะทำงานจนเสร็จ ให้กดปุ่มเริ่ม/หยุด ► อีกครั้ง

i หากต้องการชงกาแฟ 2 ถ้วยพร้อมกัน ให้แตะไอคอนเครื่องดื่มสองครั้ง หรือเลือกไอคอน 2 ครั้งโดยเลื่อนแถบที่กำหนดไว้เฉพาะ

ห้ามใช้เมล็ดกาแฟคั่วบดหรือกาแฟสำเร็จรูป

การชงเครื่องดื่มใส่นมด้วย LatteGo (ภาษาทะเกิบน้านม)

LatteGo ประกอบด้วยภาษาทะเกิบน้านม กรอบ และฝาภาษาทะ เพื่อป้องกันการรั่วซึม ตรวจสอบให้แน่ใจว่าได้ประกอบกรอบและภาษาทะเกิบน้านมเข้าด้วยกันอย่างถูกต้องก่อนที่คุณจะใส่นมลงในภาษาทะเกิบน้านม

- ในการประกอบ LatteGo
 ก่อนอื่นให้ใส่ด้านบนของภาษาทะเกิบน้านมเข้าไปใต้ขอล็อคที่ด้านบนของ กรอบ (รูปที่ 8) จากนั้นกดส่วนฐานของภาษาทะเกิบน้านมให้เข้าที่ คุณจะได้ยินเสียงดังคลิกเมื่อส่วนดังกล่าวล็อค เข้าที่ (รูปที่ 9).
หมายเหตุ: ตรวจสอบให้แน่ใจว่าภาษาทะเกิบน้านมและกรอบสะอาดก่อนที่คุณจะประกอบเข้าด้วยกัน
- เอียง LatteGo เล็กน้อย และวางลงบน หัวจ่ายน้ำร้อน (รูปที่ 10) จากนั้นกดจนกว่าจะล็อค เข้าที่ (รูปที่ 11)
- เติมนมใน LatteGo (รูปที่ 12) อย่าเติมนมในภาษาทะเกิบน้านมเกินขีดแสดงระดับสูงสุด

i หากคุณสามารถปรับแต่งปริมาณนม คุณอาจต้องเติมนมลงในภาษาทะเกิบน้านมมากหรือน้อยกว่าที่ระบุไว้สำหรับเครื่องดื่มนี้บน LatteGo

💡 ใช้นมที่ออกมาจากตู้เย็นโดยตรงเสมอเพื่อผลลัพธ์ที่ดีที่สุด
- วางถ้วยบนถาดรองน้ำ
- แตะไอคอนเครื่องดื่มใส่นมตามที่คุณเลือก หรือแตะไอคอน 'More Drinks' เพื่อเลือกเครื่องดื่มแบบอื่น
 - จากนั้นคุณสามารถปรับเครื่องดื่มให้ตรงตาม ความต้องการของคุณได้
- กดปุ่มเริ่ม/หยุด
 - เมื่อคุณชงคาปูชิโน่ แพลตวัวร์ ลาเต้มัคคิอาโต คาปูชิโน่เย็นหรือลาเต้เย็น เครื่องจะจ่ายนมก่อน แล้วตามด้วยกาแฟ เมื่อคุณชงลาเต้ กาแฟโฟเลต ลาเต้เย็นหรือกาแฟโฟเลตเย็น เครื่องจะจ่ายกาแฟก่อน แล้วตามด้วยนม
 - หากต้องการหยุดการจ่ายนมก่อนที่เครื่องจะจ่ายตามปริมาณที่ตั้งไว้ล่วงหน้า ให้กดปุ่มเริ่ม/หยุด อีกครั้ง
- หากต้องการหยุดการจ่ายเครื่องดื่มทั้งหมด (นมและกาแฟ) ก่อนที่เครื่องจะทำงานจนเสร็จ ให้กดปุ่มเริ่ม/หยุด ค้างไว้

การชงเครื่องดื่มเย็น

i ชงกาแฟด้วยน้ำอุ่น ชงใส่น้ำแข็งเพื่อให้ได้รสชาติที่ดีที่สุด

- ใส่ก้อนน้ำแข็งลงไปในแก้วประมาณ 2 ใน 3

2 วางแก้วไว้ใต้ปากพวยรินกาแฟ

3 แตะไอคอน กาแฟเย็น

- จากนั้นคุณสามารถปรับเครื่องดื่มให้ได้รสชาติตามที่คุณต้องการได้

i เราแนะนำให้ใช้ความเข้มของกลิ่น 3

4 กดปุ่มเริ่ม/หยุด ▶■

5 หากต้องการหยุดการจ่ายกาแฟก่อนที่เครื่องจะทำงานจนเสร็จ ให้กดปุ่มเริ่ม/หยุด ▶■ อีกครั้ง

6 หากต้องการกาแฟเย็นสูตรพิเศษ ให้เติมนมเย็นลงไปด้วย

เพิ่มช็อต (ExtraShot)

คุณสามารถเพิ่มช็อตเอสเปรสโซ่ให้กับกาแฟและเครื่องดื่มนมของคุณด้วยเครื่องนี้ได้

หากคุณอยากให้กาแฟเข้มข้น เป็นต้น

1 วางถ้วยไว้ใต้หัวจ่าย

2 แตะไอคอน One-touch Drink อันใดอันหนึ่งเพื่อเลือกเครื่องดื่ม หรือแตะไอคอน 'More Drinks' เพื่อเลือกเครื่องดื่ม

3 ใช้ลูกศรขึ้นเพื่อตั้งค่าความเข้มให้อยู่ในระดับสูงสุด แล้วเลือกฟังก์ชัน ExtraShot

4 แตะไอคอน OK หากต้องการปรับแต่งการตั้งค่าอื่นๆ ให้เป็นแบบเฉพาะตัว จากนั้นกดไอคอนเริ่ม/หยุด ▶■ เพื่อเริ่มชงเครื่องดื่ม

5 หากต้องการหยุดจ่ายเครื่องดื่มก่อนที่เครื่องจะทำงานเสร็จ ให้กดไอคอนเริ่ม/หยุด ▶■ อีกครั้ง

i เมื่อคุณเลือกฟังก์ชัน ExtraShot คุณสามารถชงกาแฟได้ครั้งละ 1 ถ้วยเท่านั้น

การชงกาแฟด้วยกาาแฟบล็องหน้า

คุณสามารถเลือกใช้กาาแฟที่บล็องหน้าแทนเมล็ดกาแฟ เช่น

หากคุณต้องการประเภทกาแฟที่แตกต่างกันหรือกาแฟที่ไม่มีคาเฟอีน

1 เปิดฝาช่องใส่กาาแฟที่บล็องหน้าและเทกาาแฟที่บล็องหน้าหนึ่งถ้วยตวงลงไปลงในช่องใส่กาาแฟที่บล็องหน้า (รูปที่ 14) จากนั้นปิดฝา

2 แตะไอคอน One-touch Drink หรือแตะไอคอน 'More Drinks' เพื่อเลือกอีกเครื่องดื่มหนึ่ง

3 เลือกฟังก์ชันกาาแฟบล็องหน้า โดยสามารถทำได้ใน 2 วิธีที่แตกต่างกัน ดังนี้

- ใช้ลูกศรลงเพื่อตั้งค่าความเข้มให้อยู่ในระดับต่ำสุด แล้วเลือกฟังก์ชันบล็องหน้า

- กดไอคอน Settings ⚙️ และใช้ลูกศรลงเพื่อเลือกฟังก์ชันบล็องหน้า

4 หากต้องการหยุดจ่ายกาาแฟก่อนที่เครื่องจะทำงานเสร็จ ให้กดปุ่มเริ่ม/หยุด ▶■ อีกครั้ง

i เมื่อคุณเลือกฟังก์ชันกาาแฟบล็องหน้า:

- ค่าจะถูกจัดเก็บไว้โดยอัตโนมัติ

- คุณสามารถชงกาาแฟได้เพียงครั้งละหนึ่งถ้วย

- คุณไม่สามารถเลือกความเข้มของกลิ่นที่แตกต่างกันได้

การจ่ายน้ำร้อน

- 1 กด LatteGo ออก หากติดตั้งอยู่
- 2 วางถ้วยไว้ใต้หัวจ่ายน้ำร้อน
- 3 แตะไอคอน 'More Drinks' แล้วใช้ลูกศรขึ้นและลงเพื่อเลือกน้ำร้อน
- 4 ใช้ลูกศรขึ้นและลงเพื่อปรับปริมาณและ/หรืออุณหภูมิของน้ำร้อนตามความชอบของคุณ
- 5 กดปุ่มเริ่ม/หยุด ►
 - น้ำร้อนจะจ่ายจากหัวจ่ายน้ำร้อน (รูปที่ 15)
- 6 หากต้องการหยุดการจ่ายน้ำร้อนก่อนที่เครื่องจะทำงานจนเสร็จ ให้กดปุ่มเริ่ม/หยุด ► อีกครั้ง

การปรับแต่งเครื่องดื่ม

- คุณสามารถใช้เครื่องนี้ปรับการตั้งค่าเครื่องดื่มตามความชอบของคุณเอง และจัดเก็บค่าเครื่องดื่มที่ปรับแล้วในโปรไฟล์ส่วนตัว โปรไฟล์ที่แตกต่างกันมีสี่ที่แตกต่างกัน หลังจากที่คุณเลือกเครื่องดื่มโดยแตะไอคอน One-touch Drink อันใดอันหนึ่ง หรือแตะไอคอน 'More Drinks' แล้ว คุณสามารถทำสิ่งต่อไปนี้
- 1 ปรับความเข้มข้นของกลิ่นโดยใช้ไอคอนขึ้นและลง (รูปที่ 5) ความเข้มข้นของกลิ่นมี 5 ระดับ โดยระดับที่ต่ำสุดคือกลิ่นที่อ่อนสุด และระดับที่สูงสุดคือกลิ่นที่เข้มข้น
 - 2 ปรับปริมาณกาแฟ (รูปที่ 16) และ/หรือปริมาณนมโดยใช้ไอคอนขึ้นและลง การตั้งค่าแต่ละแบบปรับปริมาณได้ 5 ระดับ
- i** ในทันทีที่เครื่องชงเสร็จ เครื่องจะจัดเก็บการตั้งค่าที่คุณเลือกไว้ในโปรไฟล์ที่คุณเลือกโดยอัตโนมัติ

เลือกโปรไฟล์

- คุณสามารถเลือกโปรไฟล์และจัดเก็บสูตรได้โดยใช้โปรไฟล์กาแฟที่ฉันเลือก (โปรไฟล์กาแฟที่ฉันเลือก)
- 1 แตะไอคอนโปรไฟล์ ☰ ซ้ายๆ เพื่อเลือกโปรไฟล์สีอันใดอันหนึ่ง โปรไฟล์ทั้งหมดจะมีสี่ที่แตกต่างกัน
 - 2 เลือกเครื่องดื่มโดยแตะไอคอน One-touch Drink หรือแตะไอคอน 'More Drinks'
 - 3 ปรับการตั้งค่าเครื่องดื่มตามรสชาติที่คุณชื่นชอบ
 - 4 กดปุ่มเริ่ม/หยุด ► เพื่อชงเครื่องดื่มที่คุณเลือก
 - เครื่องได้จัดเก็บการตั้งค่าใหม่ของคุณไว้ในโปรไฟล์ที่คุณเลือกเรียบร้อยแล้ว
- i** คุณสามารถคืนค่าการตั้งค่าจากโรงงานของเครื่องได้ (ดู 'การเรียกคืนการตั้งค่าจากโรงงาน')

โปรไฟล์สำหรับแขก

เครื่องของคุณมีการติดตั้งโปรไฟล์สำหรับแขก เมื่อเลือกโปรไฟล์สำหรับแขก ไอคอนโปรไฟล์จะปิด เมื่อคุณเลือกโปรไฟล์นี้ คุณยังคงสามารถปรับแต่งการตั้งค่าให้ตรงตามความชอบของคุณเองได้ แต่จะไม่จัดเก็บสูตรที่คุณชง

การปรับการตั้งค่าเครื่อง

การตั้งค่าความกระด้างของน้ำ

 เราขอแนะนำให้คุณปรับความกระด้างของน้ำให้ตรงกับความกระด้างของน้ำในพื้นที่ของคุณ เพื่อประสิทธิภาพที่เหมาะสมที่สุดและอายุการใช้งานของเครื่องที่ยาวนานขึ้น ซึ่งจะช่วยป้องกันไม่ให้คุณต้องขจัดตะกอนออกจากเครื่องบ่อยเกินไป ตามค่าเริ่มต้น ความกระด้างของน้ำจะถูกตั้งค่าเป็น 4: น้ำกระด้าง

ใช้แผ่นทดสอบความกระด้างของน้ำที่ให้มาในกล่องเพื่อตรวจสอบความกระด้างของน้ำในภูมิภาคของคุณ:

- 1 จุ่มแผ่นทดสอบความกระด้างของน้ำในน้ำประปาหรือปล่อยให้น้ำประปาไหลผ่านเป็นเวลา 1 วินาที (รูปที่ 17)
- 2 รอ 1 นาที จำนวนสีเหลี่ยมบนแผ่นทดสอบที่เปลี่ยนเป็นสีแดงจะบ่งบอกความกระด้าง (รูปที่ 18) ของน้ำ

ตั้งค่าเครื่องให้ตรงกับความกระด้างของน้ำ

- 1 แตะไอคอน Settings  และใช้ลูกศรขึ้นและลงเพื่อเลือก 'ความกระด้างของน้ำ' จากนั้นกดไอคอน OK เพื่อยืนยัน
- 2 ใช้ลูกศรขึ้นและลงเพื่อเลือกระดับความกระด้างของน้ำ จำนวนสีเหลี่ยมสีแดงที่เลือกในหน้าจอควรตรงกับจำนวนสีเหลี่ยมสีแดงบนแผ่นทดสอบ (รูปที่ 19)
- 3 เมื่อคุณตั้งค่าความกระด้างของน้ำที่ถูกต้องแล้ว แตะไอคอน OK เพื่อยืนยัน

การปรับการตั้งค่าตัวบด

คุณสามารถเปลี่ยนความเข้มของกาแฟได้ด้วยปุ่มการตั้งค่าการบดภายในที่ใส่เมล็ดกาแฟ การตั้งค่าการบดยิ่งต่ำ เมล็ดกาแฟก็จะยิ่งถูกบดละเอียดมากขึ้น และกาแฟก็จะมีรสชาติเข้มข้นยิ่งขึ้น คุณสามารถเลือกการตั้งค่าการบดที่แตกต่างกันได้ 12 ระดับ

เครื่องได้รับการตั้งค่าให้ได้รับรสชาติที่ดีที่สุดจากเมล็ดกาแฟของคุณ ดังนั้น เราจึงแนะนำให้ท่านปรับการตั้งค่าการบดจนกว่าคุณจะชงกาแฟไปแล้ว 100-150 ถ้วย (การใช้งานประมาณ 1 เดือน)

 คุณสามารถปรับการตั้งค่าการบดได้ในขณะที่เครื่องกำลังบดเมล็ดกาแฟอยู่เท่านั้น คุณจำเป็นต้องชงเครื่องดื่ม 2 ถึง 3 แก้วก่อน จึงจะสามารถรับรู้ถึงความแตกต่างได้อย่างเต็มที่

 ห้ามหมุนปุ่มการตั้งค่าการบดมากกว่าครึ่งละหนึ่งช่องเพื่อป้องกันความเสียหายต่อตัวบด

- 1 วางถ้วยไว้ใต้ปากพวยรินกาแฟ
- 2 เปิดฝาที่ใส่เมล็ดกาแฟ
- 3 แตะไอคอนเอสเพรสโซ่ แล้วกดปุ่มเริ่ม/หยุด 

4 เมื่อตัวบดเริ่มทำงานให้กดปุ่มการตั้งค่าการบดแล้วหมุนไปทางซ้ายหรือขวา

การปรับการตั้งค่าอื่นๆ ของเครื่อง

เมื่อแตะที่ไอคอน Settings * คุณสามารถปรับการตั้งค่าของเครื่องได้ดังต่อไปนี้

- ความกระด้างของน้ำ: คุณสามารถเลือกได้ 5 ระดับตามความกระด้างของน้ำในพื้นที่ของคุณ
- เวลาการทำงาน: คุณสามารถเลือก 15, 30, 60 หรือ 180 นาที
- ความสว่างของจอแสดงผล: คุณสามารถเลือกต่ำ กลาง และสูง
- ภาษา
- เสียง: คุณสามารถเปิดหรือปิดใช้งานเสียงเตือนของเครื่องได้
- อุณหภูมิที่เหมาะสม: คุณสามารถเลือกอุณหภูมิชงกาแฟได้ 3 ระดับ
- ไฟส่องสว่างด้านหน้า (เฉพาะรุ่น 5500 Series): คุณสามารถเลือก 'เปิดตลอดเวลา' หรือ 'เปิดขณะชง' หรือ 'ปิดตลอดเวลา'
- หน่วยวัด: คุณสามารถเลือกระหว่าง มล. หรือออนซ์
- การเปิดใช้งานโปรไฟล์: คุณสามารถเปิดหรือปิดใช้งานโปรไฟล์ได้
- การล้างก่อนเริ่มใช้งาน: คุณสามารถเปิดหรือปิดใช้งานรอบการล้างอัตโนมัติเมื่อคุณเปิดเครื่องได้
- แสงพื้นหลังของจอแสดงผล: คุณสามารถเปิดหรือปิดใช้งานแสงพื้นหลังได้ในปุ่มเครื่องดื่ม

การเรียกคืนการตั้งค่าจากโรงงาน

คุณสามารถเรียกคืนการตั้งค่าจากโรงงานในเครื่องนี้เมื่อใดก็ได้

- 1 แตะไอคอน Settings *
- 2 ใช้ไอคอนขึ้นและลงเพื่อเลือก 'Factory settings' (การตั้งค่าจากโรงงาน)
ยืนยันโดยแตะที่ไอคอน OK
- 3 กดปุ่มเริ่ม/หยุด ► เพื่อยืนยันว่าคุณต้องการเรียกคืนการตั้งค่า
 - ขณะนี้ กำลังคืนค่าการตั้งค่า

i โดยจะคืนค่าการตั้งค่าจากโรงงานต่อไปนี้ เป็นค่าเริ่มต้น: ความกระด้างของน้ำ เวลาการทำงาน ความสว่าง แสงพื้นหลังของจอแสดงผล การล้างก่อนเริ่มใช้งาน เสียง อุณหภูมิ ไฟส่องสว่างด้านหน้า โปรไฟล์

การถอดและใส่ห้วขง

ไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอแนะนำอย่างละเอียดเกี่ยวกับวิธีถอด ใส่ และทำความสะอาดห้วขง

การถอดห้วขงออกจากเครื่อง

- 1 ปิดเครื่อง
- 2 ถอดแท่งค้้น้ำออก แล้วเปิดฝา (รูปที่ 21) เครื่อง

3 กดปุ่มจับ (รูปที่ 22) PUSH แล้วดึงตรงที่จับของหัวชงเพื่อถอดออกจากเครื่อง (รูปที่ 23)

การใส่หัวชงกลับเข้าไปใหม่

⚠ ก่อนที่คุณจะเลื่อนหัวชงกลับเข้าไปในเครื่อง ตรวจสอบให้แน่ใจว่าหัวชงอยู่ในตำแหน่งที่ถูกต้อง

- 1 ตรวจสอบว่าหัวชงอยู่ในตำแหน่งที่ถูกต้อง
ลูกศรบนกระบอกสีเหลืองที่ด้านข้างของหัวชงจะต้องตรงกับลูกศรสีดำและตัว N (รูปที่ 24)
- หากไม่ตรงกัน ให้กดคันโยกลงจนสัมผัสกับฐานของหัว (รูปที่ 25) ชง
- 2 เลื่อนหัวชงกลับเข้าไปในเครื่องตามรางนำทางที่อยู่ด้านข้าง (รูปที่ 26) จนกว่าจะล็อกเข้าที่และได้ยินเสียงคลิก (รูปที่ 27) ห้ามกดปุ่ม PUSH
- 3 ปิดฝาเครื่องและใส่แท่งค่าน้ำกลับเข้าไปที่เดิม

การทำความสะอาดและบำรุงรักษา

การทำความสะอาดและดูแลรักษาเครื่องเป็นประจำช่วยให้เครื่องของคุณอยู่ในสภาพที่ดีเยี่ยม และทำให้มั่นใจได้ว่ากาแฟจะมีรสชาติที่ดีเป็นระยะเวลานานและมีการไหลของกาแฟที่สม่ำเสมอ ดูตารางที่ด้านล่างสำหรับคำอธิบายอย่างละเอียดเกี่ยวกับเวลาและวิธีการทำความสะอาดส่วนที่สามารถถอดออกได้ทั้งหมดของเครื่อง คุณสามารถดูข้อมูลและวิดีโอแนะนำอย่างละเอียดเพิ่มเติมได้ใน

www.philips.com/coffee-care

ดูภาพรวมว่าชิ้นส่วนใดบ้างที่สามารถทำความสะอาดในเครื่องล้างจานได้ในรูป B

ส่วนที่ถอดออกได้	เวลาที่ควรทำความสะอาด	วิธีทำความสะอาด
หัวชง	ทุกสัปดาห์	ถอดหัวชงออกจาก เครื่อง (ดู 'การถอดและใส่หัวชง') ล้างทำความสะอาดโดยเปิด น้ำให้ไหลผ่าน (ดู 'การทำความสะอาดหัวชงโดยเปิดน้ำให้ไหลผ่าน')
	ทุกเดือน	ทำความสะอาดหัวชงด้วย เม็ดยขัดคราบน้ำมันกาแฟของ Philips (ดู 'การทำความสะอาดหัวชงด้วยเม็ดยขัดคราบน้ำมันกาแฟ')
ช่องใส่กาแฟที่บดไว้ล่วงหน้า	ตรวจสอบช่องใส่กาแฟที่บดไว้ล่วงหน้าทุกสัปดาห์เพื่อดูว่ามีสิ่งอุดตันหรือไม่	ถอดปลั๊กเครื่องและถอดหัวชงออก เปิดฝापิดช่องใส่กาแฟที่บดไว้ล่วงหน้าแล้วใส่ ส้อมดันจับขึ้นลงจนกว่ากาแฟที่อุดตัน อยู่จะร่วง ลงมา (รูปที่ 28) ไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอแนะนำอย่างละเอียด

ส่วนที่ถอดออกได้	เวลาที่ควรทำความสะอาด	วิธีทำความสะอาด
ที่ใส่กากกาแฟ	เทกากกาแฟออกจากที่ใส่เมื่อเครื่องเตือน ทำความสะอาดทุกสัปดาห์	ถอดที่ใส่กากกาแฟออกในระหว่างที่เครื่องเปิดอยู่ ล้างโดยการเปิดน้ำให้ไหลผ่านและใช้น้ำยาทำความสะอาด หรือทำความสะอาดในเครื่องล้างจาน แผงด้านหลังของที่ใส่กากกาแฟ (รูป A15) ไม่สามารถทำความสะอาดในเครื่องล้างจานได้
ถาดรองน้ำ	เทถาดรองน้ำทุกวัน หรือทันทีที่สัญญาณ 'ถาดรองน้ำเต็ม' สีแดงโผล่พ้น ถาดรองน้ำ (รูปที่ 29) ทำความสะอาดถาดรองน้ำทุกสัปดาห์	ถอด ถาดรองน้ำออก (รูปที่ 30) และล้างโดยการเปิดน้ำให้ไหลผ่านและใช้น้ำยาทำความสะอาด คุณสามารถทำความสะอาดถาดรองน้ำในเครื่องล้างจานได้เช่นกัน แผงด้านหลังของที่ใส่กากกาแฟ (รูป A15) ไม่สามารถทำความสะอาดในเครื่องล้างจานได้
LatteGo	หลังการใช้	อันดับแรก ทำความสะอาด LatteGo ในขณะที่ยังติดอยู่กับเครื่องโดยใช้โปรแกรม 'การทำทำความสะอาดนมอย่างรวดเร็ว' (ดู 'การทำทำความสะอาด LatteGo อย่างรวดเร็ว') จากนั้นจึงนำออกจากเครื่องและล้างโดยเปิดก๊อกให้น้ำไหลผ่านหรือทำความสะอาดในเครื่องล้างจาน
การหล่อลื่นหัวชง	ทุก 2 เดือน	ดูตารางการหล่อลื่น และหยดน้ำมันหล่อลื่นของ Philips ใส่หัวชง (ดู 'การหล่อลื่นหัวชง')
แท่งคั้นน้ำ	ทุกสัปดาห์	ล้างทำความสะอาดแท่งคั้นน้ำโดยเปิดน้ำให้ไหลผ่าน
ด้านหน้าของเครื่อง	ทุกสัปดาห์	ทำความสะอาดด้วยผ้าที่เช็ดโดยไม่เป็นรอย

การทำความสะอาดหัวชง

การทำความสะอาดหัวชงเป็นประจำจะป้องกันไม่ให้กาแฟที่ตกค้างอุดตันวงจรภายใน ไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอสนับสนุนเกี่ยวกับวิธีถอด ไล่ และทำความสะอาดหัวชง

การทำความสะอาดหัวชงโดยเปิดน้ำให้ไหลผ่าน

- 1 ถอดหัวชง (ดู 'การถอดและใส่หัวชง') ออก

- 2 ล้างหัวชงให้สะอาดด้วยน้ำ ทำความสะอาดตัวกรอง (รูปที่ 31) ด้านบนของหัวชงอย่างระมัดระวัง
- 3 ปลดปล่อยหัวชงให้แห้งสนิทก่อนที่คุณจะใส่กลับเข้าไป ห้ามเช็ดหัวชงด้วยผ้าเพื่อป้องกันไม่ให้ใยผ้าไปติดสะสมอยู่ภายในหัวชง

การทำความสะอาดหัวชงด้วยเม็ดขจัดคราบน้ำมันกาแฟ

ใช้เม็ดขจัดคราบน้ำมันกาแฟของ Philips เท่านั้น

- 1 กดปุ่มไอคอน Clean ☘ และใช้ลูกศรขึ้นและลงเพื่อเลือก 'Brew group clean' (ทำความสะอาดหัวชง)
- 2 กดปุ่มไอคอน OK เพื่อยืนยัน แล้วทำตามคำแนะนำบนหน้าจอ

การหล่อลื่นหัวชง

เพื่อปรับปรุงประสิทธิภาพของเครื่อง ขอแนะนำให้หล่อลื่นหัวชงทุกๆ 2 เดือน

เพื่อให้แน่ใจว่าชิ้นส่วนที่เคลื่อนไหวยังคงเคลื่อนไหวได้อย่างนุ่มนวล

- 1 ถาน้ำมันหล่อลื่นบางๆ บนลูกสูบ (ส่วนสีเทา) ของ หัว (รูปที่ 32) ชง
- 2 ถาน้ำมันหล่อลื่นบางๆ รอบแกน (ส่วนที่เป็นสีเทา) ที่ด้านล่างของ หัวชง (รูปที่ 33)
- 3 ถาน้ำมันหล่อลื่นบางๆ ที่รางเลื่อนทั้งสอง ด้าน (รูปที่ 34)

การทำความสะอาด LatteGo (ภาชนะเก็บนํ้านม)

การทำความสะอาด LatteGo อย่างรวดเร็ว

- 1 ตรวจสอบให้แน่ใจว่า LatteGo ต่อกับเครื่องอย่างถูกต้อง (รูปที่ 10)
- 2 วางถ้วยไว้ใต้หัวจ่าย
- 3 กดปุ่มไอคอน Clean ☘ และใช้ลูกศรขึ้นและลงเพื่อเลือกโปรแกรม 'Quick milk clean' (ทำความสะอาดนมอย่างรวดเร็ว)
- 4 กดปุ่มไอคอน OK เพื่อยืนยัน แล้วทำตามคำแนะนำบนหน้าจอ เพื่อขจัดนมที่อาจค้างอยู่ในระบบนมออกมา
 - ระบบนมจะพ่นน้ำร้อนออกมาเล็กน้อย
- 5 เก็บ LatteGo ที่มีนมเหลืออยู่ไว้ในตู้เย็น

ทำความสะอาด LatteGo อย่างทั่วถึง

- 1 ถอด LatteGo ออกจากเครื่อง (รูปที่ 35)
- 2 เทนมที่หลงเหลืออยู่ออก
- 3 กดปุ่มปลดล็อกและถอดภาชนะเก็บนํ้านมออกจากกรอบของ LatteGo (รูปที่ 36)
- 4 ทำความสะอาดชิ้นส่วนทั้งหมดในเครื่องล้างจาน หรือเปิดน้ำอุ่นให้ไหลผ่านและใช้น้ำยาทำความสะอาด

ตัวกรองน้ำ AquaClean

เครื่องของคุณเปิดใช้งาน AquaClean อยู่ คุณสามารถใส่ตัวกรองน้ำ AquaClean ไว้ในถังใส่น้ำได้เพื่อรักษารสชาติของกาแฟ

และยังช่วยลดความจำเป็นในการขัดคราบตะกอนโดยลดการสะสมของคราบหินปูนในเครื่อง คุณสามารถซื้อตัวกรองน้ำ AquaClean ได้จากร้านค้าปลีกใกล้บ้านคุณ ศูนย์บริการที่ได้รับอนุญาต หรือทางออนไลน์ที่ www.philips.com/parts-and-accessories

ตัวบ่งชี้สถานะตัวกรอง AquaClean

ในขณะที่ AquaClean ทำงาน จะมองเห็นสถานะของตัวกรอง AquaClean

บนหน้าจอเป็นเปอร์เซ็นต์ตลอดเวลา

- หากสถานะของตัวกรอง AquaClean เหลือไม่เกิน 10% หน้าจอจะแสดงข้อความเป็นเวลา 2 วินาทีในแต่ละครั้งที่คุณเปิดเครื่อง ข้อความดังกล่าวจะแนะนำให้ซื้อตัวกรองใหม่
- หากสถานะของตัวกรองเป็น 0% เครื่องจะขอให้คุณเปลี่ยนตัวกรอง AquaClean ทุกครั้งที่คุณเปิดเครื่อง

การเปิดใช้งานตัวกรองน้ำ AquaClean (5 นาที)

i เครื่องจะไม่ตรวจพบโดยอัตโนมัติว่ามี การใส่ตัวกรองลงในแท่งค้ำน้ำ เพราะฉะนั้น คุณจึงจำเป็นต้องเปิดใช้งานตัวกรองน้ำ AquaClean ใหม่แต่ละเครื่องที่คุณติดตั้งในเมนู 'Clean'

เมื่อเครื่องหยุดแสดงข้อความเปิดใช้งานตัวกรองแล้ว คุณยังคงสามารถเปิดใช้งานตัวกรองน้ำ AquaClean ได้ แต่คุณจะต้องขัดตะกอนในเครื่องออกก่อน

i เครื่องของคุณจะต้องไม่มีคราบหินปูนอยู่เลยก่อนที่คุณจะเริ่มต้มน้ำด้วยตัวกรองน้ำ AquaClean ได้

ก่อนที่จะเปิดใช้งานตัวกรองน้ำ AquaClean

จะต้องมีการเตรียมการด้วยการแช่ตัวกรองไว้ในน้ำตามข้ออธิบายด้านล่าง หาก你不ทำเช่นนั้น อากาศอาจถูกดูดเข้าไปในเครื่องแทนน้ำ

ซึ่งทำให้มีเสียงดังมากและป้องกันไม่ให้เครื่องสามารถชงกาแฟได้

- 1.แตะไอคอน 'Clean' และใช้ลูกศรขึ้นและลงเพื่อเลือก 'AquaClean'
- 2.แตะไอคอน OK เพื่อยืนยัน
- 3.แตะไอคอน OK อีกครั้ง เมื่อหน้าจอการเปิดใช้งานปรากฏขึ้น ทำตามคำแนะนำบนหน้าจอ
- 4.เขย่าตัวกรองเป็นเวลา 5 วินาที (รูปที่ 37)
- 5.แช่ตัวกรองโดยคว่ำลงในเหยือกที่มีน้ำเย็น แล้วเขย่าหรือกดตัวกรอง (รูปที่ 38)
- 6.ใส่ตัวกรองบนช่องเชื่อมต่อตัวกรองในแท่งค้ำน้ำในแนวตั้ง กดตัวกรองลงไปที่ถึงจุดที่ต่ำที่สุด (รูปที่ 39)
- 7.เติมน้ำสะอาดลงในแท่งค้ำน้ำ แล้วใส่กลับเข้าไปในเครื่อง

- 8 กด LatteGo ออก หากติดตั้งอยู่
- 9 วางชามไว้ใต้หัวจ่ายน้ำร้อน
- 10 กดปุ่มเริ่ม/หยุด ► เพื่อเริ่มกระบวนการเปิดใช้งาน
- 11 เครื่องจะจ่ายน้ำร้อนออกจากหัวจ่ายน้ำร้อนในระยะเวลา 1 นาที
- 12 ตอนนี้มีการเปิดใช้งานตัวกรองเรียบร้อยแล้ว

การเปลี่ยนตัวกรองน้ำ AquaClean (5 นาที)

หลังจากที่มีน้ำ 95 ลิตรไหลผ่านตัวกรอง ตัวกรองจะหยุดทำงาน ตัวบ่งชี้สถานะ AquaClean ลดลงเป็น 0% เพื่อเตือนให้คุณเปลี่ยนตัวกรอง ทราบได้ที่ตัวบ่งชี้สถานะ AquaClean ยังคงแสดงบนจอแสดงผล

คุณก็ยังคงสามารถเปลี่ยนตัวกรองได้โดยไม่จำเป็นต้องขจัดตะกอนในเครื่องออกก่อน หากคุณเปลี่ยนตัวกรองน้ำ AquaClean ไม่ทันเวลาที่กำหนด ตัวบ่งชี้ AquaClean จะดับลงหลังจากนั้น ในกรณีนี้ คุณยังสามารถเปลี่ยนตัวกรองได้ แต่คุณต้องขจัดตะกอนออกจากเครื่องก่อน

เมื่อตัวบ่งชี้สถานะ AquaClean ลดลงเป็น 0% หรือเครื่องเตือนให้คุณเปลี่ยนตัวกรอง AquaClean ให้ปฏิบัติตามนี้

- 1 กดตัวกรองน้ำ AquaClean อันเก่าออก
- 2 ติดตั้งตัวกรองอันใหม่และเปิดใช้งานตามที่อธิบายไว้ในบท 'การเปิดใช้งานตัวกรองน้ำ AquaClean (5 นาที)'

i เปลี่ยนตัวกรองน้ำ AquaClean อย่างน้อยทุก 3 เดือน แม้เครื่องจะยังไม่ระบุว่าคุณจำเป็นต้องเปลี่ยน

ขั้นตอนการขจัดคราบตะกอน (30 นาที)

โปรดใช้น้ำยาขจัดคราบตะกอนของ Philips เท่านั้น ไม่ควรใช้น้ำยาขจัดคราบตะกอนที่มีกรดซัลฟิวริก กรดไฮโดรคลอริก กรดซัลเฟมิก หรือกรดแอซติก (น้ำส้มสายชู) ไม่ว่าในกรณีใดๆ

เนื่องจากอาจเป็นอันตรายต่อวงจรน้ำในเครื่องของคุณและไม่ละลายคราบหินปูนอย่างถูกต้อง การไม่ใช้น้ำยาขจัดคราบตะกอนของ Philips จะทำให้การรับประกันเป็นโมฆะ นอกจากนี้ การไม่ขจัดคราบตะกอนออกจากเครื่องจะทำให้การรับประกันเป็นโมฆะเช่นกัน คุณสามารถซื้อน้ำยาขจัดคราบตะกอนของ Philips ได้ในร้านค้าออนไลน์ที่

www.philips.com/coffee-care

เมื่อจำเป็นต้องขจัดตะกอนในเครื่อง จะมีข้อความปรากฏขึ้นบนจอแสดงผล

- 1 กดไอคอน Clean ► บนอินเทอร์เฟซผู้ใช้ และเลือก 'Descaling' (การขจัดตะกอน) ในเมนู
- 2 ทำตามคำแนะนำบนหน้าจอ
- 3 กด LatteGo ออก หากติดตั้งอยู่
- 4 ถอดถาดรองน้ำและที่ใส่กากกาแฟออก เททิ้งแล้วใส่กลับเข้าไปในเครื่อง

- 5 ถอดแท่งค่าน้ำออกและเทน้ำทิ้ง จากนั้นถอดตัวกรองน้ำ AquaClean ออก
- 6 เทน้ำยาขจัดคราบตะกรันของ Philips ทั้งขวดลงในแท่งค่าน้ำ จากนั้นเติมน้ำจนถึง เครื่องหมายคราบตะกรัน/ทำความสะอาด (รูปที่ 40) จากนั้นใส่กลับเข้าไปในเครื่อง
- 7 วางภาชนะขนาดใหญ่ (1.5 ลิตร) ไว้ใต้ปากพวยรินกาแฟและหัวจ่ายน้ำ
- 8 กดปุ่มเริ่ม/หยุด ► เพื่อเริ่มขั้นตอนการขจัดตะกรัน
ขั้นตอนการขจัดคราบตะกรันใช้เวลาประมาณ 30 นาที
และประกอบด้วยกระบวนการขจัดคราบตะกรันและกระบวนการล้าง
- 9 รอนกว่าเครื่องจะหยุดจ่ายน้ำ เติมน้ำในแท่งค่าน้ำ เมื่อข้อความปรากฏขึ้นบนจอแสดงผล
กระบวนการขจัดคราบตะกรันจะเสร็จเรียบร้อยแล้วเมื่อเครื่องหยุดจ่ายน้ำ
- 10 ติดตั้งและเปิดใช้งานตัวกรองน้ำ AquaClean ในแท่งค่าน้ำ
 - เมื่อเสร็จสิ้นขั้นตอนการขจัดตะกรันแล้ว เครื่องจะเตือนให้คุณติดตั้งตัวกรอง AquaClean ใหม่ (ดู 'การเปลี่ยนตัวกรองน้ำ AquaClean (5 นาที)')

 เคล็ดลับ: การใช้ตัวกรอง AquaClean จะลดความจำเป็นในการขจัดคราบตะกรัน!

ควรทำอย่างไรหากขั้นตอนการขจัดคราบตะกรันถูกรบกวน

คุณสามารถออกจากกระบวนการขจัดคราบตะกรันได้โดยกดปุ่มเปิด/ปิดบนแผงควบคุม หากกระบวนการขจัดคราบตะกรันถูกรบกวนก่อนที่จะดำเนินการเสร็จสิ้น ให้ดำเนินการดังต่อไปนี้

- 1 เทและล้างแท่งค่าน้ำให้สะอาด
- 2 เติมน้ำสะอาดลงในแท่งค่าน้ำจนถึงเส้นบอกระดับคราบตะกรัน/ทำความสะอาด แล้วเปิดสวิตช์เครื่องอีกครั้ง
- 3 ก่อนที่จะชงเครื่องดื่มใดๆ ให้ดำเนินการกระบวนการล้างแบบกำหนดเอง
เพื่อเดินรอบการล้างด้วยตนเอง
ให้เริ่มด้วยการจ่ายน้ำร้อนในปริมาณครึ่งแท่งค่าน้ำโดยเลือกฟังก์ชันน้ำร้อนซ้ำๆ กัน จากนั้นชงกาแฟที่บดไว้ล่วงหน้า 2 ถ้วยโดยไม่ต้องเพิ่มกาแฟบด

 หากขจัดคราบตะกรันตามกระบวนการไม่สำเร็จ
เครื่องจะต้องดำเนินการกระบวนการขจัดคราบตะกรันอีกครั้งโดยเร็วที่สุด

การสั่งซื้ออุปกรณ์เสริม

ใช้ผลิตภัณฑ์ดูแลรักษาของ Philips

เท่านั้นในการทำความสะอาดและขจัดคราบตะกรันออกจากเครื่อง

สามารถซื้อผลิตภัณฑ์เหล่านี้ได้จากร้านค้าปลีกในท้องถิ่นของคุณ จากศูนย์บริการที่ได้รับอนุญาต
หรือทางออนไลน์ที่ www.philips.com/parts-and-accessories

หากต้องการดูรายการอะไหล่ทั้งหมดทางออนไลน์ ให้ป้อนหมายเลขรุ่นของเครื่อง

คุณสามารถดูหมายเลขรุ่นได้ที่ด้านในของฝาเครื่อง

ผลิตภัณฑ์ดูแลรักษาและหมายเลขรุ่น:

- น้ำยาขจัดคราบตะกรัน CA6700
- ตัวกรองน้ำ AquaClean CA6903
- น้ำมันหล่อลื่นหัวขง HD5061
- เม็ดขจัดคราบน้ำมันกาแฟ CA6704

i เครื่องกรอง Brita ใช้กับเครื่องนี้ไม่ได้

การแก้ปัญหา

บทนี้ได้รวบรวมปัญหาทั่วไปเกี่ยวกับเครื่องซึ่งคุณอาจพบได้

สามารถดูวิดีโอสนับสนุนและรายการคำถามที่พบบ่อยทั้งหมดได้ใน www.philips.com/coffee-care หากคุณไม่สามารถแก้ไขปัญหาก็โปรดติดต่อศูนย์บริการลูกค้าในประเทศของคุณ สำหรับรายละเอียดการติดต่อ โปรดดูเอกสารแผ่นพับเกี่ยวกับการรับประกัน

ไอคอนเตือน

ไอคอนเตือน การแก้ปัญหา



ไอคอน 'ไม่มีน้ำในแท่ง' ปรากฏขึ้นบนจอแสดงผล

- น้ำในแท่งใกล้หมด เติมน้ำสะอาดลงในแท่งน้ำจนถึงเส้นบอกระดับสูงสุด
- แท่งค้ำน้ำถูกประกอบไม่เข้าที่ ใส่แท่งค้ำน้ำกลับเข้าไป



ไอคอน 'เติมเมล็ดกาแฟ' ปรากฏขึ้นบนจอแสดงผล

- เติมน้ำเมล็ดกาแฟในช่องใส่เมล็ดกาแฟ



ไอคอน 'เวลาที่ใส่กากกาแฟ' ปรากฏขึ้นบนจอแสดงผล

- ที่ใส่กากกาแฟเต็ม ถอดและที่ใส่กากกาแฟในระหว่างที่เครื่องเปิดอยู่ รอ 5 วินาทีก่อนแล้วค่อยใส่กลับ



ไอคอน 'ใส่หัวขง' ปรากฏขึ้นบนจอแสดงผล

- หัวขงไม่ได้ถูกใส่ให้เข้าที่หรือใส่ไม่ถูกต้อง ถอดหัวขงออกและตรวจสอบให้แน่ใจว่าล็อคเข้าที่แล้ว ดูบท 'การถอดและใส่หัวขง' เพื่อดูคำแนะนำที่ละเอียด

รหัสข้อผิดพลาด

รายการรหัสข้อผิดพลาดที่แสดงปัญหาที่คุณสามารถแก้ไขได้ด้วยตัวเองแสดงอยู่ที่ด้านล่างนี้ สามารถดูวิดีโอแนะนำได้ที่ www.philips.com/coffee-care หากรหัสข้อผิดพลาดอื่นปรากฏขึ้น โปรดติดต่อศูนย์บริการลูกค้า Philips ในประเทศของคุณ สำหรับรายละเอียดการติดต่อ โปรดดูเอกสารแผ่นพับเกี่ยวกับการรับประกัน

รหัสข้อ- ปัญหา	การแก้ปัญหาที่เป็นไปได้
01 ฟีดพลาด กรวยกาแฟอุดตัน	ปิดเครื่องและถอดปลั๊กออก ถอดหัวชงออก จากนั้นเปิดฝาปิดช่องใส่กาแฟบล็องหน้า แล้วใส่ด้ามช้อนขยับด้ามจับขึ้นลงจนกว่ากาแฟบล็องที่อุดตันอยู่จะร่วง ลงมาไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอแนะนำอย่างละเอียด
03 หัวชงสกปรกหรือเคลือบน้ำมันไม่เรียบร้อย	ปิดเครื่อง ล้างหัวชงด้วยน้ำเปล่า เป่าให้แห้ง แล้วจึงหยดน้ำมันหล่อลื่น ดูปก 'การทำความสะอาดหัวชง' หรือไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอแนะนำอย่างละเอียด จากนั้นเปิดเครื่องอีกครั้ง
04 หัวชงอยู่ในตำแหน่งที่ไม่ถูกต้อง	ปิดเครื่อง ถอดหัวชงออกและใส่กลับเข้าไปใหม่ ตรวจสอบให้แน่ใจว่าหัวชงอยู่ในตำแหน่งที่ถูกต้องก่อนที่จะใส่เข้าไป ดูปก 'การจับหัวชง' หรือไปที่ www.philips.com/coffee-care เพื่อดูวิดีโอแนะนำอย่างละเอียด จากนั้นเปิดเครื่องอีกครั้ง
05 มีอากาศอยู่ภายในวงจรรน้ำ	รีเซ็ตรถเครื่องโดยปิดเครื่องแล้วเปิดอีกครั้ง หากสามารถใช้งานได้ ให้จ่ายน้ำร้อน 2-3 ถ้วย ขจัดตะกอนในเครื่อง หากคุณไม่ได้ขจัดตะกอนมานานแล้ว
เตรียมตัวกรอง AquaClean ไม่ถูกต้องก่อนที่จะติดตั้ง หรือตัวกรองอุดตัน	ถอดตัวกรอง AquaClean ออก และลองชงกาแฟอีกครั้ง หากสามารถใช้งานได้ ตรวจสอบให้แน่ใจว่าคุณเตรียมตัวกรอง AquaClean อย่างถูกต้องก่อนที่จะใส่ กลับ เข้าไป ใส่ตัวกรอง AquaClean กลับเข้าไปในแท่งค้ำน้ำ หากยังคงใช้งานไม่ได้ แสดงว่าตัวกรองอาจจะอุดตันและจำเป็นต้องเปลี่ยนใหม่
11 เครื่องจำเป็นต้องปรับตัวให้เข้ากับอุณหภูมิห้อง	เพื่อเวลาไว้ให้เครื่องปรับตัวจากอุณหภูมิระหว่างการขนส่ง/ภายนอกเป็นอุณหภูมิห้อง ปิดเครื่อง 30 นาที และเปิดเครื่องอีกครั้ง หากยังคงไม่ทำงาน โปรดติดต่อศูนย์บริการลูกค้าในประเทศของคุณ สำหรับรายละเอียดการติดต่อ โปรดดูเอกสารแผ่นพับเกี่ยวกับการรับประกัน
14 เครื่องร้อนเกินไป	ปิดเครื่องและเปิดใหม่อีกครั้งหลังจากที่ปล่อยทิ้งไว้ 30 นาที
19 เครื่องไม่ได้เสียบปลั๊กเข้ากับเต้ารับบนผนังให้เรียบร้อย	ตรวจสอบว่าเสียบปลั๊กขนาดเล็กของสายไฟเข้ากับเต้ารับที่ด้านล่างหลังของเครื่องเรียบร้อยแล้ว

ตารางการแก้ปัญหา

บทนี้ได้รวบรวมปัญหาทั่วไปเกี่ยวกับเครื่องซึ่งคุณอาจพบได้

สามารถดูวิดีโอสนับสนุนและรายการคำถามที่พบบ่อยทั้งหมดได้ใน www.philips.com/coffee-care

หากคุณไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้าในประเทศของคุณ

สำหรับรายละเอียดการติดต่อ โปรดดูเอกสารแผ่นพับเกี่ยวกับการรับประกัน

ปัญหา	สาเหตุ	การแก้ปัญหา
มีเศษกาแฟตกค้างอยู่ในเครื่องชงกาแฟใหม่ของตน	เครื่องนี้ได้รับการทดสอบด้วยกาแฟแล้ว	แม้ว่าจะได้รับการทำความสะอาดเป็นอย่างดี แต่อาจมีกากกาแฟที่ตกค้างหลงเหลืออยู่ ถึงอย่างไรก็ยังคงเป็นเครื่องใหม่อย่างสมบูรณ์
ถาดรองน้ำเต็มเร็ว / มีน้ำในถาดรองน้ำอยู่ตลอดเวลา	ซึ่งเป็นเรื่องปกติ เครื่องใช้น้ำเพื่อล้างทำความสะอาดวงจรภายในและหัวชง น้ำบางส่วนจะไหลผ่านวงจรภายในลงไปยังถาดรองน้ำโดยธรรมชาติ	เทถาดรองน้ำทุกวัน หรือทันทีที่สัญลักษณ์ 'ถาดรองน้ำเต็ม' สีแดงโพล์พื้นฟ้าปิดถาดรองน้ำ เคล็ดลับ: วางถ้วยไว้ใต้ช่องจ่ายเพื่อรองน้ำล้างที่ไหลออกมาจากช่องจ่าย
ไอคอน 'เทที่ใส่กากกาแฟ' ยังแสดงอยู่	คุณเทที่ใส่กากกาแฟในขณะที่เครื่องยังปิดเครื่องอยู่ หรือใส่กลับเร็วเกินไป	เทที่ใส่กากกาแฟในระหว่างที่เครื่องเปิดอยู่เสมอ ถอดที่ใส่กากกาแฟ รอยอย่างน้อย 5 วินาที แล้วใส่กลับเข้าไปอีกครั้ง
เครื่องเตือนให้เทที่ใส่กากกาแฟ แม้ว่าที่ใส่จะยังไม่เต็ม	เครื่องไม่ได้รีเซ็ตตัวนับเมื่อคุณเทที่ใส่กากกาแฟครั้งสุดท้าย	รอประมาณ 5 วินาทีเสมอ เมื่อคุณใส่ที่ใส่กากกาแฟกลับเข้าไป วิธีนี้จะรีเซ็ตตัวนับกากกาแฟเป็นศูนย์ และนับจำนวนก่อนกาแฟได้อย่างถูกต้อง
		เทที่ใส่กากกาแฟในระหว่างที่เครื่องเปิดอยู่เสมอ หากคุณเทที่ใส่กากกาแฟเมื่อเครื่องปิดอยู่ เครื่องจะไม่ได้รีเซ็ตตัวนับกากกาแฟ
ที่ใส่กากกาแฟเต็มเกินไป และไอคอน 'เทที่ใส่กากกาแฟ' ไม่ปรากฏบนจอแสดงผล	คุณถอดถาดรองน้ำออกโดยไม่ได้เทที่ใส่กากกาแฟ	เมื่อคุณถอดถาดรองน้ำออก คุณต้องเทที่ใส่กากกาแฟด้วย แม้ว่าจะมีกากกาแฟอยู่เพียงเล็กน้อย ซึ่งจะทำให้แน่ใจได้ว่าตัวนับก่อนกาแฟจะถูกรีเซ็ตเป็นศูนย์ และนับจำนวนก่อนกาแฟได้อย่างถูกต้อง

ปัญหา	สาเหตุ	การแก้ปัญหา
จันไม่สามารถถอดหัว- งออกได้	หัวขงไม่อยู่ในตำแหน่งที่ถูกต้อง	รีเซ็ตเครื่องตามวิธีต่อไปนี้ ปิดฝาเครื่องและใส่แท่งค้ำน้ำกลับเข้าไป- ที่เดิม ปิดเครื่อง แล้วเปิดเครื่องใหม่อีกครั้ง และรอให้ไฟในไอคอนเครื่องดับติดสว่าง ลองถอดหัวขงอีกครั้ง ดูบท 'การถอดและใส่หัวขง' เพื่อดูคำแนะนำที่ละเอียดขึ้น
จันไม่สามารถใส่หัวขง- ได้	หัวขงไม่อยู่ในตำแหน่งที่ถูกต้อง	รีเซ็ตเครื่องตามวิธีต่อไปนี้ ปิดฝาเครื่องและใส่แท่งค้ำน้ำกลับเข้าไป- ที่เดิม ปลอยหัวขงไว้ข้างนอก ปิดเครื่องและถอดปลั๊กออก รอ 30 วินาที แล้วเสียบเครื่องกลับเข้ามา เปิดเครื่องและรอให้ไฟในไอคอนเครื่อง- ดับติดสว่าง จากนั้นใส่หัวขงในตำแหน่งที่ถูกต้อง และใส่กลับเข้าไปในเครื่องอีกครั้ง ดูบท 'การถอดและใส่หัวขง' เพื่อดูคำแนะนำที่ละเอียดขึ้น
กาแฟมีน้ำมากเกินไป	หัวขงสกปรกหรือจำเป็นต้อง- ได้รับการหล่อลื่น	ถอดหัวขง (ดู 'การถอดหัวขงออกจากเครื่อง') ล้างโดยการเปิดน้ำให้ไหลผ่าน และปล่อยให้แห้ง จากนั้นหยดน้ำมันหล่อลื่นใส่ส่วนที่เคล็- อนไหว (ดู 'การหล่อลื่นหัวขง')
	เครื่องกำลังดำเนินขั้นตอนกา- รปรับแต่งโดยอัตโนมัติอยู่ ขั้นตอนนี้จะเริ่มต้นโดยอัตโนมัติ เมื่อคุณใช้เครื่องเป็นครั้งแรก เมื่อคุณเปลี่ยนประเภทของเมล็ด กาแฟ หรือหลังจากที่ไม่ใช้งานเป็นเว- ลานาน	ชงกาแฟ 5 ถ้วยในการใช้งานครั้งแรก เพื่อให้เครื่องได้ดำเนินขั้นตอนการปรับ- แต่งโดยอัตโนมัติจนเสร็จสมบูรณ์
	ตัวบดถูกตั้งให้อยู่ในระดับที่หยา- บเกินไป	ตั้งค่าตัวบดให้อยู่ในระดับที่ละเอียดขึ้น (ต่ำลง) ชงเครื่องดื่ม 2 ถึง 3 แก้วเพื่อให้สามารถรับรู้ถึงความแตกต่าง ได้อย่างเต็มที่
กาแฟไม่อร่อยร้อน	อุณหภูมิถูกตั้งให้ต่ำเกินไป	ตั้งอุณหภูมิไว้ที่ค่าสูงสุด ปรับอุณหภูมิโดยกดไอคอน * 'Settings'

ปัญหา	สาเหตุ	การแก้ปัญหา
	รอบการล้างอัตโนมัติถูกปิดใช้งาน	เปิดใช้รอบการล้างอัตโนมัติโดยการกดที่ 'Settings' * 'Settings' เมื่อเปิดใช้งานการตั้งค่านี้ เครื่องจะร้อนขึ้นและดำเนินกระบวนการล้างโดยอัตโนมัติเมื่อคุณเปิดเครื่อง
	แก้วที่เย็นจะทำให้อุณหภูมิของเครื่องต่ำลง	อุ่นถ้วยให้ร้อนด้วยการล้างด้วยน้ำร้อน
	การเพิ่มนมจะทำให้อุณหภูมิของเครื่องต่ำลง	ไม่ว่าคุณ会增加นมที่ร้อนหรือเย็น การเพิ่มนมจะทำให้อุณหภูมิของกาแฟลดลงเสมอ อุ่นถ้วยให้ร้อนด้วยการล้างด้วยน้ำร้อน
กาแฟไม่ออกมาหรือกาแฟออกมาช้า	ตัวกรองน้ำ AquaClean ไม่ได้รับการเตรียมอย่างถูกต้องสำหรับการติดตั้ง	ถอดตัวกรอง AquaClean ออก และจ่ายน้ำร้อนออกมาบางส่วน หากสามารถใช้งานได้ แสดงว่าติดตั้งตัวกรอง AquaClean ไม่ถูกต้อง ติดตั้งใหม่และเปิดใช้งานตัวกรอง AquaClean และทำตามขั้นตอนทั้งหมดในบท 'ตัวกรองน้ำ AquaClean'
		หลังจากที่ไม่ได้ใช้งานเป็นเวลานาน คุณจำเป็นต้องเตรียมตัวกรองน้ำ AquaClean เพื่อการใช้งานอีกครั้ง และจ่ายน้ำร้อน 2-3 ถ้วย
	ตัวกรองน้ำ AquaClean อุดตัน	เปลี่ยนตัวกรองน้ำ AquaClean ทุกๆ 3 เดือน ตัวกรองที่มีอายุมากกว่า 3 เดือนอาจอุดตันได้
	ตัวบดถูกตั้งให้อยู่ในระดับที่ละเอียดเกินไป	ตั้งค่าตัวบดให้อยู่ในระดับที่หยาบขึ้น (สูงขึ้น) โปรดทราบว่า การดำเนินการนี้จะส่งผลกระทบต่อรสชาติของกาแฟ
	หัวชงสกปรก	ถอดหัวชง และล้างให้สะอาดโดยการเปิดน้ำให้ไหลผ่าน (ดู 'การทำความสะอาดหัวชงโดยเปิดน้ำให้ไหลผ่าน')
	ปากพวยรินกาแฟสกปรก	ทำความสะอาดปากพวยรินกาแฟและช่องตรงปากพวยรินกาแฟด้วยที่ทำความสะอาดท่อหรือเข็ม

ปัญหา	สาเหตุ	การแก้ปัญหา
	ช่องใส่กาแฟที่บดไว้ล้นหน้าอุดตัน	ปิดเครื่องและถอดหัวชงออก เปิดฝาปิดช่องใส่กาแฟที่บดไว้ล้นหน้า แล้วใส่ตามจับช้อนเข้าไป ขยับด้ามจับขึ้นลงจนกว่ากาแฟบดที่อุดตันอยู่จะร่วง ลงมา (รูปที่ 28)
	วงจรของเครื่องมีคราบหินปูนอุดตัน	ขจัดคราบตะกรันออกจากเครื่องด้วยน้ำยาขจัดคราบตะกรันของ Philips ขจัดตะกรันทุกครั้งเมื่อเครื่องแจ้งเตือน
นมไม่กลายเป็นฟอง	ประกอบ LatteGo ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าประกอบภาชนะเก็บนํ้านมเข้ากับกรอบของ LatteGo อย่างถูกต้อง (มีเสียง 'คลิก') (ดู 'การประกอบ LatteGo')
	ภาชนะเก็บนํ้านมและ/หรือกรอบของ LatteGo สกปรก	ถอดส่วนประกอบทั้งหมดของ LatteGo ออก และล้างทั้งสองส่วนโดยเปิดน้ำให้ไหลผ่าน หรือทำความสะอาดในเครื่องล้างจาน
	ประเภทของนมที่ใช้ไม่เหมาะกับการทำฟองนม	นมประเภทที่แตกต่างกันจะให้ปริมาณของฟองนมและคุณภาพของฟองนมที่แตกต่างกัน เราได้ทดสอบนมประเภทต่อไปนี้แล้วเพื่อให้ผลลัพธ์ของการตีฟองที่ดี นมกึ่งพร้อมมันเนยหรือนมครึ่งส่วน และนมที่ปราศจากน้ำตาลแล็กโทส
มีนมซึมออกมาจากด้านล่างของภาชนะเก็บนํ้านม LatteGo	กรอบและภาชนะเก็บนํ้านมไม่ได้ถูกประกอบอย่างถูกต้อง	ก่อนอื่นให้ใส่ด้านบนของภาชนะเก็บนํ้านมเข้าไปใต้ขอล็อคที่ด้านบนของกรอบ จากนั้นกดส่วนฐานของภาชนะเก็บนํ้านม ให้เข้าที่ คุณจะได้ยินเสียงดังคลิกเมื่อส่วนดังกล่าวล็อค เข้าที่.
	ภาชนะเก็บนํ้านมและ/หรือกรอบของ LatteGo สกปรก	ถอดส่วนประกอบทั้งหมดของ LatteGo ออก และล้างทั้งสองส่วนโดยเปิดน้ำให้ไหลผ่าน หรือทำความสะอาดในเครื่องล้างจาน






















ปัญหา	สาเหตุ	การแก้ปัญหา
เครื่องดูเหมือนจะมีการรั่วซึม	เครื่องใช้น้ำเพื่อล้างทำความสะอาดวงจรภายในและหัวชง น้ำนี้จะไหลผ่านวงจรภายในลงไปยังถาดรองน้ำโดยตรง ซึ่งเป็นเรื่องปกติ	เทถาดรองน้ำทุกวัน หรือทันทีที่สัญลักษณ์ 'ถาดรองน้ำเต็ม' โฟลว์ฟันฝาปิดถาดรองน้ำ เคล็ดลับ: วางถ้วยไว้ใต้ปากพวยเพื่อรองน้ำที่ชะล้าง และลดปริมาณน้ำในถาดรองน้ำ
	ถาดรองน้ำเต็มและล้น ซึ่งทำให้ดูเหมือนว่าเครื่องมีการรั่วซึม	เทถาดรองน้ำทุกวัน หรือทันทีที่สัญลักษณ์ 'ถาดรองน้ำเต็ม' โฟลว์ฟันฝาปิดถาดรองน้ำ
	ไม่ได้ใส่แท่งค่าน้ำจนสุด น้ำบางส่วนรั่วออกจากแท่งค่าน้ำ และอากาศถูกดูดเข้าไปในเครื่อง	ตรวจสอบว่าแท่งค่าน้ำอยู่ในตำแหน่งที่ถูกต้อง ถอดและใส่เข้าไปใหม่อีกครั้งโดยดันเข้าไปให้ลึกที่สุด
	หัวชงสกปรก/อุดตัน	ล้างหัวชง
	เครื่องไม่ได้วางอยู่บนพื้นผิวราบ	วางเครื่องบนพื้นผิวราบเพื่อให้ถาดรองน้ำไม่ล้น และสัญลักษณ์ 'ถาดรองน้ำเต็ม' ทำงานอย่างถูกต้อง
ฉันไม่สามารถเปิดใช้งานตัวกรองน้ำ AquaClean ได้ และเครื่องขอให้จัดครบตะกรัน	ติดตั้งหรือเปลี่ยนตัวกรองไม่ทันเวลาที่กำหนด หลังจากที่หน้าจอแสดงค่าเตือนของ AquaClean ซึ่งหมายความว่าเครื่องของคุณไม่ได้ปลอดคราบหินปูนแล้ว	ขจัดคราบตะกรันออกจากเครื่องของคุณก่อน แล้วจึงติดตั้งตัวกรองน้ำ AquaClean
ตัวกรองน้ำใหม่ไม่พอดี	คุณกำลังพยายามติดตั้งตัวกรองอื่นที่ไม่ใช่ตัวกรองน้ำ Philips AquaClean	ตัวกรองน้ำ Philips AquaClean เท่านั้นที่ใส่ในเครื่องได้พอดี
	ห้วงยางบนตัวกรองน้ำ AquaClean อยู่ในตำแหน่งที่ไม่ถูกต้อง	ใส่ห้วงยางบนตัวกรองน้ำ AquaClean กลับเข้าไป
เครื่องมีเสียงดัง	การที่เครื่องของคุณมีเสียงดังบ้างระหว่างใช้งานเป็นเรื่องปกติ	หากเครื่องเริ่มมีเสียงแปลกๆ ให้ทำความสะอาดหัวชงและหยดน้ำมันหล่อลื่น (ดู 'การหล่อลื่นหัวชง')

















ปัญหา	สาเหตุ	การแก้ปัญหา
	ตัวกรองน้ำ AquaClean ไม่ได้รับการเตรียมอย่างถูกต้อง และอากาศถูกดูดเข้าไปในเครื่อง	ถอดตัวกรองน้ำ AquaClean ออกจากแท่งค้ำน้ำ และเตรียมอย่างถูกต้องเพื่อการใช้งาน- ก่อนที่จะใส่กลับเข้าไปในเครื่อง ดูปก 'ตัวกรองน้ำ AquaClean' เพื่อดูคำแนะนำที่ละเอียด
	ไม่ได้ใส่แท่งค้ำน้ำให้เข้าไปจนสุด และอากาศถูกดูดเข้าไปในเครื่อง	ตรวจสอบว่าแท่งค้ำน้ำอยู่ในตำแหน่งที่- ถูกต้อง ถอดและใส่เข้าไปใหม่อีกครั้งโดยดันเข้า- ไปให้ลึกที่สุด

ข้อมูลทางเทคนิค

ผู้ผลิตขอสงวนสิทธิ์ในการปรับปรุงข้อมูลทางเทคนิคของผลิตภัณฑ์ ปริมาณที่กำหนดไว้ทั้งหมดเป็นค่าโดยประมาณ

ลักษณะ	ค่า
ขนาด (กว้าง x สูง x หนา)	246 x 377 x 434 มม.
น้ำหนัก	7.5 - 8 กก.
ความยาวสายไฟ	1200 มม.
แท่งค้ำน้ำ	1.8 ลิตร
ความจุของที่ใส่เมล็ดกาแฟ	275 กรัม
ความจุของที่ใส่กากกาแฟ	12 ถ้วย
ความจุของ LatteGo (ภาชนะเก็บน้ำนม)	250 มล.
ความสูงของปากพวยแบบปรับได้	88-145 มม.
แรงดันไฟฟ้าที่ระบุ - ระดับกำลังไฟ - แหล่งจ่ายไฟ	ดูข้อมูลที่อยู่ด้านในฝาเครื่อง (รูป A11)

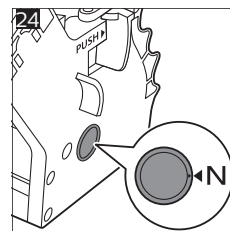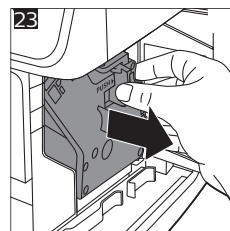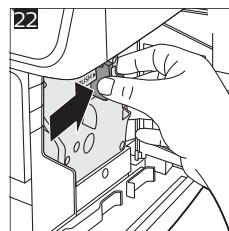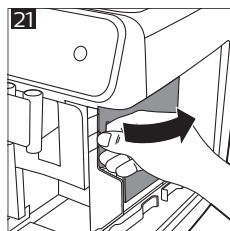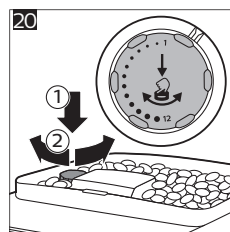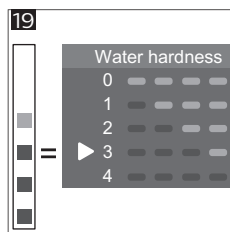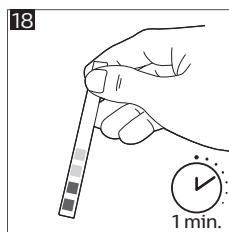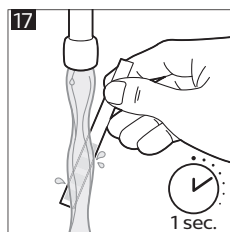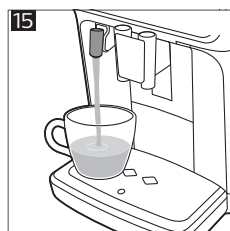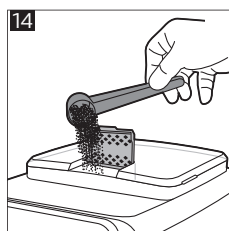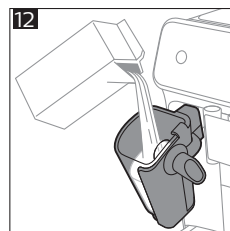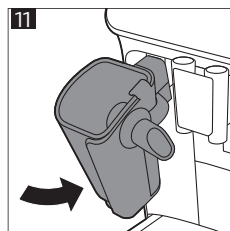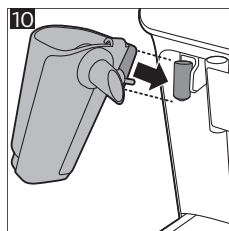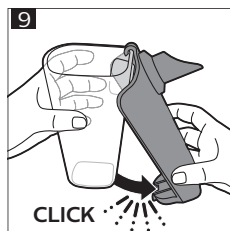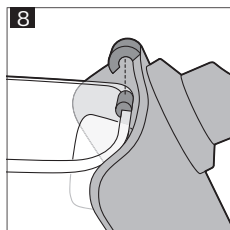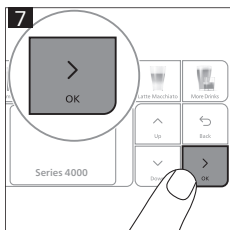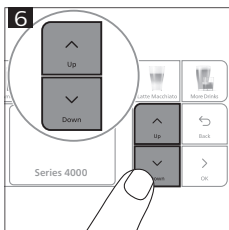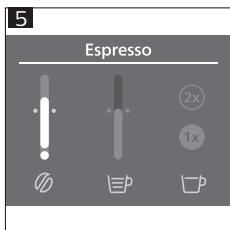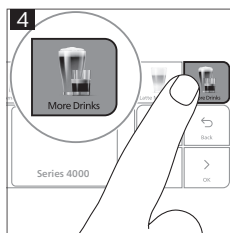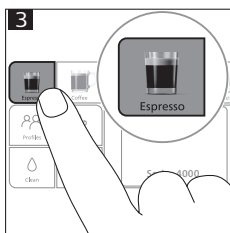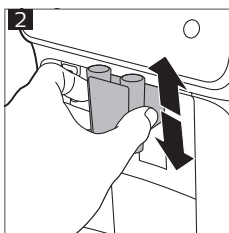

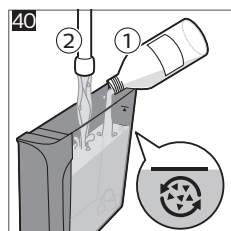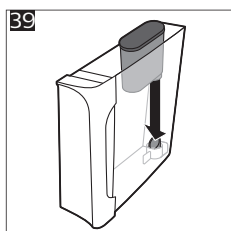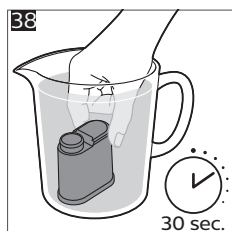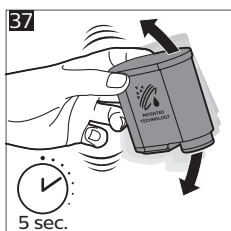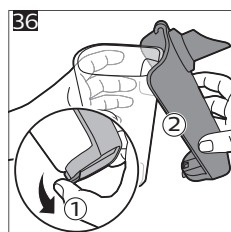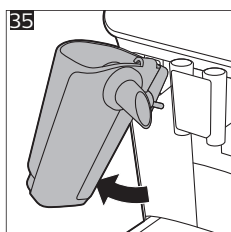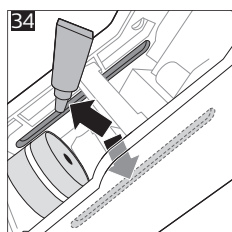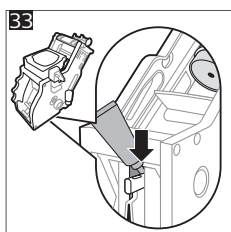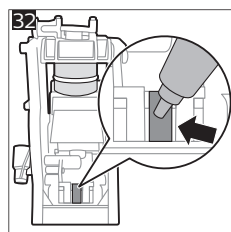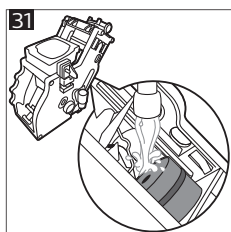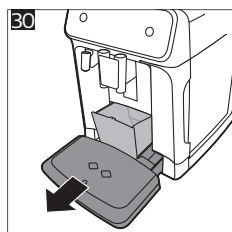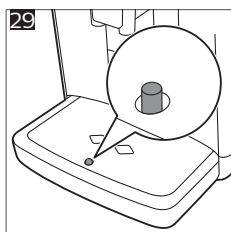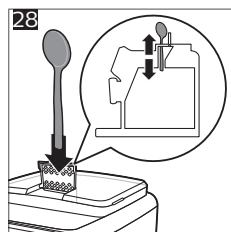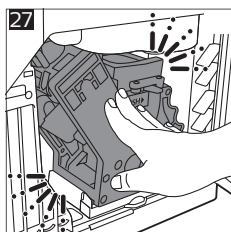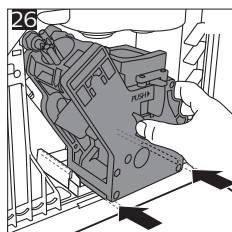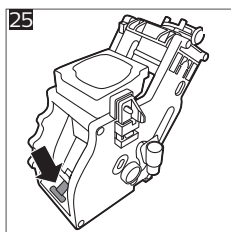



2024 © Versuni Holding B.V.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.



642001021255

www.philips.com/coffee-care



100% recycled paper