



Register your product and get support at www.philips.com/welcome

HD2136
HD2139



EN	User manual	VI	Hướng dẫn sử dụng
IN	Buku Petunjuk Pengguna	ZH-CN	用户手册
MS-MY	Manual pengguna		

PHILIPS

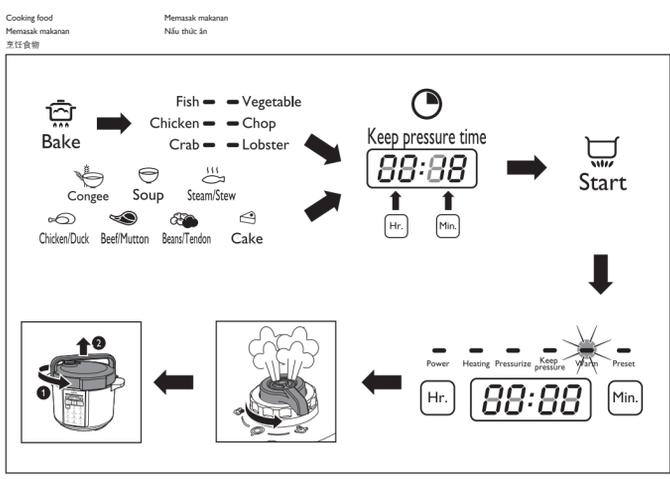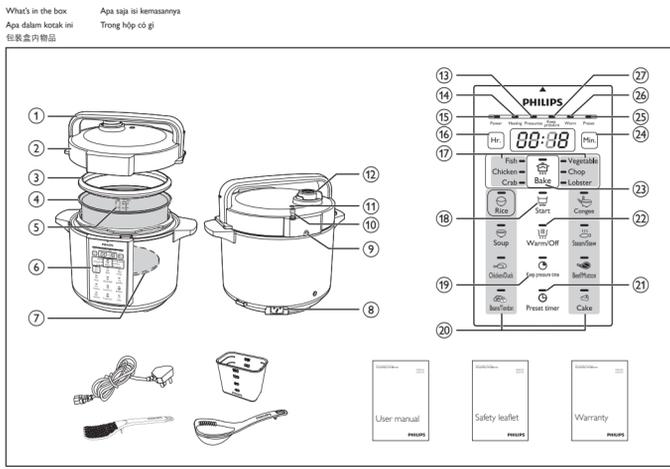

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

HD2136_2139_UM_AS_v3.0_141022

English

1 Your electric pressure cooker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 What's in the box

Electric pressure cooker main unit	Rice spoon
Soup ladle	Measuring cup
User manual	Safety leaflet
Warranty card	Power cord

Overview

① Lid handle	⑦ Heating element
② Top lid	⑧ Power socket
③ Sealing ring	⑨ Locking pin
④ Inner pot	⑩ Floater
⑤ Water level indication	⑪ Floating valve
⑥ Control Panel	⑫ Pressure regulator valve

Controls Overview

Ⓜ Pressure indicator	Ⓜ Preset timer button
Ⓜ Heating indicator	Ⓜ Warm/Off button
Ⓜ Power indicator	Ⓜ Bake button
Ⓜ Hour button	Ⓜ Minute button
Ⓜ Baking functions	Ⓜ Preset indicator
Ⓜ Start button	Ⓜ Warm indicator
Ⓜ Keep pressure time button	Ⓜ Keep pressure indicator
Ⓜ Pressure cooking functions	

Before first use



- Remove all packaging materials from the appliance.
- Take out all the accessories from the inner pot.
- Clean the parts of the electric pressure cooker thoroughly before using it for the first time (see chapter "Cleaning").

Note

- Make sure all parts are completely dry before you start using the electric pressure cooker.

3 Using the electric pressure cooker

- Before using the electric pressure cooker to cook food, you need to follow below preparations:
- Hold the lid handle and turn it anti-clockwise until the top lid cannot move any more, then lift up the top lid.
 - Take out the inner pot from the electric pressure cooker and put the pre-washed food in the inner pot.
 - Wipe the outside of the inner pot dry and put it back into the electric pressure cooker.

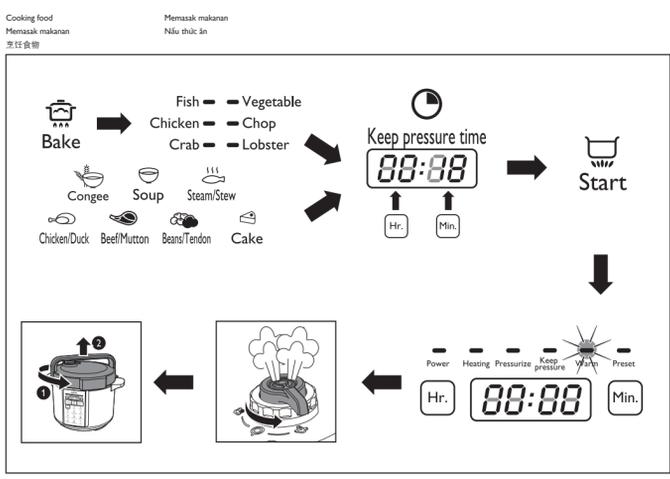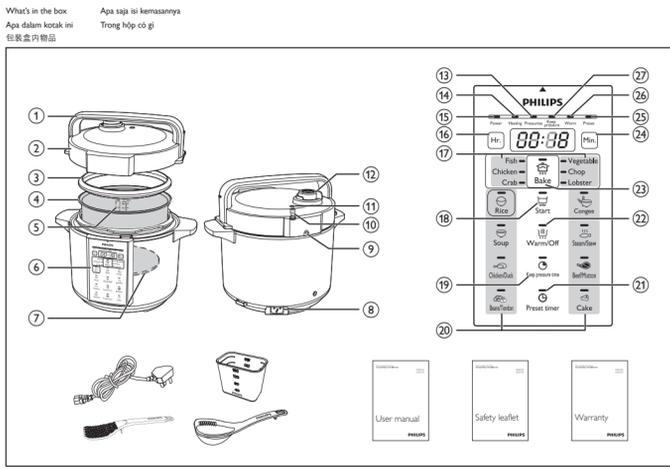

4 Place the top lid onto the electric pressure cooker and turn it clockwise. You will hear a "click" sound when the top lid is properly locked.

5 Turn the pressure control valve to the sealed position (Ⓜ).

- ### Note
- Make sure the sealing ring is properly assembled around the inside of the top lid.
 - Make sure the pressure regulator valve and floating valve are clean and not blocked.
 - Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.
 - Make sure the inner pot is in proper contact with the heating element.

Cooking food

Note

- Do not fill the inner pot with less than 1/3 or more than 2/3 full of food and liquid.
- For food that expands during cooking, do not fill the inner pot with more than 1/2 full of food and liquid.
- For rice cooking, follow the water level indications on the inside of the inner pot. You can adjust the water level for different types of rice and your own preference. Do not exceed the quantities indicated on the inside of the inner pot.
- Make sure the floater falls down before cooking.

1 Follow the preparation steps in "Using the electric pressure cooker".

- Put the plug in the power socket.
- Press the desired cooking function button or the baking button (Ⓜ) to choose a cooking mode.
- The selected cooking mode indicator flashes.
- The default pressure keeping time is displayed on the screen.

- If you want to set a different pressure keeping time, press the keep pressure time button (Ⓜ).
- The pressure keeping time flashes on the screen.



- Press the hour button (Hr.) to set the hour unit and the minute button (Min.) to set the minute unit.
- Press the start button (Start) and the electric pressure cooker starts working in the selected mode.

- When the electric pressure cooker reaches the working pressure, the keep pressure (Keep pressure) indicator lights up.
- The electric pressure cooker enters pressure keeping mode.

- When the pressure keeping time has elapsed, the electric pressure cooker automatically switches to keep warm mode.

- Turn the pressure regulator valve to the vent (Ⓜ) position.
- The electric pressure cooker starts releasing pressure.
- The floater drops when the pressure is released sufficiently.

- Hold the top lid handle and turn the lid anti-clockwise until it cannot move any more, then lift it up.

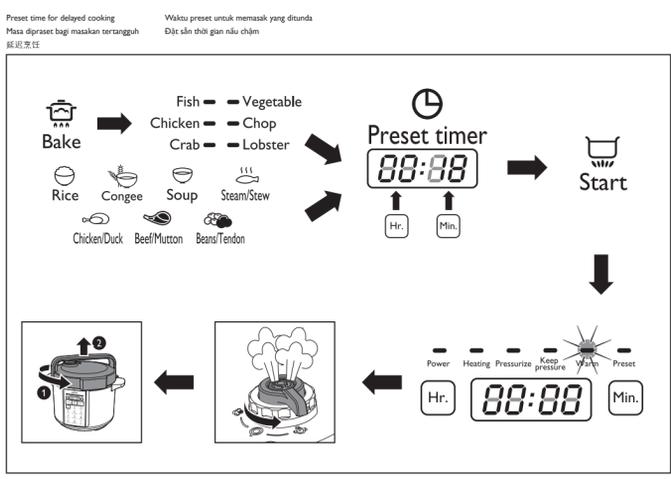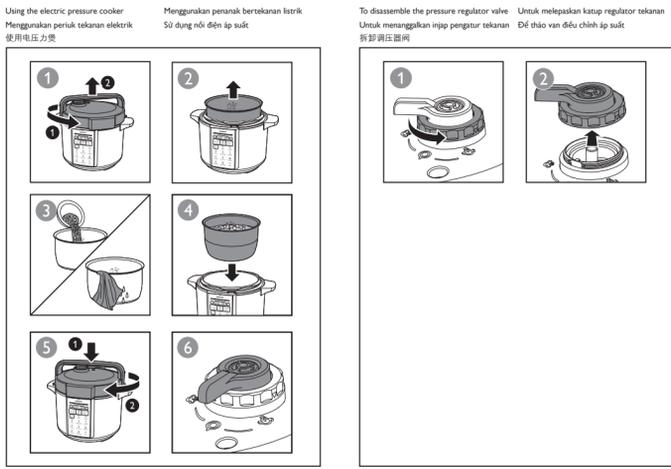

Rice (Rice)	14	N/A
Soup (Soup)	20	20-59
Chicken/Duck (Chicken/Duck)	15	12-59
Beans/Tendon (Beans/Tendon)	30	25-59
Congee (Congee)	13	1-59
Steam/Stew (Steam/Stew)	20	5-59
Beef/Mutton (Beans/Tendon)	30	30-59
Cake (Cake)	45	45-59

Assembling and disassembling the pressure regulator valve

Caution

- Do not disassemble the pressure regulator valve during cooking. Always unplug the electric pressure cooker and wait until the pressure has been released sufficiently.

To disassemble the pressure regulator:

- Turn the lower screw anticlockwise until it becomes loose.
 - Pull it up and take out the pressure regulator.
- To assemble the pressure regulator:
- Assemble the lower screw back to the regulator.
 - Make sure the regulator points at the sealed position and put it back to the steam valve.
 - Turn the screw clockwise until it is fastened.

4 Specifications

Model Number	HD2136	HD2139
Rated power output	900W	1000W
Rated capacity	5.0L	6.0L
Diameter	22cm	22cm
Warm keeping temperature	60-80°C	60-80°C

Note



- Always unplug the appliance if not used for a longer period.

Adjustable pressure keeping time range

Cooking function	Default pressure keeping time (minute)	Adjustable pressure keeping time (minute)
Fish (Fish)	15	15-59
Chicken (Chicken)	18	18-59
Crab (Crab)	20	20-59
Vegetable (Vegetable)	3	1-59
Chop (Chop)	23	20-59
Lobster (Lobster)	20	20-59

Interior

- Inside of the outer lid and the main body:
- Wipe with wrung out and damp cloth.
 - Make sure to remove all the food residues stuck to the electric pressure cooker.

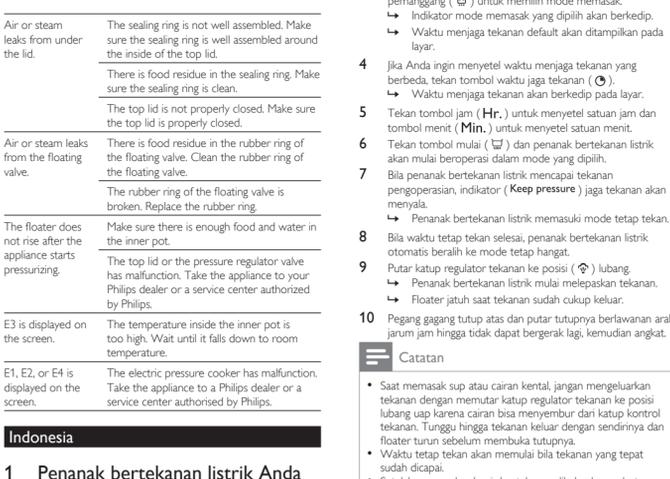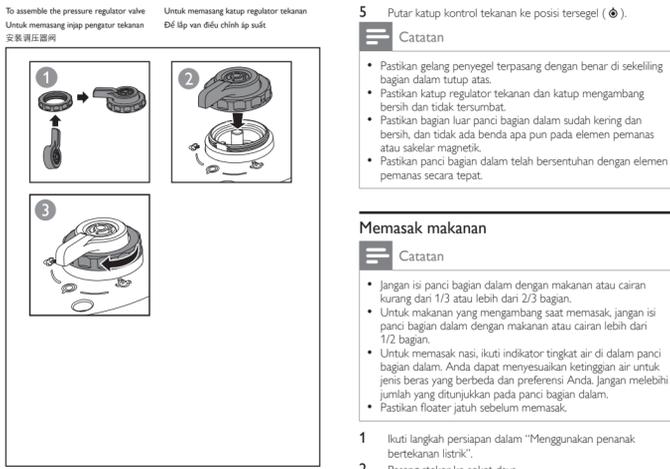

1 Penanak bertekanan listrik Anda

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, datarkan produk Anda di www.philips.com/welcome.

2 Apa saja isi kemasannya

Unit utama penanak bertekanan listrik	Sendok nasi
Sendok sup	Gelas takar
Petunjuk Pengguna	Pamflet keselamatan
Kartu garansi	Kabel listrik

Ikhtisar

① Pegangan tutup	⑦ Elemen pemanas
② Tutup atas	⑧ Soket Daya
③ Gelang penyegel	⑨ Pin pengunci
④ Panci bagian dalam	⑩ Floater
⑤ Indikator ukuran air	⑪ Katup mengembang
⑥ Panel Kontrol	⑫ Katup regulator/tekanan

Ikhtisar Kontrol

Ⓜ Indikator tekanan	Ⓜ Tombol timer preset
Ⓜ Indikator pemanas	Ⓜ Tombol Warm/Off
Ⓜ Indikator daya	Ⓜ Tombol panggang
Ⓜ Tombol jam	Ⓜ Tombol menit
Ⓜ Fungsi pemanggang	Ⓜ Indikator Preset
Ⓜ Tombol mulai	Ⓜ Indikator hangat
Ⓜ Tombol waktu jaga tekanan	Ⓜ Indikator jaga tekanan
Ⓜ Fungsi memasak dengan tekanan	

Sebelum menggunakan alat pertama kali

- Lepaskan semua kemasan dari alat.
- Lepaskan semua aksesoris dari panci bagian dalam.
- Bersihkan bagian-bagian penanak bertekanan listrik dengan saksama sebelum menggunakannya untuk pertama kali (lihat bab "Membersihkan").

Catatan

- Pastikan semua bagian benar-benar kering sebelum Anda mulai menggunakan penanak bertekanan listrik.

3 Menggunakan penanak bertekanan listrik

Sebelum menggunakan penanak bertekanan listrik untuk memasak, Anda perlu melakukan persiapan berikut:

- Pegang gagang tutup dan putar berlawanan arah jarum jam hingga tutup atas tidak dapat bergerak lagi, kemudian angkat tutup atasnya.
- Keluarkan panci bagian dalam dari penanak bertekanan listrik dan masukkan makanan yang telah dicuci ke dalam panci bagian dalam.
- Lap bagian luar panci bagian dalam, keringkan dan masukkan kembali ke dalam penanak bertekanan listrik.
- Pasang tutup atas ke penanak bertekanan listrik dan putar searah jarum jam. Anda akan mendengar suara "klik" bila tutup telah terkunci dengan benar.

Bubur (Congee)	13	1-59
Kukus/Tanak (Steam/Stew)	20	5-59
Daging Sapi/ Daging Domba (Beans/Tendon)	30	30-59
Kue (Cake)	45	45-59

Memasang dan melepaskan katup regulator tekanan

Perhatian

- Jangan melepaskan katup regulator tekanan saat memasak. Selalu cabut steker penanak bertekanan listrik dan tunggu hingga tekanan sudah cukup keluar.

Untuk membongkar regulator tekanan:

- Putar sekrup bawah berlawanan arah jarum jam hingga lepas.
 - Tarik ke atas dan lepaskan regulator tekanan.
- Untuk memasang regulator tekanan:
- Pasang sekrup bawah kembali ke regulator.
 - Pastikan titik-titik regulator di posisi yang bersebelahan dan pasang kembali ke katup uap.
 - Putar sekrup searah jarum jam hingga kencang.

4 Spesifikasi

Nomor Model	HD2136	HD2139
Keluaran daya tenukur	900 W	1.000 W
Kapasitas tenukur	5.0 L	6.0 L
Diameter	22 cm	22 cm
Suhu tetap hangat	60-80 °C	60-80 °C

Catatan

- Selalu cabut steker alat jika tidak digunakan dalam waktu lama.

5 Membersihkan dan Pemeliharaan

Catatan

- Cabut steker penanak bertekanan listrik sebelum membersihkannya.
- Tunggu sampai penanak bertekanan listrik sudah cukup dingin sebelum membersihkannya.

Bagian dalam

Bagian dalam tutup luar dan badan utama:

- Seka menggunakan kain yang sudah diperas dan lembab.
- Pastikan untuk membersihkan semua sisa makanan yang menempel pada penanak bertekanan listrik.

Elemen pemanas:

- Seka menggunakan kain yang sudah diperas dan lembab.
- Bersihkan sisa makanan dengan kain yang sudah diperas dan lembab atau tusuk gigi.

Gelang penyegel:

- Rendam di dalam air hangat dan bersihkan dengan spons.

Bagian luar

Permukaan tutup luar dan bagian luar badan utama:

- Seka dengan kain yang dibasahi air sabun.
- Gunakan hanya kain lembut dan kering untuk menyeka panel kontrol.
- Pastikan untuk membersihkan semua sisa makanan yang menempel pada katup regulator/tekanan dan katup mengembang.

Katup kontrol tekanan dan katup mengembang:

- Lepaskan katup kontrol tekanan, rendam dalam air hangat dan bersihkan dengan spons.
- Bersihkan sisa makanan yang menempel pada katup kontrol tekanan dan katup mengembang dengan tusuk gigi.

Aksesori

Sendok nasi, sendok sup dan panci bagian dalam:

- Rendam di dalam air panas dan bersihkan dengan spons.

6 Lingkungan

Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkan ke tempat pengumpulan barang bekas yang resmi untuk didaur ulang. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.

7 Garansi dan layanan

Jika Anda memerlukan layanan atau informasi, kunjungi situs web Philips di www.philips.com atau hubungi Pusat Layanan Pelanggan Philips di negara Anda. Anda bisa menemukan nomor telepon Philips di kartu garansi internasional. Jika di negara Anda tidak terdapat Pusat Layanan Pelanggan, kunjungi dealer Philips setempat.

8 Mengatasi masalah

Jika penanak bertekanan listrik Anda tidak berfungsi dengan benar atau jika kualitas memasak tidak memadai, perhatikan tabel di bawah ini. Jika Anda tidak dapat mengatasi masalah tersebut, hubungi pusat layanan Philips atau Pusat Layanan Konsumen di negara Anda.

Masalah Solusi

Saya kesulitan menutup tutup atas.

Gelang penyegel tidak terpasang dengan benar. Pastikan gelang penyegel terpasang dengan benar di sekeliling bagian dalam tutup atas.

Saya kesulitan membuka tutup atas setelah tekanan dikeluarkan.

Floater memblokir pin pengunci. Tekan floater sehingga tidak memblokir pin pengunci. Floater belum jatuh. Tekan floater ke bawah.

Makanan tidak matang.

Pastikan tidak ada endapan asing pada elemen pemanas dan di luar panci bagian dalam sebelum menghidupkan penanak bertekanan listrik.

Elemen pemanas rusak, atau panci bagian dalam sudah berubah bentuk. Bawah penanak ke dealer Philips Anda atau ke pusat layanan resmi Philips.

