


PHILIPS

2000 series

XB2023

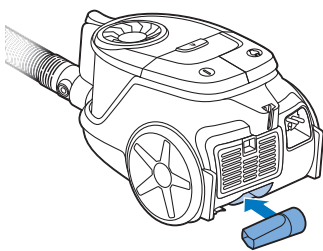





Scan me

ES

Registra tu producto para utilizarlo fácilmente y realizar un seguimiento de tu garantía de 2 años

EN

Register your product to easily use and track your 2-year warranty

www.philips.com/MyBagless2000

© Philips Domestic Appliances Holding B.V.
All rights reserved
3000.062.5513.1 (07/2021)

 >75% recycled paper
 >75% papier recyclé

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/MyVacuumCleaner.

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never vacuum up water or any other liquid, flammable substances or hot ashes.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth.
- Do not use the appliance in combination with a transformer, as this could cause hazardous situations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- This vacuum cleaner is designed for household use only. Do not use this vacuum cleaner to vacuum up building waste, cement dust, ashes, fine sand, lime and similar substances. Never use the vacuum cleaner without any of the filters. This could damage the motor and shorten the life of the vacuum cleaner. Always clean all parts of the vacuum cleaner as shown in the user manual. Do not clean any parts with water and/or cleaning agents if this is not specifically shown in the user manual.

Caution

- Never use the appliance without any of the filters. This could damage the motor and shorten the life of the appliance.
- Always clean all parts as shown in the user manual. Do not clean any parts with water and/or cleaning agents if this is not particularly shown in the user manual.
- If you clean a washable filter with water, make sure it is completely dry before you put it back into the appliance. Do not dry the filter in direct sunlight, on a radiator or in a tumble dryer. Replace a washable filter if it can no longer be cleaned properly or if it is damaged.
- To guarantee optimal dust retention and performance of the vacuum cleaner, always replace the filters with original Philips filters of the correct type (see „Ordering accessories“).
- Maximum noise level: Lc = 84 dB(A)

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 1).
- Follow your country's rules for the separate collection of electrical products.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The suction power is insufficient.	The dust container is full.	Empty the dust container.
	The filters are dirty.	Clean or replace the filters.
	The suction power is set to a low setting.	Increase the suction power with the regulator on the appliance or on the handgrip.
	The nozzle, tube or hose is blocked up.	To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way around. Switch on the vacuum cleaner to force the air through the blocked-up item in opposite direction.
When I use my vacuum cleaner I sometimes feel electric shocks.	Your vacuum cleaner builds up static electricity. The lower the air humidity, the more static electricity the appliance builds up.	Discharge the appliance by frequently holding the tube against other metal objects in the room (for example the legs of a table or chair, a radiator etc.). You can also raise the air humidity level in the room.

Español Latino

Introducción

Felicitaciones por su compra y bienvenido a Philips. Para aprovechar al máximo la asistencia que Philips ofrece, registre el producto en www.philips.com/MyBagless2000.

Información de seguridad importante

Antes de usar el aparato, lea atentamente esta información importante y consérvela por si necesita consultarla en el futuro.

Peligro

- No aspire nunca agua ni ningún otro líquido, sustancias inflamables ni cenizas calientes.

Advertencia

- Antes de enchufarlo, verifique que el voltaje indicado en el aparato coincida con el de la red eléctrica local.
- No utilice el artefacto si está dañado o si el cable de alimentación o el enchufe están deteriorados.
- Si el cable de alimentación está dañado, deberá ser sustituido por Philips, un centro de servicio autorizado por Philips o personas con una calificación similar a fin de evitar peligros.
- No apunte con la manguera, el tubo ni ningún otro accesorio a los ojos o las orejas, ni los ponga en la boca.
- No conecte el aparato a un transformador ya que pueden producirse situaciones peligrosas.
- Este aparato no debe ser usado por personas (adultos o niños) con su capacidad física, psíquica o sensorial reducida, ni por quienes no tengan los conocimientos y la experiencia necesarios, a menos que sean supervisados o instruidos acerca del uso del aparato por una persona responsable de su seguridad.
- Asegúrese de que los niños no jueguen con este aparato.
- Compruebe siempre el aparato antes de utilizarlo.
- El enchufe debe retirarse de la toma antes de la limpieza o mantenimiento del aparato.
- Esta aspiradora fue diseñada exclusivamente para uso doméstico. No utilice esta aspiradora para aspirar residuos de construcción, polvo de cemento, cenizas, arena fina, cal o sustancias similares. Nunca utilice la aspiradora sin filtros. Esto podría dañar el motor y reducir la vida útil de la aspiradora. Limpie siempre todas las piezas de la aspiradora tal como se indica en el manual del usuario. No limpie ninguna de las piezas con agua o agentes de limpieza si no se encuentra indicado de manera específica en el manual del usuario.

Precauciones

- Nunca use el aparato sin filtros. Esto podría dañar el motor y reducir la vida útil del aparato.
- Limpie siempre todas las piezas tal como se indica en el manual del usuario. No limpie ninguna de las piezas con agua o agentes de limpieza si no se encuentra indicado de manera específica en el manual del usuario.
- Si limpia un filtro lavable con agua, asegúrese de que esté bien seco antes de volver a colocarlo en el aparato. No seque el filtro bajo la luz directa del sol, sobre un radiador o en una secadora. Cambie el filtro lavable en caso de que ya no pueda limpiarse correctamente o esté dañado.
- Para garantizar la mejor retención del polvo y el rendimiento óptimo de la aspiradora, sustituya siempre los filtros por filtros Philips originales del modelo correcto (consulte „Pedido de accesorios“).
- Nivel de ruido máximo: Lc = 84 dB(A)

Campos electromagnéticos (CEM)

Este aparato de Philips cumple con los estándares y las normativas vigentes sobre exposición a campos electromagnéticos.

Pedido de accesorios

Para adquirir accesorios o piezas de repuesto, visite www.philips.com/parts-and-accessories o comuníquese con el distribuidor Philips de su zona. También puede comunicarse con el Centro de atención al cliente de Philips de su país (consulte el folleto de garantía internacional para obtener la información de contacto).

Garantía y asistencia

Si necesitás información o asistencia, visitá www.philips.com/support o leé el folleto de garantía internacional.

Reciclaje

- El símbolo significa que este producto no se debe eliminar con los residuos domésticos habituales (Fig. 1).
- Siga las normas de su país para la recolección selectiva de productos eléctricos y electrónicos.

Solución de problemas

En este capítulo, se resumen los problemas más comunes que pueden surgir al usar el aparato. Si no puede resolver el problema con la siguiente información, visite www.philips.com/support para consultar una lista de preguntas frecuentes o comuníquese con el Servicio de Atención al Cliente de su país.

Problema	Posible causa	Solución
La potencia de succión es insuficiente.	La cubeta está llena.	Vacíe la cubeta.
	Los filtros están sucios.	Limpie o cambie los filtros.
	Puede que la potencia de succión esté en un ajuste bajo.	Aumente la potencia de succión con el regulador del aparato o el mango.
	La boquilla, el tubo o la manguera están obstruidos.	Para eliminar la obstrucción, desconecte la pieza obstruida y conéctela al revés (en la medida que sea posible). Encienda la aspiradora para que el aire empuje la pieza obstruida en el otro sentido.
Cuando utilizo la aspiradora a veces siento descargas eléctricas.	La aspiradora acumula electricidad estática. Cuanto más bajo es el nivel de humedad, más electricidad estática acumula el aparato.	Descargue el aparato apoyando frecuentemente el tubo sobre otros objetos de metal de la habitación (como por ejemplo, las patas de una mesa o silla, un radiador, etc.). También puede aumentar el nivel de humedad del aire de la habitación.

XB2023/51
220V -50-60Hz
1600W IEC
1800W MAX

1

XB2023_3000.062.5513.1_LEAFLET_foldedA6_SC.indd 1

11-03-21 09:03

