

PHILIPS

Humidifier

HU1509, HU1510



English 4
العربية 26

Important

Read this important information booklet carefully before you use the appliance, and save it for future reference.

To ensure the best performance, kindly suggest the firmware of your appliance is upgraded to the latest version. You can do this upgrade via the Air+ app.

Danger

- Do not spray any flammable materials such as insecticides or fragrance around the appliance.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.
- The water in the water tank is not suitable for drinking. Do not drink this water and do not use it to feed animals or to water plants. When you empty the water tank, pour the water down the drain.

Warning

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the supply cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.
- Standard WiFi interface based on 802.11b/g/n/ax at 2.4GHz with a maximum output power of 64mW EIRP.
- Bluetooth version 5.2 (LE) at frequency 2.4GHz with RF output less than 10mW EIRP.

Caution



- The appliance is only intended for household use under normal operating conditions.
- Always place and use the appliance on a dry, stable, flat and horizontal surface.
- Do not place anything on top of the appliance and do not sit or stand on the appliance.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen, or in a room with major temperature changes.
- Do not immerse the humidifier base, power cord, or plug in water.
- Empty the water tank and refill every third day. Before refilling, clean it with fresh tap water. Remove any scale, deposits, or film that has formed on the sides of the water tank or on interior surfaces and wipe all surfaces dry.
- Always unplug the appliance when you want to move, clean appliance, fill the water, or carry out maintenance.
- Do not put any substance other than water in the water tank. Do not add essential oils or chemical substances into the water.
- Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air. Do not use hot water.
- Do not pour water into any openings except for the water tank.
- Do not cover the nozzles while the humidifier is on. Mist should be directed away from walls, furniture, bedding, and appliances.
- Remove the water tank from the base before moving the humidifier.
- Never place the product in a washing machine or dishwasher. It would be destroyed as a result.
- During the working of the humidifier, do not remove the water tank from the base, and never touch the water conduits or any components inside the reservoir.
- The essential oils are not included with the product. Please purchase and use the essential oils if needed.
- Make sure the product is disconnected with power before dropping essential oils into the aroma box.
- Do not use substances other than essential oils to the aroma box.
- Read and follow the safety and use instruction of the essential oil carefully before using it.
- Check the ingredients information of the essential oil versus your known allergies and exclude it from use when necessary.
- Consult and follow doctor recommendation before using the essential oil for infants, pregnant women or women in the lactation period or if you have respiratory issues
- If you feel unwell, irritation or discomfort during the use of the essential oil, please stop using it.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.


Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Your humidifier


Product overview

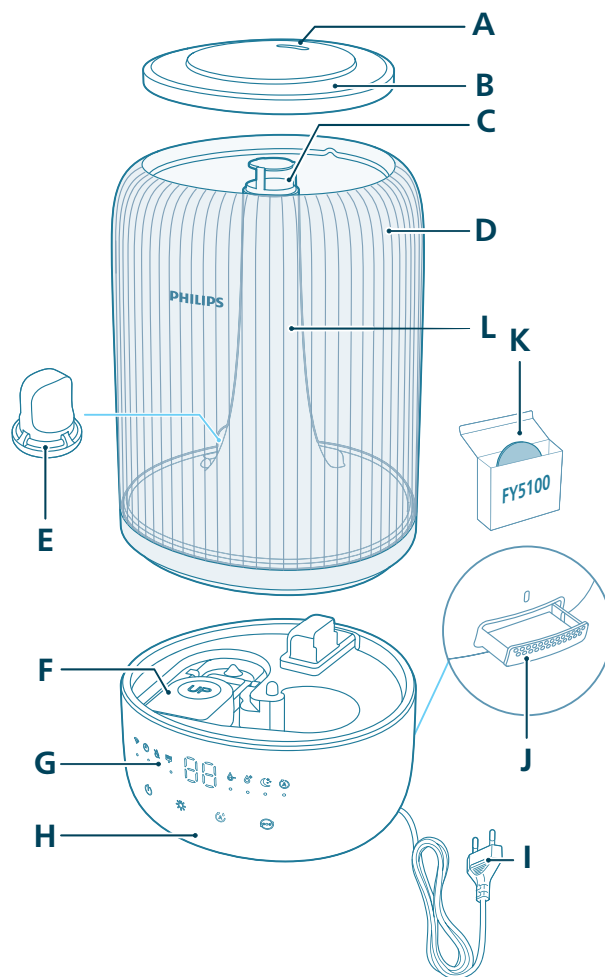

A	Nozzle	G	Control panel
B	Water tank cover	H	Base
C	Mist outlet	I	Power plug
D	Water tank	J	Aroma box

E	Water filter	K	Aroma pads (FY5100)
F	Float	L	Mist tube

Controls overview

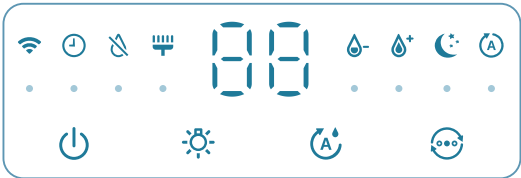

Control buttons:

	Power on/off button		Light function button
	Humidity setting button		Mode switch

Long press the button(s) for 3 seconds:

	Cleaning reset		Wi-Fi reset
--	----------------	--	-------------

Display panel:


	Auto mode		Sleep mode
	WiFi indicator		Medium mode
	High mode		Humidifier cleaning alert
	Water refill indicator		Timer indicator (available in the app)

Getting started


First time use

- Note:
- Remove all packing materials before first time use.
- Take the water tank off of the base and remove all tapes.
- Rinse all parts before first use.
- Select a firm, flat, water-resistant surface for the humidifier, ensuring it is positioned at least 30cm away from walls.
- Ensure that the mist is directed away from walls, furniture, and other appliance.


- 1 Make sure that the float is well in place.

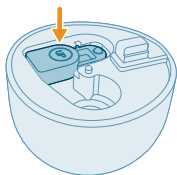

- 2 Remove the top cover from the water tank.

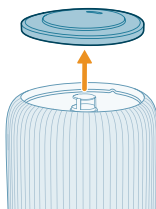


- 3 Make sure the water filter is attached properly.

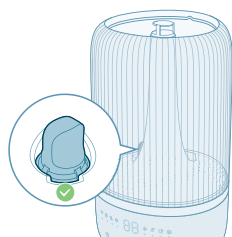

- 4 Fill the water tank with water. Do not fill with hot water.

Note:

Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air.

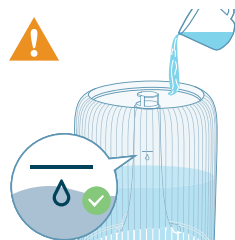

- Do not exceed the water level indication when filling water.


10 English



- Do not pour water through the ultrasonic mist outlet.



- Do not pour water directly into the base.

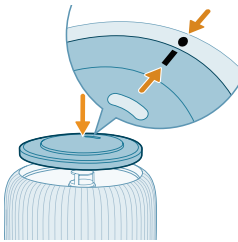

- 5 Reattach the top cover to the water tank.

Using the aroma function

Notes:

The essential oils are not included with the product. Please purchase and use the prescribed essential oils if needed.

Read the user manual of essential oils carefully before using the aroma function.

Make sure the product is disconnected with power before dropping essential oils into the aroma box.

Do not use substances other than essential oils.

Read and follow the safety and use instruction of the essential oil carefully before using it.


Check the ingredient information of the essential oil against your known allergies and exclude it from use when necessary.

Consult and follow your doctor's recommendation before using essential oils for infants, pregnant women, women in the lactation period, or if you have respiratory issues.


If you feel unwell, experience irritation or discomfort during the use of essential oils, please discontinue use.

Do not use the aroma function of essential oils for infants, pregnant women, or women in the lactation period.


Only add essential oils directly to the aroma pad. Don't add essential oils to other parts, otherwise the parts will be damaged by the oil.

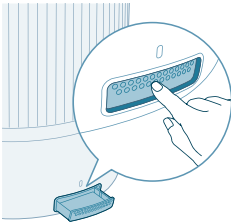

1 Push the aroma box to automatically eject it.

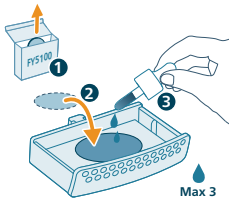

2 Drop in 2-3 drops of essential oils to the supplied aroma pad.

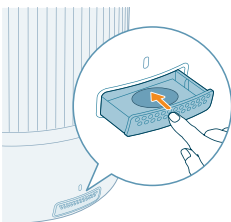

3 Push the aroma box to back into the appliance.

Understanding Wi-Fi indicator

Wi-Fi icon status

Blink in orange

Stable in orange

Blink in white

Wi-Fi connection status

Connecting to the smart phone

Connected to the smart phone

Connecting to the server

Stable in white

Connected to the server

Off

Wi-Fi function disabled or device lights are off

Wi-Fi connection




Setting up the Wi-Fi connection for the first time

- 1 Download and install the Philips "Air+" app from the App Store or Google Play.



- 2 Put the plug of the humidifier in the power socket and press the power button to turn on the humidifier.
 - The Wi-Fi indicator  blinks orange for the first time.

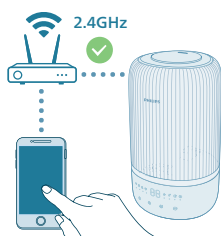

- 3 Make sure that your smart phone or tablet is successfully connected to your Wi-Fi network.

Note:

Enable Bluetooth feature on your smart phone to ensure the smooth pairing.

Please ensure your smartphone is connected to a 2.4GHz (home) Wi-Fi network instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.



- 4 Launch the Philips "Air+" app and click on "Add a device" or press the "+" button on the screen. Follow the on-screen instructions to connect the air purifier to your network.
 - After a successful connection, the Wi-Fi indicator remains steady in white.


Note:

This instruction is only valid when the humidifier is being set up for the first time. If the network has changed or the setup needs to be performed again.


If you want to connect more than one humidifier to your smart phone or tablet, you can add the humidifier in the app on additional smart phones without doing the Wi-Fi connection reset on the device.

Make sure that the distance between your smart phone or tablet and the humidifier is less than 10 m without any obstructions.

Reset the Wi-Fi connection

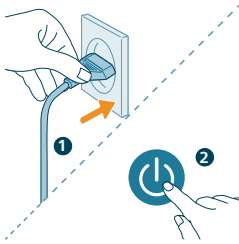

- 1 Put the plug of the humidifier in the power socket and press  to turn on the air humidifier.

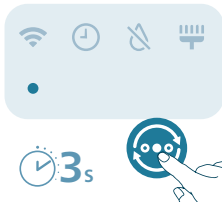


- 2 Long press  button at the same time for 3 seconds until you hear a beep.
 - The humidifier goes to pairing mode.
 - The Wi-Fi indicator  blinks orange.
- 3 Follow the steps 3-4 in "Setting up the Wi-Fi connection for the first time" section.

Using the humidifier

Understanding the humidity light

Relative humidity represents the amount of water vapor in the atmosphere. The humidification indicator has four status levels:

The humidification light has three colors:

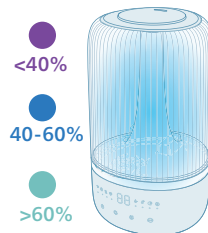

Humidification light color	Current humidity	What does it mean?
Purple	<40%	Dry
Blue	40-60%	Comfortable humidity
Green	>60%	Too humidity

Note: The default target humidity is 50%RH, you can set the desired target humidity by pressing the humidity setting button.

Water level

When there is not enough water in the water tank, the water refill indicator is on, the humidifier stops working, The humidifier will resume work when you refill water into the water tank.

Refilling water

Note:

Empty the water tank and refill every third day.

When filling water, do not exceed the maximum water level.

Do not shake the water tank when moving it, or water might leak.

Follow the steps in "First time use" for refilling water.

Turning on and off


Note:

For optimum humidification performance, close doors and windows.

Keep curtains away from the air inlet or air outlet.

The humidifier is applicable for ambient temperature range : 5-40 °C.


- 1 Put the plug of the humidifier into the power socket.

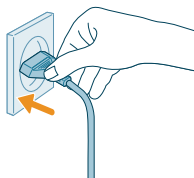

- 2 Press the power button to switch on the humidifier.
 - The humidifier beeps.
 - The humidity light chooses the appropriate color to match the surrounding humidity level.
 - The humidifier operates in the Medium mode with current humidity level displayed on the screen.


- 3 Press the power button again to switch off the humidifier.

Note: If the humidifier stays connected to the electrical outlet after turning OFF, it will operate under the previous settings when turned ON again.

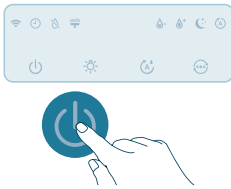

Adjusting mist direction


Rotate the nozzle to preferred mist direction.

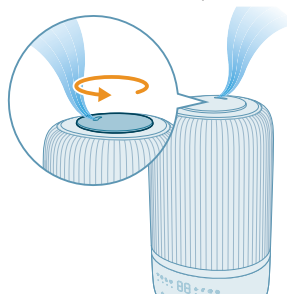


Changing the mode setting


You can choose the **Auto mode**, the **Sleep mode**, the **Medium mode**, or the **High mode** by pressing the mode switch button.

Auto mode (A): The humidifier automatically adjusts the mist level in accordance with the ambient air humidity.

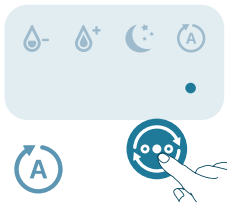


Sleep mode (C): The humidifier operates quietly at a low mist level. After 3 seconds, the screen lights turn off.

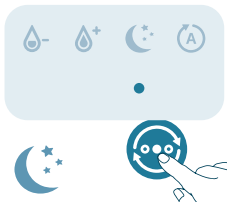

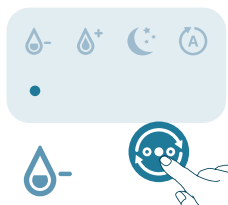

Medium mode (Mist level icon): The humidifier operates on the medium mist level.

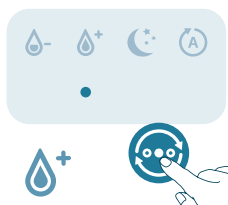

High mode (Mist level icon): The humidifier operates on the highest mist level.

Setting humidity level


Note:

The default humidity level is 50%RH.


The humidity level can only be adjusted in the Auto mode.

The humidifier will change to Auto mode automatically when you set target humidity level in other modes.

You can adjust the humidity level by pressing the humidity setting button to choose from 40%, 50%, 60%, or 70%.

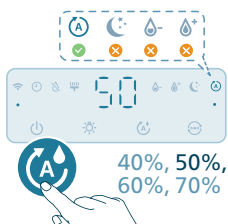


Using the light function

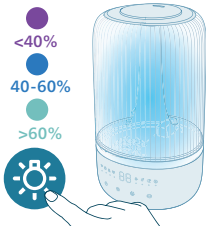


You can press the button to turn on humidity light , ambient light or turn off all lights and the control panel.

- The humidifier will turn on the humidity light by default.

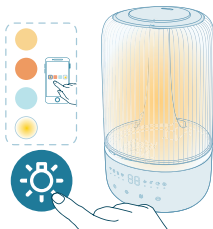

- You can press the light function button to switch to ambient light mode. Tailor the brightness and the color in the Air+ app.

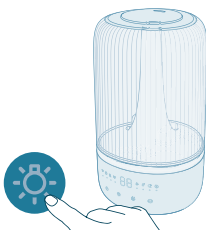

You can press the light function button to turn off all lights and the control panel. Press any button to wake up the panel first, and press the light button again to set the light mode you want in 3 seconds.

Cleaning and maintenance

Note:

Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.


Avoid pouring water through the air inlets and outlets.

Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.


Cleaning the humidifier

Clean the humidifier when the cleaning alert is on or every three days.


Regularly clean the inside and outside of the humidifier to prevent dust from collecting.

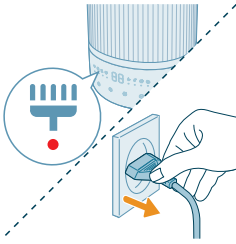


- 1 Wipe away dust with a soft dry cloth from the body of the humidifier.
- 2 Switch off the appliance and unplug from the power socket.

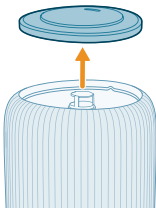


- 3 Remove the top cover from the water tank.

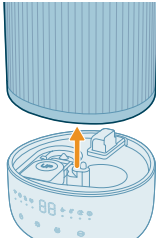


- 4 Remove the water tank from the base.

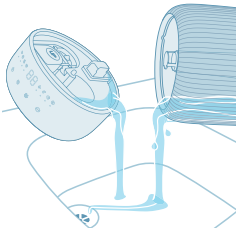


- 5 Pour water out from the tank and the base.

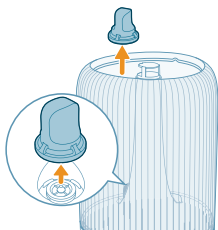


- 6 Remove the water filter from the water tank.

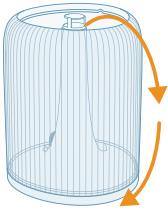


7 Turn the water tank upside down.

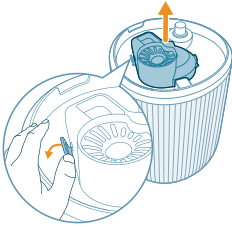


8 Remove the deafener from the bottom of the water tank.

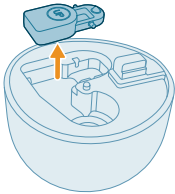

9 Remove the float from the base chamber.

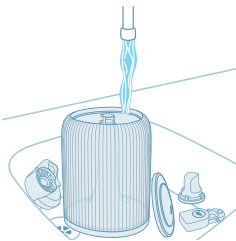


10 Rinse the water tank, top cover, float, deafener and water filter with water.

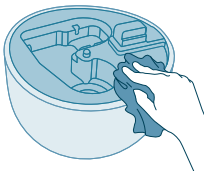


11 Wipe the base clean and dry.


12 Put the float back to the base chamber.

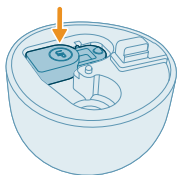


13 Put the water filter back to the water tank.

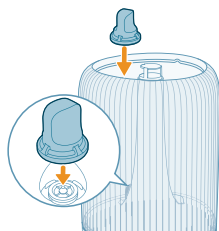


14 Put the deafener back to the bottom of the base.

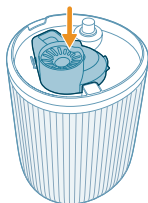


15 Reattach the top cover.

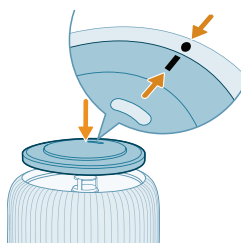


16 Re-install the water tank onto the base.

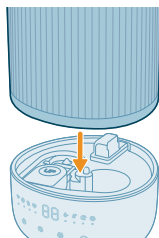

17 Put the power plug into the power socket.

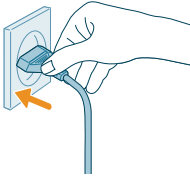


18 Press and hold light button for 3 seconds to reset the cleaning time.

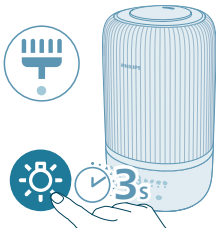


Cleaning the aroma pad and box


For effective aromatherapy, the aroma pad should always be cleaned before using a new essential oil blend. Do not mix essential oil blends.

1 Remove the aroma box by pressing it in, then pulling it out.

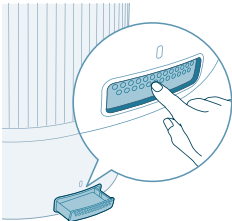


2 Remove the aroma pad and rinse the pad and the box under warm, running water.

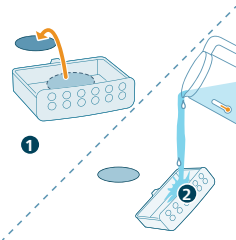

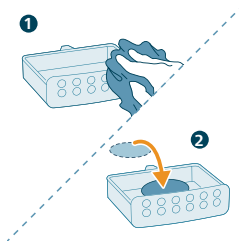

3 Dry with a clean cloth and place the pad back into the aroma box.

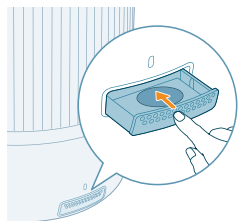

4 Place the aroma box back inside the air humidifier

Note: Do not pour liquid cleaners or detergents into the aroma pad or box.

Replacing the Aroma Pad

If the aroma pad becomes deformed or damaged after repeated washing, it may need to be replaced. To maintain the performance of your air humidifier, only use official Philips aroma pads.

Storage

- 1 Turn off the humidifier and unplug from the power socket.
- 2 Clean the humidifier (see Chapter "**Cleaning and Maintenance**").
- 3 Let all parts air dry thoroughly before storing.
- 4 Store the humidifier in a cool, dry location.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The humidifier does not work.	Make sure that there is power supply to the humidifier. Make sure that the water tank is filled with water and the water tank is placed properly on the base.
Little or no mist comes out of the mist outlet.	Put the plug of the humidifier into the power socket and switch on the humidifier. It may have achieved your target humidity rate.

	Make sure that the water tank is filled with water and placed properly.
	There may be too much water in the base (above the MAX reminder on the base). Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base.
	Make sure the bottom of the base is not blocked. The humidifier should not be set on carpet or other surfaces that may block the base.
	Make sure the nozzle is not blocked.
	Make sure the mist tube is not blocked or clogged.
	Make sure the humidifier is on a level surface.
	The water temperature may be too low. Turn the mist level to the highest setting and let the humidifier run for a while, then adjust to the desired setting.
I do not see the humidity level change.	Your room might have too much ventilation. Please close doors and windows.
	Your room size is too big. This humidifier is suitable for room size $\leq 34\text{m}^2$.
	Turn the mist level to a higher setting.
	When used in a dry environment, the moisture will be absorbed surrounding objects such as walls and furniture, which can prolong the humidification time.
	Cleaning the humidifier (see the chapter 'Cleaning and maintenance').
The humidifier stops even when i feel quite dry.	The water tank is empty, please refill with water.
	The humidity level around product has been achieved to target setting in auto mode, it will restart automatically once the humidity level lower than target setting.
	Our device will stop working when the humidity level around product is higher than 70% because it may lead to diversity fungi mold growth.
There are some white dust around humidifier.	The white deposits are called scale and they consist of minerals from the water.
	Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air.
	We recommend using the Anti-calc cartridge to protect your humidifier from calc and prevent white residue on nearby surfaces. You need to replace it when necessary.

24 English

It is too wet around humidifier.	Humidity may be too high. Turn the mist level to a lower setting.
There is unpleasant smell coming out from the humidifier.	The first few times you use your air humidifier, it may produce a plastic smell. This is normal and will fully disappear within a few days.
	Clean the humidifier (see the chapter 'Cleaning and maintenance').
My aroma function doesn't work well(too weak or strong).	Use proper 2-3 drops essential oil.
	Different essential oil may has different perceived intensity.
	It need take sometime to evaporate the smell to whole room.
The water tank leaks.	Make sure that the humidifier is not overfilled with water.
	Make sure that the humidifier is well assembled/connected every time after you clean it or after you remove the water tank for refilling.
	Make sure that the water tank is properly placed. If the problem persists, contact the Consumer Care Center in your country.
If the humidifier is not used for a long time, How to store and reuse it?	When the humidifier is not used for a long time, bacteria and mold may grow. Please follow below steps for storage and reuse.
	Clean the water tank and base thoroughly before storage.
Mould grows inside the humidifier.	Clean the water tank and base regularly.
The Wi-Fi setup is not successful.	Please ensure your smart phone is connected to a 2.4GHz (home) Wi-Fi network instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.
	Ensure to enable the following permissions: "Location", "Storage", "Bluetooth", and "Local Network" on your smart phone. After a successful Wi-Fi setup, you can change permission settings as desired.
	Please verify that you have entered the correct Wi-Fi password. The password is case-sensitive, has a limit of 63 characters. Special symbols are not accepted.
	Ensure the network name of your home Wi-Fi is correct. The network name is case-sensitive.
	If you are using a VPN on your smart phone, please turn it off before starting the pairing process.
	If your router has a whitelist set up to block pairing, please disable the whitelist to ensure successful connection.

Please ensure that both your device and smart phone are within 10 meters of the router.

Ensure the app has been updated to the latest version.

To ensure a strong Wi-Fi connection, avoid placing your device near other electronic devices, bright light sources, or signal stations that may cause interference. If you experience connectivity issues, move the device away from these sources and attempt to reconnect it to the Wi-Fi network.

Consult the help section in the app for extensive and up-to-date troubleshooting tips.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website **www.philips.com/support**.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit **www.philips.com/support**.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country.

For Australia and New Zealand

Our goods and services come with guarantees that cannot be excluded under the Australian Consumer Law, or under the Consumer Guarantees Act (NZ). For major failures with the service, you are entitled: to cancel your service contract with us; and to a refund for the unused portion, or to compensation for its reduced value. You are also entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service. To make a claim under this warranty, contact: Versuni Australia on 1300 805 865 (AU) or 0800 854885 (NZ). Expenses of claiming the warranty will be borne by the person making the claim. This warranty is provided by Versuni Australia, 65 Epping Road North Ryde, Sydney NSW.

هام

اقرأ كتيب المعلومات المهمة هذا بدقة قبل استخدام الجهاز واحتفظ به للرجوع إليه في المستقبل.
لضمان أفضل أداء، يُرجى الحرص على ترقية البرنامج الثابت للجهاز إلى أحدث إصدار. يمكنك إجراء الترقية عبر تطبيق Air+.

خطر

- لا تترش أي مواد قابلة للاشتعال، مثل مبيدات الحشرات أو العطور بالقرب من الجهاز.
- لا تستخدم المياه أو أي سائل آخر أو مواد تنظيف (قابلة للاشتعال) لتنظيف الجهاز، وذلك لتفادي حدوث صدمة كهربائية و/أو نشوب حريق.
- إن المياه داخل خزان المياه غير صالحة للشرب. لا تشرب من هذه المياه ولا تستخدمها لإطعام الحيوانات أو لري النباتات. عند إفراغ خزان المياه، اسكب المياه في المغسلة.

تحذير

- يرجى الانتباه إلى أن مستويات الرطوبة العالية قد تعزز نمو الكائنات الحية في البيئة.
- لا تدع المنطقة حول جهاز ترطيب الهواء تصبح رطبة أو مبللة. في حال ظهور رطوبة، قم بتخفيف إخراج جهاز ترطيب الهواء. في حال تعذر تخفيف كمية إخراج جهاز ترطيب الهواء، فاستخدم هذا الأخير بشكل متقطع. لا تدع المواد العالية الامتصاص مثل السجاد أو الستائر أو أغذية الطاولات تصبح رطبة.
- لا تترك أبداً الماء في الخزان عند عدم استخدام الجهاز.
- قم بإفراغ جهاز ترطيب الهواء وتنظيفه قبل تخزينه. قم بتنظيف جهاز ترطيب الهواء قبل الاستخدام التالي.
- تحقق من أن الفولتية المُشار إليها على الجهاز تتوافق مع فولتية سلك الطاقة الرئيسية المحلية قبل توصيل الجهاز.
- إذا كان سلك التزويد بالطاقة تالفاً، فيجب استبداله من قبل Philips أو مركز خدمة معتمد من Philips أو أشخاص مؤهلين لتجنب أي خطر.
- لا تستخدم الجهاز إذا كان القابس أو سلك الطاقة أو الجهاز نفسه تالفاً.
- يمكن استخدام هذا الجهاز من قبل الأطفال الذين يبلغون 8 سنوات من العمر وما فوق والأشخاص الذين يعانون نقصاً في القدرات الجسدية أو الحسية أو العقلية أو أولئك الذين تنقصهم الخبرة أو المعرفة، في حال تم الإشراف عليهم أو إعطاؤهم إرشادات تتعلق باستخدام الجهاز بطريقة آمنة وإذا كانوا يفهمون المخاطر المرتبطة به. يمنع على الأطفال اللعب بالجهاز. يجب ألا يقوم الأطفال بالتنظيف أو أعمال الصيانة من دون مراقبة.
- إن الكائنات الدقيقة التي قد تكون موجودة في المياه أو في البيئة التي يتم فيها استخدام الجهاز أو تخزينه، يمكن أن تنمو في خزان المياه وتتصاعد في الهواء ما يسبب مخاطر صحية خطيرة جداً عندما لا يتم تجديد المياه ولا يتم تنظيف الخزان بشكل صحيح كل 3 أيام.
- تستند واجهة WiFi القياسية إلى 802.11b/g/n على تردد 2,4 جيجاهرتز مع قدرة إخراج تبلغ 64 ميلي واط من القيمة المكافئة لطاقة الإشعاع المتجانس اتجاهياً (EIRP) كحد أقصى.
- إصدار (LE) 5.2 Bluetooth على تردد يبلغ 2,4 جيجاهرتز مع إخراج تردد لاسلكي يقل عن 10 ميلي واط من القيمة المكافئة لطاقة الإشعاع المتجانس اتجاهياً (EIRP).

تنبيه

- هذا الجهاز معد للاستخدام المنزلي فقط ضمن حالات التشغيل العادية.
- ضع الجهاز واستخدمه دائماً على سطح جاف ومستقر ومسطح وأفقي.
- لا تضع أي غرض على سطح الجهاز ولا تجلس أو تقف على الجهاز.
- لا تستخدم الجهاز بالقرب من الأجهزة التي تعمل على الغاز أو أجهزة التدفئة أو المواقد.

- لا تضع الجهاز مباشرة تحت مكيف هواء، وذلك لتفادي تساقط المياه المكثفة عليه.
- لا تستخدم هذا الجهاز إذا سبق أن استخدمت مواد طاردة للحشرات تصدر دخاناً في الداخل، أو في الأماكن التي تحتوي على بقايا من الزيت أو بخور مشتعل أو أدخنة كيميائية.
- لا تستخدم الجهاز في أماكن رطبة أو في أماكن تكون درجات الحرارة المحيطة مرتفعة، مثل الحمام أو المراحيض أو المطبخ أو في غرفة تشهد تقلبات كبيرة في درجة الحرارة.
- لا تغمر قاعدة جهاز ترطيب الهواء أو سلك الطاقة أو القابض بالمياه.
- قم بإفراغ خزان المياه وإعادة ملئه مرة كل ثلاثة أيام. قبل إعادة ملء الخزان، قم بتنظيفه بمياه الصنبور.
- قم بإزالة أي ترسبات كلسية أو رواسب أو أشربة قد تكون تشكلت على جانبي خزان المياه أو على الأسطح الداخلية وامسح كل الأسطح الجافة.
- افصل الجهاز دائماً عن مصدر الطاقة عندما تريد نقله أو تنظيفه أو تعبئة المياه أو إجراء عمليات صيانة.
- لا تضع أي مادة أخرى غير المياه في خزان المياه. لا تضع أي زيوت أساسية أو مواد كيميائية في المياه.
- استخدم المياه النقية أو المقطرة أو المياه التي تكون نسبة المعادن فيها منخفضة لمنع تراكم الترسبات الكلسية وانتشار المعادن في الهواء. لا تستخدم المياه الساخنة.
- لا تصب الماء في أي فتحات إلا في خزان المياه.
- لا تقم بتغطية الفوهات في أثناء تشغيل جهاز ترطيب الهواء. يجب توجيه الرذاذ بعيداً عن الجدران والأثاث والفرش والأجهزة المنزلية.
- قم بإزالة خزان المياه من القاعدة قبل تحريك جهاز ترطيب الهواء.
- لا تضع المنتج أبداً في الغسالة أو الجلاية. سيؤدي ذلك إلى تدميره.
- في أثناء تشغيل جهاز ترطيب الهواء، لا تقم بإزالة خزان المياه من القاعدة، ولا تلمس أبداً قنوات المياه أو أي مكونات داخل الخزان.
- لا يتضمن المنتج الزيوت الأساسية. لذا عند الحاجة، يرجى شراء الزيوت الأساسية واستخدامها.
- وقبل إضافة الزيوت الأساسية في علبة العطور، يرجى التأكد من فصل المنتج عن التيار.
- لا تقم باستخدام أي مواد أخرى غير الزيوت الأساسية في علبة العطور.
- اقرأ تعليمات السلامة والاستخدام الخاصة بالزيوت الأساسية بعناية واحرص على اتباعها قبل استخدامها.
- تحقق من معلومات مكونات الزيوت الأساسية للتأكد من أنها غير مسببة لأي من أنواع الحساسية التي تعاني منها وتجنب استخدامها إذا لزم الأمر.
- استشر طبيباً واتباع توصياته قبل استخدام الزيت الأساسي في وجود الرضع أو الحوامل أو المرضعات أو إذا كنت تعاني من مشاكل تنفسية.
- إذا شعرت بوعكة أو تهيج أو ألم مزعج في أثناء استخدام الزيت الأساسي، فيرجى التوقف عن استخدامه.



المجالات الكهرومغناطيسية (EMF)

يتوافق هذا الجهاز مع المعايير والأنظمة المطبقة المتعلقة بالتعرض للحقول الكهرومغناطيسية.


إعادة التدوير

لا تتخلص من المنتج مع النفايات المنزلية العادية عند انتهاء فترة عمله، بل سلّمه إلى مركز تجميع رسمي لإعادة تدويره. عند قيامك بذلك، تساهم في المحافظة على البيئة.

اتباع القوانين المعتمدة في بلدك لجمع المنتجات الإلكترونية والكهربائية بطريقة منفصلة. يساعد التخلص من النفايات بطريقة صحيحة في منع العواقب السلبية على البيئة وصحة الأشخاص.

جهاز ترطيب الهواء

نظرة عامة حول المنتج

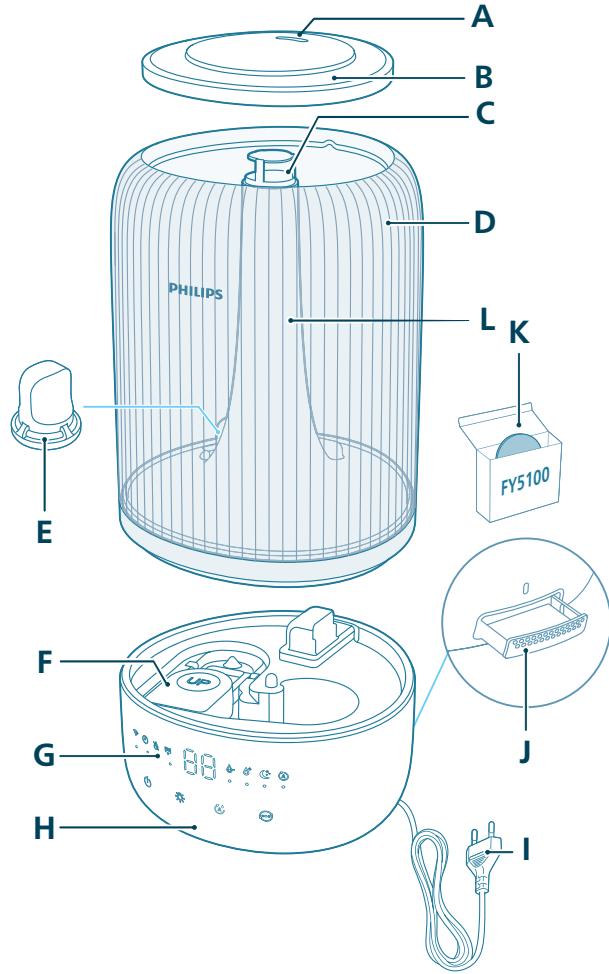

الفوهة	A	لوحة التحكم	G
غطاء خزان المياه	B	القاعدة	H
مخرج الرذاذ	C	قابس الطاقة	I
خزان المياه	D	علبة العطور	J

E	فلتر المياه	K	الوسائد العطرية (FY5100)
F	العوامة	L	خرطوم الرذاذ

نظرة عامة على جهاز التحكم



أزرار التحكم:

زر التشغيل/إيقاف التشغيل	زر وظيفة الضوء
زر إعداد الرطوبة	زر الوضع
اضغط مطوياً على الزر (الأزرار) لمدة 3 ثوانٍ:	إعادة تعيين Wi-Fi
إعادة تعيين التنظيف	

لوحة العرض:

الوضع التلقائي	وضع النوم
مؤشر WiFi	الوضع المتوسط
وضع الطاقة العالية	تنبيه لتنظيف جهاز الترطيب
مؤشر إعادة تعبئة المياه	مؤشر المؤقت (متوفر في التطبيق)

بدء الاستخدام

الاستخدام للمرة الأولى

ملاحظة:

أزل كل مواد التغليف قبل استخدام الجهاز للمرة الأولى.


أزل خزان المياه عن القاعدة وأزل كل الأشرطة اللاصقة.

اشطف كل الأجزاء قبل الاستخدام للمرة الأولى.


اختر سطحاً متيناً مسطحاً ومقاوماً للمياه لتثبيت جهاز الترطيب، وتأكد أنه موضوع على بعد 30 سم من الجدار على الأقل.

تأكد أن الرذاذ موجه بعيداً عن الجدران والأثاث وغيره من الأجهزة.


1 تأكد أن العوامة ثابتة في مكانها.

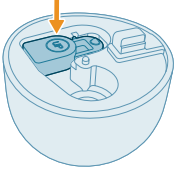

2 أزل الغطاء العلوي في خزان المياه.

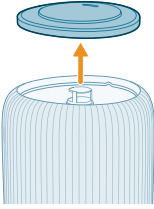

3 تأكد من أن فلتر المياه متصل بشكل صحيح.

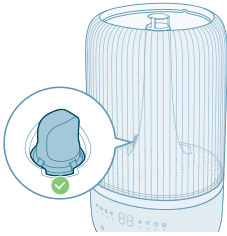


4 املأ خزان المياه بالمياه. لا تملأ بالمياه الساخنة.

ملاحظة:

استخدم المياه النقية أو المقطرة أو المياه التي تكون نسبة المعادن فيها منخفضة لمنع تراكم الترسبات الكلسية وانتشار المعادن في الهواء.



- لا تتجاوز مؤشر الحد الأقصى للمياه عند تعبئة المياه.

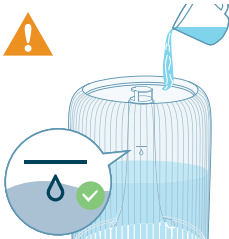


- لا تسكب المياه عبر مخرج الرذاذ بالموجات فوق الصوتية.



- لا تسكب الماء مباشرة على القاعدة.



5 أعد تركيب الغطاء العلوي بخزان المياه.

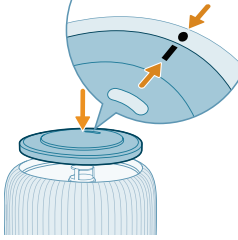

استخدام وظيفة العطور

ملاحظات:

لا يتضمن المنتج الزيوت العطرية. لذا إذا لزم الأمر، فيُرجى شراء الزيوت العطرية الموصوفة واستخدامها.

اقرأ دليل المستخدم الخاص بالزيوت العطرية بعناية قبل استخدام وظيفة العطور.

وقبل إضافة الزيوت العطرية في علبة العطور، يُرجى التأكد من فصل المنتج عن التيار.

لا تستخدم أي مواد أخرى غير الزيوت العطرية.

اقرأ تعليمات السلامة والاستخدام الخاصة بالزيوت العطرية بعناية واحرص على اتباعها قبل استخدامها.

تحقق من معلومات مكونات الزيوت العطرية للتأكد من أنها غير مسببة لأي من أنواع الحساسية التي تعاني منها وتجنب استخدامها إذا لزم الأمر.


استشر طبيبًا واتبع توصياته قبل استخدام الزيوت العطرية في وجود الرضع أو الحوامل أو المرضعات أو إذا كنت تعاني من مشاكل في التنفس.

إذا شعرت بوعكة أو عانيت من تهيج أو ألم مزعج في أثناء استخدام الزيوت العطرية، فيُرجى التوقف عن استخدامها.


لا تستخدم وظيفة العطور الخاصة بالزيوت العطرية للأطفال الرضع أو النساء الحوامل أو النساء في فترة الإرضاع.

أضف الزيوت العطرية مباشرة إلى الوسادة العطرية فقط. لا تضيف الزيوت العطرية إلى الوسائد الأخرى، وإلا فستتضرر القطع بسبب الزيت.


1 اضغط على علبه العطور لإخراجها تلقائيًا.

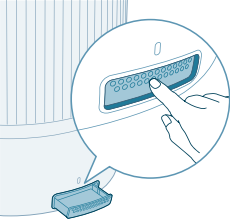

2 أسقط من قطرتين إلى 3 قطرات من الزيوت العطرية على الوسادة العطرية المرفقة.

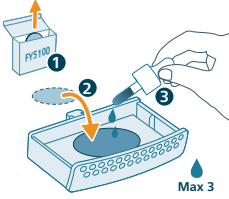

3 ادفع علبه العطور إلى مكانها داخل الجهاز.

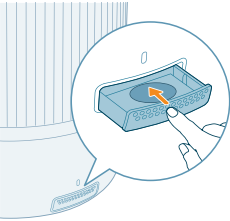

فهم مؤثر Wi-Fi

حالة رمز Wi-Fi

حالة اتصال Wi-Fi

يوميض باللون البرتقالي

الاتصال بالهاتف الذكي

ثابت باللون البرتقالي

متصل بالهاتف الذكي

يوميض باللون الأبيض

يتم الاتصال بالخادم

متصل بالخادم

يضيء باللون الأبيض الثابت

تم تعطيل وظيفة Wi-Fi أو إطفاء مصابيح الجهاز

متوقف عن التشغيل

اتصال Wi-Fi

إعداد اتصال Wi-Fi للمرة الأولى

1 قم بتنزيل تطبيق "Air+" وتثبيته من متجر App Store أو Google Play.



2 ضع مقبس جهاز ترطيب الهواء في مقبس الطاقة واضغط على زر الطاقة لتشغيل الجهاز.

- يومض مؤشر Wi-Fi باللون البرتقالي للمرة الأولى.




3 تأكد من أن هاتفك الذكي أو الجهاز اللوحي متصلان بنجاح بشبكة Wi-Fi.

ملاحظة:

قم بتمكين ميزة Bluetooth على هاتفك الذكي لضمان الاقتران السلس.

يُرجى التأكد من اتصال الهاتف الذكي بشبكة Wi-Fi بسرعة 2.4 جيجاهرتز (المنزل) بدلاً من شبكة Wi-Fi بسرعة 5 جيجاهرتز أو شبكة Wi-Fi عامة. لإنشاء عملية اقتران ناجحة، نوصي بإيقاف تشغيل بيانات الهاتف قبل بدء عملية الاقتران.

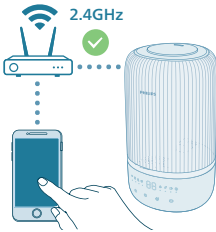

4 شغل تطبيق "Air+" من Philips وانقر فوق "إضافة جهاز" أو اضغط على الزر "+" على الشاشة. اتبع

الإرشادات التي تظهر على الشاشة لتوصيل جهاز تنقية الهواء بالشبكة.

- بعد نجاح عملية الاتصال، يبقى مؤشر Wi-Fi ثابتاً باللون الأبيض.

ملاحظة:

لا يكون هذا الإرشاد صالحاً إلا عند إعداد جهاز ترطيب الهواء للمرة الأولى. في حال تم تغيير الشبكة، يصبح هناك حاجة إلى إجراء الإعداد من جديد.




إنما كنت ترغب في إنشاء اتصال بين أكثر من جهاز ترطيب هواء واحد وهاتفك الذكي أو جهازك اللوحي، فيمكنك إضافة جهاز ترطيب الهواء إلى التطبيق على هواتف ذكية إضافية من دون إعادة تعيين اتصال Wi-Fi على الجهاز.

احرص على أن تكون المسافة بين الهاتف الذكي أو الجهاز اللوحي وجهاز ترطيب الهواء أقل من 10 أمتار وخالية من أي عوائق.

إعادة تعيين اتصال Wi-Fi

1 ضع قابس جهاز ترطيب الهواء في مقبس الطاقة واضغط على  لتشغيله.

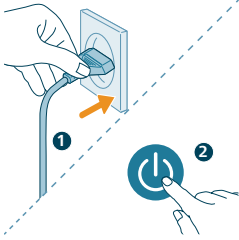


2 اضغط مطولاً على الزر  في الوقت نفسه لمدة 3 ثوانٍ حتى تسمع إشارة صوتية.

- يدخل جهاز ترطيب الهواء في وضع الإقران.

- يومض مؤشر Wi-Fi باللون البرتقالي.


3 اتبع الخطوات 3 و4 في قسم "إعداد اتصال Wi-Fi للمرة الأولى".

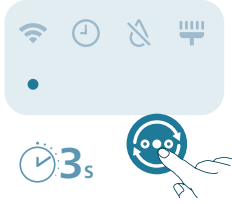

استخدام جهاز ترطيب الهواء

فهم أضواء نسبة الرطوبة

تشير الرطوبة النسبية إلى كمية بخار المياه الموجودة في الجو. يتمتع مؤشر الترطيب بأربعة مستويات للحالة: يتضمن ضوء الترطيب ثلاثة ألوان:

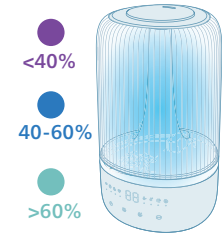

لون ضوء الترطيب	الرطوبة الحالية	ماذا يعني ذلك؟
أرجواني	>40%	جاف
أزرق	40-60%	رطوبة وفيرة
أخضر	<60%	رطوبة مرتفعة للغاية

ملاحظة: تبلغ النسبة الهدف الافتراضية للرطوبة النسبية 50%، ويمكنك ضبط النسبة الهدف المطلوبة للرطوبة بالضغط على زر إعداد الرطوبة.

مستوى المياه

عندما تكون المياه في الخزان غير كافية سيضيئ مؤشر إعادة تعبئة المياه ويتوقف جهاز الترطيب عن العمل. سيعود جهاز الترطيب إلى العمل عندما تعيد تعبئة خزان المياه بالمياه.

إعادة التعبئة بالمياه

ملاحظة:

قم بإفراغ خزان المياه وإعادة ملئه مرة كل ثلاثة أيام.

عند تعبئة المياه لا تتخطى الحد الأقصى لمستوى المياه.

لا تهز خزان المياه عند تحريكه، وإلا فقد تتسرب المياه.

اتبع خطوات "الاستخدام للمرة الأولى" لإعادة تعبئة المياه.

التشغيل وإيقاف التشغيل


ملاحظة:

للاستفادة من أقصى درجات الترطيب، أغلق الأبواب والنوافذ.

احرص على أن تكون الستائر بعيدة عن مدخل أو مخرج الهواء.

يعمل جهاز الترطيب في الحرارة المحيطة التي تتراوح بين 5 و40 درجة مئوية.

1 ضع قابس جهاز ترطيب الهواء في مقبس الطاقة.

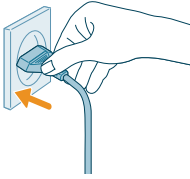


2 اضغط على زر الطاقة لتشغيل جهاز ترطيب الهواء.

- سيصدر جهاز ترطيب الهواء صوت تنبيه.

- يحدد ضوء الرطوبة اللون المناسب لمستوى الرطوبة المحيطة.

- يعمل جهاز ترطيب الهواء بالوضع المتوسط مع عرض مستوى الرطوبة الحالي على الشاشة.




3 اضغط على زر الطاقة مجدداً لإيقاف تشغيل جهاز ترطيب الهواء.

ملاحظة: إذا ظل جهاز ترطيب الهواء متصلاً بالمأخذ الكهربائي بعد إيقاف تشغيله، فسيعمل وفقاً للإعدادات السابقة عند تشغيله في المرة القادمة.



تعديل اتجاه الرزاز

أدير الفوهة في اتجاه رش الرزاز الذي تفضله.

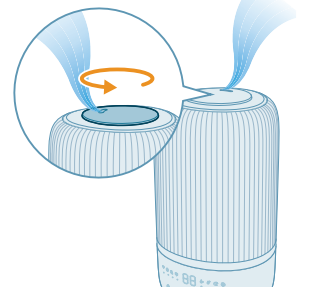

تغيير إعداد الوضع


يمكنك اختيار الوضع التلقائي أو وضع السكون أو الوضع المتوسط أو وضع الطاقة العالية من خلال الضغط على زر تبديل الوضع. الوضع التلقائي (A): يضبط جهاز ترطيب الهواء مستوى الرزاز تلقائياً بما يتناسب مع رطوبة الهواء المحيط.




وضع السكون (S): يعمل جهاز ترطيب الهواء بهدوء على مستوى رطوبة منخفض. تنطفئ مصابيح الشاشة بعد مرور 3 ثوانٍ.



الوضع المتوسط (☼⁻): يعمل جهاز ترطيب الهواء بمستوى رطوبة متوسط.

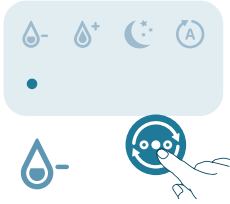

وضع الطاقة العالية (☼⁺): يعمل جهاز ترطيب الهواء بأعلى مستوى رطوبة.

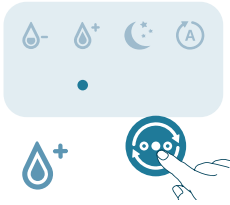

تعيين مستوى الرطوبة


ملاحظة:

يبلغ مستوى الرطوبة النسبية الافتراضي 50%.

يمكن تعديل مستوى الرطوبة فقط في الوضع التلقائي.

سينتقل جهاز ترطيب الهواء تلقائياً إلى الوضع التلقائي عند تعيين مستوى الرطوبة الهدف في الأوضاع الأخرى.


يمكنك ضبط مستوى الرطوبة بالضغط على زر إعداد الرطوبة للاختيار من بين 40% أو 50% أو 60% أو 70%.

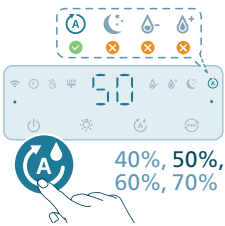


استخدام وظيفة الضوء

يمكنك الضغط على الزر لتشغيل ضوء الرطوبة أو الإضاءة المحيطة أو إطفاء كل المصابيح ولوحة التحكم.


- سيقوم جهاز ترطيب الهواء بتشغيل ضوء الرطوبة افتراضياً.

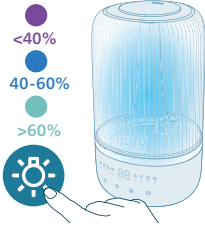

- يمكنك الضغط على زر وظيفة الضوء للتبديل إلى وضع الإضاءة المحيطة. يمكنك تخصيص شدة السطوع واللون في تطبيق Air+.

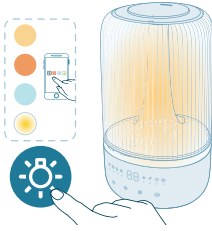

يمكنك الضغط على زر الإضاءة لإطفاء كل المصابيح ولوحة التحكم. اضغط على أي زر لإيقاف اللوحة أولاً، ثم اضغط على زر الضوء مرة أخرى لتعيين وضع الإضاءة الذي ترغب فيه في غضون 3 ثوانٍ.

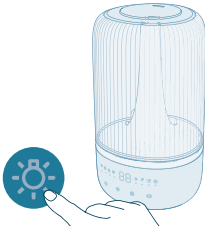

التنظيف والصيانة

ملاحظة:

افصل الجهاز دائماً عن مصدر الطاقة قبل تنظيفه.

لا تغمر الجهاز بالمياه أو بأي سائل آخر على الإطلاق.

اسكب دائماً المياه من خلال مداخل الهواء ومخارجه.


لا تستخدم أبداً أي مواد تنظيف كاشطة أو قوية أو قابلة للاشتعال، مثل مادة التبييض أو الكحول لتنظيف أي جزء من الجهاز.

تنظيف جهاز الترطيب


نظف جهاز الترطيب عندما يضيء تنبيه التنظيف أو كل ثلاثة أيام.

يجب تنظيف جهاز ترطيب الهواء من الداخل والخارج بانتظام لمنع تراكم الغبار.


- 1 امسح الغبار عن هيكل جهاز ترطيب الهواء باستخدام قطعة قماش جافة وناعمة.
- 2 أوقف تشغيل الجهاز وافصله عن مأخذ الطاقة.

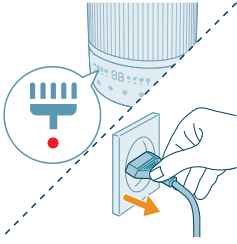


- 3 أزل الغطاء العلوي في خزان المياه.

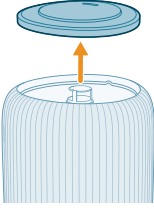


- 4 فك خزان المياه من القاعدة.

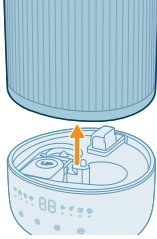


- 5 اسكب المياه من الخزان والقاعدة.

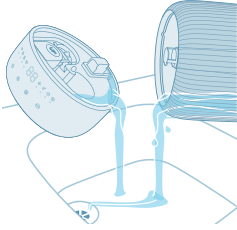


- 6 أزل فلتر المياه من خزان المياه.

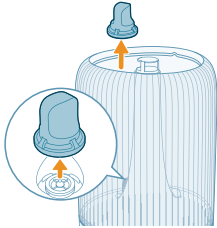


7 أقلب خزان المياه رأسًا على عقب.

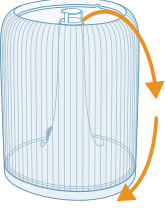


8 أزل الكاتم من أسفل خزان المياه.

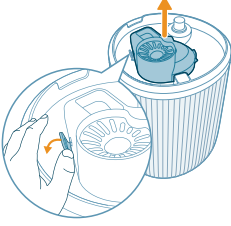


9 أزل العوامة من حجرة القعر.

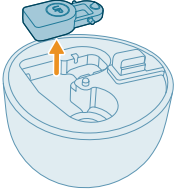


10 اشطف خزان المياه، والغطاء العلوي والعوامة والكاتم وفلتر المياه بالمياه.

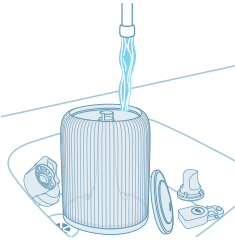


11 امسح القاعدة للتنظيف والتجفيف.

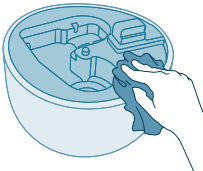


12 أعد العوامة إلى حجرة القعر.

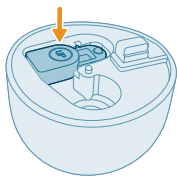


13 أعد وضع فلتر المياه في خزان المياه.

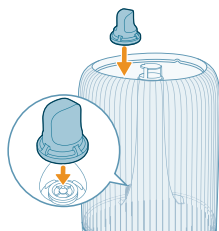


14 أعد الكاتم إلى قعر القاعدة.

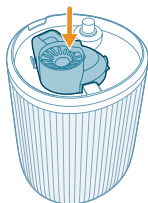


15 أعد تركيب الغطاء العلوي.

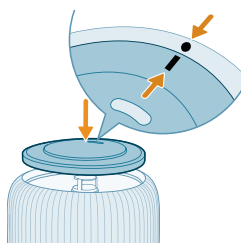


16 أعد تركيب خزان المياه في القاعدة.

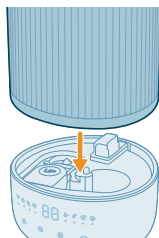

17 ضع القابس في مأخذ الطاقة.

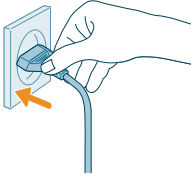


18 اضغط باستمرار على زر الضوء لمدة 3 ثوانٍ لإعادة تعيين وقت التنظيف.

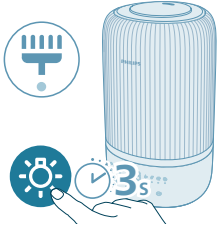


تنظيف الوسادة العطرية وعلبة العطور


للحصول على علاج عطري فعال، يجب دائماً تنظيف الوسادة العطرية قبل استخدام مزيج جديد من الزيوت العطرية. لا تخلط مزيجاً من الزيوت العطرية.
1 أزل علبة العطور بالضغط عليها، ثم سحبها إلى الخارج.

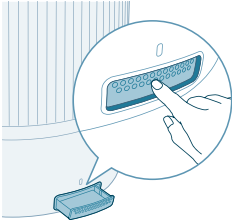

2 أزل الوسادة العطرية واشطف كلاً من الوسادة والعلبة تحت المياه الدافئة الجارية.

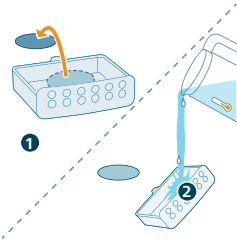


3 جفف العلبة باستخدام قطعة قماش نظيفة، ثم ضع الوسادة مرة أخرى في علبة العطور.

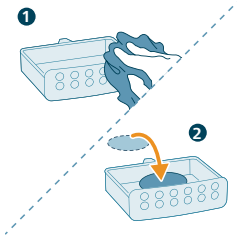

4 أعيد علبة العطور إلى داخل جهاز ترطيب الهواء.

ملاحظة: لا تسكب المنظفات السائلة أو المساحيق المنظفة على الوسادة أو علبة العطور.

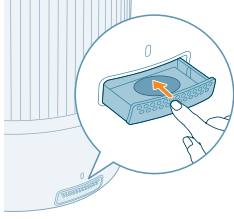

استبدال الوسادة العطرية

إذا أصبحت الوسادة العطرية مشوهة أو تالفة بعد الغسل المتكرر، فقد يتعين استبدالها. للحفاظ على أداء جهاز ترطيب الهواء، لا تستخدم إلا الوسائد العطرية الرسمية من Philips.

التخزين

- 1 أوقف تشغيل جهاز ترطيب الهواء وافصله من مقبس الطاقة.
- 2 نظف جهاز ترطيب الهواء (راجع فصل "التنظيف والصيانة").
- 3 اترك كل الأجزاء تجف جيداً في الهواء قبل تخزينها.
- 4 قم بتخزين جهاز ترطيب الهواء في مكان جاف وبارد.

استكشاف الأخطاء وإصلاحها

يلخص هذا الفصل المشاكل الأكثر شيوعاً التي قد تصادفها عند استخدام الجهاز. إذا لم تساعدك المعلومات التالية على حل مشكلتك، فيمكنك الاتصال بمركز خدمة المستهلك في بلدك.

المشكلة	الحل المحتمل
جهاز ترطيب الهواء لا يعمل.	تأكد من إمداد جهاز ترطيب الهواء بالطاقة.
يخرج رذاذ قليل أو لا يخرج أي رذاذ من مخرج الرذاذ.	تأكد من أن خزان المياه مملوء بالمياه وأن خزان المياه موضوع بطريقة صحيحة على القاعدة.
	ضع قابس جهاز ترطيب الهواء في مقبس الطاقة وقم بتشغيل الجهاز.
	من المحتمل أن معدل الرطوبة المستهدف قد تم تحقيقه.
	تأكد أن خزان المياه ممتلئ بالمياه وموضوع بشكل صحيح.

قد تكون المياه كثيرة في القاعدة (فوق علامة الحد الأقصى على القاعدة). أفرغ حجرة القاعدة. أعد تعبئة خزان المياه (وليس حجرة القاعدة) وضع خزان المياه بشكل مناسب على القاعدة.	
تأكد أن أسفل القاعدة غير مسدود. لا يجب وضع جهاز الترطيب على السجادة أو على سطح آخر قد يسد القاعدة.	
تأكد أن الفوهة غير مسدودة.	
تأكد أن أنبوب الرذاذ غير مسدود أو مغلق.	
تأكد أن جهاز الترطيب موضوع على سطح مستو.	
قد تكون درجة الحرارة منخفضة جداً. أدر مستوى الترطيب إلى إعداد الحد الأقصى ودع جهاز الترطيب يعمل لفترة، بعدها عدّله إلى الإعداد المطلوب.	
قد تكون هناك تهوية كثيرة جداً في غرفتك. يُرجى إغلاق الأبواب والنوافذ.	لا أرى تغييراً في مستوى الرطوبة.
حجم غرفتك كبير جداً. إن جهاز ترطيب الهواء هذا مناسب للغرف التي تبلغ مساحتها $34 \geq m^2$.	
اضبط مستوى الرذاذ إلى إعداد أعلى.	
عند الاستخدام في بيئة جافة، ستمتص الأغراض المحيطة مثل الجدران والأثاث الرطوبة، وهو ما قد يطيل وقت الترطيب.	
نظّف جهاز ترطيب الهواء (راجع فصل "التنظيف والصيانة").	
خزان المياه فارغ، يُرجى إعادة تعبئته بالمياه.	يتوقف جهاز ترطيب الهواء حتى عندما أشعر بالجفاف تماماً.
تم الوصول إلى مستوى الرطوبة حول المنتج. لاستهداف الإعداد في الوضع التلقائي، ستم إعادة التشغيل تلقائياً بمجرد أن يصبح مستوى الرطوبة أقل من الإعداد المستهدف.	
سيتوقف الجهاز عن العمل عندما يكون مستوى الرطوبة حول المنتج أعلى من 70% لأنه قد يؤدي إلى نمو أنواع مختلفة من العفن الفطري.	
تعرف الترسبات البيضاء بالترسبات الكلسية وتتألف من المعادن الموجودة في المياه.	هناك بعض الغبار الأبيض حول جهاز الترطيب.
استخدم المياه النقية أو المقطرة أو المياه التي تكون نسبة المعادن فيها منخفضة لمنع تراكم الترسبات الكلسية وانتشار المعادن في الهواء.	
ننصح باستخدام خرطوشة مضادة للتسربات الكلسية لحماية جهاز الترطيب من الكلس وتفايدي البقايا البيضاء على الأسطح القريبة. عليك أن تستبدله عند الحاجة.	
قد تكون الرطوبة مرتفعة جداً. اضبط مستوى الرذاذ إلى إعداد أدنى.	ثمة مياه كثيرة حول جهاز الترطيب.
قد تنبعث رائحة بلاستيك من جهاز ترطيب الهواء في المرات الأولى من استخدامه. هذا الأمر طبيعي وسيختفي تماماً في غضون بضعة أيام.	ثمة رائحة كريهة تنبعث من جهاز ترطيب الهواء.
نظّف جهاز الترطيب (راجع فصل "التنظيف والصيانة").	
استخدم من قطرتين إلى 3 قطرات من الزيت العطري.	وظيفة التعطير لا تعمل جيداً (ضعيفة أو قوية للغاية).

قد يكون للزيوت العطرية المختلفة شدة مدركة مختلفة.	
قد يستغرق الأمر بعض الوقت حتى تتبخر الرائحة في الغرفة بأكملها.	
إن خزان المياه يسرّب المياه.	تأكد من عدم امتلاء جهاز ترطيب الهواء بالمياه بشكل زائد.
تأكد من تركيب/توصيل جهاز ترطيب الهواء جيداً بعد كل مرة تنظفه فيها أو بعد إزالة خزان المياه لإعادة التعبئة.	
تأكد من أن خزان المياه موضوع بشكل صحيح. في حال استمرار المشكلة، اتصل بمركز خدمة المستهلك في بلدك.	
إذا لم يُستخدم جهاز ترطيب الهواء فترة طويلة، فكيف يتم تخزينه وإعادة استخدامه؟	قد تنمو البكتيريا والعفن على الفلتر عند عدم استخدام الجهاز لفترة طويلة. يُرجى اتباع الخطوات التالية لتخزين الجهاز وإعادة استخدامه.
نظف خزان المياه والقاعدة جيداً قبل التخزين.	
ينمو العفن على جهاز الترطيب.	نظف خزان المياه والقاعدة بانتظام.
إعداد ال Wi-Fi غير ناجح.	يُرجى التأكد من توصيل الهاتف الذكي بشبكة Wi-Fi بسرعة 2.4 جيجاهرتز (المنزل) بدلاً من شبكة Wi-Fi بسرعة 5 جيجاهرتز أو شبكة Wi-Fi عامة. لإنشاء عملية اقتران ناجحة، نوصي بإيقاف تشغيل بيانات الهاتف قبل بدء عملية الاقتران.
تأكد من تمكين الأذونات الآتية: "الموقع"، و"التخزين"، و"البلوتوث"، و"الشبكة المحلية" على الهاتف الذكي. بعد الإعداد الناجح لشبكة Wi-Fi، يمكنك تغيير إعدادات الإذن على النحو المرغوب.	
يُرجى التحقق من أنك قد أدخلت كلمة المرور الصحيحة لشبكة Wi-Fi. كلمة المرور حساسة لحالة الأحرف وتحتوي على 63 حرفاً كحد أقصى. الرموز الخاصة غير مقبولة.	
تأكد من صحة اسم شبكة Wi-Fi المنزلية لديك. إن اسم الشبكة حساس لحالة الأحرف.	
إذا كنت تستخدم شبكة افتراضية خاصة على هاتفك الذكي، فيُرجى تعطيلها قبل بدء عملية الإقران.	
إذا كان قد تم إعداد قائمة بيضاء على الموجه لحجب الإقران، فيُرجى إلغاء تفعيل القائمة البيضاء لضمان إنشاء اتصال ناجح.	
يُرجى التأكد من وجود الجهاز والهاتف الذكي في نطاق 10 أمتار من الموجه.	
تأكد من تحديث التطبيق إلى أحدث إصدار.	
لضمان اتصال Wi-Fi قوي، تجنب وضع الجهاز بالقرب من أجهزة إلكترونية أخرى أو مصادر الضوء الساطع أو محطات الإشارة التي قد تسبب تداخلاً. إذا واجهتك مشكلات في الاتصال، فحرك الجهاز بعيداً عن هذه المصادر وحاول إعادة توصيله بشبكة Wi-Fi.	
راجع قسم التعليمات في التطبيق للحصول على نصائح شاملة ومحدّثة حول استكشاف الأخطاء وإصلاحها.	

الضمان والدعم

تقدم Versuni ضمانًا لمدة عامين بعد الشراء على هذا المنتج. هذا الضمان غير صالح إذا كان العيب ناتجًا عن الاستخدام غير الصحيح أو الصيانة السيئة. لا يؤثر الضمان الخاص بنا على حقوقك كمستهلك بموجب القانون. لمزيد من المعلومات أو لاستدعاء الضمان، يرجى زيارة موقعنا على الويب www.philips.com/support.

طلب القطع أو الملحقات

إذا احتجت إلى تبديل قطعة أو إذا كنت ترغب في شراء قطعة إضافية، فتوجه إلى وكيل Philips لديك أو تفضل بزيارة www.philips.com/support.

وإذا واجهتك مشاكل في الحصول على الأجزاء، فيرجى الاتصال بمركز خدمة المستهلك التابع لشركة Philips في بلدك.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2024 © Versuni Holding B.V.

