
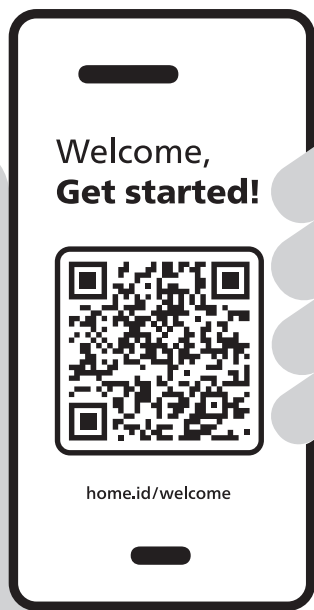


EN Welcome, Get started! KO 환영합니다. 지금 시작하세요!


EN Registration and Benefits KO 등록 및 혜택

EN Digital manual KO 디지털 설명서


1

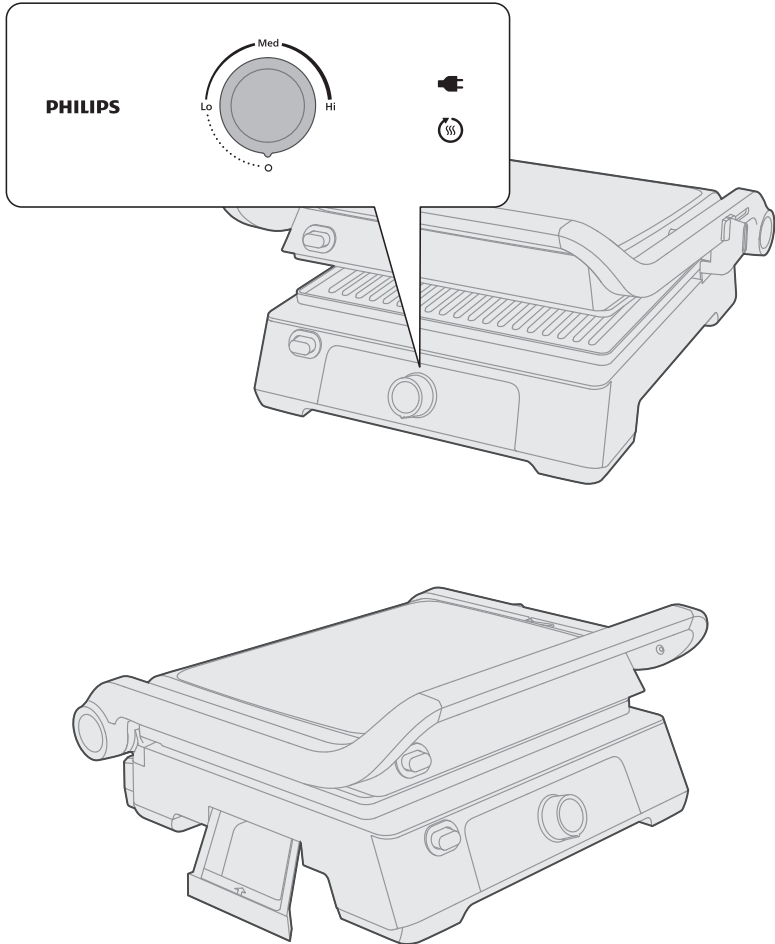


2

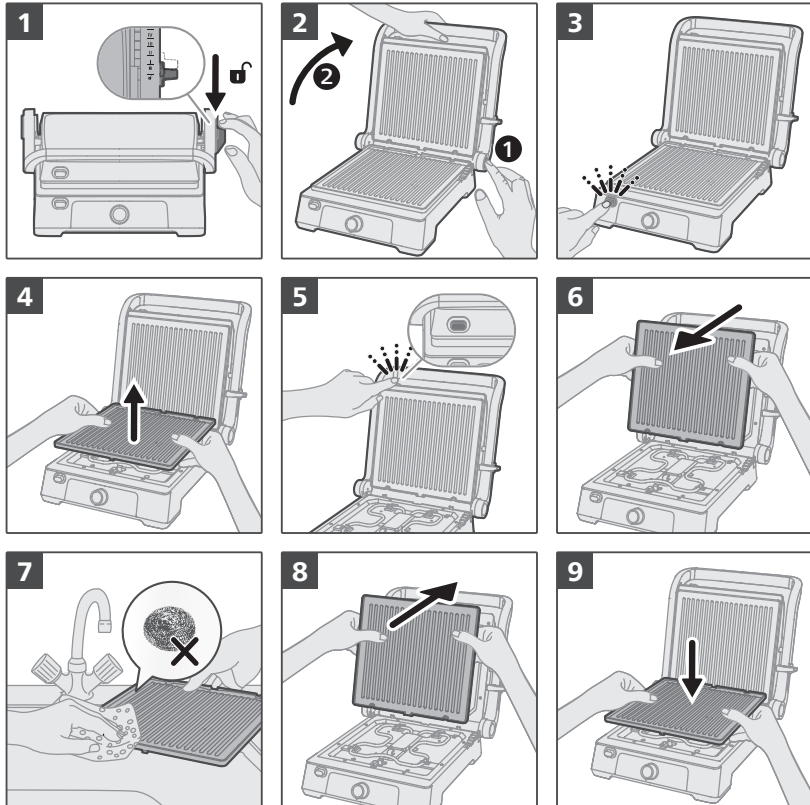

3

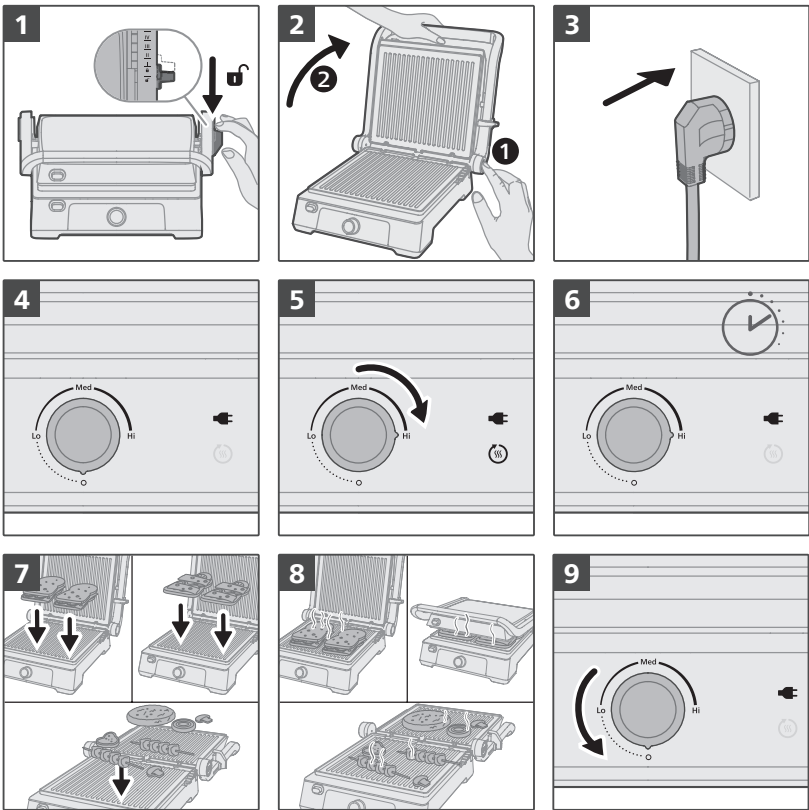

4

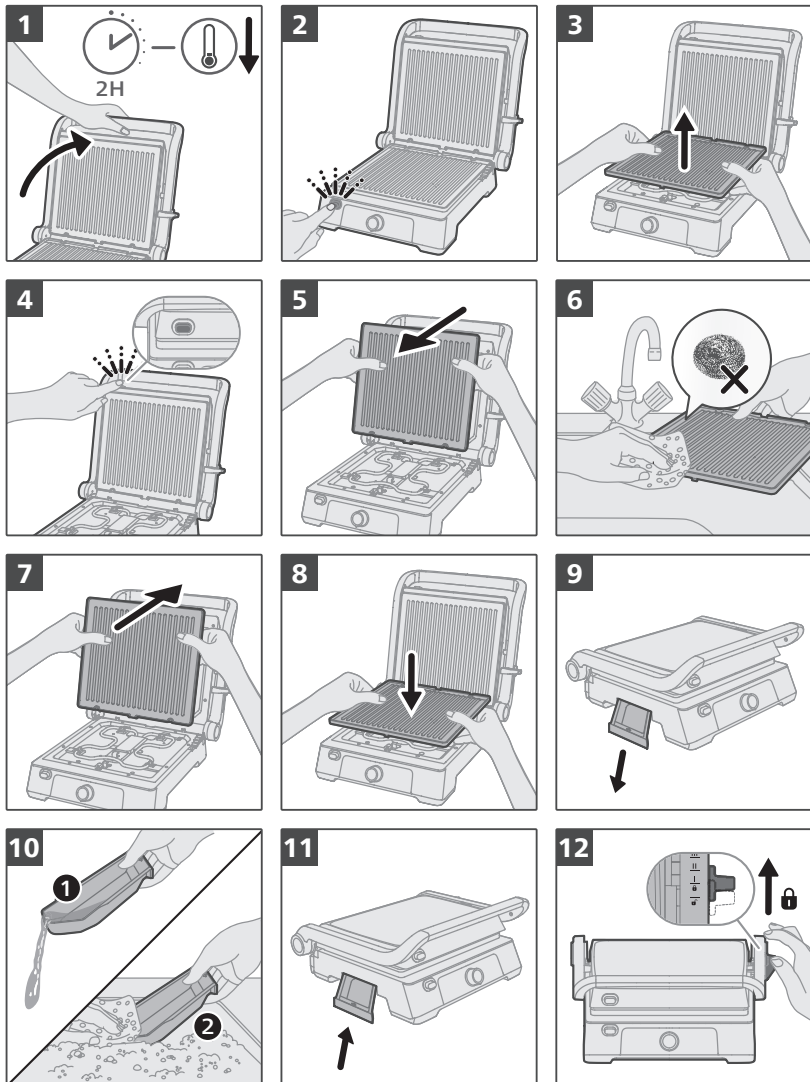

English

Introduction

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

- Read this important information leaflet carefully before you use the appliance and save it for future reference.

Danger

- Do not immerse the appliance or the mains cord in water or any other liquid.

Warning

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Keep the mains cord away from hot surfaces.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Do not let the appliance operate unattended.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The accessible surfaces may become hot during use.

Caution

- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotel, motels, bed and breakfasts and other residential environments.
- If you wash the grill plates in the dishwasher, there's a chance that oxidation may happen at the back of the plate, which could result in black powder or substance remaining on the rear side of the plate.
- Only connect the appliance to an earthed wall socket.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- The temperature of accessible surfaces may be high when the appliance operates.
- Let the appliance cool down completely before you clean the appliance or put it away.
- Never touch the plates with sharp or abrasive items, as this damages the non-stick surface.
- Always switch off and unplug the appliance after use.
- In order to get the best result from your contact grill, always clean the appliance after every use. When you take the grills out heating elements will be opened, you can clean this parts with a piece of cloth. Be careful not to drop any water on these pads.

Electromagnetic fields (EMF)

- This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

- To buy accessories or spare parts, visit www.philips.com/support or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).




Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

4

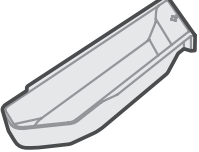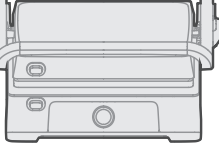				
	✓	✓	✓	✗
	✓	✗	✓	✗
	✗	✗	✓	✗

한국어

소개

필립스 제품을 구입해 주셔서 감사합니다!
필립스가 드리는 지원 혜택을 받으실 수 있도록 www.philips.com/welcome에서 제품을 등록하십시오.

주의 사항

- 본 제품을 사용하기 전에 이 중요 정보 책자를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

위험

- 제품이나 전원 코드를 물이나 기타 액체에 담그지 마십시오.

경고

- 제품을 벽면 콘센트에 연결하기 전에 제품 바닥에 표시되어 있는 전압이 사용 지역의 전압과 일치하는지 확인하십시오.
- 플러그, 전원 코드 또는 기타 부품이 손상된 경우에는 제품을 사용하지 마십시오.
- 전원 코드가 제품의 뜨거운 표면에 닿지 않도록 하십시오.
- 제품을 외부 타이머에 연결하지 마십시오. 위험할 수 있습니다.
- 제품이 작동 중일 때는 자리를 비우지 마십시오.
- 8세 이상의 아이들과 신체적인 감각 및 정신적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 8세 이하 및 관리 하에 있지 않은 어린이가 제품을 청소 및 관리할 수 없습니다.
- 제품 및 코드를 8세 이하 어린이의 손에 닿지 않는 곳에 보관하십시오.
- 본 제품은 외부 타이머나 별도의 리모콘 시스템으로 작동하지 않습니다.
- 전원 코드가 손상된 경우 안전을 위해 제조업체, 서비스 기사 또는 전문 기술자에게 의뢰하여 교체하십시오.
- 사용 중에는 손이 닿는 표면이 뜨거워질 수 있습니다.

주의

- 본 제품은 일반 가정용품입니다. 본 제품은 매장의 직원 휴게실, 사무실, 농장 또는 기타 작업 환경에서 사용하기 위한 것이 아닙니다. 또한 호텔, 모텔, 민박 및 기타 숙박 시설의 투숙객을 위한 제품도 아닙니다.
- 식기 세척기로 그릴 판을 세척하면 열판의 뒷면에 산화 작용이 발생하여 열판의 뒤쪽 측면에 검은색 가루 또는 이물질이 생길 수 있습니다.
- 제품은 반드시 접지된 벽면 콘센트에 연결하십시오.
- 제품이 울려져 있는 식탁이나 조리대의 가장자리로 전원 코드가 흘러내리지 않도록 합니다.
- 제품이 작동하는 동안 손이 닿는 표면의 온도가 매우 높을 수 있습니다.
- 제품을 청소하거나 보관하기 전에 제품을 완전히 식히십시오.
- 눌러붙음 방지 표면이 손상될 수 있으므로 날카롭거나 마모시킬 수 있는 물건을 열판에 접촉하지 마십시오.
- 사용 후 제품의 전원을 끄고 전원 코드를 뽑으십시오.
- 내장된 그릴의 최상의 결과를 얻으려면 매번 사용 후에 제품을 청소하십시오. 그릴을 꺼내면 열판이 노출됩니다. 이곳을 천으로 깨끗하게 닦을 수 있습니다. 이 패드에 물을 떨어뜨리지 않도록 주의하십시오.

EMF(전자기장)

- 이 제품은 EMF(전자기장) 노출과 관련된 해당 표준 및 규정을 준수합니다.

액세서리 주문

- 액세서리나 교체용 부품을 구입하려면 www.philips.com/support 또는 필립스 대리점을 방문하십시오. 해당 지역의 필립스 고객 상담실에 문의하셔도 됩니다. 자세한 연락처는 국제 보증서를 참조하십시오.

재활용

- 이 기호는 이 제품을 일반 가정용 쓰레기와 함께 버리면 안 된다는 것을 의미합니다(2012/19/EU).
- 해당 국가의 전기/전자 제품 분리수거 규칙에 따라 버리십시오. 올바른 제품 폐기를 통해 환경 및 인류의 건강을 유해한 영향으로부터 보호할 수 있습니다.

보증 및 지원

Versuni는 제품 구매 후 2년간 보증을 제공합니다. 제품의 결함이 올바르게 못한 사용 또는 잘못된 유지 관리로 인한 것인 경우 보증은 무효합니다. 당사의 보증은 소비자로서 법에 따른 귀하의 권리에 영향을 미치지 않습니다. 자세한 내용 또는 보증을 이용하려면, 웹사이트 www.philips.com/support에서 확인하실 수 있습니다.

제품이 콘센트에 연결되었습니다.

제품이 가열되고 있습니다.

5

		°C	Min.		
		Hi	6-9		
		Hi	3-4		
		Hi	4-6		
		Hi	8-10		
		Hi	5-8		
		Hi	10-12		
		Hi	6-8		
		Hi	4-6		
		Hi	8-10		
			18-20		
		Hi	7-9		
			25-30		
		Med	5-6		
		Med	6-7		
		Med	6-10		
		Med	20-25		
		Med	6-10		
		Med	20-25		
		Hi	3-5		
		Hi	8-12		
		Lo	6-10		
		Hi	6-8		

제품의 제조년월을 확인하는 방법

제품의 제조년월은 제품의 라벨에 명시되어 있습니다.

제품명:

제조원:

수입원: 필립스생활가전코리아 주식회사

A/S센터: 1661-0083

제조년월: YYWW

식품용

제조년월: YY.WW

주차

년도

제조년월은 4자리의 숫자로 이루어져 있습니다.

예시) 2222

주차

년도

2022년 22주차 생산품

* 4자리의 숫자 중 앞 두자리는 제조년도를 의미합니다.

* 4자리의 숫자 중 뒤 두자리는 해당년도의 주차를 의미합니다.