

PHILIPS






6000 Series

Cordless Vacuum

XC6552, XC6553, XC6557



English 3
Türkçe 6

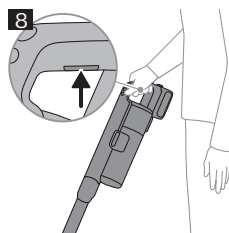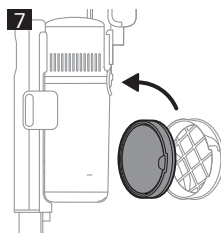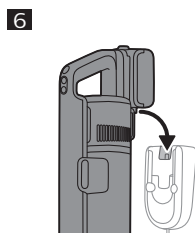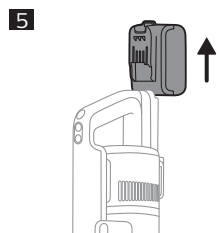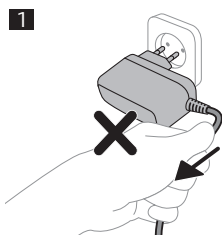

English

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Never vacuum up water or any other liquid, flammable substances or ashes.
- Never immerse the appliance or the adapter in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Always check the appliance before you use it. Do not use the appliance or the adapter if it is damaged. Always replace a damaged part with one of the original type.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- If the appliance is damaged, do not try to charge it.
- Always remove the battery and/or turn off the appliance before performing maintenance on the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the adapter if you are not going to use the appliance for some time.
- When storing the appliance for more than a month (without usage or charging), make sure that the battery is charged to at least 50%. Storing the appliance with an empty battery may lead to irreversible damage to the battery.
- Do not let the motorized nozzle move over the mains cords of other appliances or other cables as this may cause a hazard.
- Keep loose clothing, hair and body parts away from the motorized brushes.
- Do not cover or block the ventilation openings when the appliance is operating.
- This vacuum cleaner is designed for household use only. Do not use this vacuum cleaner to vacuum up building waste, cement dust, ashes, fine sand, lime and similar substances. Never use the vacuum cleaner without any of the filters. This could damage the motor and shorten the life of the vacuum cleaner. Always clean all parts of the vacuum cleaner as shown in the user manual. Do not clean any parts with water and/or cleaning agents if this is not specifically shown in the user manual.
- Take the appliance to an authorized Philips service center when you can no longer recharge it or when it runs out of power quickly.

Caution

- During charging, the adapter becomes warm to the touch. This is normal.
- Do not park the appliance against a wall or other object, it can drop and create an unsafe situation.
- Do not plug in, unplug or operate the appliance with wet hands.
- Do not remove the adapter from the wall socket by pulling at the cord (Fig. 1). When you do not use the charging station for charging, always unplug the appliance by pulling the small plug out of the appliance and the adapter out of the wall socket.
- Always switch off the appliance after use and before you charge it.
- Do not clean the removable parts of the appliance in the dishwasher. These parts are not dishwasher-proof.
- Always use the vacuum cleaner with the filter assembled.
- When you clean the washable sponge filter with water, make sure it is completely dry before you put it back into the filter holder and dust container. Do not dry the sponge filter in direct sunlight, on the radiator or in the tumble dryer. Do not clean the filter holder with water. This part is not washable.
- Replace the filter if it can no longer be cleaned properly or if it is damaged.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Make sure that the appliance is installed with the charging station attached to the wall according to the instructions in the user manual.
- Be careful when you drill holes in the wall to attach the charging station, to avoid the risk of electric shock.
- When this appliance is used with the aqua tank, it uses water to clean, the floor may remain wet and slippery for a while (Fig. 2).
- Philips has only tested this appliance with XV1792 Philips Floor Cleaner. When using any other suitable liquid floor cleaner, add a maximum of 10 ml to the aqua tank.
- Only use liquid floor cleaners that are transparent. Do not use milky or non-transparent floor cleaners.
- To prevent damage, only put water and transparent liquid floor cleaners in the aqua tank.
- Do not mix different types of liquid floor cleaner.
- Do not clean the metal wetting strip with a sharp object, as this may damage the strip. Follow the instructions online to clean the wetting strip and aqua tank. Replace the wetting strip when you can no longer clean it.
- Only use the aqua tank on hard floors with a water-resistant top coat (such as linoleum, enameled tiles and varnished parquet) and stone floors (such as marble). If your floor has not been treated to make it water-resistant, check with the manufacturer if you can use water to clean it. Do not use the aqua tank on hard floors of which the water-resistant top coat is damaged.
- Do not use the aqua tank to clean carpets.
- Do not move the appliance with aqua tank assembled sideways, as this leaves water traces. Only move forwards and backwards.
- Always store the aqua tank with the cap removed from the filling hole.

Battery safety instructions

- Only use this product for its intended purpose and follow the general and battery safety instructions as described in this user manual. Any misuse can cause electric shock, burns, fire and other hazards or injuries.
- Only charge the appliance with the adapter supplied. Only use 34V adapter ZD012M340044. The corresponding adapter number can be found on the adapter.
- Charge, use and store the product at a temperature between 5 °C and 40 °C.
- Do not expose the device to direct sunlight or to high temperatures (near hot stoves, in microwave ovens or on induction cookers). Batteries may explode if overheated.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact us.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To prevent batteries from heating up or releasing toxic or hazardous substances, do not modify, pierce or damage products and batteries and do not disassemble, short-circuit, overcharge or reverse charge batteries.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3).
- Follow your country's rules for the separate collection of electrical products and batteries.
- This symbol means that it is necessary to check the recycling provisions of your local municipality (Fig. 4).
- For an explanation of the material symbols, see the separate enclosed leaflet.

Removal of rechargeable batteries


Remove rechargeable batteries from the product when you discard the product. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.



Take any necessary safety precautions when you dispose of batteries.

- To remove the rechargeable battery, follow the instructions below.
- 1 Disconnect the appliance from the wall socket and let it run until the motor stops.
 - 2 Press the unlock button and pull the battery out of the appliance (Fig. 5).

Troubleshooting

This chapter summarizes some problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

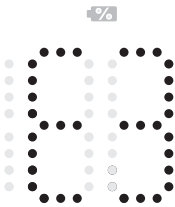Problem	UI screen	Possible cause	Solution
The appliance does not respond when the on/off button is pushed.		The battery is empty.	To charge the battery, connect the appliance to the charging station or attach the handheld vacuum cleaner directly to the power plug of the adapter.
The appliance suddenly stops working.		The display shows E2. The appliance is operated below the functioning temperature.	Move the appliance to a warmer room. Do not store, charge or use the appliance at a temperature below 5 °C or above 40 °C.
		The display shows E3. The appliance is operated above the functioning temperature.	Move the appliance to a cooler room. Do not store, charge or use the appliance at a temperature below 5 °C or above 40 °C.
		The display shows i4. The brush roll is stuck or objects are stuck in the air flow channel.	Make sure the appliance is switched off. Clean the nozzle according to the user manual and check the tube by removing the tube from the main appliance. Remove the object in the nozzle or tube and restart the appliance.

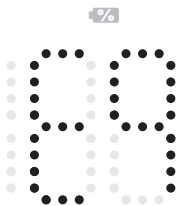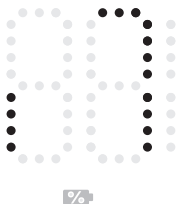Problem	UI screen	Possible cause	Solution
		The display shows E9. There is a short circuit in the nozzle.	Take it to a Philips service center or contact the Consumer Care Center.
		The display shows i5. Foreign object is stuck in the airflow passage.	Make sure the appliance is switched off. Clean the nozzle according to the user manual and check the tube by removing the tube from the main appliance. Remove the object in the nozzle, tube, or handheld and restart the appliance.
			If you have checked the above and the appliance still does not charge, take it to a Philips service center or contact the Consumer Care Center.
The appliance has a lower suction power than usual.		The display shows i8. Foreign object is interrupting the airflow passage.	Make sure the appliance is switched off. Clean the nozzle as instructed in the user manual. Disconnect the tube from the main appliance and check for obstructions. Remove any objects from the nozzle, tube, or handheld. Restart the appliance.
		The display shows i8. The filter and the cyclone are dirty.	Empty the dust bucket. Clean the filter and the cyclone. Make sure the filter is washed at least once a month, when using the appliance regularly. Make sure hair and dirt stuck in the cyclone are removed.
		The display shows i8. The filter is old.	You can buy new filters in the online Philips shop at www.philips.com/support or at your Philips dealer.
			If you have checked the above and the appliance still shows the error, take it to a Philips service center or contact the Consumer Care Center.
Dust escapes from the appliance.		The filter is not present in the appliance.	Make sure that the filter is in the appliance and assembled correctly.
The appliance is not charging.		The display shows i7 (seen from upside down with the battery icon under i7). A wrong adapter is used.	Make sure that you use the adapter supplied.

Problem	UI screen	Possible cause	Solution
		The display shows i6 (seen from upside down with the battery icon under i6). The adapter is not removed.	Remove the adapter before operating the appliance.
		The display shows E5. The battery does have enough power to be switched on.	Connect the appliance again to the charger. If the appliance still does not charge, take it to a Philips service center or contact the Consumer Care Center.
			If you have checked the above and the appliance still does not charge, take it to a Philips service center or contact the Consumer Care Center.
The appliance suddenly stops working.		When the appliance has an internal malfunction, the buttons will not respond and the screen will remain blank.	Connect the appliance to the charging station (Fig. 6) or attach the handheld vacuum cleaner directly to the adapter. Check the display. If an error code appears, you can find its meaning in the online user manual.
The appliance delivers static shocks.		The appliance builds up static electricity. The lower the air humidity, the more static electricity is build up.	Discharge the appliance by frequently holding the tube against other metal objects in the room (for example the legs of a table or chair, etc.). Or raise the air humidity level in the room.
		The dust and dirt that is vacuumed up is static.	Empty the dust container and clean the filter (Fig. 7) according to the instructions in the user manual.
		The anti static pin is not connected.	Ensure you are holding the metal strip at the back of the handle while vacuuming (Fig. 8).

Türkçe

Önemli güvenlik bilgileri

Cihazı ve aksesuarlarını kullanmadan önce bu önemli bilgileri dikkatlice okuyun ve gelecekte başvurmak üzere saklayın. Cihazla birlikte verilen aksesuarlar ürününe göre farklılık gösterebilir.

Tehlike

- Hiçbir zaman su veya başka bir sıvıyı, yanıcı maddeleri veya kulleri süpürmeyin.
- Cihazı ya da adaptörü suya veya başka bir sıvıya daldırmayın ve musluk suyu altında durulamayın.

Uyarı

- Cihazı kullanmadan önce, adaptörün üzerinde belirtilen gerilimin ülkenizdeki gerilimle uygunluğunu kontrol edin.
- Cihazı kullanmadan önce her zaman kontrol edin. Hasar gören cihazı veya adaptörü kullanmayın. Zarar görmüş bir parçayı mutlaka orijinaliyle değiştirin.
- Adaptör içinde bir transformator bulunur. Adaptörü kesip başka bir fişe değiştirmeyin, aksi takdirde cihazı kullanmak tehlikeli hâle gelir.
- Cihaz hasarlı ise şarj etmeye çalışmayın.
- Cihaza bakım yapmadan önce mutlaka pili çıkarın ve/veya cihazı kapatın.
- Bu cihazın 8 yaşın üzerindeki çocuklar ve fiziksel, duyuşal ya da zihinsel becerileri gelişmemiş veya bilgisi ve tecrübesi olmayan kişiler tarafından kullanımı sadece bu kişilerin nezaretinden sorumlu kişilerin bulunması veya cihazın güvenli kullanım talimatlarının bu kişilere sağlanması ve olası tehlikelerin anlatılması durumunda mümkündür. Çocuklar cihazla oynamamalıdır. Temizlik ve kullanıcı bakımı gözetim olmadan çocuklar tarafından yapılmamalıdır.
- Cihazı bir süre kullanmayacaksanız adaptörün fişini çekin.
- Cihazı bir aydan daha uzun bir süre (kullanmadan veya şarj etmeden) saklayacaksanız pilinin en az %50 dolu olduğundan emin olun. Cihazı boş bir pille saklamak, pil üzerinde geri dönüşü olmayan bir hasara yol açabilir.
- Tehlikeye neden olabileceği için motorlu başlığın, diğer cihazların elektrik kabloları veya başka kablolar üzerinden geçmesine izin vermeyin.
- Sabitlenmemiş kumaş, saç ve vücudunuzu motorlu fırçalardan uzak tutun.

- Cihaz çalışırken havalandırma deliklerini kapatmayın veya tıkamayın.
- Bu elektrikli süpürge sadece evde kullanın için tasarlanmıştır. Bu elektrikli süpürgeyi inşaat atıkları, çimento tozu, kül, ince kum, kireç ve benzer maddeleri çekmek için kullanmayın. Elektrikli süpürgeyi filtre olmadan kesinlikle kullanmayın. Bu, motorun zarar görmesine ve elektrikli süpürge'nin kullanım ömrünün azalmasına neden olabilir. Elektrikli süpürge'nin tüm parçalarını her zaman kullanım kılavuzunda gösterilen şekilde temizleyin. Kullanım kılavuzunda özellikle gösterilmediği takdirde herhangi bir parçayı su ve/veya temizlik maddeleri ile temizlemeyin.
- Şarj edilebilir pili artık yeniden şarj edemiyorsanız veya gücü hızlı bir şekilde bitiyorsa cihazı yetkili bir Philips servisine götürün.

Dikkat

- Şarj sırasında adaptör ısınır. Bu durum normaldir.
- Cihazı duvara veya başka bir nesneye karşı park etmeyin, devrilerek güvenli olmayan bir duruma sebep olabilir.
- Elleriniz ıslakken cihazın fişini prize takmayın, prizden çıkarmayın veya cihazı kullanmayın.
- Adaptörü kablodan çekerek prizden ayırmayın (Şek. 1). Şarj etmek için şarj istasyonunu kullanmadığınızda küçük fişi cihazdan ve adaptörü de prizden çıkararak cihazın fişini daima çekin.
- Cihazı kullandıktan sonra ve şarj etmeden önce mutlaka kapatın.
- Cihazın çıkarılabilir parçalarını bulaşık makinesinde yıkamayın. Bu parçalar bulaşık makinesinde yıkanmaya uygun değildir.
- Elektrikli süpürgeyi her zaman filtresi takılı olarak kullanın.
- Yıkayabilir sünger filtreyi suyla temizlerken, filtre yuvasına ve toz haznesine geri takmadan önce tamamen kuru olduğundan emin olun. Sünger filtreyi doğrudan güneş ışığı altında, radyatör üzerinde veya çamaşır kurutma makinesinde kurutmayın. Filtre yuvasını suyla temizlemeyin. Bu parça yıkanamaz.
- Filtreyi artık düzgün bir şekilde temizlenemiyorsa veya hasar görmüşse değiştirin.
- Başka üreticilere ait olan veya Philips tarafından özellikle tavsiye edilmeyen aksesuar veya parçaları kesinlikle kullanmayın. Buna benzer aksesuar veya parçalar kullandığınızda garantiniz geçersiz olur.
- Cihazın, kullanım talimatlarına uygun şekilde duvara monte şarj istasyonu ile birlikte takıldığından emin olun.
- Şarj istasyonunu monte etmek için duvara delikler açarken elektrik çarpması riskine karşı dikkatli olun.
- Bu cihaz, su haznesi ile kullanıldığında temizleme esnasında su kullandığından cihaza bir süre ıslak ve kaygan kalabilir (Şek. 2).
- Philips, bu cihazı yalnızca XV1792 Philips Zemin Temizleyici ile test etmiştir. Uygun başka bir sıvı zemin temizleyici kullanırken su haznesine en fazla 10 ml sıvı ekleyin.
- Sadece şeffaf zemin temizleyicileri kullanın. Bulanık veya şeffaf olmayan zemin temizleyicileri kullanmayın.
- Hasar oluşmasını önlemek için su haznesine yalnızca su ve şeffaf sıvı zemin temizleyicileri koyun.
- Farklı türdeki sıvı yüzey temizleyicilerini karıştırmayın.
- Metal ıslatma şeridini keskin bir nesne ile temizlemeyin. Aksi takdirde, şerit hasar görebilir. ıslatma şeridini ve su haznesini temizlemek için çevrimiçi talimatları izleyin. Artık temizlenemiyorsa ıslatma şeridini değiştirin.
- Su haznesini sadece su geçirmez kaplamalı (muşambas, emaye seramik ve vernikli parke gibi) sert zeminlerde ve taş zeminlerde (mermer gibi) kullanın. Zemininiz su geçirmezlik için işlem görmediyse temizlik için su kullanıp kullanamayacağınızı üreticiye danışın. Su geçirmez kaplaması hasar görmüş sert zeminlerde su haznesini kullanmayın.
- Su haznesini halıları temizlemek için kullanmayın.
- Su izi bırakabilecek için su haznesi cihaza takılıyken cihazı yana doğru hareket ettirmeyin. Yalnızca ileri geri hareket ettirin.
- Su haznesini her zaman doldurma deliğinin kapagı çıkarılmış hâlde saklayın.

Pil güvenlik talimatları

- Bu ürünü yalnızca amacına uygun olarak kullanın ve bu kullanım kılavuzunda açıklanan genel ve pil güvenlik talimatlarına uyun. Tasarlanma amacı dışında kullanım elektrik çarpmasına, yanma kaynaklı yaralanmalara, yangına ve diğer tehlikelere veya yaralanmalara neden olabilir.
- Cihazı sadece verilen adaptör ile şarj edin. Yalnızca 34 V ZD012M340044 adaptörü kullanın. Uygun adaptör numarası adaptörün üzerinde yer alır.
- Ürünü 5 °C ila 40 °C arası sıcaklıklarda şarj edin, kullanın ve saklayın.
- Cihazı doğrudan güneş ışığına veya yüksek sıcaklıklara (sıcak sobaların yakınında, mikrodalga fırında veya induksiyon ocaklarının üzerinde) maruz bırakmayın. Aşırı ısınan piller patlayabilir.
- Ürün aşırı ısınır veya üründen koku gelirse, renk değiştirirse ya da şarj işlemi her zamankinden daha uzun süresince ürünü kullanmayı ve şarj etmeyi bırakıp bizimle iletişime geçin.
- Ürünleri ve pillerini mikrodalga fırına ya da endüsiyonlu pişiricilerin üstüne koymayın.
- Pillere dokunurken ellerinizin, ürünün ve pillerin kuru olmasına dikkat edin.
- Pillerin ısınmasını veya zehirlili ya da tehlikeli madde açığa çıkarmasını önlemek için ürünü ve pillerini kurcalamayın, delmeyin veya ürüne ve pillerine hasar vermemeyin, pilleri demonte etmeyin, kısa devre yaptırmayın, aşırı veya ters şarj etmeyin.
- Çıkarıldıktan sonra pillerin kazara kısa devre yapmasını önlemek için pil üzerindeki terminallerin metal nesnelere (bozuk para, toka, yüzük vb.) temas etmemesine çok dikkat edin. Pilleri alüminyum folyoya sarmayın. Atmadan önce pil terminallerini bantla kapatın veya pilleri bir plastik torbaya koyun.
- Hasarlı veya sızdıran pillerin cilde ya da göze temas etmemesine dikkat edin. Bu durumda, hiç vakit kaybetmeden temas yerini suyla iyice yıkayın ve bir doktora başvurun.

Elektromanyetik alanlar (EMF)

Bu cihaz, elektromanyetik alanlara maruz kalmaya ilişkin geçerli standartlara ve düzenlemelere uygundur.

Garanti ve destek

Versuni, satın alındıktan sonra bu ürün için iki yıl garanti vermektedir. Bu garanti, yanlış kullanım veya yetersiz bakımdan kaynaklanan bir kusur olması durumunda geçerli değildir. Bu garanti, bir tüketici olarak yasal kapsamında sunulan haklarınızı etkilemez. Daha fazla bilgi edinmek veya garantiyi kullanmak için lütfen www.philips.com/support adresindeki web sitemizi ziyaret edin.

Geri dönüşüm

- Bu simge, elektrikli ürün ve pillerin normal ev atıklarıyla birlikte atılmaması gerektiğini belirtir (Şek. 3).
- Ülkenizde elektrikli ürün ve pillerin ayrı olarak toplanmasına ilişkin yürürlükte olan yönetmelikleri takip edin.
- Bu sembol, belediye'nin geri dönüşüm yönetmeliğini kontrol etmeniz gerektiği anlamına gelir (Şek. 4).
- Malzeme sembollerinin açıklamaları için ayrı ilüstrilmiş broşürü inceleyin.

Şarj edilebilir pilleri çıkarma

Ürünü atarken şarj edilebilir pilleri üründen çıkarın. Pili çıkarmadan önce cihazı prizden çıkardığınızdan ve pilin tamamen boş olduğundan emin olun.

Pilleri atarken gerekli tüm güvenlik önlemlerini alın.



Şarj edilebilir pili çıkarmak için, aşağıdaki talimatları uygulayın.

- 1 Cihazın fişini prizden çekin ve motor durana kadar cihazı çalıştırın.
- 2 Kilit açma düğmesine basın ve pili cihazdan çıkarın (Şek. 5).

Sorun giderme

Bu bölümde, cihazla ilgili karşılaşılabileceğiniz bazı sorunlar özetlenmektedir. Sorunu aşağıda verilen bilgileri kullanarak çözemezseniz, sık sorulan sorular listesi için www.philips.com/support adresini ziyaret edin veya ülkenizdeki Müşteri Destek Merkezi ile iletişime kurun.

Sorun	Kullanıcı arayüzü ekranı	Olası neden	Çözüm
Cihaz, açma/kapama düğmesine basıldığında yanıt vermiyor.		Pil bitmiştir.	Pili şarj etmek için cihazı şarj istasyonuna bağlayın veya elektrikli el süpürgesini doğrudan adaptörün elektrik fişine takın.
Cihaz aniden duruyor.		Ekranda E2 görüntüleniyor. Cihaz, çalışma sıcaklığının altında çalıştırılıyor.	Cihazı daha sıcak bir odaya alın. Cihazı 5 °C'nin altındaki veya 40 °C'nin üzerindeki sıcaklıklarda saklamayın, şarj etmeyin veya kullanmayın.
		Ekranda E3 görüntüleniyor. Cihaz, çalışma sıcaklığının üzerinde çalıştırılıyor.	Cihazı daha soğuk bir odaya alın. Cihazı 5 °C'nin altındaki veya 40 °C'nin üzerindeki sıcaklıklarda saklamayın, şarj etmeyin veya kullanmayın.
		Ekranda i4 görüntüleniyor. Fırça rulosu sıkışmış veya hava akışı kanalına yabancı nesneler sıkışmış.	Cihazın kapalı olduğundan emin olun. Başlığı kullanım kılavuzuna göre temizleyin ve boruyu ana cihazdan çıkarak boruyu kontrol edin. Başlıkta veya boruda bulunan nesneyi çıkarın ve cihazı yeniden başlatın.
		Ekranda E9 görüntüleniyor. Başlıkta kısa devre olmuştur.	Ürünü bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.

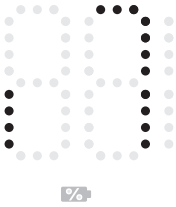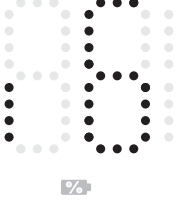Sorun	Kullanıcı arayüzü ekranı	Olası neden	Çözüm
		Ekranda i5 görüntüleniyor. Hava akımı kanalında yabancı bir madde sıkışmıştır.	Cihazın kapalı olduğundan emin olun. Başlığı kullanım kılavuzuna göre temizleyin ve boruyu ana cihazdan çıkararak boruyu kontrol edin. Başlıkta, boruda veya el süpürgesinde bulunan nesneyi çıkarın ve cihazı yeniden başlatın.
			Yukarıdaki kontrolleri yaptıysanız ve cihaz hala şarj olmuyorsa, cihazı Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.
Cihazın emiş gücünde azalma var.		Ekranda i8 görüntüleniyor. Hava akımı kanalında yabancı bir madde akımı engelliyor.	Cihazın kapalı olduğundan emin olun. Kullanım kılavuzunda belirtildiği şekilde başlığı temizleyin. Boruyu ana cihazdan ayırın ve tıkanıklık olup olmadığını kontrol edin. Başlık, boru veya el aparatında bulunan tüm nesneleri çıkarın. Cihazı kapatıp açın.
		Ekranda i8 görüntüleniyor. Filtre ve siklon bölmesi kirlidir.	Toz kovasını boşaltın. Filtreyi ve siklon bölmesini temizleyin. Cihaz düzenli olarak kullanılıyorsa filtrenin en az ayda bir defa yıkandığından emin olun. Siklon bölmesinde kalan tül ve kirleri temizlediğinizden emin olun.
		Ekranda i8 görüntüleniyor. Filtre eskidir.	Yeni filtreleri www.philips.com/support adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz.
			Yukarıdaki kontrolleri yaptıysanız ve cihaz hâlâ hata gösteriyorsa cihazı Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.
Cihaz toz kaçırıyor.		Cihazda filtre yok.	Cihazda filtre olduğundan ve filtrenin doğru şekilde takıldığından emin olun.
Cihaz şarj etmiyor.		Ekranda i7 görüntüleniyor (i7'nin altındaki pil simgesiyle birlikte baş aşağı görülür). Yanlış adaptör kullanılmıştır.	Birlikte verilen adaptörü kullandığınızdan emin olun.
		Ekranda i6 görüntüleniyor (i6'nın altındaki pil simgesiyle birlikte baş aşağı görülür). Adaptör çıkarılmamıştır.	Cihazı çalıştırmadan önce adaptörü çıkarın.

Sorun	Kullanıcı arayüzü ekranı	Olası neden	Çözüm
		Ekranda E5 görüntüleniyor. Cihazın açılabilmesi için pilde yeterince güç yoktur.	Cihazı tekrar şarj cihazına takın. Cihaz yine de şarj olmuyorsa cihazı bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.
Cihaz aniden duruyor.		Cihazın dâhilî bir arızası olduğunda düğmeler yanıt vermez ve ekran boş görünür.	Yukarıdaki kontrolleri yaptıysanız ve cihaz hala şarj olmuyorsa, cihazı Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.
Cihaz statik elektrik çarpmasına neden oluyor.		Cihazda statik elektrik birikebilir. Havadaki nem ne kadar düşük olursa biriken statik elektrik o kadar yüksek olur.	Cihazı şarj istasyonuna bağlayın (Şek. 6) veya elektrikli el süpürgesini doğrudan adaptöre takın. Ekranı kontrol edin. Bir hata kodu görüntülenirse kodun ne anlama geldiğini çevrimiçi kullanım kılavuzunda bulabilirsiniz.
		Süpürülen toz ve kir statiktir.	Boruyu sık sık odadaki diğer metal nesnelere değiştirerek cihaz yükünü boşaltın (örneğin, masanın veya sandalyenin ayakları vb.). İsterseniz odadaki nem seviyesini de artırabilirsiniz.
		Anti statik pim takılı değildir.	Toz haznesini boşaltın ve filtreyi (Şek. 7) kullanım kılavuzundaki talimatlara göre temizleyin.
			Süpürme sırasında tutma yerinin arkasındaki metal şeridi tuttuğunuzdan emin olun (Şek. 8).

2024 © Versuni Holding B.V.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

642001016843 (10/2024)



100 % recycled paper
100 % papier recyclé