



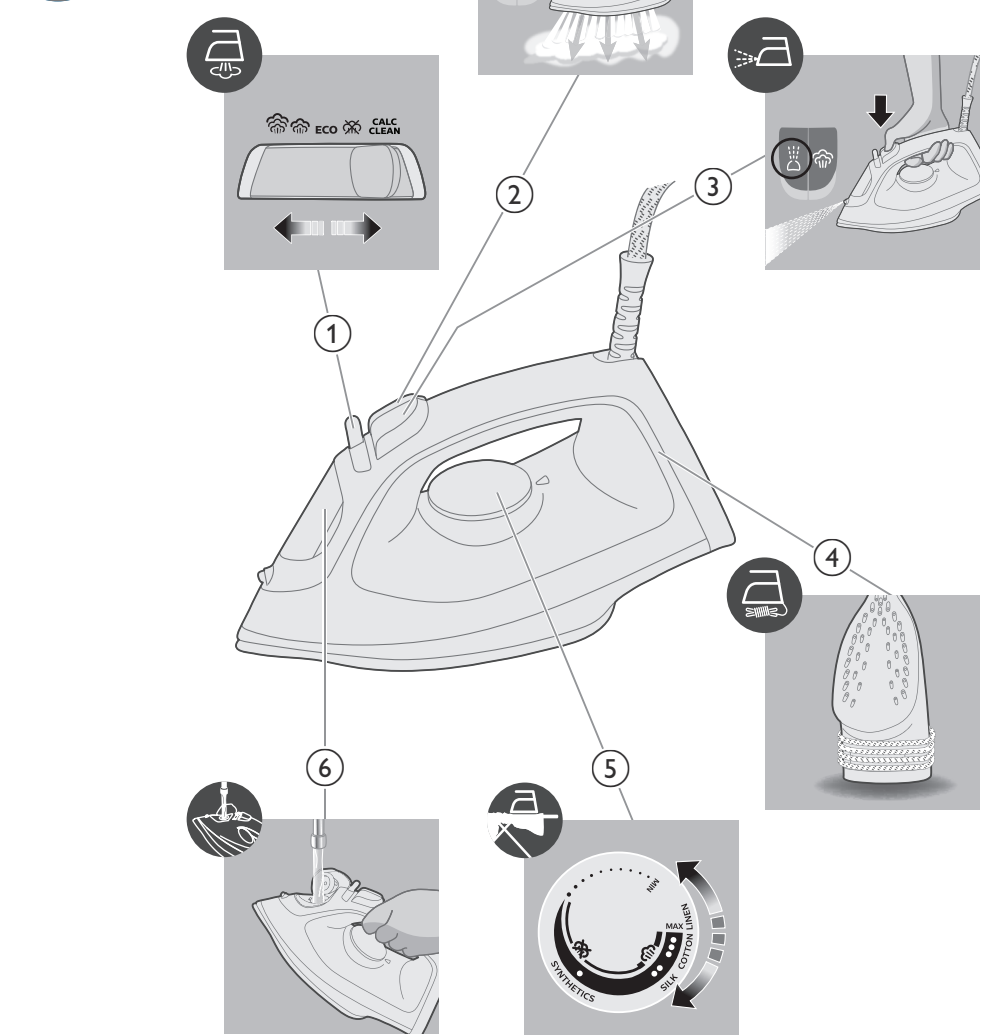


1

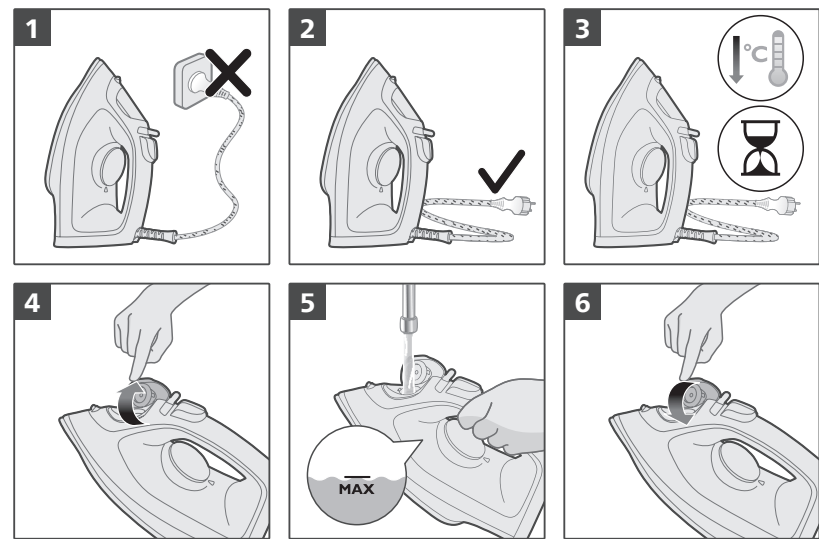


2




3

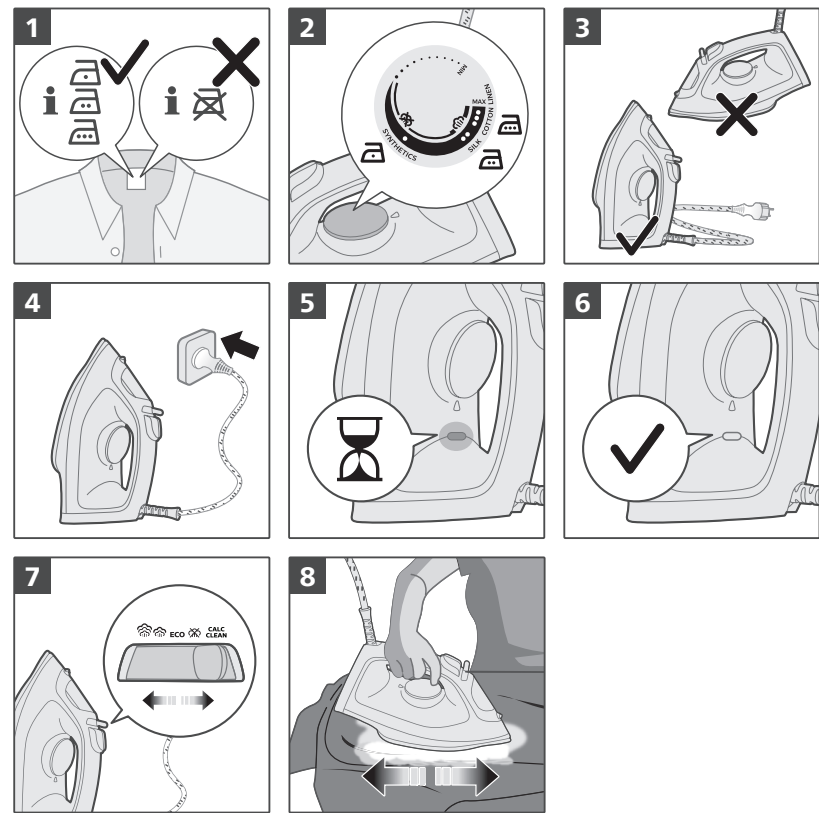

4

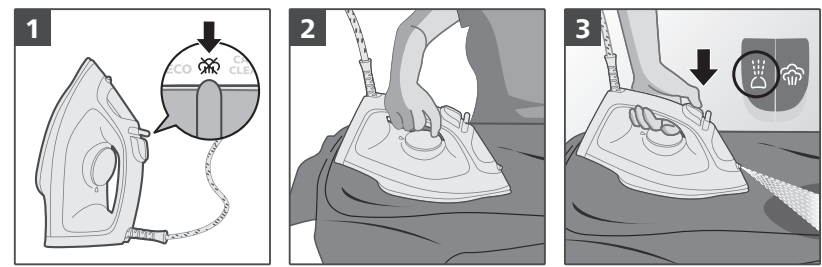


5

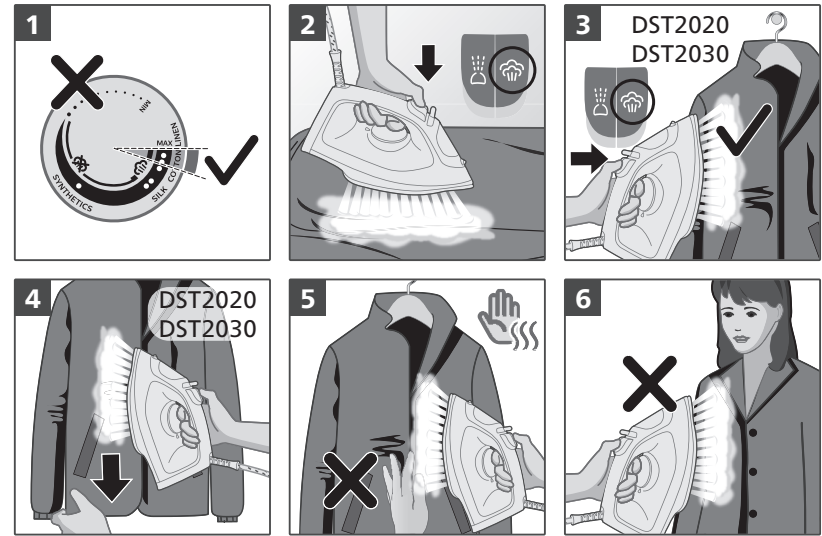


6

Auto
Shut Off

DST2030

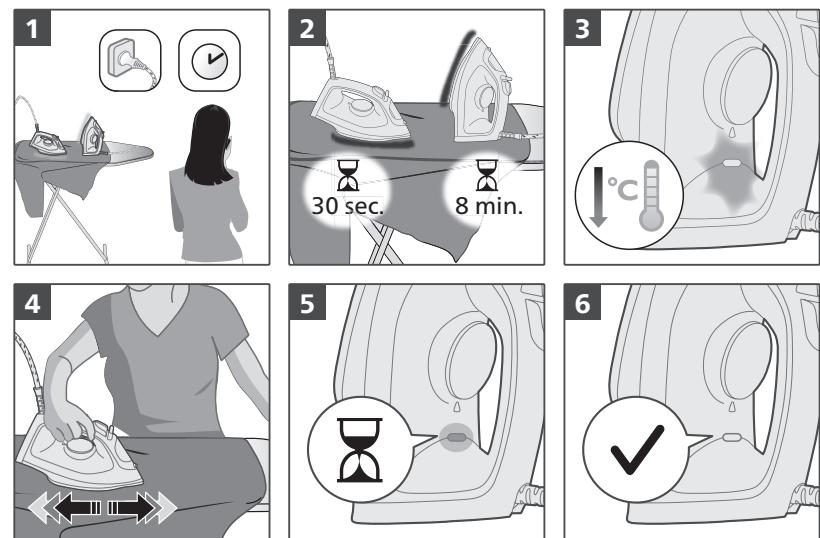


7

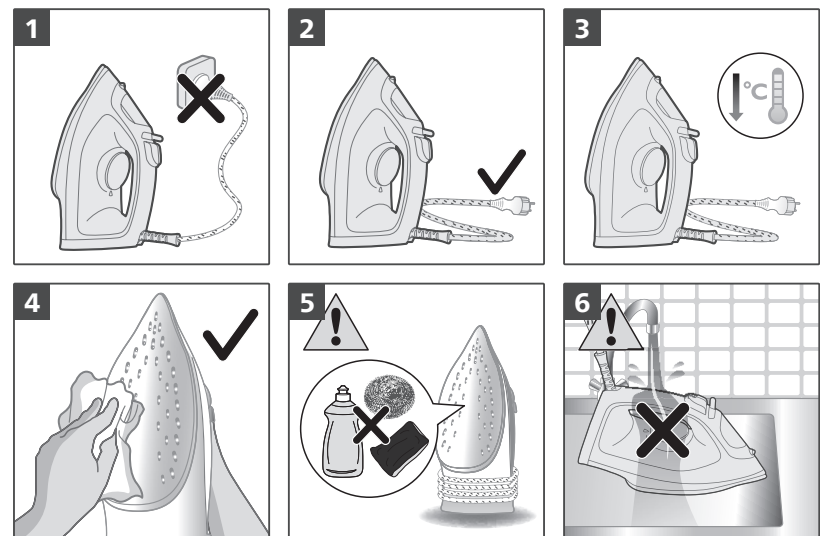


8

1
month

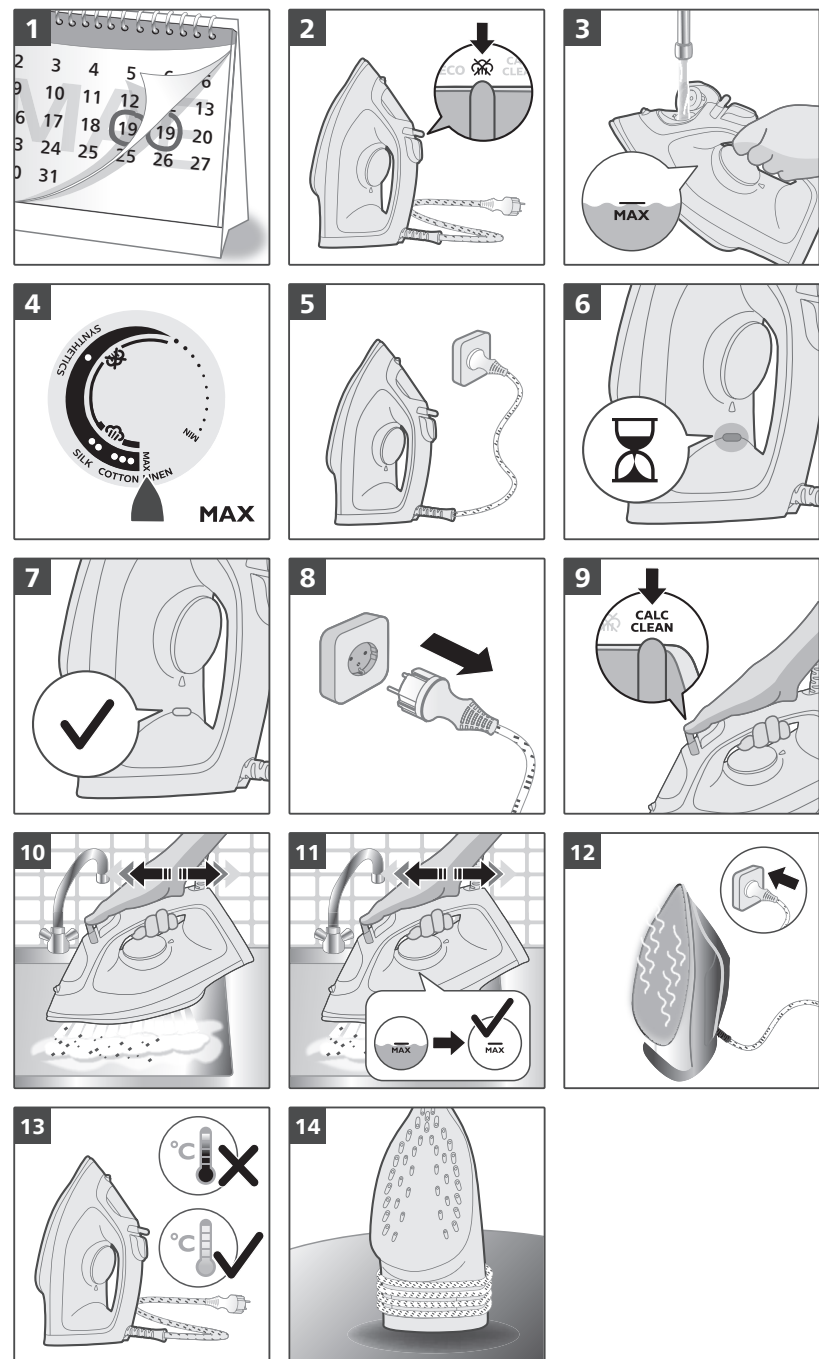

9

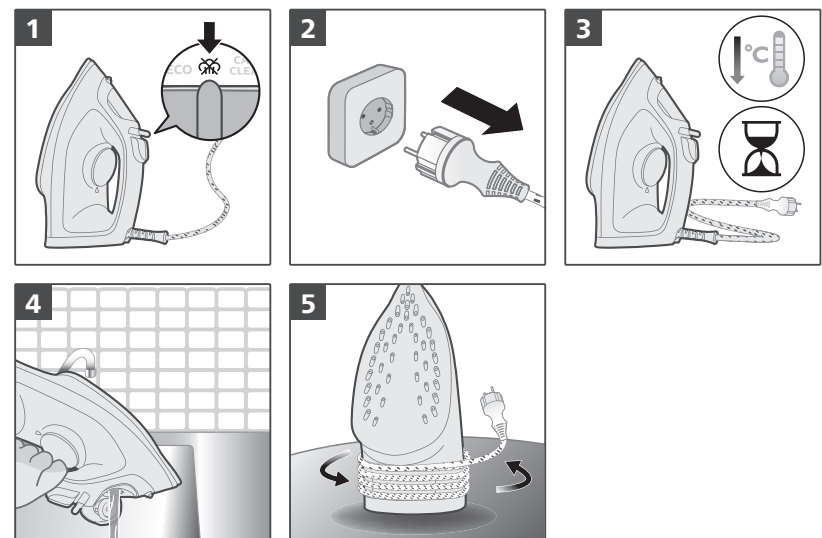

English

1 Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**. Read this user manual, the important information leaflet, and the quick start guide carefully before you use the appliance. Save them for future reference.

2 Product overview (Fig. 1)

① Steam selector	④ Cord winding
② Steam boost button	⑤ Temperature dial
③ Water spray	⑥ Water tank lid

3 Preparing for use

Note: The iron may give off some steam when you use it for the first time. This stops after a short while.

Type of water to use

The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent fast scale build up and prolong the lifetime of the appliance.

Warning: Do not add perfume, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.

Filling the water tank
- Do not plug in the appliance (Fig. 2-1). - Ensure the appliance is cooled down (Fig. 2-2). - Slide the steam selector to the right to select no steam mode (dry ironing)  (Fig. 2-3). - Flip open the water tank lid (Fig. 2-4). - Fill water tank up to the MAX indication in the water tank (Fig. 2-5). - Close the water tank lid firmly (Fig. 2-6).

Setting the temperature

		
	MAX LINEN	
	COTTON	
	SILK	ECO
	SYNTHETICS	

ECO setting ECO: Minimum constant steam is delivered continuously for garments with less creases. This setting also saves energy.

Two steam clouds : More constant steam is delivered continuously for tough creases.

Three steam clouds : Maximum constant steam is delivered continuously for stubborn creases.

4 Using the appliance

- Check the garment label for the required ironing (Fig. 3-1).
- Set the temperature dial to the required ironing temperature by turning it to the appropriate temperature indication (Fig. 3-2).
- Allow the iron to rest on its heel (Fig. 3-3).
- Plug the appliance in an earthed wall socket (Fig. 3-4).
- The iron ready light will light up, indicating iron is heating up (Fig. 3-5).
- When the iron ready light has gone out, wait a while before you start ironing. The ready light will go on from time to time during ironing (Fig. 3-6).

No steam/Dry ironing

- Set steam setting to no steam setting (Fig. 4-1).
- After a short while, steam will cease during ironing (Fig. 4-2).

Water spray

- Set steam setting to no steam setting. Press and release the water spray button for a stream of mist to remove stubborn creases (Fig. 4-3).

Steam boost

- Set temperature dial to **MAX** setting between cotton and linen (Fig. 5-1).
- Press and release the steam boost button for a powerful boost of steam to remove stubborn creases (Fig. 5-2).
- You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging garments (for DST2020 and DST2030 only) (Fig. 5-3).
- Pull and stretch your garment while applying steam boost to remove stubborn creases (for DST2020 and DST2030 only) (Fig. 5-4).
- Do not use your bare hand as a supporting surface when you iron (Fig. 5-5).
- Do not position the appliance towards yourself/ another person (Fig. 5-6).

Auto shut off (DST2030)

- To give you a peace of mind, the appliance will cool down on its own if it is left unattended for a period of time (Fig. 6-1).
- When the appliance is not in use for more than 30 seconds resting on its soleplate or 8 minutes resting on its heel/ base, the appliance will enter auto shut off mode (Fig. 6-2).
- The temperature of the appliance will decrease in auto shut-off mode. The iron ready light will also flash non-stop to indicate the appliance is at auto-off status. To completely switch off the appliance, unplug the appliance from the socket (Fig. 6-3).
- To let the appliance heat up again, pick up the appliance or move it slightly (Fig. 6-4).
- The iron ready light will light up, indicating the appliance is heating up (Fig. 6-5).
- Once the iron ready light turns off, the appliance is ready to use (Fig. 6-6).

5 Cleaning and Maintenance

- Ensure the appliance is not plugged in (Fig. 7-1 & Fig. 7-2).
- Ensure the appliance has cooled down (Fig. 7-3).
- Wipe flakes and other deposit off the soleplate with a damp cloth (Fig. 7-4).

Note: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate (Fig. 7-5).
- Do not wash/ clean the appliance under running water (Fig. 7-6).

Calc-Clean

Tips: The Quick Calc Release function can be used at any time. If you live in a hard water area, use the function more frequently.

- After 1 month of use, it is recommended to perform calc clean to remove scales collected from your appliance to prolong its life and ensure the appliance heats up (Fig. 8-1).
- Make sure the iron is unplugged and the steam setting is set to no steam mode (dry ironing)  (Fig. 8-2).
- Fill the water tank to the **MAX** indication (Fig. 8-3).
- Set the temperature dial to **MAX** (Fig. 8-4).

- Plug in appliance to an earthed wall socket (Fig. 8-5).
- The iron ready light will light up, indicating the appliance is heating up (Fig. 8-6).
- Wait for iron ready light to go out (Fig. 8-7).
- Unplug the iron (Fig. 8-8).
- Slide the steam selector to the Calc-Clean position and hold it (Fig. 8-9).
- Hold the iron over the sink and gently shake the iron. Hot water and calc particles will be released from the soleplate (Fig. 8-10).
- Caution:** While scale is flushed out, steam and boiling water also come out of the soleplate.
- Continue to shake the iron until all the water in the water tank has been released (Fig. 8-11).
- Plug in the appliance and let the appliance heat up to dry the soleplate. This takes about 2 minutes (Fig. 8-12).
- Let the iron cool down (Fig. 8-13).
- Wind the cord around the heel of the iron (Fig. 8-14).

6 Storage

- Slide the steam selector to select no steam mode (dry ironing)  (Fig. 9-1).
- Unplug the appliance (Fig. 9-2).
- Let the appliance cool down (Fig. 9-3).
- Pour any remaining water out of the water tank (Fig. 9-4).
- Wind the power cord around the main body of the appliance (Fig. 9-5).

7 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The iron cannot remove wrinkles from the garment.	There is no steam during ironing.	Fill the water tank and set the steam slider to  .
The iron does not produce any steam.	There is not enough water in the tank.	Fill the water tank.
	The steam slider is set to  .	Set the steam slider to  .
	The iron is not hot enough yet to product steam.	When the iron is heating up, the „iron-ready“ light is steady on. When the iron is ready for use, the light turns off.
Water droplets drips onto the garment during ironing.	You have used the boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	You have not closed the water tank lid properly.	Press the lid until you hear a ‘click’.
The iron does not produce a steam boost.	You have used the steam boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	The iron is not hot enough for ironing yet.	Wait until the ‘iron ready’ light has stopped flashing and lights up steadily.
	You have put a chemical into the water tank.	Rinse the water tank and do not put any perfume or chemicals into the water tank.
Water drips from the soleplate after the iron has been unplugged.	The steam slider is set to  .	Set the steam slider to  .
	You have put the iron in horizontal position with water still left in the water tank.	Empty the water tank after use, or store the iron in vertical position.
The iron leaves a shine or an imprint on the garment.	The surface to be ironed was uneven, for instance because you ironed over a seam or a fold in the garment.	The iron is safe to use on all ironable garments. The shine or imprint is not permanent and disappears when you wash the garment. Avoid ironing over seams or folds. You can also place a cotton cloth over the area to be ironed to avoid imprints.

ไทย

1 ข้อมูลเบื้องต้น

ขอแสดงความยินดีที่คุณเลือกซื้อผลิตภัณฑ์ของเรา และยินดีต้อนรับสู่ Philips เพื่อให้คุณได้รับประโยชน์อย่างเต็มที่จากบริการที่ Philips มอบให้ โปรดลงทะเบียนผลิตภัณฑ์ของคุณที่ **www.philips.com/welcome** โปรดอ่านคู่มือผู้ใช้นี้ เอกสารข้อมูลสำคัญ และคู่มือเริ่มต้นใช้งานอย่างย่อโดยละเอียดก่อนใช้งานผลิตภัณฑ์ และเก็บไว้เพื่ออ้างอิงต่อไป

2 ภาพรวมผลิตภัณฑ์ (รูปที่ 1)

① ตัวเลือกไอน้ำ	④ การพันเก็บสายไฟ
② ปุ่มเพิ่มพลังไอน้ำ	⑤ ปุ่มปรับอุณหภูมิ
③ สปรอยละอองน้ำ	⑥ ผ้าแกงค้ำ

3 การเตรียมการใช้งาน

หมายเหตุ: อาจมีไอน้ำเล็กน้อยออกมาจากเตารีดเมื่อคุณใช้งานเครื่องในครั้งแรก ครั้นจะหายไปเมื่อผ่านไประยะหนึ่ง

ชนิดของน้ำที่ใช้งาน

เครื่องเหมาะสำหรับใช้งานกับน้ำประปา อย่างไรก็ตาม หากคุณอาศัยอยู่ในพื้นที่ที่น้ำกร่อยด่างมาก เราขอแนะนำให้คุณผสมน้ำประปาในปริมาณที่เท่ากับน้ำกลั่นหรือน้ำปราศจากแร่ธาตุ ซึ่งจะช่วยป้องกันไม่ให้เกิดตะกรันสะสมอย่างรวดเร็วและยืดอายุการใช้งานของเครื่อง

คำเตือน: อย่าใส่น้ำหอม น้ำจากเครื่องอบผ้า น้ำสลายยูรี แป้ง น้ำยาขจัดคราบตะกรัน น้ำยารีดผ้าเรียบ น้ำที่ผ่านการขจัดตะกรันด้วยสารเคมี หรือสารเคมีอื่นๆ เนื่องจากอาจทำให้น้ำกร่อยเดิน เกิดคราบสีน้ำตาล หรือทำให้เครื่องเสียหายได้

การเติมน้ำลงในแท่งค้ำ

- ห้ามเสียบปลั๊กเครื่อง (รูปที่ 2-1)
- ตรวจสอบให้แน่ใจว่าเครื่องเย็นลงแล้ว (รูปที่ 2-2)
- เลื่อนตัวเลือกไอน้ำไปทางขวาเพื่อเลือกโหมดไม่ใช้ไอน้ำ (รีดผ้าแบบแห้ง)  (รูปที่ 2-3)
- พลิกเปิดผ้าแท่งค้ำ (รูปที่ 2-4)
- เติมน้ำลงในแท่งค้ำน้ำจนถึงขีดบอกระดับสูงสุด (รูปที่ 2-5)
- ปิดผ้าแท่งค้ำน้ำให้แน่น (รูปที่ 2-6)

การตั้งอุณหภูมิ

			
	MAX LINEN	ระดับสูงสุด ลินิน	
	COTTON	ผ้าฝ้าย	
	SILK	ผ้าไหม	ECO
	SYNTHETICS	ผ้าใยสังเคราะห์	

การตั้งค่าโหมดประหยัดไอน้ำ ECO: พลังไอน้ำคงที่ขั้นต่ำจะถูกปล่อยออกมาอย่างต่อเนื่องสำหรับเสื้อผาที่เป็รอยยับน้อย การตั้งค่านี้ยังช่วยประหยัดพลังงานอีกด้วย

พลังไอน้ำระดับ 2 : พลังไอน้ำสม่ำเสมอยิ่งขึ้นถูกส่งออกมาอย่างต่อเนื่องสำหรับรอยยับที่รุดยาก

พลังไอน้ำสูงสุด : พลังไอน้ำคงที่สูงสุดจะถูกส่งออกมาอย่างต่อเนื่องเพื่อจัดรอยยับที่รุดยาก

4 การใช้งาน

- โปรดดูคำแนะนำเกี่ยวกับการรดับบนป้ายเสื้อผ้าของคุณ (รูปที่ 3-1)
- ตั้งปุ่มหมุนอุณหภูมิไปที่อุณหภูมิการรีดผ้าที่ต้องการโดยหมุนไปที่ตัวแสดงอุณหภูมิที่เหมาะสม (รูปที่ 3-2)
- พืกเตารีดในแนวตั้ง (รูปที่ 3-3)
- เสียบปลั๊กไฟเข้ากับเต้ารับติดตั้งที่ต่อสายดินไว้เรียบร้อยแล้ว (รูปที่ 3-4)
- ไฟแสดงความพร้อมใช้งานของเตารีดจะสว่างขึ้นเพื่อแสดงว่าเตารีดกำลังร้อน (รูปที่ 3-5)
- เมื่อไฟแสดงความพร้อมใช้งานของเตารีดดับลง หรือสติกครู่ก่อนเริ่มรีดผ้า ไฟแสดงความพร้อมใช้งานจะสว่างขึ้นเป็นครั้งคราวระหว่างการรีดผ้า (รูปที่ 3-6)

ไม่ใช้ไอน้ำ/รีดผ้าแบบแห้ง

- ตั้งการตั้งค่าไอน้ำเป็นแบบไม่ใช้ไอน้ำ (รูปที่ 4-1)
- หลังจากนั้นไม่นาน ไอน้ำจะหยุดลงระหว่างรีดผ้า (รูปที่ 4-2)

สปรอยละอองน้ำ

- ตั้งการตั้งค่าไอน้ำเป็นแบบไม่ใช้ไอน้ำ กดและปล่อยปุ่มสปรอยละอองน้ำ เพื่อใช้ไอน้ำขจัดรอยยับที่รุดยาก (รูปที่ 4-3)

เพิ่มพลังไอน้ำ

- ตั้งปุ่มหมุนอุณหภูมิไปที่การตั้งค่าระดับ **สูงสุด** ระหว่างรีดผ้าฝ้ายและผ้าลินิน (รูปที่ 5-1)
- กดและปล่อยปุ่มเพิ่มพลังไอน้ำเพื่อเพิ่มพลังไอน้ำอันทรงพลังเพื่อขจัดรอยยับที่รุดยาก (รูปที่ 5-2)
- คุณสามารถใช้ฟังก์ชันเพิ่มพลังไอน้ำได้เมื่อคุณถือเตารีดในแนวตั้งเพื่อขจัดรอยยับออกจากเสื้อผ้าที่แขวนอยู่ (สำหรับ DST2020 และ DST2030 เท่านั้น) (รูปที่ 5-3)
- ดึงและยืดเสื้อผ้าของคุณพร้อมกับเพิ่มพลังไอน้ำเพื่อขจัดรอยยับที่รุดยาก (สำหรับ DST2020 และ DST2030 เท่านั้น) (รูปที่ 5-4)
- อย่าใช้มือเปล่ารองพื้นผิวเมื่อคุณใช้ไอน้ำ (รูปที่ 5-5)
- อย่าวางห็นเครื่องเข้าหาตัวคุณ/บุคคลอื่น (รูปที่ 5-6)

ปิดเครื่องอัตโนมัติ (DST2030)

- เพื่อให้คุณอุ่นใจได้ เครื่องจะทำความเย็นใต้องหากปล่อยทิ้งไว้โดยไม่มีใครใช้งานเป็นระยะเวลานาน (รูปที่ 6-1)
- เมื่อไม่ได้ใช้งานเครื่องนานกว่า 30 วินาทีโดยวางบนแผ่นความร้อน หรือ 8 นาทีโดยวางแนวตั้ง/บนฐาน เครื่องจะเข้าสู่โหมดตัดไฟอัตโนมัติ (รูปที่ 6-2)
- อุณหภูมิของเครื่องจะลดลงในโหมดตัดไฟอัตโนมัติ ไฟแสดงความพร้อมใช้งานของเตารีดจะกะพริบไม่หยุดเพื่อระบุว่าการีงอยู่ในสถานะตัดไฟอัตโนมัติ หากต้องการปิดเครื่องโดยสมบูรณ์ ให้ถอดปลั๊กเครื่องออกจากเต้ารับ (รูปที่ 6-3)
- หากต้องการให้เครื่องร้อนขึ้นอีกครั้ง ให้หยิบเครื่องขึ้นมาหรือขยับเครื่องเล็กน้อย (รูปที่ 6-4)
- ไฟแสดงความพร้อมใช้งานของเตารีดจะสว่างขึ้นเพื่อแสดงว่าเครื่องกำลังร้อน (รูปที่ 6-5)
- เมื่อไฟแสดงความพร้อมใช้งานของเตารีดดับลง แสดงว่าเครื่องพร้อมใช้งาน (รูปที่ 6-6)

5 การทำความสะอาดและดูแลรักษา

- ตรวจสอบให้แน่ใจว่าเครื่องไม่ได้เสียบปลั๊กอยู่ (รูปที่ 7-1 และรูปที่ 7-2)
- ตรวจสอบให้แน่ใจว่าเครื่องเย็นลงแล้ว (รูปที่ 7-3)
- เช็ดสะกิดและสิ่งตกค้างอื่นๆ ออกจากแผ่นความร้อนด้วยผ้าชุบน้ำหมาด (รูปที่ 7-4)
- หมายเหตุ:** เพื่อรักษาแผ่นความร้อนให้เรียบส้น ให้หลีกเลี่ยงการกระทบกับวัตถุที่เป็นโลหะ ห้ามใช้แผ่นขัดถู น้ำสลายยูรี หรือสารเคมีอื่นๆ ในการทำความสะอาดแผ่นความร้อน (รูปที่ 7-5)
- ห้ามล้าง/ทำความสะอาดเครื่องใต้น้ำไหล (รูปที่ 7-6)

ขจัดคราบตะกรัน

เคล็ดล็บ: สามารถใช้ฟังก์ชันสลายคราบตะกรันด่วนได้ตลอดเวลา หากคุณอาศัยอยู่ในบริเวณที่มีน้ำกร่อยด่าง ให้ใช้ฟังก์ชันนี้อย่างสม่ำเสมอ

- หลังจากใช้งานไป 1 เดือน ขอแนะนำให้ทำความสะอาดคราบตะกรันเพื่อขจัดตะกรันที่สะสมออกจากเครื่องใช้ไฟฟ้าของคุณ เพื่อยืดอายุการใช้งานและให้แน่ใจว่าเครื่องจะทำความร้อนได้ (รูปที่ 8-1)
- ตรวจสอบให้แน่ใจว่าได้ถอดปลั๊กแล้ว และตั้งค่าไอน้ำเป็นโหมดไม่ใช้ไอน้ำ (รีดผ้าแบบแห้ง)  (รูปที่ 8-2)
- เติมน้ำประปาลงในแท่งค้ำน้ำจนถึงขีดระดับ **สูงสุด** (รูปที่ 8-3)
- ตั้งปุ่มหมุนอุณหภูมิไปที่ระดับ **สูงสุด** (รูปที่ 8-4)
- เสียบปลั๊กไฟเข้ากับเต้ารับติดตั้งที่ต่อสายดินไว้เรียบร้อยแล้ว (รูปที่ 8-5)
- ไฟแสดงความพร้อมใช้งานของเตารีดจะสว่างขึ้นเพื่อแสดงว่าเครื่องกำลังร้อน (รูปที่ 8-6)
- รอนกว่าไฟแสดงความพร้อมใช้งานของเตารีดจะดับลง (รูปที่ 8-7)
- ถอดปลั๊กเตารีด (รูปที่ 8-8)
- สไลด์ตัวเลือกไอน้ำไปที่ตัวเลือกขจัดคราบตะกรันค้างไว้ (รูปที่ 8-9)

10 ถือเตารีดไว้เหนืออ่างแล้วหย่าเตารีดเบาๆ น้ำร้อนและอนุภาคคราบตะกรันจะหลุดออกมาจากแผ่นความร้อน (รูปที่ 8-10)

ข้อควรระวัง: ระหว่างที่คราบตะกรันถูกชะล้างออกมา ไอน้ำและน้ำเดือดจะไหลออกมาจากแผ่นความร้อน

11 หย่าเตารีดต่อไปจนกว่าน้ำในแท่งค้ำน้ำจะหมด (รูปที่ 8-11)

12 เสียบปลั๊กเครื่องและปล่อยให้เครื่องร้อนเพื่อทำให้แผ่นความร้อนแห้ง ขั้นตอนนี้ใช้เวลาประมาณ 2 นาที (รูปที่ 8-12)

13 ปลอยให้เตารีดเย็นลง (รูปที่ 8-13)

14 ม้วนสายไฟรอบฐานของตัวเครื่อง (รูปที่ 8-14)

6 การจัดเก็บ

- เลื่อนตัวเลือกไอน้ำเพื่อเลือกโหมดไม่ใช้ไอน้ำ (รีดผ้าแบบแห้ง)  (รูปที่ 9-1)
- ถอดปลั๊กเครื่อง (รูปที่ 9-2)
- ปล่อยให้เครื่องเย็นลง (รูปที่ 9-3)
- เทน้ำที่เหลือออกจากแท่งค้ำเก็บน้ำ (รูปที่ 9-4)
- ม้วนสายไฟรอบตัวเครื่อง (รูปที่ 9-5)

7 การแก้ไขปัญหา

ในบทนี้ เราได้รวบรวมปัญหาต่างๆ ที่อาจเกิดขึ้นกับเครื่องได้ หากคุณไม่สามารถแก้ปัญหาด้วยข้อมูลด้านล่างได้ โปรดดูรายการคำถามที่พบบ่อยที่ **www.philips.com/support** หรือติดต่อศูนย์บริการลูกค้าในประเทศของคุณ

ปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ปัญหา
เตารีดไม่สามารถขจัดรอยยับออกจากผ้า	ไม่มีพลังไอน้ำในระหว่างการรีดผ้า	เติมน้ำลงในแท่งค้ำน้ำแล้วตั้งค่าปุ่มสไลด์ปรับพลังไอน้ำที่ 
เตารีดไม่ผลิตไอน้ำ	มีน้ำในแท่งค้ำไม่เพียงพอ	เติมน้ำลงในแท่งค้ำ
	ปุ่มสไลด์ปรับพลังไอน้ำถูกตั้งค่าไปที่ 	ตั้งค่าปุ่มสไลด์ปรับพลังไอน้ำไปที่ 
	เตารีดยังร้อนไม่พอที่จะทำให้เกิดไอน้ำ	เมื่อเตารีดกำลังทำความร้อน ไฟ "พร้อมสำหรับรีดผ้า" จะสว่างตลอดเวลา เมื่อเตารีดพร้อมทำการใช้งานไฟจะดับลง
ละอองน้ำจะหยดลงบนเนื้อผ้าขณะรีดผ้า	คุณใช้ฟังก์ชันพลังไอน้ำพิเศษบ่อยเกินไปภายในระยะเวลาสั้นๆ	ควรรีดในตำแหน่งแวนอนสักระยะก่อนใช้ฟังก์ชันพลังไอน้ำพิเศษอีกครั้ง
	คุณยังปิดผ้าแท่งค้ำน้ำไม่สนิท	กดฝาปิดลงจนได้ยินเสียงดัง 'คลิก'
เตารีดไม่สร้างพลังไอน้ำพิเศษ	คุณใช้ฟังก์ชันพลังไอน้ำพิเศษบ่อยเกินไปภายในระยะเวลาสั้นๆ	ควรรีดในตำแหน่งแวนอนสักระยะก่อนใช้ฟังก์ชันพลังไอน้ำพิเศษอีกครั้ง
	เตารีดยังมีความร้อนไม่เพียงพอสำหรับการรีดผ้า	รอนกว่าไฟสัญญาณ 'เตารีดพร้อมใช้' หยุดกะพริบเป็นช่วงๆ และติดสว่างตลอดเวลา
	คุณใส่สารเคมีลงในแท่งค้ำน้ำ	ล้างแท่งค้ำน้ำและอย่าใส่น้ำหอมหรือสารเคมีใดๆ ลงในแท่งค้ำน้ำ
น้ำหยดออกมาจากแผ่นความร้อนหลังจากเตารีดถอดปลั๊กเตารีดแล้ว	ปุ่มสไลด์ปรับพลังไอน้ำถูกตั้งค่าไปที่ 	ตั้งค่าปุ่มสไลด์ปรับพลังไอน้ำไปที่ 
	คุณอาจวางเตารีดในแวนอนในขณะที่มีน้ำเหลืออยู่ในแท่งค้ำน้ำ	เทน้ำออกจากแท่งค้ำหลังการใช้งานหรือจัดเก็บเตารีดโดยตั้งในแนวตั้ง
เตารีดทำให้ผ้าที่รีดเป็นเงาและมีรอยกด	พื้นผิวบริเวณที่จะรีดนั้นไม่เรียบ เช่น คุณอาจรีดผ้าบนรอยตะเข็บหรือมีผ้าพับซ้อน	สามารถใช้งานเตารีดกับเนื้อผ้าที่รีดได้ทุกชนิดได้อย่างปลอดภัย เราหรือรอยกดบนผ้าไม่เป็นรอยถาวร และจะหายไปเมื่อคุณซักผ้า โปรดหลีกเลี่ยงการรีดผ้าลงบนรอยตะเข็บหรือรอยพับ คุณยังสามารถวางผ้าฝ้ายไว้บนบริเวณที่ต้องการจะรีดเพื่อหลีกเลี่ยงรอยกดของเตารีดได้