


# PHILIPS

Fully automatic  
espresso machine

4400 series  
5500 series

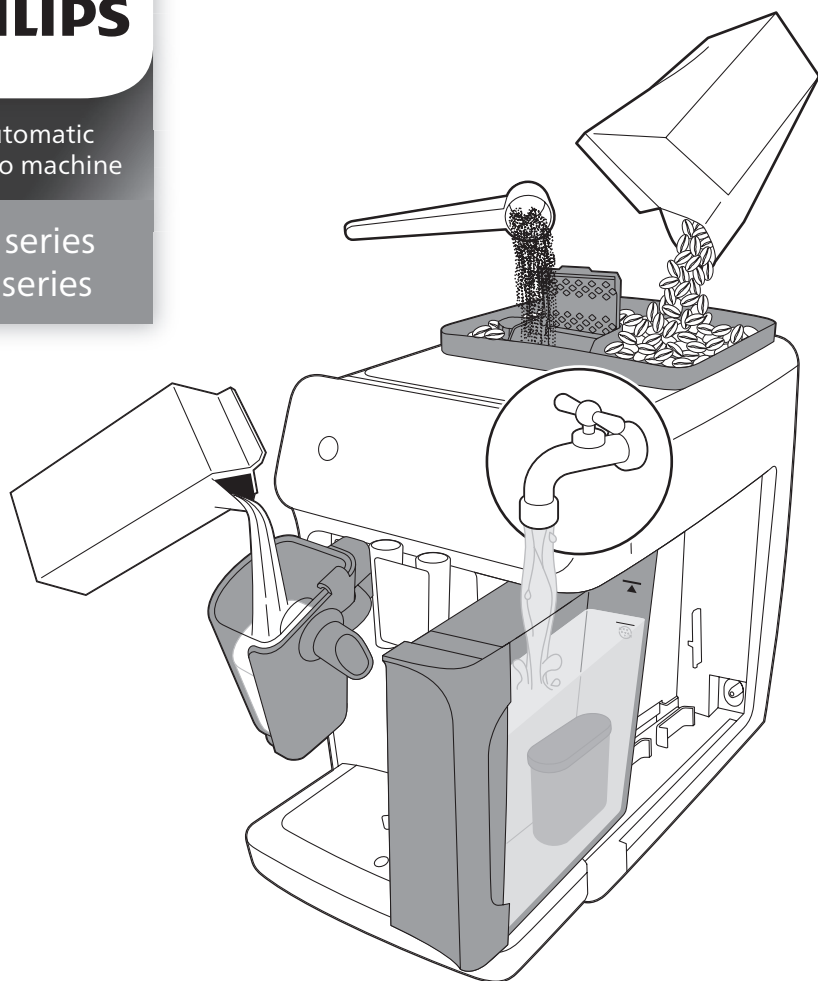

EN USER MANUAL

繁體中文 使用手冊

한국어 사용 설명서



[www.home.id](http://www.home.id)



EP4400



EP5500



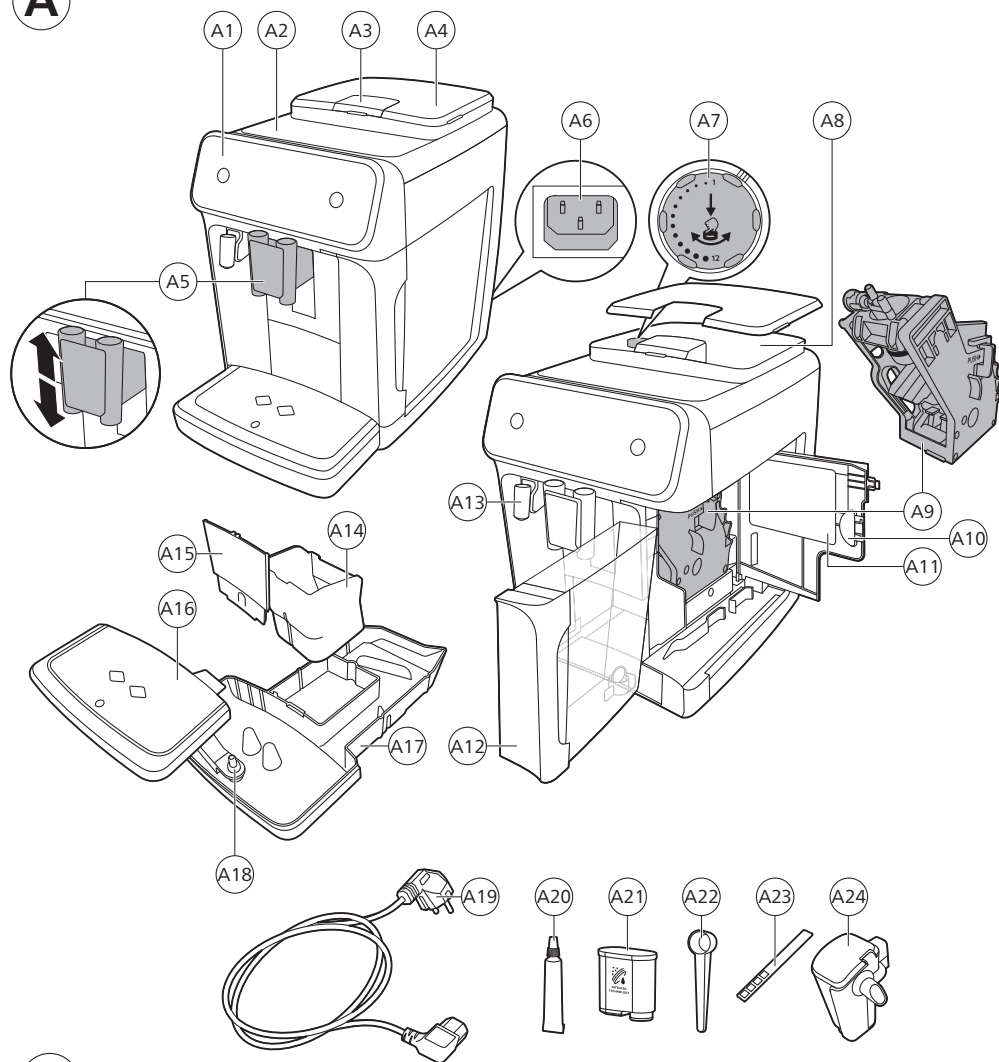

**A****B**

A18 A17



A16



A14



A24



A22



A15





A9



A4



A12

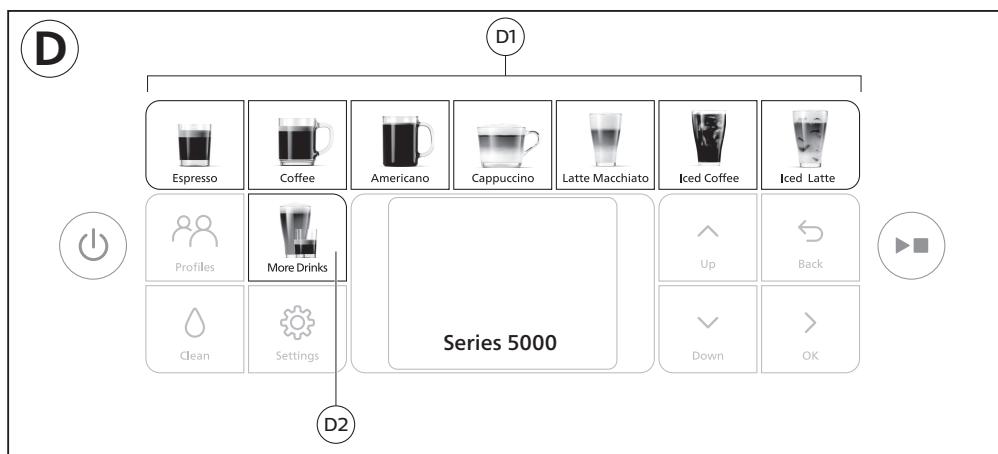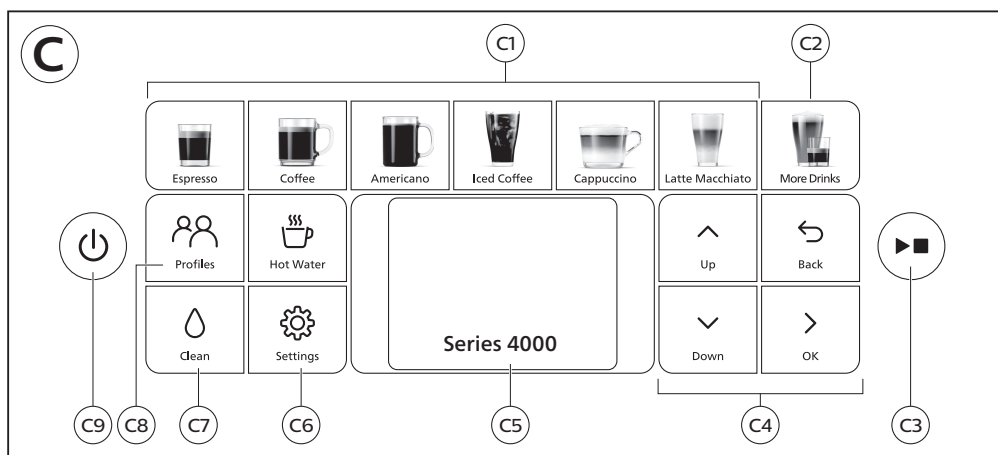

**E**

| Series 4400<br>Series 5500                                                                                                                                                                                                                        | A20<br> | A21<br> | A22<br> | A23<br> | A24<br> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <b>LatteGo</b><br><br>EP4441<br>EP4443<br>EP4444<br>EP4446<br>EP4447<br>EP4449<br>EP5541<br>EP5543<br>EP5544<br>EP5545<br>EP5546<br>EP5547<br>EP5548<br>EP5549 | ✓                                                                                          | ✓                                                                                          | ✓                                                                                          | ✓                                                                                          | ✓                                                                                           |

Contents

|                                       |    |
|---------------------------------------|----|
| Machine overview (Fig. A)             | 2  |
| Control panel                         | 2  |
| Introduction                          | 3  |
| Before first use                      | 4  |
| Brewing drinks                        | 5  |
| Personalizing drinks                  | 7  |
| Adjusting machine settings            | 7  |
| Removing and inserting the brew group | 9  |
| Cleaning and maintenance              | 9  |
| AquaClean water filter                | 11 |
| Descaling procedure (30 min.)         | 12 |
| Ordering accessories                  | 13 |
| Troubleshooting                       | 13 |
| Technical specifications              | 19 |

Machine overview (Fig. A)

|    |                               |     |                                         |
|----|-------------------------------|-----|-----------------------------------------|
| A1 | Control panel                 | A10 | Service door                            |
| A2 | Cup holder                    | A11 | Data label with type number             |
| A3 | Pre-ground coffee compartment | A12 | Water tank                              |
| A4 | Lid of bean hopper            | A13 | Hot water spout                         |
| A5 | Adjustable coffee spout       | A14 | Coffee grounds container                |
| A6 | Socket for power cord         | A15 | Front panel of coffee grounds container |
| A7 | Grind setting knob            | A16 | Drip tray cover                         |
| A8 | Coffee bean hopper            | A17 | Drip tray                               |
| A9 | Brew Group                    | A18 | 'Drip tray full' indicator              |

Accessories

|     |                        |     |                           |
|-----|------------------------|-----|---------------------------|
| A19 | Power cord             | A22 | Measuring scoop           |
| A20 | Grease tube            | A23 | Water hardness test strip |
| A21 | AquaClean water filter | A24 | LatteGo (milk container)  |

Control panel

There are multiple versions of this espresso machine, with different control panels. Each version has its own type number. You can find the type number on the data label on the inside of the service door (Fig. A11). You can also find the type number by tapping the Settings ⚙ icon and selecting 'Support'. Refer to figure C and D for an overview of all buttons and icons. Below you find the description.

Use the up and down arrows to scroll through the display and tap the OK icon to select or confirm your choices.

## All types (Fig. C/D)

|                                                                                                        |                                                                                                        |                                                                                                         |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| C1/D1 One-touch drink icons                                                                            | C4. Navigation icons (up, down, back, ok)                                                              | C7. Cleaning menu      |
| C2/D2. Menu with More Drinks                                                                           | C5. Display                                                                                            | C8. Personal profiles  |
| C3 Start/stop  button | C6. Machine settings  | C9. On/off button                                                                                       |

## 4000 Series only (Fig. C)

C1 One-touch drink icons: Espresso, Coffee, Americano, Iced Coffee, Cappuccino, Latte Macchiato

## 5000 Series only (Fig. D)

D1 One-touch drink icons: Espresso, Coffee, Americano, Cappuccino, Latte Macchiato, Iced Coffee, Iced Latte

# Introduction

Congratulations on your purchase of a Philips fully automatic coffee machine! To fully benefit from the support that we offer, please register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Read the separate safety booklet carefully before you use the machine for the first time and save it for future reference.

To help you get started and to get the best out of your machine, we offer support in multiple ways. In the box you can find:

- 1 The quick start guide with picture-based usage instructions and information on cleaning and maintenance.
- 2 The separate safety booklet with instructions on how to use the machine in a safe way.
- 3 For online support (this extended user manual, frequently asked questions, videos, etc.), scan the QR code on the cover of this booklet to download the app, or visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care).


**i** There are multiple versions of this espresso machine, which all have different features. Each version has its own type number. You can find the type number on the data label on the inside of the service door (see fig A11).

**i** This machine has been tested with coffee. Although it has been carefully cleaned, there may be some coffee residues left. We guarantee, however, that the machine is absolutely new.


The machine automatically adjusts the amount of ground coffee that is used to make the best-tasting coffee. You should brew 5 coffees initially to allow the machine to complete its self-adjustment.

Make sure you rinse the LatteGo (milk container) before first use.

# Before first use

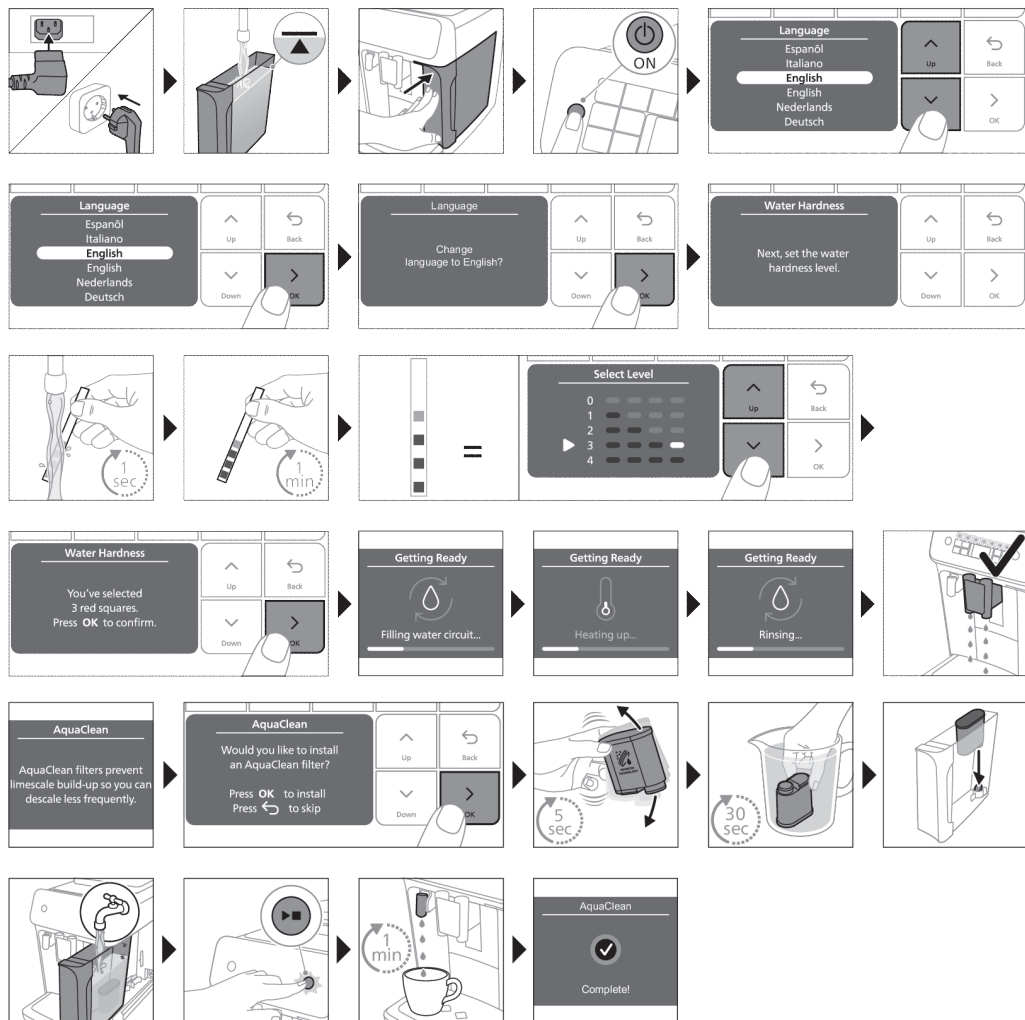

## Assembling LatteGo

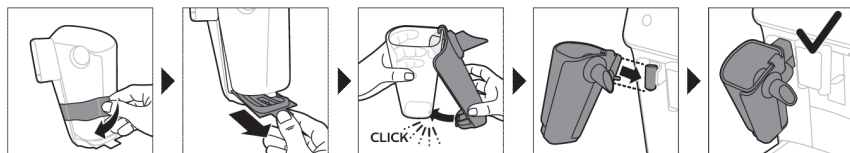

# Brewing drinks

## General steps

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 Insert the small plug into the socket located on the back of the machine. Insert the mains plug into the wall socket.
- 3 Press the on/off button to switch on the machine.
  - When all lights in the drink icons light up continuously, the machine is ready for use.
- 4 Place a cup under the coffee dispensing spout. Slide the coffee dispensing spout up or down to adjust its height to the size of the cup or glass you are using (Fig. 2).

## Brewing coffee with beans

- 1 To brew a coffee, tap the drink icon of your choice or tap the 'More Drinks' icon.
  - You can now adjust the drink to your personal taste. Use the up and down arrows to adjust the coffee strength. Tap the OK icon if you want to adjust more settings.
- 2 Press the start/stop ► button at any time to start brewing the selected drink.
- 3 To stop dispensing coffee before the machine is finished, press the start/stop ► button again.

**i** To brew 2 coffees at the same time, tap the drink icon twice or select the 2x icon scrolling the dedicated bar.

**⚠** Do not use caramelized or flavored coffee beans.

## Brewing milk-based drinks with LatteGo (milk container)

**⚠** LatteGo consists of a milk container, a frame and a storage lid. To avoid leakage, make sure the frame and the milk container are properly assembled before you fill the milk container.

- 1 To assemble LatteGo, first insert the top of the milk container under the hook at the top of the frame (Fig. 8). Then press home the bottom part of the milk container. You hear a click when it locks into place (Fig. 9).

**Note:** Make sure that the milk container and the frame are clean before you connect them.

- 2 Slightly tilt LatteGo and put it on the hot water spout (Fig. 10). Then press it home until it locks into place (Fig. 11).
- 3 Fill LatteGo with milk (Fig. 12). Do not fill the milk container beyond the maximum indication.

**i** If you have personalized the milk quantity, you may need to fill the milk container with more or less milk than indicated for this drink on LatteGo.

**🥛** Always use milk coming directly from the fridge for optimal results.

- 4 Place a cup on the drip tray.
- 5 Tap the milk-based drink icon of your choice or tap the 'More Drinks' icon to select a different drink
  - You can now adjust the drink to your own preference.
- 6 Press the start/stop ► button.
  - When you brew cappuccino, flat white, latte macchiato, iced cappuccino or iced latte, the machine first dispenses milk and then coffee. When you brew caffè latte, café au lait, iced caffè latte, or iced café au lait, the machine first dispenses coffee and then milk.



## 6 English

- To stop dispensing milk before the machine has dispensed the preset amount, press the start/stop ► button.
- 7 To stop dispensing the complete drink (milk and coffee) before the machine is finished, press and hold the start/stop ► button.

## Brewing iced drinks

**i** The coffee is brewed with warm water. Brew over ice cubes for optimal results.

- 1 Take a glass and fill it two-thirds with ice cubes.
- 2 Place the glass under the coffee dispensing spout.
- 3 Tap the iced coffee icon.
  - You can now adjust the drink to your preferred taste.

**i** We recommend using aroma strength 3.

- 4 Press the start/stop ► button.
- 5 To stop dispensing coffee before the machine is finished, press the start/stop ► button again.
- 6 For a special iced coffee treat, top it up with cold milk.

## Extra shot (ExtraShot)

Your machine offers you the possibility to add an extra shot of Ristretto to your coffee and milk drinks, for example if you want to have a stronger coffee.

- 1 Place a cup under the spout
- 2 Tap one of the one-touch drinks icons to select a drink or tap the 'More Drinks' icon to select a drink.
- 3 Use the up arrow to set the strength to the top level and then select the ExtraShot function.
- 4 Tap the OK icon if you want to personalize the other settings. Then press the start/stop ► icon to start brewing the drink.
- 5 To stop dispensing the drink before the machine has finished, press the start/stop ► icon again.

**i** When you have selected the ExtraShot function, you can only brew one coffee at the time.

## Brewing coffee with pre-ground coffee

You can choose to use pre-ground coffee instead of beans, for example if you prefer a different coffee variety or decaffeinated coffee.

- 1 Open the lid of the pre-ground coffee compartment and pour one leveled measuring scoop of pre-ground coffee into it (Fig. 14). Then close the lid.
- 2 Tap one of the one-touch drink icons or tap the 'More Drinks' icon to select another drink.
- 3 Select the pre-ground coffee function. You can do this in 2 different ways:
  - use the down arrow to set the strength to the lowest level and then select the pre-ground function.
  - press the Settings ⚙ icon and use the down arrow to select the pre-ground function.
- 4 To stop dispensing coffee before the machine has finished, press the start/stop ► button again.

**i** When you select the pre-ground coffee function:

- it is automatically stored.
- you can only brew one coffee at a time.
- you cannot select a different aroma strength.

## Dispensing hot water

- 1 If attached, remove LatteGo.
- 2 Place a cup under the hot water spout.
- 3 Tap the 'More Drinks' icon and use the up and down arrows to select hot water.
- 4 Use the up and down arrows to adjust the hot water quantity and/or temperature to your preference.
- 5 Press the start/stop ► button.
  - Hot water is dispensed from the hot water spout (Fig. 15).
- 6 To stop dispensing hot water before the machine is finished, press the start/stop ► button again.

## Personalizing drinks

The machine allows you to adjust the settings of a drink to your own preference and to store the adjusted drink in a personal profile. The different profiles have different colors.

After selecting a drink by tapping one of the one-touch drink icons or by tapping the 'More Drinks' icon, you can do the following things:

- 1 adjust the aroma strength with the up and down icons (Fig. 5). There are 5 strengths, the lowest is the mildest and the highest is the strongest.
- 2 adjust the coffee quantity (Fig. 16) and/or the milk quantity with the up and down icons. There are 5 quantities for each of the settings.

**i** As soon as the machine has finished brewing, the settings you selected will be stored automatically in the profile you chose.

## Select a profile

You can select a profile and store a recipe using My coffee choice profiles (My Coffee Choice Profiles).

- 1 Tap the profiles  icon repeatedly to select one of the colored profiles. All profiles have a different color.
- 2 Select a drink by tapping one of the one-touch drink icons or by tapping the 'More Drinks' icon.
- 3 Adjust the drink settings to your favorite taste.
- 4 Press start/stop ► button to brew the drink you selected
  - Your new settings have now been stored in the colored profile you selected.

**i** You can always restore the factory settings of the machine (see 'Restoring factory settings').

## Guest profile

Your machine is equipped with a guest profile. When the guest profile is selected, the profile icon is off. When you select this profile, you can still personalize the settings to your own preference but the recipes you brew will not be stored.

## Adjusting machine settings

### Setting the water hardness

**i** We advise you to adjust the water hardness setting to the water hardness level in your region for optimal performance and a longer lifetime of the machine. This also prevents you from having to descale the machine too often. The default water hardness setting is 4: hard water.

## Use the water hardness test strip supplied in the box to determine the water hardness in your region:

- 1 Immerse the water hardness test strip in tap water or hold it under the tap for 1 second (Fig. 17).
- 2 Wait 1 minute. The number of squares on the test strip that turn red indicate the water hardness (Fig. 18).

## Set the machine to the correct water hardness:

- 1 Tap the Settings  icon and use the up and down arrows to select 'Water hardness'. Then press the OK icon to confirm.
- 2 Use the up and down arrows to select the water hardness level. The number of red squares selected on the display should be the same as the number of red squares on the test strip (Fig. 19).
- 3 When you have set the correct water hardness, tap the OK icon to confirm.

## Adjusting grinder settings

You can change the coffee strength with the grind setting knob inside the bean container. The lower the grind setting, the finer the coffee beans are ground and the stronger the coffee. There are 12 different grind settings you can choose from.

The machine has been set up to get the best taste out of your coffee beans. Therefore we advise you not to adjust the grind setting until you have brewed 100-150 cups (approx. 1 month of use).

**i** You can only adjust the grind settings when the machine is grinding coffee beans. You need to brew 2 to 3 drinks before you can taste the full difference.

**A** Do not turn the grind setting knob more than one notch at a time to prevent damage to the grinder.

- 1 Place a cup under the coffee dispensing spout.
- 2 Open the lid of the coffee bean hopper.
- 3 Tap the espresso icon and then press the start/stop  button.
- 4 When the grinder starts grinding, press down the grind setting knob and turn it to the left or right. (Fig. 20)

## Adjusting other machine settings

By tapping the Settings  icon you can adjust the following machine settings:

- Water hardness: you can select between 5 levels according to the water hardness in your region;
- Standby time: you can select 15, 30, 60 or 180 min
- Display brightness: you can select low, medium and high.
- Language
- Sound: you can activate or deactivate the beeping sound of the machine
- Temperature: you can choose between 3 brewing temperatures for your coffee
- Front illumination (5500 series only): you can choose 'always on', 'on during brewing' or 'always off'.
- Measuring unit: you can choose between ml. or oz.
- Profile activation: you can activate or deactivate profiles.
- Rinsing on start-up: you can activate or deactivate an automatic rinsing cycle when you switch on the machine.
- Display backlight: you can activate or deactivate the backlight in the drink buttons.

## Restoring factory settings

The machine offers you the possibility to restore the factory settings at any moment.

- 1 Tap the Settings  icon.
- 2 Use the up and down icons to select 'Factory settings'. Confirm by tapping the OK icon.
- 3 Press the start/stop  button to confirm you want to restore the settings.
  - The settings are now being restored.

**i** The following factory settings are restored to default: water hardness, standby time, brightness, display backlight, start-up rinsing, sound, temperature, front illumination, profiles.

## Removing and inserting the brew group

Go to [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for detailed video instructions on how to remove, insert and clean the brew group.

### Removing the brew group from the machine

- 1 Switch off the machine.
- 2 Remove the water tank and open the service door (Fig. 21).
- 3 Press the PUSH handle (Fig. 22) and pull at the grip of the brew group to remove it from the machine (Fig. 23).

### Reinserting the brew group

**i** Before you slide the brew group back into the machine, make sure it is in the correct position.

- 1 Check if the brew group is in the correct position. The arrow on the yellow cylinder on the side of the brew group has to be aligned with the black arrow and N (Fig. 24).
  - If they are not aligned, push down the lever until it is in contact with the base of the brew group (Fig. 25).
- 2 Slide the brew group back into the machine along the guiding rails on the sides (Fig. 26) until it locks into position with a click (Fig. 27). Do not press the PUSH button.
- 3 Close the service door and place back the water tank.

## Cleaning and maintenance

Regular cleaning and maintenance keeps your machine in top condition and ensures good-tasting coffee for a long time with a steady coffee flow.

Consult the table below for a detailed description on when and how to clean all detachable parts of the machine. You can find more detailed information and video instructions on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). See figure B for an overview of which parts can be cleaned in the dishwasher.

| Detachable parts | When to clean | How to clean                                                                                                                                                |
|------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Brew group       | Weekly        | Remove the brew group from the machine (see 'Removing and inserting the brew group'). Rinse it under the tap (see 'Cleaning the brew group under the tap'). |
|                  | Monthly       | Clean the brew group with the Philips coffee oil remover tablet (see 'Cleaning the brew group with the coffee oil remover tablets').                        |

| Detachable parts              | When to clean                                                                                                                                   | How to clean                                                                                                                                                                                                                                                                                                                               |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pre-ground coffee compartment | Check the pre-ground coffee compartment weekly to see if it is clogged.                                                                         | Unplug the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into it. Move the handle up and down until the clogged ground coffee falls down (Fig. 28). Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. |
| Coffee grounds container      | Empty the coffee grounds container when prompted by the machine. Clean it weekly.                                                               | Remove the coffee grounds container while the machine is switched on. Rinse it under the tap with some washing-up liquid or clean it in the dishwasher. <b>The front panel of the coffee grounds container (Fig. A15) is not dishwasher-safe.</b>                                                                                          |
| Drip tray                     | Empty the drip tray daily or as soon as the red 'drip tray full' indicator pops up through the drip tray (Fig. 29). Clean the drip tray weekly. | Remove the drip tray (Fig. 30) and rinse it under the tap with some washing-up liquid. You can also clean the drip tray in the dishwasher. <b>The front panel of the coffee grounds container (Fig. A15) is not dishwasher-safe.</b>                                                                                                       |
| LatteGo                       | After every use                                                                                                                                 | First clean LatteGo while it is attached to the machine by using the 'Quick milk clean' program (see 'Quick cleaning LatteGo'). Then remove it from the machine and rinse it under the tap or clean it in the dishwasher.                                                                                                                  |
| Lubrication of the brew group | Every 2 months                                                                                                                                  | Consult the lubrication table and lubricate the brew group with the Philips grease (see 'Lubricating the brew group').                                                                                                                                                                                                                     |
| Water tank                    | Weekly                                                                                                                                          | Rinse the water tank under the tap                                                                                                                                                                                                                                                                                                         |
| Machine front                 | Weekly                                                                                                                                          | Clean with a non-abrasive cloth                                                                                                                                                                                                                                                                                                            |

## Cleaning the brew group

Regular cleaning of the brew group prevents coffee residues from clogging up the internal circuits. Visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for support videos on how to remove, insert and clean the brew group.

### Cleaning the brew group under the tap

- 1 Remove the brew group (see 'Removing and inserting the brew group').
- 2 Rinse the brew group thoroughly with water. Carefully clean the upper filter (Fig. 31) of the brew group.
- 3 Let the brew group air-dry before you place it back. Do not dry the brew group with a cloth to prevent fibers from collecting inside the brew group.

### Cleaning the brew group with the coffee oil remover tablets

Only use Philips coffee oil remover tablets.

- 1 Tap the Clean  icon and use the up and down arrows to select 'Brew group clean'.
- 2 Tap the OK icon to confirm and then follow the instructions on the screen.

## Lubricating the brew group

To improve your machine's performance, we suggest that you lubricate the brew group every 2 months, to ensure that the moving parts continue to move smoothly.

- 1 Apply a thin layer of grease on the piston (grey part) of the brew group (Fig. 32).
- 2 Apply a thin layer of grease around the shaft (grey part) in the bottom of the brew group (Fig. 33).
- 3 Apply a thin layer of grease to the guiding rails on both sides (Fig. 34).

## Cleaning LatteGo (milk container)

### Quick cleaning LatteGo

- 1 Make sure LatteGo is properly attached to the machine (Fig. 10).
- 2 Place a cup under the spout.
- 3 Tap the Clean  icon and use the up and down arrows to select the 'Quick milk clean' program.
- 4 Tap the OK icon to confirm and then follow the instructions on the screen to remove any milk that may be left inside the milk system.
  - Small jets of hot water will be dispensed by the milk system.
- 5 Store LatteGo with the remaining milk in the fridge.

### Thoroughly cleaning LatteGo

- 1 Remove LatteGo from the machine (Fig. 35).
- 2 Pour out any remaining milk.
- 3 Press the release button and remove the milk container from the frame of LatteGo (Fig. 36).
- 4 Clean all parts in the dishwasher or under the tap with lukewarm water and some washing-up liquid.

## AquaClean water filter

Your machine is AquaClean enabled. You can place the AquaClean water filter in the water tank to preserve the taste of your coffee. It also diminishes the need for descaling by reducing limescale build-up in your machine. You can purchase an AquaClean water filter from your local retailer, from authorized service centers or online at [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories).

## AquaClean filter status indication

When the AquaClean is active, the status of the AquaClean filter is always visible on the screen as a percentage.

- If the status of the AquaClean filter is 10% or less, the screen shows a message for 2 seconds each time you switch on the machine. This message advises you to buy a new filter.
- If the status of the filter is 0%, the machine asks you to replace the AquaClean filter every time you switch on the machine.

## Activating the AquaClean water filter (5 min.)

**i** The machine does not automatically detect that a filter has been placed in the water tank. Therefore you need to activate each new AquaClean water filter that you install in the 'Clean' menu.

When the machine stops showing the filter activation message, you can still activate an AquaClean water filter, but you will need to descale the machine first.

**i** Your machine has to be completely limescale-free before you start using the AquaClean water filter.

Before activating the AquaClean water filter, it has to be prepared by soaking it in water as described below. If you don't do this, air might be drawn into the machine instead of water, which makes a lot of noise and prevents the machine from being able to brew coffee.

- 1 Tap the 'Clean'  icon and use the up and down arrows to select 'AquaClean'.
- 2 Tap the OK icon to confirm.
- 3 Tap the OK icon again when the activation screen appears. Follow the instructions on the screen.
- 4 Shake the filter for about 5 seconds (Fig. 37).
- 5 Immerse the filter upside down in a jug with cold water and shake/press it (Fig. 38).
- 6 Insert the filter vertically onto the filter connection in the water tank. Press it down to the lowest possible point (Fig. 39).
- 7 Fill the water tank with fresh water and place it back into the machine.
- 8 If attached, remove the LatteGo.
- 9 Place a bowl under the hot water spout.
- 10 Press the start/stop  button to start the activation process.
- 11 Hot water will be dispensed from the hot water spout during 1 minute.
- 12 The filter is now successfully activated.

## Replacing the AquaClean water filter (5 min.)

After 95 liters of water have flowed through the filter, the filter will cease to work. The AquaClean status indicator drops to 0% to remind you to replace the filter. As long as the AquaClean status indicator is shown on the display, you can replace the filter without having to descale the machine first. If you do not replace the AquaClean water filter in time, the AquaClean indicator goes out after some time. In that case you can still replace the filter but you first need to descale the machine.

When the AquaClean status indicator drops to 0% or when the machine reminds you to replace the AquaClean filter:

- 1 take out the old AquaClean water filter.
- 2 install a new filter and activate it as described in chapter 'Activating the AquaClean water filter (5 min.)'.

**i** Replace the AquaClean water filter at least every 3 months, even if the machine does not yet indicate that replacement is required.

## Descaling procedure (30 min.)

Please use Philips descaler only. Under no circumstances should you use a descaler based on sulfuric acid, hydrochloric acid, sulfamic or acetic acid (vinegar) as this may damage the water circuit in your machine and not dissolve the limescale properly. Not using the Philips descaler will void your warranty. Failure to descale the appliance will also void your warranty. You can buy Philips descaling solution in the online shop at [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

When the machine needs descaling, a message appears on the display.

- 1 Touch the clean  icon on the user interface and select 'Descaling' in the menu.
- 2 Follow the instructions on the screen.
- 3 If attached, remove LatteGo.
- 4 Remove the drip tray and the coffee grounds container, empty them and put them back into place.
- 5 Remove the water tank and empty it. Then remove the AquaClean water filter.
- 6 Pour the whole bottle of Philips descaler in the water tank and then fill it with water up to the Calc / Clean indication (Fig. 40). Then place it back into the machine.
- 7 Place a large container (1.5 l) under the coffee dispensing spout and the water spout.

- 8 Press the start/stop ► button to start the descaling procedure. The descaling procedure lasts approximately 30 minutes and consists of a descaling cycle and a rinsing cycle.
- 9 Wait until the machine stops dispensing water. Refill the water tank when the message appears on the display. The descaling procedure is finished when the machine stops dispensing water.
- 10 Install and activate a new AquaClean water filter in the water tank.
  - When the descaling procedure is finished, the machine reminds you to install the new AquaClean filter (see 'Replacing the AquaClean water filter (5 min.)').

 **Tip:** Using the AquaClean filter reduces the need for descaling!

## What to do if the descaling procedure is interrupted

You can exit the descaling procedure by pressing the on/off button on the control panel. If the descaling procedure is interrupted before it is completely finished, do the following:

- 1 Empty and rinse the water tank thoroughly.
- 2 Fill the water tank with fresh water up to the Calc / Clean level indication and switch the machine back on.
- 3 Before brewing any drinks, perform a manual rinsing cycle. To perform a manual rinsing cycle, first dispense half a water tank of hot water by repeatedly selecting the hot water function and then brew 2 cups of pre-ground coffee without adding ground coffee.

 **i** If the descaling procedure was not completed, the machine will require another descaling procedure as soon as possible.

## Ordering accessories

To clean and descale the machine, only use the Philips maintenance products. These products can be purchased from your local retailer, from the authorized service centers or online at **[www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories)**. To find a full list of spare parts online, enter the model number of your machine. You can find the model number on the inside of the service door.

Maintenance products and type numbers:

- Descaling solution CA6700
- AquaClean water filter CA6903
- Brew group grease HD5061
- Coffee oil remover tablets CA6704

 **i** Brita-filters are not compatible with this machine.

## Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on **[www.philips.com/coffee-care](http://www.philips.com/coffee-care)**. If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.



Warning icons

| Warning icon                                                                     | Solution                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>The 'water tank empty' icon pops up on the display.</p> <ul style="list-style-type: none"><li>- The water tank is almost empty. Fill the water tank with fresh water to the maximum level indication.</li><li>- The water tank is not in place. Place back the water tank.</li></ul>                               |
|  | <p>The 'add beans' icons pops up on the display.</p> <ul style="list-style-type: none"><li>- Fill the bean hopper with coffee beans.</li></ul>                                                                                                                                                                        |
|  | <p>The 'empty coffee ground container' icon pops up on the display.</p> <ul style="list-style-type: none"><li>- The coffee grounds container is full. Remove and empty the coffee grounds container while the machine is switched on. Wait 5 seconds before you place it back.</li></ul>                              |
|  | <p>The 'insert brew group' icon pops up on the display.</p> <ul style="list-style-type: none"><li>- The brew group is not in place or not placed correctly. Remove the brew group and make sure it is locked into place. See chapter 'Removing and inserting the brew group' for step-by-step instructions.</li></ul> |

Error codes

Below you find a list of the error codes showing problems that you can solve yourself. Video instructions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If another error code appears, please contact the Philips Consumer Care Center in your country. For contact details, see the warranty leaflet.

| Error code | Problem                                                                              | Possible solution                                                                                                                                                                                                                                                                                                                               |
|------------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01         | The coffee funnel is clogged.                                                        | Switch off the machine and unplug it. Remove the brew group. Then open the lid of the pre-ground coffee compartment and insert the spoon handle. Move the handle up and down until the clogged ground coffee falls down. Visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.    |
| 03         | The brew group is dirty or not well-greased.                                         | Switch off the machine. Rinse the brew group with fresh water, let it air-dry and then lubricate it. Consult chapter 'Cleaning the brew group' or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again.                                         |
| 04         | The brew group is not positioned correctly.                                          | Switch off the machine. Remove the brew group and reinsert it. Make sure that the brew group is in the correct position before you insert it. Consult chapter 'Handling the brew group or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again. |
| 05         | There is air in the water circuit.                                                   | Restart the machine by switching it off and on again. If this works, dispense 2-3 cups of hot water. Descale the machine if you have not done so for a longer period of time.                                                                                                                                                                   |
|            | The AquaClean filter was not prepared properly before installation or it is clogged. | Remove the AquaClean filter and try again to brew a coffee. If this works, make sure that the AquaClean filter is prepared properly before you place it back. Put the AquaClean filter back into the water tank. If this still does not work, the filter might be clogged and needs to be replaced.                                             |

| Error code | Problem                                                   | Possible solution                                                                                                                                                                                                                                                                       |
|------------|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11         | Machine needs to adjust to room temperature               | Allow some time for the machine to adjust from transport/outdoor temperature to room temperature. Switch off the machine for 30 minutes and switch it on again. If this does not work, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet. |
| 14         | The machine is overheated.                                | Switch the machine off and switch it back on again after 30 minutes.                                                                                                                                                                                                                    |
| 19         | The machine is not connected to the wall socket properly. | Make sure that the small plug of the power cord is properly connected to the socket on the back of the machine.                                                                                                                                                                         |

## Troubleshooting table

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.

| Problem                                                                                          | Cause                                                                                                                                                          | Solution                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There are some coffee residues inside my new coffee machine.                                     | This machine has been tested with coffee.                                                                                                                      | Although it has been carefully cleaned, there may be some coffee residues left. However, the machine is absolutely new.                                                                                    |
| The drip tray fills up quickly / there is always some water in the drip tray.                    | This is normal. The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray. | Empty the drip tray daily or as soon as the red 'drip tray full' indicator pops up through the drip tray cover. Tip: place a cup under the dispensing spout to collect rinsing water that comes out of it. |
| The 'empty coffee grounds container' icon remains on.                                            | You emptied the coffee grounds container while the machine was switched off, or placed it back too fast.                                                       | Always empty the coffee grounds container while the machine is switched on. Remove the coffee grounds container, wait at least 5 sec. and then insert it again.                                            |
| The machine prompts to empty the coffee grounds container even though the container is not full. | The machine did not reset the counter the last time you emptied the coffee grounds container.                                                                  | Always wait approx. 5 seconds when you place back the coffee grounds container. In this way the coffee grounds counter will be reset to zero and the number of coffee pucks is counted correctly.          |
|                                                                                                  |                                                                                                                                                                | Always empty the coffee grounds container while the machine is switched on. If you empty the coffee grounds container when the machine is switched off, the coffee grounds counter won't reset.            |

| Problem                                                                                                               | Cause                                                                                                                                                                                                                            | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The coffee grounds container is too full and the 'empty coffee grounds container' icon did not appear on the display. | You removed the drip tray without emptying the grounds container.                                                                                                                                                                | When you remove the drip tray, also empty the coffee grounds container even if it contains only a few coffee pucks. This ensures that the coffee pucks counter is reset to zero and that the number of coffee pucks is counted correctly.                                                                                                                                                                                                                      |
| I cannot remove the brew group.                                                                                       | The brew group is not in the correct position.                                                                                                                                                                                   | Reset the machine in the following way: close the service door and place back the water tank. Switch the machine off and back on again and wait for the lights in the drinks icons to come on. Try again to remove the brew group. See chapter 'Removing and inserting the brew group' for step by step instructions.                                                                                                                                          |
| I cannot insert the brew group.                                                                                       | The brew group is not in the correct position.                                                                                                                                                                                   | Reset the machine in the following way: close the service door and place back the water tank. Leave the brew group out. Switch the machine off and unplug it. Wait for 30 sec. and then plug the machine back in and switch it on and wait for the lights in the drinks icons to come on. Then put the brew group in the correct position and reinsert it into the machine. See chapter 'Removing and inserting the brew group' for step by step instructions. |
| The coffee is watery.                                                                                                 | The brew group is dirty or needs to be lubricated.                                                                                                                                                                               | Remove the brew group (see 'Removing the brew group from the machine'), rinse it under the tap and leave it to dry. Then lubricate the moving parts (see 'Lubricating the brew group').                                                                                                                                                                                                                                                                        |
|                                                                                                                       | The machine is performing its self-adjustment procedure. This procedure is started automatically when you use the machine for the first time, when you change to another type of coffee beans or after a long period of non-use. | Brew 5 cups of coffee initially to allow the machine to complete its self-adjustment procedure.                                                                                                                                                                                                                                                                                                                                                                |
|                                                                                                                       | The grinder is set to a too coarse setting.                                                                                                                                                                                      | Set the grinder to a finer (lower) setting. Brew 2 to 3 drinks to be able to before taste the full difference.                                                                                                                                                                                                                                                                                                                                                 |
| The coffee is not hot enough.                                                                                         | The temperature is set too low.                                                                                                                                                                                                  | Set the temperature to the maximum setting. To adjust the temperature, press the 'Settings'  icon.                                                                                                                                                                                                                                                                          |

| Problem                                              | Cause                                                                  | Solution                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                      | The automatic rinsing cycle is disabled.                               | Activate the automatic rinsing cycle by pressing press the 'Settings'  icon. When this setting is activated, the machine will heat up and perform an automatic rinsing cycle when you turn on the machine. |
|                                                      | A cold cup reduces the temperature of the drink.                       | Preheat the cups by rinsing them with hot water.                                                                                                                                                                                                                                            |
|                                                      | Adding milk reduces the temperature of the drink.                      | Regardless of whether you add hot or cold milk, adding milk always reduces the temperature of the coffee. Preheat the cups by rinsing them with hot water.                                                                                                                                  |
| Coffee does not come out or coffee comes out slowly. | The AquaClean water filter was not prepared properly for installation. | Remove the AquaClean filter and dispense some hot water. If this works, the AquaClean filter was not installed properly. Reinstall and activate the AquaClean filter and follow all steps in chapter 'AquaClean water filter'.                                                              |
|                                                      |                                                                        | After a long period of non-use, you need to prepare the AquaClean water filter for use again and dispense 2-3 cups of hot water.                                                                                                                                                            |
|                                                      | The AquaClean water filter is clogged.                                 | Replace the AquaClean water filter every 3 months. A filter that is older than 3 months can become clogged.                                                                                                                                                                                 |
|                                                      | The grinder is set to a too fine setting.                              | Set the grinder to a coarser (higher) setting. Note that this will impact the coffee taste.                                                                                                                                                                                                 |
|                                                      | The brew group is dirty.                                               | Remove the brew group and rinse it under the tap (see 'Cleaning the brew group under the tap').                                                                                                                                                                                             |
|                                                      | The coffee dispensing spout is dirty.                                  | Clean the coffee dispensing spout and its holes with a pipe cleaner or needle.                                                                                                                                                                                                              |
|                                                      | The pre-ground coffee compartment is clogged                           | Switch off the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into it. Move the handle up and down until the clogged ground coffee falls down (Fig. 28).                                                                  |
|                                                      | The machine circuit is blocked by limescale.                           | Descale the machine with Philips descaler. Always descale when the machine prompts you.                                                                                                                                                                                                     |
| The milk does not froth.                             | LatteGo is assembled incorrectly.                                      | Make sure that the milk container is properly assembled to the frame of LatteGo ('click') (see 'Assembling LatteGo').                                                                                                                                                                       |

| Problem                                                                          | Cause                                                                                                                                                                  | Solution                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                  | The milk container and/or frame of LatteGo are dirty.                                                                                                                  | Disassemble LatteGo and rinse both parts under the tap or clean them in the dishwasher.                                                                                                                                                          |
|                                                                                  | The type of milk used is not suitable for frothing.                                                                                                                    | Different types of milk result in different amounts of froth and different froth qualities. We have tested the following milk types which proved to deliver a good milk froth result: semi-skimmed or full-fat cow's milk and lactose-free milk. |
| Milk is leaking from the bottom of the LatteGo milk container.                   | The frame and the milk container are not assembled properly.                                                                                                           | First insert the top of the milk container under the hook at the top of the frame. Then press home the bottom part of the milk container. You hear a click when it locks into place.                                                             |
|                                                                                  | The milk container and/or frame of LatteGo are dirty.                                                                                                                  | Disassemble LatteGo and rinse both parts under the tap or clean them in the dishwasher.                                                                                                                                                          |
| The machine seems to be leaking.                                                 | The machine uses water to rinse the internal circuit and brew group. This water flows through the internal system directly into the drip tray. This is normal.         | Empty the drip tray every day or as soon as the 'drip tray full' indicator pops up through the drip tray cover. Tip: place a cup under the dispensing spout to collect rinsing water and reduce the amount of water in the drip tray.            |
|                                                                                  | The drip tray is too full and has overflowed which makes it look like the machine is leaking.                                                                          | Empty the drip tray every day or as soon as the 'drip tray full' indicator pops up through the drip tray cover.                                                                                                                                  |
|                                                                                  | The water tank is not fully inserted, some water is leaking out of the water tank and air is drawn into the machine.                                                   | Make sure the water tank is in the correct position: remove it and insert it again pushing it as far as possible.                                                                                                                                |
|                                                                                  | The brew group is dirty/clogged.                                                                                                                                       | Rinse the brew group.                                                                                                                                                                                                                            |
|                                                                                  | The machine is not placed on a horizontal surface.                                                                                                                     | Place the machine on a horizontal surface so that the drip tray does not overflow and the 'drip tray full' indicator works properly.                                                                                                             |
| I cannot activate the AquaClean water filter and the machine asks for descaling. | The filter has not been installed or replaced in time after the screen shows the AquaClean reminder. This means your machine is not anymore completely limescale free. | Descale your machine first and then install the AquaClean water filter.                                                                                                                                                                          |
| The new water filter does not fit.                                               | You are trying to install another filter than the Philips AquaClean water filter.                                                                                      | Only the Philips AquaClean water filter fits into the machine.                                                                                                                                                                                   |

| Problem                             | Cause                                                                                       | Solution                                                                                                                                                                            |
|-------------------------------------|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                     | The rubber ring on the AquaClean water filter is not in place.                              | Place back the rubber ring on the AquaClean water filter.                                                                                                                           |
| The machine is making a loud noise. | It is normal that your machine makes some noise during use.                                 | If the machine starts to make a different kind of noise, clean the brew group and lubricate it (see 'Lubricating the brew group').                                                  |
|                                     | The AquaClean water filter was not prepared properly and air is now drawn into the machine. | Remove the AquaClean water filter from the water tank and properly prepare it for use before you place it back. See chapter 'AquaClean water filter' for step-by-step instructions. |
|                                     | The water tank is not fully inserted and air is drawn into the machine.                     | Make sure the water tank is in the correct position: remove it and insert it again pushing it as far as possible.                                                                   |

## Technical specifications

The manufacturer reserves the right to improve the technical specifications of the product. All the preset quantities are approximate.

| Description                                   | Value                                               |
|-----------------------------------------------|-----------------------------------------------------|
| Size (w x h x d)                              | 246 x 377 x 434 mm                                  |
| Weight                                        | 7.5 - 8 kg                                          |
| Power cord length                             | 1200 mm                                             |
| Water tank                                    | 1.8 litres                                          |
| Coffee bean hopper capacity                   | 275 g                                               |
| Coffee grounds container capacity             | 12 pucks                                            |
| LatteGo (milk container) capacity             | 250 ml                                              |
| Adjustable spout height                       | 88-145 mm                                           |
| Nominal voltage - Power rating - Power supply | See data label on inside of service door (Fig. A11) |

內容

|               |    |
|---------------|----|
| 咖啡機總覽 (圖 A)   | 20 |
| 控制面板          | 20 |
| 簡介            | 21 |
| 第一次使用前        | 22 |
| 沖煮飲品          | 23 |
| 個人化飲品         | 25 |
| 調整咖啡機的設定      | 25 |
| 取出和裝上沖煮器      | 26 |
| 清潔與維護         | 27 |
| AquaClean 濾水器 | 28 |
| 除鈣程序 (30分鐘)。  | 29 |
| 訂購配件          | 30 |
| 疑難排解          | 30 |
| 技術規格          | 34 |

咖啡機總覽 (圖 A)

|             |              |
|-------------|--------------|
| A1 控制面板     | A10 維修門蓋     |
| A2 杯子固定座    | A11 規格標籤和型號  |
| A3 預磨咖啡粉槽   | A12 水箱       |
| A4 豆槽蓋      | A13 熱水流出口    |
| A5 可調型咖啡流出口 | A14 咖啡粉槽     |
| A6 電源線插座    | A15 咖啡粉槽前板   |
| A7 研磨設定旋鈕   | A16 水盤蓋      |
| A8 咖啡豆槽     | A17 滴水盤      |
| A9 沖煮器      | A18 「水盤已滿」指示 |

配件

|                   |                        |
|-------------------|------------------------|
| A19 電線            | A22 量匙                 |
| A20 潤滑劑           | A23 水質硬度試紙             |
| A21 AquaClean 濾水器 | A24 LatteGo 咖啡機 (牛奶容器) |

控制面板

我們的義式濃縮咖啡機版本眾多，各有不同的控制面板。並有一個自己的型號。打開維修門蓋後即可看到規格標籤，您可在上方看到咖啡機型號 (圖 A11)。您也可以輕觸設定☼圖示並選擇「支援」，來找到型號。

所有按鈕和圖示之總覽請參見圖 C 和 D。下方可見說明。

使用向上和向下箭頭捲動顯示幕，然後輕觸 OK 圖示以選擇或確認您的選擇。

## 所有類型 (圖 C/D)

|                 |                                                                                            |                                                                                            |
|-----------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| C1/D1 單鍵式飲品圖示   | C4.瀏覽的圖示 (上、下、返回、確定)                                                                       | C7.清潔功能表  |
| C2/D2.功能表附加其他飲品 | C5.顯示屏                                                                                     | C8.我的最愛   |
| C3 開始/停止▶■ 按鈕   | C6.咖啡機設定  | C9.開關按鈕                                                                                    |

## 限 4000 系列 (圖 C)

C1 單鍵式飲品圖示：義式濃縮咖啡、咖啡、美式咖啡、冰咖啡、卡布奇諾、拿鐵瑪奇朵

## 限 5000 系列 (圖 D)

D1 單鍵式飲品圖示：義式濃縮咖啡、咖啡、美式咖啡、卡布奇諾、拿鐵瑪奇朵、冰咖啡、冰拿鐵

## 簡介

恭喜您成為飛利浦全自動咖啡機使用者！若要充分享受我們為您提供的支援，請前往下列位址註冊您的產品：[www.philips.com/welcome](http://www.philips.com/welcome)。

請在第一次使用咖啡機前，仔細詳閱盒中另外附上的安全手冊，並將手冊保存作未來查閱用。

我們透過多種方式為您提供支援，助您上手並充分利用咖啡機。在包裝盒中含有：

- 1 快速使用指南，包含帶圖片的使用說明以及清潔和保養的資訊。
- 2 另有安全手冊介紹如何安全使用咖啡機。
- 3 如需線上支援 (本加強版使用者手冊、常見問題、影片等)，請掃描本手冊封面上的 QR 碼以下載應用程式，或造訪 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)。

**i** 我們的義式濃縮咖啡機版本眾多，每一種都提供不同的特色功能，並有一個自己的型號。打開維修門蓋後即可看到規格標籤，您可在上方看到咖啡機型號 (請見圖 11)。


**i** 本咖啡機已測試製作過咖啡。雖然機器經過仔細清潔，機器內還是可能留有咖啡殘渣，但是我們保證此咖啡機為全新機器。

咖啡機會自動調整咖啡粉的量，以煮出最好喝的咖啡。新咖啡機要煮過 5 杯咖啡，咖啡機才會完成自動調整程序。

首次使用前，務必將 LatteGo (牛奶容器) 清洗乾淨。



# 第一次使用前

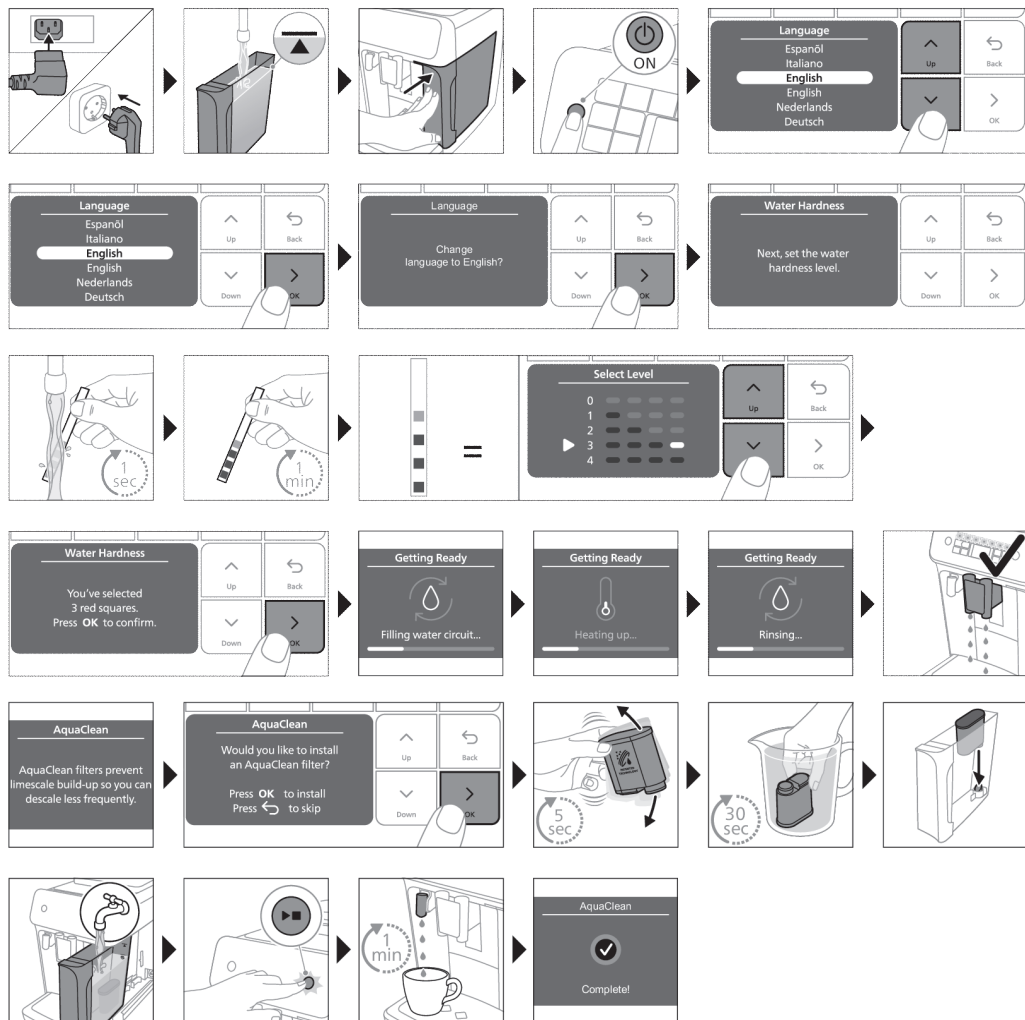

## 組裝 LatteGo



# 沖煮飲品

## 一般步驟

- 1 使用自來水注入水箱，然後將咖啡豆放入咖啡豆槽。
- 2 將小插頭插入咖啡機背面的插孔。將電源插頭插入牆上插座。
- 3 按下開關按鈕開啟咖啡機。
  - 等所有飲品圖示指示燈都持續亮起後，即可使用咖啡機。
- 4 將一個咖啡杯放在咖啡流出口下方。將咖啡龍頭滑上或滑下，調整成適合您所使用的咖啡杯高度 (圖 2)。

## 以咖啡豆沖煮咖啡

- 1 輕觸任何飲品圖示或輕觸「其他飲品」圖示，開始煮咖啡。
  - 現在您可以依照您個人的口味調整。使用向上和向下箭頭來調整咖啡濃度。若要調整其他設定，請輕觸 OK 圖示。
- 2 隨時按下開始/停止▶■按鈕，即可開始沖煮所選的飲品。
- 3 再按一次開始/停止▶■按鈕，即可在咖啡機運作完成前停止沖出咖啡。

**i** 輕觸兩次飲品圖示或選擇 2x 圖示捲動專用列，即可一次煮兩杯咖啡。

**⚠** 請勿使用焦糖化或加味的咖啡豆。

## 用 LatteGo (牛奶容器) 煮牛奶基底的飲品。

**⚠** LatteGo 內附有牛奶容器、框架和保存盒蓋。為了預防漏水，請在加入牛奶前確保框架盒牛奶容器已確實裝好。

- 1 安裝 LatteGo 的步驟如下：請先把牛奶容器的上面部分插入 框架 的最上方 (圖 8)，接著將牛奶容器底部向內推至定位。確實卡入正確位置 (圖 9) 後，您會聽見「喀達」一聲。

注意：請在連接前確認牛奶容器和框架都已清洗乾淨。

- 2 稍微傾斜 LatteGo，並將其放在熱水流出口 (圖 10)，然後向內推至定位，直到卡入正確位置 (圖 11)。
- 3 將牛奶 加入 LatteGo (圖 12)。注意不要讓牛奶量多於最大指標。

**i** 如果您已個人化調整牛奶份量，可能會需要在牛奶容器中加入和 LatteGo 所指不一樣的牛奶量。

**🥛** 為製作最優質的飲品，請使用直接從冰箱取出的牛奶。

- 4 將咖啡杯置於滴水盤上。
- 5 依您的選擇輕觸牛奶基底的飲品圖示，或輕觸「其他飲品」圖示以選擇不同的飲品
  - 您可依照個人喜好調整飲品。
- 6 按下開始/停止▶■按鈕。
  - 沖煮卡布奇諾、澳式白咖啡、拿鐵瑪奇朵、冰卡布奇諾或冰拿鐵時，咖啡機會先沖出牛奶，再沖出咖啡。沖煮拿鐵咖啡、咖啡歐蕾、冰拿鐵咖啡或冰咖啡歐蕾時，咖啡機會先沖出咖啡，再沖出牛奶。
  - 如果想在咖啡機沖出預設份量的牛奶之前暫停，請按下開始/停止▶■按鈕。
- 7 如果想在咖啡機把飲品全部沖出以前暫停，請按下開始/停止▶■按鈕。

## 沖煮冰飲品

**i** 用溫水沖煮咖啡。在冰塊上沖煮咖啡以獲得最佳效果。

- 1 拿一個玻璃杯，將其三分之二裝滿冰塊。
- 2 將玻璃杯放在咖啡流出口下方。
- 3 按下冰咖啡圖示。
  - 現在您可以依照您所喜歡的口味調整。

**i** 我們建議使用香氣濃度 3。

- 4 按下開始/停止▶■按鈕。
- 5 再按一次開始/停止▶■按鈕，即可在咖啡機運作完成前停止沖出咖啡。
- 6 如果想要享用特製冰咖啡，請在上面倒入冷牛奶。

## 額外份量 (ExtraShot)

如果想要喝較濃的咖啡，咖啡機讓您可以在咖啡和牛奶飲品中再加入一份芮斯崔朵。

- 1 將杯子放在流出口下方
- 2 輕觸其中一個單鍵式飲品圖示來選擇飲品，或輕觸「其他飲品」圖示來選擇飲品。
- 3 使用向上箭頭將濃度設定至最高，然後選擇 ExtraShot 功能。
- 4 若要個人化其他設定，請輕觸 OK 圖示。然後按下開始/停止▶■圖示，開始沖煮飲品。
- 5 再按一次開始/停止▶■圖示，即可在咖啡機運作完成前停止沖出飲品。

**i** 選擇 ExtraShot 功能時，一次只能沖煮一杯咖啡。

## 以預磨咖啡粉沖煮咖啡

您不見得要使用咖啡豆，亦可以使用預磨咖啡。例如其他咖啡種類或無咖啡因咖啡。

- 1 打開預磨咖啡槽蓋，並倒入一平量匙的預磨咖啡在其 (圖 14) 中。然後關閉預磨咖啡粉槽蓋。
- 2 輕觸其中一個單鍵式飲品圖示，或輕觸「其他飲品」圖示，來選擇另一個飲品。
- 3 選取預磨咖啡功能。有 2 種不同的方式可以執行這項操作：
  - 使用向下箭頭將濃度設定至最低，然後選擇預磨功能。
  - 按下設定⚙圖示，然後使用向下箭頭選擇預磨功能。
- 4 再按一次開始/停止▶■按鈕，即可在咖啡機運作完成前停止沖出咖啡。

**i** 選擇預磨咖啡功能時：

- 它會自動儲存。
- 一次只能沖煮一杯咖啡。
- 您無法選擇其他的香氣濃度。

## 提供熱水

- 1 如果 LatteGo 安裝在咖啡機上，請將其取出。
- 2 將杯子放在熱水出水口下方。
- 3 輕觸「其他飲品」圖示，然後使用向上和向下箭頭來選擇熱水。
- 4 使用向上和向下箭頭，依照您的個人喜好調整熱水份量和/或溫度。
- 5 按下開始/停止▶■按鈕。
  - 熱水從熱水流出口 (圖 15) 沖出。
- 6 再按一次開始/停止▶■按鈕，即可在咖啡機運作完成前停止沖出熱水。

# 個人化飲品

咖啡機可讓您根據自己的喜好調整飲品的設定，並將調整後的飲品儲存在個人設定中。不同的個人設定有以不同顏色標示。

在輕觸其中一個單鍵式飲品圖示或輕觸「其他飲品」圖示來選擇飲品之後，您可以進行下列操作：

- 1 使用上和下圖示來調整香氣濃度（圖 5）。濃度分 5 等級，最低代表最淡，最高則是最濃。
- 2 使用上和下圖示來調整咖啡份量（圖 16）和/或牛奶份量。每個設定有 5 種份量。

**i** 當咖啡機完成沖煮後，便會將您選擇的設定自動儲存在您選擇的我的最愛中。

## 選擇我的最愛

您可以使用 My Coffee Choice Profiles 來選擇我的最愛及儲存喜愛飲品。

- 1 重複輕觸我的最愛圖示，選擇其中一個彩色我的最愛設定。所有的個人設定都有不同顏色。
- 2 輕觸其中一個單鍵式飲品圖示或輕觸「其他飲品」圖示，來選擇飲品。
- 3 依您喜好的口感調整飲品設定。
- 4 按下開始/停止按钮來沖煮您選擇的飲品
  - 現在您的新設定已儲存在您選擇的彩色個人設定中。

**i** 您隨時可以重新載入咖啡機的原廠設定（見「重新載入原廠設定」）。

## 家人的最愛

咖啡機配有家人的最愛。選擇家人的最愛後，我的最愛圖示會關閉。選擇家人的最愛後，您仍然可以依自己的喜好進行個人化設定，但不會儲存您沖煮的喜愛飲品。

# 調整咖啡機的設定

## 設定水質硬度

**i** 為了確保您獲得最佳成果，並讓咖啡機長久運作，我們建議您將水質硬度設定調整成您的地區的水質硬度等級。這也可以讓您不必太常為咖啡機除鈣。預設的水質硬度設定為 4：硬水。

用箱子內附有的水質硬度測試棒測試您地區內的水質硬度：

- 1 將水質硬度測試棒浸入自來水中，或將其放在水龍頭下 1 秒（圖 17）。
- 2 等候 1 秒。測試棒方格中變紅的數字代表水質硬度（圖 18）。

把咖啡機的設定調整成正確水質硬度：

- 1 輕觸設定圖示，然後使用向上和向下箭頭來選擇「水質硬度」。然後按下 OK 圖示以確認。
- 2 使用向上和向下箭頭來選擇水質硬度等級。在顯示幕上選擇的紅色方塊數應與測試棒上的紅色方塊數相同（圖 19）。
- 3 設定完正確水質硬度後，輕觸 OK 圖示以確認。

## 調整研磨設定

您可以用咖啡豆容器內的研磨設定把手改變咖啡濃度。研磨設定越低，咖啡豆就會越精緻，咖啡也會越濃。您共有 12 種不同的研磨設定可以選擇。

咖啡機已設定為從咖啡豆中萃取出最佳風味。因此我們建議您不要調整研磨設定，直到您已沖煮 100-150 杯（約 1 月使用量）為止。

**i** 僅能在咖啡機研磨咖啡豆時調整研磨設定。在沖煮 2 至 3 杯飲品後，才能品出味道的不同。

**A** 為了不要破壞研磨機，每次轉動研磨設定把手時，請勿轉動超過一級。

- 1 將一個咖啡杯放在咖啡流出口下方。
- 2 打開咖啡豆槽的蓋子。
- 3 輕觸義式濃縮咖啡圖示，然後按下開始/停止▶■按鈕。
- 4 研磨機開始研磨後，將研磨設定把手往下壓，並向左或向右轉。(圖 20)

## 調整其他的咖啡機設定

輕觸設定⚙圖示，即可調整下列咖啡機設定：

- 水質硬度：您可以根據您所在地區的水質硬度，從 5 個等級中進行選擇；
- 待機時間：您可以選擇 15、30、60 或 180 分鐘
- 顯示亮度：您可以選擇低、中和高。
- 語言
- 音效：您可以開啟或關閉咖啡機的嗶聲
- 溫度：您可以從 3 種咖啡沖泡溫度中進行選擇
- 前端照明指示燈 (限 5500 系列)：您可以選擇「保持開啟」、「沖煮時開啟」或「保持關閉」。
- 量度單位：您可以選擇毫升或盎司。
- 個人設定啟動：您可以啟動或重新啟動個人設定。
- 啟動時沖洗：您可以啟動或停用在咖啡機開啟時自動沖洗循環。
- 顯示背光：您可以啟動或停用飲料按鈕中的背光。

## 重新載入原廠設定

咖啡機讓您可以隨時重新載入原廠設定。

- 1 輕觸設定⚙圖示。
- 2 使用上和下圖示來選擇「原廠設定」。輕觸 OK 圖示以確認。
- 3 按下開始/停止▶■按鈕，確認重新載入原廠設定。
  - 現在正在重新載入設定。

**i** 下列原廠設定會重新載入做為預設值：水質硬度、待機時間、亮度、顯示背光、開始沖洗、音效、溫度、前端照明、個人設定。

## 取出和裝上沖煮器

前往 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)，取得如何拆下、插入和清潔沖煮組件的詳細和影片說明。

### 從咖啡機中取出沖煮器

- 1 關閉咖啡機電源。
- 2 取出水箱並打開維修門蓋 (圖 21)。
- 3 按下推把手 (圖 22)，然後從沖煮器的網格把沖煮器從咖啡機 (圖 23) 中取出。

### 重新插入沖煮組件

**A** 將沖煮器裝回咖啡機前，請確保沖煮器位於正確位置。

- 1 確認沖煮器在正確位置。沖煮器側向黃色圓柱上的箭頭要和黑色箭頭還有 N (圖 24) 對齊。
  - 如果未對齊，請壓下控制桿，直到控制桿接觸沖煮組件 (圖 25) 的底座。
- 2 沿著兩側 (圖 26) 的導引軌道將沖煮組件推回咖啡機，直到聽見「喀噠」 (圖 27) 一聲卡入定位為止。請勿按下 PUSH 按鈕。
- 3 關閉維修門蓋並放回水箱。

## 清潔與維護

定期清潔和保養才可讓您的咖啡機保持在最佳狀態，並保證您可以長期煮出穩定流量的好喝咖啡。請查見以下表格，了解如何清洗咖啡機可拆卸部分的細節說明。您可以在 [www.philips.com/coffee-care](http://www.philips.com/coffee-care) 找到供更詳細的資訊和影片說明。請見圖 B 查看可放入洗碗機清洗項目總覽。

| 可拆卸部分   | 何時清潔                                           | 如何清潔                                                                                                                                                   |
|---------|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| 沖煮器     | 每週                                             | 從咖啡機 (見 '取出和裝上沖煮器') 將沖煮器取出。在水龍頭 (見 '在水龍頭下清潔沖煮組件') 下清洗。                                                                                                 |
|         | 每月                                             | 使用飛利浦咖啡去油汙錠 (見 '使用咖啡去油汙錠清潔沖煮組件') 清潔沖煮器。                                                                                                                |
| 預磨咖啡粉槽  | 每週檢查預磨咖啡槽是否堵塞。                                 | 請拔下咖啡機插頭，然後取出沖煮器。打開預磨咖啡槽的蓋子並插入湯匙把手。上下移動握把，直到堵塞的咖啡粉掉落 (圖 28)。前往 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。 |
| 咖啡粉槽    | 咖啡機提示時請清空咖啡粉槽。每週清潔。                            | 在咖啡機開機的情況下取出咖啡粉槽。以洗潔精在水龍頭下沖洗，或是放到洗碗機中清洗。 <b>咖啡粉槽的前板 (圖 A15) 不可放入洗碗機內。</b>                                                                              |
| 水盤      | 每天將滴水盤倒空，或在紅燈指示「滴水盤已滿」時將滴水盤 (圖 29) 倒空。每週清洗滴水盤。 | 取出滴水盤 (圖 30)，並用洗潔精在水龍頭下清洗。也可以在洗碗機內清洗滴水盤。 <b>咖啡粉槽的前板 (圖 A15) 不可放入洗碗機內。</b>                                                                              |
| LatteGo | 每次使用後                                          | 首先，使用「快速牛奶清潔」設定 (見 '快速清潔 LatteGo')，清潔連接著咖啡機的 LatteGo。然後將其從咖啡機取下，在水龍頭下沖洗或放入洗碗機清洗。                                                                       |
| 潤滑沖煮器   | 每 2 個月                                         | 查見潤滑表格，並使用飛利浦潤滑油 (見 '潤滑沖煮組件') 潤滑沖煮器。                                                                                                                   |
| 水箱      | 每週                                             | 將水箱放在水龍頭下沖洗                                                                                                                                            |
| 咖啡機正面   | 每週                                             | 使用非磨蝕性的布來清潔                                                                                                                                            |

## 清洗沖煮組件

定期清潔沖煮組件可防止咖啡粉殘渣堵塞內部管路。造訪 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)，以觀看如何取下、插入和清潔沖煮組件的支援影片。

### 在水龍頭下清潔沖煮組件

- 1 取出沖煮器 (見 '取出和裝上沖煮器')。
- 2 用水徹底沖洗沖煮組件。請仔細清潔沖煮組件的上方濾網 (圖 31)。
- 3 裝回沖煮組件前，請先讓沖煮組件風乾。請勿用布擦乾沖煮組件，以避免沖煮組件內累積棉絮纖維。

## 使用咖啡去油汙錠清潔沖煮組件

僅使用飛利浦咖啡有清潔錠。

- 1 輕觸清潔圖示，然後使用向上和向下箭頭來選擇「沖煮器清潔」。
- 2 輕觸 OK 圖示以確認，然後依照螢幕上的指示進行。

## 潤滑沖煮組件

為提高咖啡機性能，建議您每 2 個月潤滑沖煮器一次，以確保咖啡機內轉動部分能維持順暢運作。

- 1 在沖煮器的活塞（灰色部分）上抹上一層薄薄的潤滑油（圖 32）。
- 2 在沖煮器底部的轉軸（灰色部分）上塗抹一層薄薄的潤滑油（圖 33）。
- 3 在導引軌道兩側塗抹一層薄薄的潤滑劑（圖 34）。

## 清洗 LatteGo (牛奶容器)

### 快速清潔 LatteGo

- 1 請確定 LatteGo 已經妥善接上咖啡機（圖 10）。
- 2 將杯子放在流出口下方。
- 3 輕觸清潔圖示，然後使用向上和向下箭頭來選擇「快速牛奶清潔」設定。
- 4 輕觸 OK 圖示以確認，然後按螢幕指示將奶泡系統中可能殘留的牛奶排出。
  - 牛奶系統會稍微噴出熱水。
- 5 將 LatteGo 和剩下的牛奶保存在冰箱中。

### 徹底清潔 LatteGo

- 1 從咖啡機（圖 35）將 LatteGo 取出。
- 2 把剩下的牛奶倒乾淨。
- 3 按解除按鈕，並將牛奶容器從 LatteGo（圖 36）的框架取出。
- 4 將所有部分放入洗碗機中，或用溫水在水龍頭下用洗潔精清洗。

## AquaClean 濾水器

咖啡機已啟用 AquaClean。您可以將 AquaClean 濾水器放在水箱中保持咖啡的口味。這也可以省去為咖啡機內累積的水垢除鈣的必要。您可以向當地零售商、授權服務中心或上網於 [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) 購買 AquaClean 濾水器。

## AquaClean 濾水器狀態指示

AquaClean 啟用時，AquaClean 濾水器的狀態在螢幕上一律以百分比顯示。

- 如果 AquaClean 濾水器的狀態為 10% 或以下，每次您開啟咖啡機時螢幕都會顯示 2 秒鐘的訊息。此訊息建議您購買新的濾水器。
- 如果濾水器的狀態為 0%，每次您開啟咖啡機時，咖啡機都會要求您更換 AquaClean 濾水器。

## 啟動 AquaClean 濾水器 (5 分鐘)

**i** 咖啡機不會自動偵測到濾水器沒有放入水箱中。因此，您需要在「清潔」功能表中啟動您新安裝的每個 AquaClean 濾水器。

當咖啡機停止顯示濾水器啟動訊息時，您仍然可以啟動 AquaClean 濾水器，但是必須先為咖啡機除鈣。

**i** 在使用 AquaClean 濾水器前，咖啡機必須完全沒有水垢。



在啟動 AquaClean 濾水器前，請按照下述方式將其泡水做準備。如果忽略了此步驟，空氣而不是水會進入咖啡機，導致許多噪音產生，而且咖啡機將無法煮咖啡。

- 1 輕觸「清潔」圖示，然後使用向上和向下箭頭來選擇「AquaClean」。
- 2 輕觸 OK 圖示以確認。
- 3 當啟動畫面出現時，再輕觸一次 OK 圖示。請依照螢幕上的指示進行。
- 4 甩動濾水器約 5 秒 (圖 37)。
- 5 將濾水器倒置浸泡在裝有冷水的水罐中，然後搖晃/按壓水罐 (圖 38)。
- 6 將濾水器垂直插入水箱內的濾水器連接處。將濾水器壓到最底處 (圖 39)。
- 7 在水箱內倒入清水，並將水箱放回咖啡機。
- 8 如果 LatteGo 安裝在咖啡機上，請將其取出。
- 9 將碗放在熱水出水口下方。
- 10 按下開始/停止按鈕開始啟動程序。
- 11 熱水會先從熱水流出口沖出 1 分鐘。
- 12 現已成功啟動濾水器。

## 裝入新的 AquaClean 濾水器 (5 分鐘)。

濾過 95 公升的水後，濾水器將停止運作。AquaClean 狀態指示燈降至 0%，提醒您要更換濾水器。只要顯示幕上顯示 AquaClean 狀態指示燈，您就可以更換濾水器，而不必先為咖啡機除鈣。如果未及時更換 AquaClean 濾水器，AquaClean 指示燈會在一段時間過後熄滅。如果是這個情況，您還是可以更換濾水器，但是必須要先為咖啡機除鈣。

當 AquaClean 狀態指示燈降至 0% 或咖啡機提示您要更換 AquaClean 濾水器時：

- 1 將舊的 AquaClean 濾水器取出。
- 2 安裝新的濾水器，並按照「啟動 AquaClean 濾水器 (5 分鐘)」一章所述的方式來啟動。

 即便咖啡機沒有指示要求更換，請至少每 3 個月更換一次 AquaClean 濾水器。

## 除鈣程序 (30分鐘)。

只能使用飛利浦除垢劑。絕不可使用硫酸、鹽酸、氨基磺酸或醋酸 (例如醋) 為基底的除垢劑，因為它們可能損害咖啡機的水流管路，且無法妥善溶解水垢。未使用飛利浦除垢劑會使保固失效。未去除咖啡機水垢也會使保固失效。您可以前往 [www.philips.com/coffee-care](http://www.philips.com/coffee-care) 線上商店購買飛利浦除垢溶液。

當咖啡機需要除鈣時，顯示幕上會出現訊息。

- 1 輕觸使用者介面上的清潔圖示，然後在功能表中選擇「除鈣」。
- 2 請依照螢幕上的指示進行。
- 3 如果 LatteGo 安裝在咖啡機上，請將其取出。
- 4 取下水盤與咖啡粉槽後，清空之後再裝回原位。
- 5 取出水箱然後倒空。接著取出 AquaClean 濾水器。
- 6 將整罐飛利浦除鈣劑到入水箱中，並依照除鈣/清洗指示 (圖 40) 加入水。然後將其放回咖啡機。
- 7 請在咖啡流出口和熱水流出口下放置一個大容器 (1.5 公升)。
- 8 按下開始/停止按鈕開始除鈣程序。除垢程序會持續 30 分鐘左右，其中包含除垢循環和沖洗循環。
- 9 等待咖啡機停止流出水。當顯示幕上出現訊息時，請加水至水箱。除鈣過程完成後，咖啡機會停止出水。
- 10 在水箱中安裝和啟動新的 AquaClean 濾水器。
  - 除鈣程序完成後，咖啡機會提示您安裝新的 AquaClean 濾水器 (見 '裝入新的 AquaClean 濾水器 (5 分鐘)')。

 提示：使用 AquaClean 濾水器可減少除鈣需求！



## 若除鈣程序中斷該怎麼做

您可按下控制面板上的開/關按鈕，結束除鈣程序。如果在完全完成前中斷除鈣程序，執行下列步驟：

- 1 請倒光水箱內的水後，徹底洗淨水箱。
- 2 依照除鈣/清洗等級指示在水箱內加入水，並重新將咖啡機開機。
- 3 在沖煮咖啡已前，請先進行手動清洗循環。欲進行手動清洗循環，首先請重複選擇熱水功能，將水箱內一半的熱水沖出，然後在不加入咖啡粉的情況下沖煮兩杯預磨咖啡。

**i** 如果除鈣程序還沒有完成，咖啡機會要求您盡快進行除鈣。

## 訂購配件

如欲為本機器進行清潔與除鈣，只能使用飛利浦維護產品。本產品可於您的當地零售商、授權服務中心或上網於 [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) 購買。若要上網尋找完整的備用零件清單，請輸入咖啡機的型號。您可以在維修門內側找到型號。

保養產品和型號：

- 除鈣溶液 CA6700
- AquaClean 濾水器 CA6903
- 沖煮器潤滑劑 HD5061
- 咖啡去油汙錠 CA6704

**i** Brita 濾水器與本咖啡機不相容。

## 疑難排解

本單元概述了使用本機器最常遇到的問題。[www.philips.com/coffee-care](http://www.philips.com/coffee-care) 提供支援影片和完整的常見問題清單。如果您無法解決問題，請聯絡您所在國家/地區的客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。

## 警告圖示

### 警告圖示

### 解決方法



顯示幕上亮起「水箱已空」圖示。

- 水箱幾乎淨空。把清水倒入水箱的最高水位。
- 水箱沒有正確裝入。把水箱放回。



顯示幕上亮起「加入咖啡豆」圖示。

- 將咖啡豆放入咖啡豆槽。



顯示幕上亮起「清空咖啡粉槽」圖示。

- 代表咖啡粉槽已滿。在咖啡機開機時取出和清空咖啡粉槽。等待 5 秒鐘後再放回去。



顯示幕上亮起「插入沖煮器」圖示。

- 沖煮器沒有正確放置在位置上。取出沖煮器，並確認沖煮器已確實卡入定位。請參閱「取出和裝回沖煮器」一章中的逐步說明。

錯誤碼

下列是顯示問題的錯誤碼清單，您可以自行解決這些問題。[www.philips.com/coffee-care](http://www.philips.com/coffee-care) 提供影片說明。如果出現另一個錯誤碼，請聯絡您所在國家/地區的飛利浦客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。

| 錯誤碼 | 問題                                        | 可能的解決方法                                                                                                                                                     |
|-----|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01  | 咖啡漏斗堵塞。                                   | 關閉咖啡機電源，並拔除插頭。拆卸沖煮器。打開預磨咖啡粉槽蓋，插入湯匙握把。上下移動握把，直到堵塞的咖啡粉掉落。造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。           |
| 03  | 沖煮器有髒污或沒有充分潤滑。                            | 關閉咖啡機電源。以清水沖洗沖煮組件、使其自然風乾，然後潤滑沖煮組件。請參閱「清潔沖煮器」章節或造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。然後再開啟咖啡機電源。        |
| 04  | 沖煮器安裝不正確。                                 | 關閉咖啡機電源。請取出沖煮器並重新裝入。插入沖煮器前，請確定沖煮器位於正確的位置。請參閱「處理沖煮器」章節或造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。然後再開啟咖啡機電源。 |
| 05  | 水流管路中有空氣。                                 | 關閉咖啡機電源後再次開啟，藉此重新啟動咖啡機。如果有效，讓熱水流出 2-3 杯的量。若您有很長一段時間沒這樣做，請為咖啡機除鈣。                                                                                            |
|     | 安裝前未正確準備 AquaClean 濾水器，或 AquaClean 濾水器阻塞。 | 請拆下 AquaClean 濾水器，然後再試著沖煮咖啡。如果有效，請確定在裝回 AquaClean 濾水器前已正確準備此濾水器。將 AquaClean 濾水器推回水箱中。如果此方法仍無效，表示濾水器已阻塞，需要更換。                                                |
| 11  | 咖啡機需要調整至室溫                                | 留一些時間讓咖啡機從運輸/室外溫度調整至室溫。將咖啡機關機 30 分鐘，將其再次開啟。如果此方法無效，請聯絡您所在國家/地區的客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。                                                                    |
| 14  | 代表咖啡機已過熱。                                 | 關閉咖啡機電源，在 30 分鐘後重新開啟咖啡機電源。                                                                                                                                  |
| 19  | 咖啡機未妥善接上牆上插座。                             | 確認電源線的小插頭已正確插入咖啡機背面的插座。                                                                                                                                     |

疑難排解表

本單元概述了使用本機器最常遇到的問題。[www.philips.com/coffee-care](http://www.philips.com/coffee-care) 提供支援影片和完整的常見問題清單。如果您無法解決問題，請聯絡您所在國家/地區的客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。

| 問題               | 原因                                          | 解決方法                                                      |
|------------------|---------------------------------------------|-----------------------------------------------------------|
| 我的新咖啡機內有咖啡殘渣。    | 本機器經過咖啡沖泡測試。                                | 雖然機器經過仔細清潔，機器內可能留有咖啡殘渣。但是，此咖啡機為全新機器。                      |
| 水盤一下就滿了/水盤中一直有水。 | 這是正常現象。咖啡機會用清水清洗內部管路和沖煮器。部分的水會經由內部系統直接流入水盤。 | 每天將滴水盤倒空，或在紅燈指示「滴水盤已滿」時將滴水盤蓋倒空。訣竅：在流出口下方放一個杯子，來收集流出的沖洗用水。 |
| 「清空咖啡粉槽」圖示持續亮著。  | 您在咖啡機關閉時清空咖啡粉槽，或是太快裝回咖啡粉槽。                  | 請一定要在咖啡機電源開啟時清空咖啡粉槽。取出咖啡粉槽，等候至少 5 秒，然後將其裝回。               |

| 問題                           | 原因                                                       | 解決方法                                                                                                                                    |
|------------------------------|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 咖啡機在容器未滿的情況下提示您清空咖啡粉槽。       | 上次情況咖啡研磨槽時未重新設定計數器。                                      | 在把咖啡粉槽放回時，請務必等候約 5 秒鐘。如此一來咖啡粉槽檯才會歸零，並正確計算咖啡渣的數量。                                                                                        |
|                              |                                                          | 請一定要在咖啡機電源開啟時清空咖啡粉槽。如果在咖啡機關機時清空咖啡粉槽，咖啡粉槽不會重新設定。                                                                                         |
| 咖啡粉槽過滿，但是「清空咖啡粉槽」圖示未出現在顯示幕上。 | 您未清空咖啡粉槽即取出了滴水盤。                                         | 每次取出滴水盤時，即便咖啡粉槽裡只有一點點咖啡渣，還是要將咖啡粉槽清空。這可確保咖啡渣槽檯歸零，並且正確計算咖啡渣的數量。                                                                           |
| 我無法拆下沖煮器。                    | 沖煮器的位置不正確。                                               | 請以如下方式重新設定機器：關閉維修門蓋並放回水箱。關閉咖啡機電源後再開啟，然後等待飲品圖示的指示燈亮起。再次試著拆下沖煮器。請參閱「取出和裝回沖煮器」一章中的逐步說明。                                                    |
| 我無法插入沖煮器。                    | 沖煮器的位置不正確。                                               | 請以如下方式重新設定機器：關閉維修門蓋並放回水箱。但不要裝回沖煮器。將咖啡機關機並將插頭拔除。等候 30 秒，並將咖啡機插頭插回再開機，然後等待飲品圖示的指示燈亮起。然後將沖煮器放到位，再重新插入咖啡機內。請參閱「取出和裝回沖煮器」一章中的逐步說明。           |
| 咖啡太淡。                        | 沖煮器有髒污，或需要潤滑。                                            | 取出沖煮器（見 '從咖啡機中取出沖煮器'）並在水龍頭下清洗，接著晾乾。潤滑會轉動的部分（見 '潤滑沖煮組件'）。                                                                                |
|                              | 咖啡機正在執行自我調整程序。在您初次使用咖啡機、改變咖啡豆種類時，或一段長時間沒有使用過後，這個程序會自動開啟。 | 先沖煮 5 杯咖啡，讓咖啡機可以完成自我調整程序。                                                                                                               |
|                              | 研磨器設為過粗的顆粒設定。                                            | 將研磨器設為較細（較低）的設定。沖煮 2 至 3 杯飲品過後，才會確實有所變化。                                                                                                |
| 咖啡不夠燙。                       | 溫度設定過低。                                                  | 將溫度設定調到最高設定。若要調整溫度，按下「設定」  圖示。                       |
|                              | 自動沖洗循環已停用。                                               | 按下「設定」即可啟動自動沖洗循環  圖示。啟動此設定後，咖啡機將在您開啟咖啡機時加熱並執行自動沖洗循環。 |
|                              | 杯子如果是冰的會降低飲品的溫度。                                         | 先以熱水沖洗來預熱杯子。                                                                                                                            |
|                              | 加入牛奶會降低飲品的溫度。                                            | 不論是加入熱牛奶或冰牛奶，加入牛奶都會降低咖啡的溫度。先以熱水沖洗來預熱杯子。                                                                                                 |

| 問題                     | 原因                                      | 解決方法                                                                                                       |
|------------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------|
| 沒有流出咖啡，或咖啡流出的速度太慢。     | AquaClean 濾水器尚未準備好安裝。                   | 請拆下 AquaClean 濾水器，然後再沖出一些熱水。如果有效，代表未正確安裝 AquaClean 濾水器。重新安裝和啟動 AquaClean 濾水器，並依照「AquaClean 濾水器」一章中的所有步驟操作。 |
|                        |                                         | 若長期未使用 AquaClean 濾水器後再度使用，您需要將濾水器再次準備好，並放掉 2-3 杯熱水。                                                        |
|                        | AquaClean 濾水器堵塞。                        | 每 3 個月更換一次 AquaClean 濾水器。壽命超過 3 個月的濾水器容易堵塞。                                                                |
|                        | 研磨器設為過細的顆粒設定。                           | 將研磨器設為較粗 (較高) 的設定。請注意，這將影響咖啡的口感。                                                                           |
|                        | 沖煮器有髒污。                                 | 拆卸沖煮器，在水龍頭下沖洗 (見 '在水龍頭下清潔沖煮組件')。                                                                           |
|                        | 咖啡流出口有髒污。                               | 使用管狀清潔工具或針清洗咖啡流出口和上面的洞。                                                                                    |
|                        | 預磨咖啡粉槽堵塞                                | 將咖啡機關機並取出沖煮器。打開預磨咖啡粉槽的蓋子並插入湯匙把手。上下移動握把，直到堵塞的咖啡粉掉落 (圖 28)。                                                  |
|                        | 咖啡機管路被水垢阻塞。                             | 用飛利浦除鈣劑將咖啡機除鈣。請務必在收到提示時再為咖啡機除鈣。                                                                            |
| 牛奶沒有奶泡。                | LatteGo 沒有正確組裝。                         | 請確保牛奶容器妥當組裝在 LatteGo 的框架上 (有喀達聲) (見 '組裝 LatteGo')。                                                         |
|                        | 牛奶容器和/或 LatteGo 的框架不乾淨。                 | 拆除 LatteGo 並在水龍頭下清洗，或用洗碗機清洗。                                                                               |
|                        | 所用的牛奶種類不適合製作奶泡。                         | 牛奶種類會影響奶泡量和奶泡品質。我們已測試下列的牛奶種類，結果證明這些牛奶都能製作出優質奶泡：半低脂牛奶或全脂牛奶和零乳糖牛奶。                                           |
| 牛奶從 LatteGo 的牛奶容器底部漏出。 | 框架和牛奶容器沒有妥善組裝好。                         | 請先將牛奶容器的最上方插入 框架 上方的勾。接著將牛奶 容器 底部向內推至定位。確實卡入正確位置後，您會聽見「喀達」一聲。                                              |
|                        | 牛奶容器和/或 LatteGo 的框架不乾淨。                 | 拆除 LatteGo 並在水龍頭下清洗，或用洗碗機清洗。                                                                               |
| 咖啡機似乎會漏水。              | 咖啡機會用水清洗內部管路和沖煮器。此水流會從內部系統滴入滴水盤。這是正常現象。 | 每天或當水盤蓋上「水盤已滿」指示燈亮起後，立即清空水盤。訣竅：將杯子放置在流出口下方，以收集沖洗用水，避免滴水盤內的水過量。                                             |
|                        | 水盤過滿而溢出，讓咖啡機看起來似乎是在漏水。                  | 每天或當水盤蓋上「水盤已滿」指示燈亮起後，立即清空水盤。                                                                               |

| 問題                             | 原因                                            | 解決方法                                                        |
|--------------------------------|-----------------------------------------------|-------------------------------------------------------------|
|                                | 水箱沒有完全裝好，有水從水箱漏出，因此空氣流入咖啡機內。                  | 請確保水箱位於正確位置：將其取出後再放回去，並盡可能推到最深處。                            |
|                                | 沖煮器不乾淨/堵塞。                                    | 清洗沖煮器。                                                      |
|                                | 咖啡機未放在水平表面上。                                  | 將咖啡機放在一個水平面上，以防止滴水盤內的水過量，並確保「滴水盤已滿」指標運作正常。                  |
| 我無法啟動 AquaClean 濾水器，但是咖啡機要求除鈣。 | 未在螢幕顯示 AquaClean 提醒後及時安裝或更換濾水器。這表示您的咖啡機中含有水垢。 | 請將咖啡機除鈣，然後再安裝 AquaClean 濾水器。                                |
| 新的濾水器不符。                       | 您正在嘗試安裝非飛利浦 AquaClean 的其他濾水器。                 | 本咖啡機僅能搭配使用飛利浦 AquaClean 濾水器。                                |
|                                | AquaClean 上的橡膠圈沒有在正確位置上。                      | 請將橡膠圈重新放回 AquaClean 濾水器中。                                   |
| 咖啡機正在發出大聲噪音。                   | 這是正常現象，咖啡機會在使用時發出些許噪音。                        | 如果咖啡機開始發出不同的噪音，請清潔並潤滑沖煮器 (見 '潤滑沖煮組件')。                      |
|                                | AquaClean 濾水器沒有妥當準備好，因此現在有空氣流入咖啡機中。           | 將 AquaClean 濾水器從水箱中取出，將其準備好再放回去。請參閱「AquaClean 濾水器」一章中的逐步說明。 |
|                                | 水箱沒有完全裝好，因此空氣流入咖啡機內。                          | 請確保水箱位於正確位置：將其取出後再放回去，並盡可能推到最深處。                            |

技術規格

製造商保有更新此產品技術規格的權利。所有預設的數量皆為約略值。

| 說明                 | 值                     |
|--------------------|-----------------------|
| 尺寸 (寬 x 高 x 深)     | 246 x 377 x 434 公釐    |
| 重量                 | 7.5 - 8 公斤            |
| 電線長度               | 1200 公釐               |
| 水箱                 | 1.8 公升                |
| 咖啡豆槽容量             | 275 公克                |
| 咖啡粉槽容量             | 12 塊                  |
| LatteGo (牛奶容器) 容量  | 250 毫升                |
| 壺嘴高度調節幅度           | 88 -145 公釐            |
| 額定電壓 - 功率定額 - 電力供應 | 請見維修門蓋內側的規格標籤 (圖 A11) |

목차

|                 |    |
|-----------------|----|
| 커피 머신 개요(그림 A)  | 35 |
| 제어판             | 35 |
| 소개              | 36 |
| 처음 사용 전         | 37 |
| 음료 추출           | 38 |
| 음료 조절           | 40 |
| 머신 설정 조절        | 40 |
| 추출기 분리 및 장착     | 41 |
| 청소 및 유지관리       | 42 |
| AquaClean 정수 필터 | 44 |
| 석회질 제거 과정(30분)  | 45 |
| 액세서리 주문         | 45 |
| 문제 해결           | 46 |
| 기술 사양           | 50 |

이  
장  
의  
목  
차

커피 머신 개요(그림 A)

|                  |                       |
|------------------|-----------------------|
| A1 제어판           | A10 서비스 도어            |
| A2 컵 홀더          | A11 유형 번호가 포함된 데이터 라벨 |
| A3 분쇄 커피함        | A12 물탱크               |
| A4 원두 투입구 뚜껑     | A13 온수 배출구            |
| A5 조절 가능한 커피 배출구 | A14 커피 찌꺼기 통          |
| A6 전원 코드 소켓      | A15 커피 찌꺼기 통의 전면 패널   |
| A7 분쇄 설정 조절기     | A16 물받이 덮개            |
| A8 커피 원두 컨테이너    | A17 물받이               |
| A9 추출기           | A18 '물받이 가득 참' 표시등    |

액세서리

|                     |                  |
|---------------------|------------------|
| A19 전원 코드           | A22 계량 스푼        |
| A20 윤활유 튜브          | A23 물 경도 검사지     |
| A21 AquaClean 정수 필터 | A24 LatteGo(우유통) |

제어판

이 에스프레소 머신에는 여러 가지 버전이 있는데, 제어판이 각기 다릅니다. 각 버전별로 고유한 모델 번호가 있습니다. 데이터 라벨의 유형 번호는 서비스 도어 안쪽에 있습니다(그림 A11). 설정  아이콘을 누르고 '지원'을 선택하여 유형 번호를 찾을 수도 있습니다.

모든 버튼 및 아이콘의 개요는 그림 C와 D를 참조하십시오. 아래에는 설명이 나와 있습니다.

위쪽 및 아래쪽 화살표를 사용하여 디스플레이에서 스크롤하고 OK 아이콘을 눌러 선택하거나 선택을 확인할 수 있습니다.

모든 유형(그림 C/D)

|                                                                                            |                                                                                             |                                                                                              |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| C1/D1 원터치 음료 아이콘                                                                           | C4. 탐색 아이콘(위로, 아래로, 뒤로, OK)                                                                 | C7. 세척 메뉴   |
| C2/D2. 추가 음료가 있는 메뉴                                                                        | C5. 디스플레이                                                                                   | C8. 개인 프로필  |
| C3 시작/중지  | C6. 머신 설정  | C9. 전원 버튼                                                                                    |

4000 시리즈만 해당(그림 C)

C1 원터치 음료 아이콘: 에스프레소, 커피, 아메리카노, 아이스 커피, 카푸치노, 라테 마키아토

5000 시리즈만 해당(그림 D)

D1 원터치 음료 아이콘: 에스프레소, 커피, 아메리카노, 카푸치노, 라테 마키아토, 아이스 커피, 아이스 라테

소개

Philips 전자동 커피 머신을 구입해 주셔서 감사합니다! 저희가 제공하는 지원 혜택을 받으실 수 있도록 [www.philips.com/welcome](http://www.philips.com/welcome)에서 제품을 등록해 주십시오.  
커피 머신을 처음 사용하기 전에 별도의 안전 책자를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.  
저희는 커피 머신 이용을 시작하고 최대한 활용할 수 있도록 여러 가지 방식으로 지원을 제공해 드리고 있습니다. 상자 내용물:


- 1 그림을 기반으로 한 사용 방법 안내 및 세척과 유지관리에 관한 정보가 들어 있는 빠른 시작 가이드.
- 2 커피 머신을 안전하게 사용하는 방법에 대한 설명이 포함된 별도의 안전 설명서.
- 3 온라인 지원(확장 사용 설명서, 자주 묻는 질문, 동영상 등)을 받으려면 본 책자의 표지에 있는 QR 코드를 스캔하여 앱을 다운로드하거나 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)를 방문하십시오.

**i** 이 에스프레소 머신에는 여러 가지 버전이 있는데, 모두 기능이 다릅니다. 각 버전에는 해당 유형 번호가 있습니다. 데이터 라벨의 유형 번호는 서비스 도어 뒷면에 있습니다(그림 A11 참조).

**i** 이 커피 머신은 커피를 사용하여 테스트를 거쳤습니다. 꼼꼼히 세척하였으나 일부 커피 가루가 남아 있을 수 있습니다. 그러나 이 커피 머신은 완벽한 새 제품임을 보장합니다.

커피 머신은 가장 맛있는 커피를 만들 수 있는 분쇄 커피의 양을 자동으로 조절합니다. 처음에 5번 정도 커피를 추출해 커피 머신에서 자율 조절 기능을 완료하게 해야 합니다.  
처음 사용하기 전에 LatteGo(우유통)를 행귀냈는지 확인합니다.

## 처음 사용 전

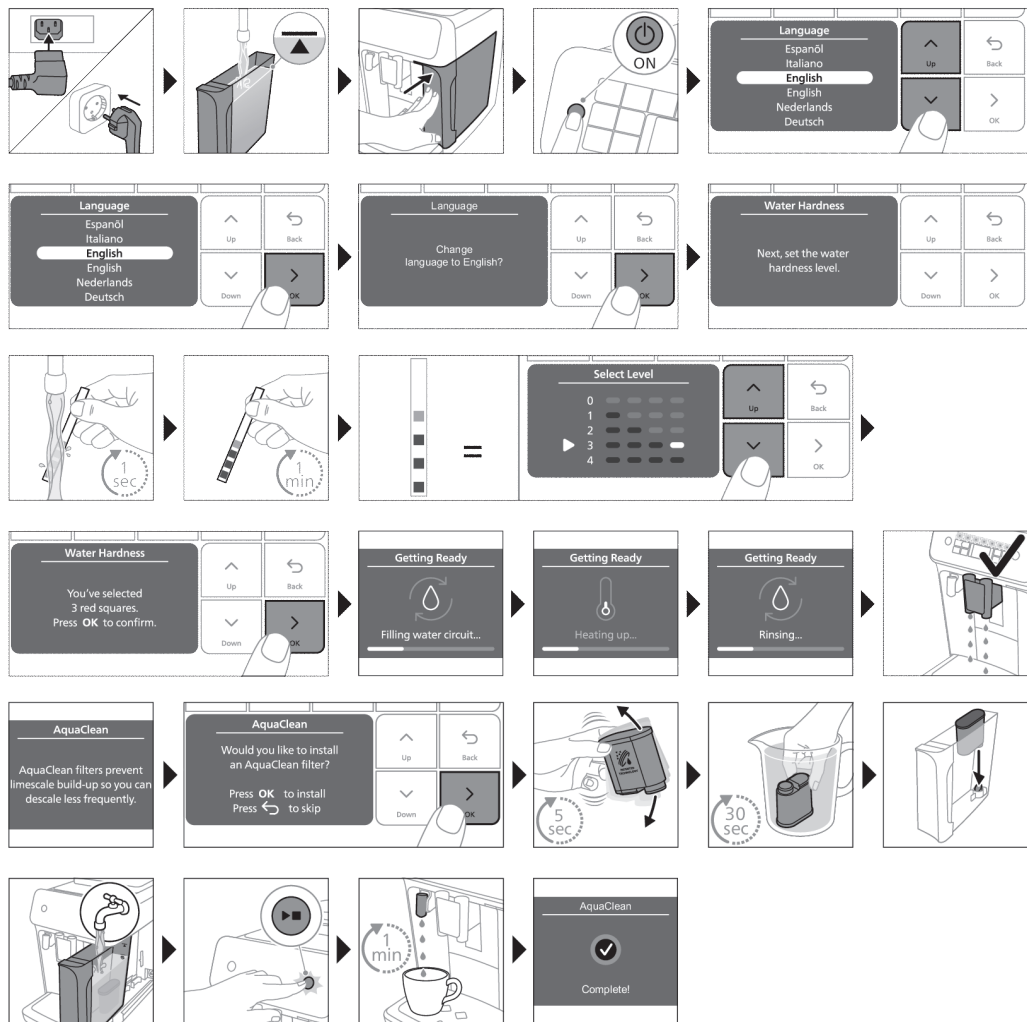

## LatteGo 조립





# 음료 추출

## 일반 단계

- 1 물탱크에 사용할 물을 채우고 커피 원두 컨테이너에 원두를 채웁니다.
- 2 머신 뒷면에 있는 소켓에 소형 플러그를 꽂으십시오. 전원 플러그를 벽면 콘센트에 꽂으십시오.
- 3 전원 버튼을 눌러 제품을 켭니다.
  - 음료 아이콘의 모든 표시등이 계속 켜진 상태를 유지하면 커피 머신을 사용할 준비가 되었다는 의미입니다.
- 4 커피 배출구 아래에 잔을 놓습니다. 커피 배출구 높이를 사용 하는 컵이나 유리잔 크기에 맞추려면 배출구를 위나 아래로 밀어 조정합니다 (그림 2).

## 원두로 커피 추출

- 1 커피를 추출하려면 선택한 음료 아이콘을 누르거나 '추가 음료' 아이콘 을 누릅니다.
  - 이제 원하는 맛 에 따라 음료 설정을 조절할 수 있습니다. 위쪽 및 아래쪽 화살표를 사용하여 커피 농도를 조절합니다. 설정 을 더 조절하려면 OK 아이콘을 누릅니다.
- 2 언제든지 시작/중지 ►■ 버튼을 눌러 선택한 음료를 추출합니다.
- 3 커피 머신이 완료되기 전에 커피 배출을 멈추려면 시작/중지 ►■ 버튼을 다시 누릅니다.

**i** 동시에 2잔의 커피를 추출하려면 음료 아이콘을 두 번 누르거나 전용 막대를 스크롤하여 2x 아이콘을 선택합니다.

**A** 캐러멜 원두나 향이 첨가된 원두를 사용하지 마십시오.

## LatteGo(우유통)로 우유 함유 음료 추출

**A** LatteGo는 우유통, 프레임 및 저장 뚜껑으로 구성되어 있습니다. 새지 않도록 하려면 우유통을 채우기 전에 프레임과 우유통을 올바르게 조립해야 합니다.

- 1 LatteGo를 조립하려면 우유통의 상단을 프레임 상단의 흑 아래에 삽입합니다 (그림 8). 그런 다음 우유통 하단의 홈을 눌러 제자리에 끼웁니다. 제자리 에 고정할 때 딸깍 소리가 납니다 (그림 9).

**참고:** 우유통과 프레임을 연결하기 전에 깨끗한지 확인하십시오.

- 2 LatteGo를 살짝 기울여 온수 배출구 위에 올려 놓습니다 (그림 10). 그런 다음 제자리 에 고정될 때까지 눌러 끼웁니다 (그림 11).
- 3 LatteGo에 우유 를 채웁니다 (그림 12). 우유통의 최대 표시선을 초과하여 우유를 채우지 마십시오.

**i** 우유량을 맞춤 조정한 경우 우유통에 우유를 LatteGo에 이 음료에 대해 표시된 것보다 많이 또는 적게 채워야 할 수 있습니다.

**☞** 최적의 결과를 위해서는 항상 냉장고에서 바로 꺼낸 우유를 사용하십시오.

- 4 물받이에 잔을 놓습니다.
- 5 선택한 우유 함유 음료 아이콘을 누르거나 '추가 음료' 아이콘을 눌러 다른 음료 를 선택합니다.
  - 이제 기호 에 맞게 음료를 조절할 수 있습니다.
- 6 시작/중지 ►■ 버튼을 누릅니다.
  - 카푸치노, 플랫 화이트, 라테 마키아토, 아이스 카푸치노 또는 아이스 라테를 추출할 때는 커피 머신이 먼저 우유를 배출한 다음 커피를 배출합니다. 카페 라테, 카페 오레, 아이스 카페 라테 또는 아이스 카페 오레를 추출할 때는 커피 머신이 먼저 커피를 배출한 다음 우유를 배출합니다.
  - 커피 머신이 사전 설정된 양을 배출하기 전에 우유 배출을 멈추려면 시작/중지 ►■ 버튼을 누릅니다.
- 7 커피 머신이 완료되기 전에 커피 완성된 음료(우유와 커피) 배출을 멈추려면 시작/중지 ►■ 버튼을 길게 누릅니다.

## 아이스 음료 추출

**i** 커피는 온수로 추출합니다. 최적의 결과를 위해서는 각얼음 위로 추출합니다.

- 1 각얼음으로 유리잔을 2/3까지 채웁니다.
- 2 유리잔을 커피 배출구 아래에 놓습니다.
- 3 아이스 커피 아이콘 을 탭합니다.  
- 이제 선호하는 맛에 맞게 음료 설정을 조절할 수 있습니다.

**i** 아로마 강도는 3으로 설정하는 것을 추천합니다.

- 4 시작/중지 ►■ 버튼을 누릅니다.
- 5 커피 머신이 완료되기 전에 커피 배출을 멈추려면 시작/중지 ►■ 버튼을 다시 누릅니다.
- 6 아이스 커피를 특별하게 마시려면 위에 차가운 우유를 부어주세요.

## 추가 샷(ExtraShot)

더 진한 커피를 마시고 싶은 경우 커피 머신에서 리스트레토 추가 샷을 커피와 우유 음료에 추가할 수 있습니다.

- 1 배출구 아래에 잔을 놓습니다.
- 2 원터치 음료 아이콘 중 하나를 눌러 음료를 선택하거나 '추가 음료' 아이콘을 눌러 음료를 선택합니다.
- 3 위쪽 화살표를 사용하여 농도를 최고 수준으로 설정한 후 추가 샷 기능을 선택합니다.
- 4 다른 설정을 원하는 대로 조절하려면 OK 아이콘을 누릅니다. 그런 다음 시작/중지 ►■ 아이콘을 눌러 음료 추출을 시작합니다.
- 5 커피 머신의 동작이 끝나기 전에 음료 배출을 멈추려면 시작/중지 ►■ 아이콘을 다시 누릅니다.

**i** 추가 샷 기능을 선택하면 커피를 한 번에 한 잔만 추출할 수 있습니다.

## 분쇄 상태 커피로 커피 추출

예를 들어 다른 종류의 커피 또는 디카페인 커피를 선호하는 경우 원두 대신 분쇄 커피를 사용할 수 있습니다.

- 1 분쇄커피 투입구 (그림 14) 뚜껑을 열고 분쇄 커피를 한스푼의 정량 (넘치지 않도록) 붓습니다. 그런 다음 뚜껑을 닫습니다.
- 2 원터치 음료 아이콘 중 하나를 누르거나 '추가 음료' 아이콘을 눌러 다른 음료를 선택합니다.
- 3 분쇄 커피 기능을 선택합니다. 두 가지 방법을 사용할 수 있습니다.  
- 아래쪽 화살표를 사용하여 농도를 최저 수준으로 설정한 후 분쇄 기능을 선택합니다.  
- 설정 ⚙️ 아이콘을 누르고 아래쪽 화살표를 사용하여 분쇄 기능을 선택합니다.
- 4 커피 머신이 동작을 끝내기 전에 커피 배출을 멈추려면 시작/중지 ►■ 버튼을 다시 누릅니다.

**i** 분쇄 커피 기능을 선택할 경우:

- 자동으로 저장됩니다.
- 커피를 한 번에 한 잔만 추출할 수 있습니다.
- 다른 아로마 강도를 선택할 수 없습니다.

## 뜨거운 물 배출

- 1 LatteGo가 부착되어 있으면 분리합니다.
- 2 온수 배출구 아래에 잔을 놓습니다.
- 3 '추가 음료' 아이콘을 누르고 위쪽 및 아래쪽 화살표를 사용하여 뜨거운 물을 선택합니다.
- 4 위쪽 및 아래쪽 화살표를 사용하여 온수의 양이나 온도를 기호에 맞게 조절합니다.
- 5 시작/중지 ►■ 버튼을 누릅니다.  
- 온수 배출구 (그림 15)에서 온수가 배출됩니다.
- 6 커피 머신이 완료되기 전에 뜨거운 물 배출을 멈추려면 시작/중지 ►■ 버튼을 다시 누릅니다.

## 음료 조절

커피 머신에서 기호에 맞게 음료 설정을 조절하고 조절한 음료를 개인 프로필에 저장할 수 있습니다. 프로필마다 색상이 다릅니다.

원터치 음료 아이콘 중 하나를 누르거나 '추가 음료' 아이콘을 눌러 음료를 선택한 후에는 다음 작업을 할 수 있습니다.

- 1 위쪽 및 아래쪽 아이콘으로 아로마 강도를 조절합니다 (그림 5). 5가지 강도가 있는데 강도가 낮아질수록 부드럽고 높아질수록 강합니다.
- 2 위쪽 및 아래쪽 아이콘으로 커피의 양 (그림 16)이나 우유의 양을 조절합니다. 설정마다 5가지 양 설정이 있습니다.

**i** 선택한 설정은 커피 머신이 추출을 끝내는 즉시 선택한 프로필에 자동으로 저장됩니다.

## 프로필 선택

내 커피 선택 프로필(My Coffee Choice Profiles)을 사용하여 프로필을 선택하고 레시피를 저장할 수 있습니다.

- 1 프로필  아이콘을 여러 번 눌러 컬러 프로필 중 하나를 선택합니다. 프로필마다 색상이 다릅니다.
- 2 원터치 음료 아이콘 중 하나를 누르거나 '추가 음료' 아이콘을 눌러 음료를 선택합니다.
- 3 기호에 맞게 음료 설정을 조절합니다.
- 4 시작/중지  버튼을 눌러 선택한 음료를 추출합니다.
  - 이제 새로운 설정이 선택한 컬러 프로필에 저장되었습니다.

**i** 언제든지 커피 머신의 기본 설정을 복원할 수 있습니다 (보기 '기본 설정 복원').

## 게스트 프로필

커피 머신에 기본적으로 게스트 프로필이 있습니다. 게스트 프로필을 선택하면 프로필 아이콘이 꺼집니다. 이 프로필을 선택해도 기호에 맞게 설정을 조절할 수 있지만 추출 레시피는 저장되지 않습니다.

## 머신 설정 조절

### 물 경도 설정

**💡** 커피 머신의 최적의 성능과 수명 연장을 위해 해당 지역의 물 경도 수준에 맞게 물 경도 설정을 조절하는 것이 좋습니다. 그렇게 하면 커피 머신의 석회질을 너무 자주 제거하지 않아도 됩니다. 기본 물 경도는 4: 경수로 설정되어 있습니다.

**해당 지역의 물 경도를 확인하려면 상자 안에 제공된 물 경도 검사지를 사용하십시오.**

- 1 물 경도 검사지를 수돗물에 담그거나 흐르는 수돗물에 1초 동안 담니다 (그림 17).
- 2 1분 동안 기다립니다. 검사지에서 빨간색으로 변하는 정사각형의 수로 물 경도를 표시합니다 (그림 18).

**커피 머신을 올바른 물 경도로 설정합니다.**

- 1 설정  아이콘을 누르고 위쪽 및 아래쪽 화살표를 사용하여 '물 경도'를 선택합니다. 그런 다음 OK 아이콘을 눌러 확인합니다.
- 2 위쪽 및 아래쪽 화살표를 사용하여 물 경도 수준을 선택합니다. 디스플레이에 선택된 빨간 사각형 수가 검사지 (그림 19)의 빨간 사각형 수와 같아야 합니다.
- 3 정확한 물 경도 설정을 선택하고 OK 아이콘을 눌러 확인합니다.

## 그라인더 설정

원두 용기 안에 있는 분쇄 설정 노브로 커피 강도를 변경할 수 있습니다. 분쇄 설정이 낮을수록 커피 원두가 곱게 분쇄되고 커피 강도는 높아집니다. 12가지 분쇄 설정 중에서 선택할 수 있습니다.

커피 머신은 분쇄 커피를 가장 맛있게 추출하도록 설정되어 있습니다. 그러므로 커피를 100-150잔 정도 추출할 때까지(약 1개월 사용) 분쇄 설정을 조정하지 않는 것이 좋습니다.

**i** 분쇄 설정은 커피 원두가 분쇄되는 동안에만 조절할 수 있습니다. 2~3번 정도 음료를 추출해야 전체적인 차이를 맞출 수 있습니다.

**A** 그라인더 손상을 방지하려면 분쇄 설정 노브를 한 번에 한 단계 이상 돌리지 마십시오.

- 1 커피 배출구 아래에 잔을 놓습니다.
- 2 분쇄 커피 원두 투입구의 뚜껑을 엽니다.
- 3 에스프레소 아이콘을 누른 다음 시작/중지 ▶ 버튼을 누릅니다.
- 4 분쇄기가 분쇄를 시작하기 전, 분쇄 설정 노브를 돌려 왼쪽이나 오른쪽으로 돌립니다. (그림 20)

## 기타 커피 머신 설정 조절

설정  아이콘을 눌러 다음과 같은 커피 머신 설정을 조절할 수 있습니다.

- 물 경도: 해당 지역 물 경도 수준에 따라 5가지 수준 중에서 선택할 수 있습니다.
- 대기 시간: 15, 30, 60 또는 180분을 선택할 수 있습니다.
- 디스플레이 밝기: 낮음, 보통, 높음을 선택할 수 있습니다.
- 언어
- 소리: 커피 머신의 신호음을 활성화하거나 비활성화할 수 있습니다.
- 온도: 3가지 커피 추출 온도 중에서 선택할 수 있습니다.
- 전면 조명(5500 시리즈만 해당): '항상 켜기', '추출 중 켜기' 또는 '항상 끄기' 중에서 선택할 수 있습니다.
- 측정 단위: ml.와 oz. 중에서 선택할 수 있습니다.
- 프로필 활성화: 프로필을 활성화하거나 비활성화할 수 있습니다.
- 시작 시 행굼: 커피 머신의 전원을 켰을 때 자동 행굼 과정이 진행되는 기능을 활성화 또는 비활성화할 수 있습니다.
- 디스플레이 백라이트: 음료 버튼의 백라이트를 활성화하거나 비활성화할 수 있습니다.

## 기본 설정 복원

커피 머신에는 언제든지 기본 설정을 복원할 수 있는 기능이 있습니다.

- 1 설정  아이콘을 누릅니다.
- 2 위쪽 및 아래쪽 아이콘을 사용하여 '기본 설정'을 선택합니다. OK 아이콘을 눌러 확인합니다.
- 3 설정 복원을 확인하려면 시작/중지 ▶ 버튼을 누릅니다.
  - 이제 설정이 복원됩니다.

**i** 기본값으로 복원되는 기본 설정은 물 경도, 대기 시간, 밝기, 디스플레이 백라이트, 행굼 시작, 소리, 온도, 전면 조명, 프로필입니다.

## 추출기 분리 및 장착

추출기를 분해, 삽입 및 청소하는 방법에 대한 자세한 동영상 지침은 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)를 참조하십시오.

## 커피 머신에서 추출기 분리하기

- 1 머신의 전원을 끄십시오.
- 2 물탱크를 분리하고 서비스 도어 (그림 21)를 엽니다.
- 3 PUSH(누름) 손잡이 (그림 22)을 누르고 추출기의 손잡이를 잡아당겨 커피 머신 (그림 23)에서 빼냅니다.

## 추출기 다시 장착하기

**A** 추출기를 커피 머신에 다시 끼우기 전 위치가 올바른지 확인합니다.

- 1 추출기 위치가 올바른지 확인합니다. 추출기 측면에 있는 노란색 실린더의 화살표가 검은색 화살표 및 N (그림 24)과 나란히 정렬되어야 합니다.
  - 정렬되지 않았으면 추출기 (그림 25) 바닥에 닿을 때까지 레버를 아래로 누릅니다.
- 2 딸깍 (그림 27) 소리가 날 때까지 측면 (그림 26)의 가이드 레일을 따라 추출기를 커피 머신에 다시 끼워 넣습니다. PUSH(누름) 버튼을 누르지 마십시오.
- 3 서비스 도어를 닫고 물탱크를 다시 끼웁니다.

## 청소 및 유지관리

주기적으로 세척하고 유지 보수를 수행하면 커피 머신의 상태가 최상으로 유지되어 오랫동안 맛있는 커피를 추출하고 커피 흐름이 안정적으로 유지됩니다.

커피 머신의 모든 분리형 부품을 청소하는 시기와 방법에 대한 자세한 내용은 아래 표를 참조하십시오. 보다 자세한 정보와 동영상 지침은 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)에서 확인할 수 있습니다. 어떤 부품을 식기세척기로 세척할 수 있는지에 대한 개요는 그림 B를 참조하십시오.

| 분리형 부품   | 세척 시기                                                                    | 세척 방법                                                                                                                                                                                                                   |
|----------|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 추출기      | 매주                                                                       | 추출기를 커피 머신 (보기 '추출기 분리 및 장착')에서 꺼내십시오. 수돗물 (보기 '수돗물로 추출기 세척')로 행구하십시오.                                                                                                                                                  |
|          | 매월                                                                       | Philips 커피 기름때 제거용 세정제 (보기 '커피 기름때 제거용 세정제로 추출기 세척')로 추출기를 세척합니다.                                                                                                                                                       |
| 분쇄커피 투입구 | 일주일에 한 번 정도 분쇄커피 투입구가 막혔는지 확인합니다.                                        | 커피 머신 플러그를 뽑고 추출기를 꺼냅니다. 분쇄커피 투입구 뚜껑을 열고 그 안에 스푼 손잡이를 삽입합니다. 막힌 분쇄 커피가 떨어질 때까지 (그림 28) 손잡이를 위아래로 움직입니다. 자세한 동영상 지침은 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 에서 자세한 동영상 지침을 참조하십시오. |
| 커피 찌꺼기 통 | 커피 머신에서 메시지가 표시되면 커피 찌꺼기 통을 비우십시오. 매주 세척합니다.                             | 커피 머신의 전원을 켜 상태에서 커피 찌꺼기 통을 분리하십시오. 소량의 세제를 넣어 수돗물로 행구거나 식기세척기로 세척합니다. <b>커피 찌꺼기 통의 전면 패널(그림 A15)은 식기세척기로 세척할 수 없습니다.</b>                                                                                               |
| 물받이      | 물받이 (그림 29)에서 빨간색 '물받이 가득 참' 표시등이 켜지는 즉시 또는 매일 물받이를 비웁니다. 물받이를 매주 세척합니다. | 물받이 (그림 30)를 분리해 소량의 세제와 함께 사용할 물로 행굽니다. 물받이를 식기 세척기에 넣어서 세척할 수도 있습니다. <b>커피 찌꺼기 통의 전면 패널(그림 A15)은 식기세척기로 세척할 수 없습니다.</b>                                                                                               |

| 분리형 부품      | 세척 시기    | 세척 방법                                                                                                                 |
|-------------|----------|-----------------------------------------------------------------------------------------------------------------------|
| LatteGo     | 매 회 사용 후 | 먼저 '빠른 우유 세척' 프로그램 (보기 '빠른 LatteGo 세척')을 사용하여 커피 머신에 부착된 채로 LatteGo를 세척합니다. 그런 다음 커피 머신에서 분리해 수돗물로 행구거나 식기세척기로 세척합니다. |
| 추출기에 윤활유 도포 | 2개월마다    | 윤활 표를 참조하여 추출기에 Philips 윤활유 (보기 '추출기 윤활')를 도포합니다.                                                                     |
| 물탱크         | 매주       | 사용할 물로 물탱크를 행굽니다.                                                                                                     |
| 커피 머신 전면    | 매주       | 부드러운 천으로 닦으십시오.                                                                                                       |

## 추출기 세척

추출기를 정기적으로 청소하면 커피 찌꺼기로 인해 내부 추출관이 막히는 것을 방지할 수 있습니다. 추출기를 분해, 삽입 및 청소하는 방법에 대한 지원 동영상은 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)를 참조하십시오.

### 수돗물로 추출기 세척

- 1 추출기 (보기 '추출기 분리 및 장착')를 분리합니다.
- 2 미지근한 물로 추출기를 깨끗이 행굽니다. 추출기의 상단 필터 (그림 31)를 주의하여 세척합니다.
- 3 추출기를 다시 넣기 전에 상온에서 완전히 말립니다. 추출기 내부를 천으로 닦으면 보풀이 묻을 수 있으므로 천으로 닦지 마십시오.

### 커피 기름때 제거용 세정제로 추출기 세척

Philips 커피 기름때 제거용 세정제만 사용하십시오.

- 1 세척  아이콘을 누르고 위쪽 및 아래쪽 화살표를 사용하여 '추출기 세척'을 선택합니다.
- 2 OK 아이콘을 눌러 확인한 후 화면의 지침에 따릅니다.

## 추출기 윤활

커피 머신 성능을 개선하려면 부품이 계속 부드럽게 움직일 수 있도록 2개월마다 추출기에 윤활유를 도포하는 것이 좋습니다.

- 1 추출기 (그림 32)의 피스톤(회색 부품)에 윤활유를 얇게 바릅니다.
- 2 추출기 (그림 33) 바닥의 축(회색 부품) 주변에 윤활유를 얇게 바릅니다.
- 3 양쪽 (그림 34) 가이딩 레일에 윤활유를 얇게 바릅니다.

## LatteGo(우유통) 세척

### 빠른 LatteGo 세척

- 1 LatteGo가 커피 머신 (그림 10)에 제대로 장착되어 있는지 확인합니다.
- 2 배출구 아래에 잔을 놓습니다.
- 3 세척  아이콘을 누르고 위쪽 및 아래쪽 화살표를 사용하여 '빠른 우유 세척' 프로그램을 선택합니다.
- 4 OK 아이콘을 눌러 확인한 후 화면의 지시에 따라 우유 시스템 안에 남아 있는 우유를 모두 제거합니다.
  - 우유 시스템에서 소량의 온수가 분사될 수 있습니다.
- 5 남은 우유와 함께 LatteGo를 냉장고에 보관합니다.

### 꼼꼼하게 LatteGo 세척

- 1 커피 머신 (그림 35)에서 LatteGo를 분리합니다.
- 2 남은 우유는 모두 따라냅니다.

- 3 분리 버튼을 누르고 LatteGo (그림 36)의 프레임에서 우유통을 분리합니다.
- 4 모든 부품을 식기세척기로 또는 미지근한 수돗물과 소량의 세제로 세척합니다.

## AquaClean 정수 필터

커피 머신에 AquaClean이 활성화되어 있습니다. 커피의 맛을 보존하기 위해 AquaClean 정수 필터를 물탱크 안에 장착할 수 있습니다. 또한 이것은 커피 머신 안의 석회질이 쌓이는 것을 줄여 석회질 제거 필요를 줄입니다. AquaClean 정수 필터는 현지 대리점, 지정 서비스 센터 또는 [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories)에서 온라인으로 구입할 수 있습니다.

## AquaClean 필터 상태 확인

AquaClean이 작동 중이면 AquaClean 필터 상태가 항상 화면에 백분율로 표시됩니다.

- AquaClean 필터 상태가 10% 이하이면 커피 머신 스위치를 켤 때마다 화면에 새 필터를 구입하라는 메시지가 2초 동안 나타납니다.
- 필터 상태가 0%이면 커피 머신 스위치를 켤 때마다 AquaClean 필터를 교체하라는 메시지가 나타납니다.

## AquaClean 정수 필터 활성화(5분)

**i** 커피 머신은 물탱크 안에 필터가 장착되었는지 자동으로 감지하지 않습니다. 따라서 '세척' 메뉴에서 설치한 새 AquaClean 정수 필터를 각각 활성화해야 합니다.

필터 활성화 메시지가 커피 머신에 더 이상 표시되지 않으면 AquaClean 정수 필터를 활성화할 수 있지만 먼저 커피 머신의 석회질을 제거해야 합니다.

**i** AquaClean 정수 필터를 사용하려면 커피 머신에 석회질이 전혀 없어야 합니다.

AquaClean 정수 필터를 활성화하기 전에 아래에 설명된 대로 물에 담가 준비해야 합니다. 그렇게 하지 않으면 물 대신에 커피 머신 안에 공기가 유입될 수 있기 때문에 소음이 많이 나고 커피 머신이 커피를 추출하지 못하게 됩니다.

- 1 '세척'  아이콘을 누르고 위쪽 및 아래쪽 화살표를 사용하여 'AquaClean'을 선택합니다.
- 2 OK 아이콘을 눌러 확인합니다.
- 3 활성화 화면이 나타나면 다시 OK 아이콘을 누릅니다. 화면의 지침을 잘 따르십시오.
- 4 필터를 약 5초 (그림 37) 동안 흔들어 줍니다.
- 5 찬물이 들어 있는 용기에 필터를 거꾸로 담고 용기 (그림 38)를 흔들고/누릅니다.
- 6 필터를 물탱크의 필터 연결부에 수직 방향으로 끼웁니다. 최대한 아래 지점 (그림 39)까지 누릅니다.
- 7 물탱크의 깨끗한 물을 채우고 머신에 다시 장착합니다.
- 8 LatteGo가 부착되어 있으면 분리합니다.
- 9 온수 배출구 아래에 용기를 놓습니다.
- 10 활성화 과정을 시작하려면 시작/중지 ► 버튼<sup>1</sup>을 누릅니다.
- 11 온수 배출구에서 1분 동안 온수가 배출됩니다.
- 12 이제 필터가 제대로 활성화되었습니다.

## AquaClean 정수 필터 교체(5분)

95리터의 물이 필터를 통과하여 흐른 후 필터는 작동을 멈춥니다. AquaClean 상태 표시가 0%로 떨어지면 필터를 교체해야 한다는 의미입니다. AquaClean 상태 표시가 디스플레이에 보이는 동안에는 먼저 커피 머신의 석회질을 제거하지 않고 필터를 교체할 수 있습니다. AquaClean 정수 필터를 제때에 교체하지 않으면 어느 정도 시간이 지나고 AquaClean 상태 표시가 꺼집니다. 그런 경우에도 필터를 교체할 수는 있지만 먼저 커피 머신의 석회질 제거 프로세스를 시행해야 합니다.

AquaClean 상태 표시가 0%로 떨어지거나 커피 머신에서 AquaClean 필터 교체를 알리면 다음과 같이 하십시오.

- 1 오래된 AquaClean 정수 필터를 꺼냅니다.

2 새 필터를 설치하고 'AquaClean 정수 필터 활성화(5분)' 장에 설명된 대로 활성화합니다.

**i** 교체가 필요하다는 메시지가 나타나지 않더라도 적어도 3개월에 한 번은 AquaClean 정수 필터를 교체합니다.

## 석회질 제거 과정(30분)

필립스 석회질 제거제만 사용하십시오. 황산, 염산, 술판산 또는 아세트산(식초) 기반의 석회질 제거제는 절대 사용하지 마십시오. 커피 머신의 물 배출구가 손상되고 석회질이 적절하게 녹지 않을 수 있습니다. 필립스 석회질 제거제를 사용하지 않으면 보증이 무효화됩니다. 제품의 석회질을 제거하지 않아도 보증이 무효화됩니다. 필립스 석회질 제거 용액은 온라인 매장 <http://pok.co.kr/> 에서 구입할 수 있습니다.

커피 머신에서 석회질을 제거할 때가 되면 디스플레이에 메시지가 나타납니다.

- 1 사용자 인터페이스의 세척  아이콘을 누르고 메뉴에서 '석회질 제거'를 선택합니다.
- 2 화면의 지침을 잘 따르십시오.
- 3 LatteGo가 부착되어 있으면 분리합니다.
- 4 물받이와 커피 찌꺼기 통을 빼내고 비운 다음 제자리에 넣습니다.
- 5 물탱크를 빼내 비웁니다. 그런 다음 AquaClean 정수 필터를 제거합니다.
- 6 물탱크에 Philips 석회질 제거제 한 병을 모두 붓고 스케일 / 세척 표시선 (그림 40)까지 물을 채웁니다. 그런 다음 커피 머신에 다시 끼웁니다.
- 7 커피 및 물 배출구 아래에 큰 용기(1.5l)를 놓습니다.
- 8 석회질 제거 과정을 시작하려면 시작/중지  버튼을 누릅니다. 석회질 제거 절차에는 약 30분이 소요되며 석회질 제거 과정과 행궁 과정으로 이루어져 있습니다.
- 9 물 배출이 멈출 때까지 기다립니다. 디스플레이에 메시지가 나타나면 물탱크를 다시 채웁니다. 커피 머신이 물 배출을 중지하면 석회질 제거 절차가 완료된 것입니다.
- 10 물탱크에 새 AquaClean 정수 필터를 설치하고 활성화합니다.
  - 석회질 제거 절차가 끝나면 커피 머신에서 새 AquaClean 필터 (보기 'AquaClean 정수 필터 교체(5분)')를 설치하도록 알립니다.

**i** 도움말: AquaClean 필터를 사용하면 석회질을 자주 제거할 필요가 없습니다!

## 석회질 제거 절차가 도중에 중단된 경우의 대처 방법

제어판에서 전원 버튼을 눌러 석회질 제거 절차를 종료할 수 있습니다. 완료되기 전에 석회질 제거 절차가 중단된 경우 다음을 수행합니다.

- 1 물탱크를 비우고 깨끗이 행굽니다.
- 2 물탱크에 스케일 / 세척 표시선까지 깨끗한 물을 채운 후 커피 머신을 다시 켭니다.
- 3 음료를 추출하기 전에 수동 행궁 과정을 수행합니다. 수동 행궁 과정을 수행하려면 먼저 온수 기능을 여러 번 선택하여 물탱크에서 온수를 반 정도 배출하고 분쇄 커피를 넣지 않고 분쇄 커피를 2잔 추출합니다.

**i** 석회질 제거 과정이 완료되지 않은 경우 가능한 한 빨리 석회질 제거 과정을 다시 수행해야 합니다.

## 액세서리 주문

커피 머신을 청소하거나 석회질을 제거할 때는 반드시 Philips Philips 관리 제품을 사용하십시오. 이러한 제품은 현지 대리점, 지정 서비스 센터 또는 [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories)에서 온라인으로 구입할 수 있습니다. 전체 예비 부품 목록을 온라인에서 확인하려면 커피 머신의 모델 번호를 입력하십시오. 모델 번호는 서비스 도어 뒷면에 있습니다.

관리 제품 및 유형 번호:

- 석회질 제거 용액 CA6700
- AquaClean 정수 필터 CA6903



- 추출기 윤활유 HD5061
- 커피 기름때 제거용 세정제 CA6704

**i** Brita 필터는 이 커피 머신과 호환되지 않습니다.

## 문제 해결

이 장에서는 커피 머신을 사용하면서 접할 수 있는 가장 일반적인 문제를 다룹니다. [www.philips.com/coffee-care](http://www.philips.com/coffee-care)에서 지원 동영상 및 전체 자주 묻는 질문(FAQ) 목록을 확인할 수 있습니다. 문제를 해결할 수 없으면 해당 국가의 고객 상담실로 문의하십시오. 연락처 정보는 보증서를 참조하십시오.

## 경고 아이콘

### 경고 아이콘 해결책



- 디스플레이에 '물 부족' 아이콘이 나타납니다.
- 물탱크가 거의 비어 있습니다. 물탱크의 최대 표시선까지 깨끗한 물을 채우십시오.
  - 물탱크가 제대로 장착되지 않았습니다. 물탱크를 다시 끼웁니다.



- 디스플레이에 '원두 추가' 아이콘이 나타납니다.
- 원두 컨테이너에 원두를 채웁니다.



- 디스플레이에 '커피 찌꺼기 통 비우기' 아이콘이 나타납니다.
- 커피 찌꺼기 통이 가득 찬 것입니다. 커피 찌꺼기 통은 커피 머신의 전원을 켜 상태에서 분리하여 비웁니다. 5초간 기다린 후 다시 장착합니다.



- 디스플레이에 '추출기 삽입' 아이콘이 나타납니다.
- 추출기가 제자리에 있지 않거나 제대로 놓여있지 않습니다. 추출기를 분리하고 제자리에 고정되었는지 확인합니다. 단계별 방법은 '추출기 분리 및 장착' 장을 참조하십시오.

## 오류 코드

직접 해결할 수 있는 문제를 표시하는 오류 코드 목록은 다음과 같습니다. [www.philips.com/coffee-care](http://www.philips.com/coffee-care)에서 동영상 지침을 확인할 수 있습니다. 다른 오류 코드가 나타나면 해당 국가의 필립스 서비스 센터에 문의하십시오. 연락처 정보는 보증서를 참조하십시오.

| 오류 코드 | 문제점                            | 가능한 해결책                                                                                                                                                                                                                   |
|-------|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01    | 커피 주입구가 막혔습니다.                 | 커피 머신 전원을 끄고 전원 코드를 뽑습니다. 추출기를 분리합니다. 그런 다음 분쇄 커피파우더를 열고 스푼 손잡이를 삽입합니다. 막힌 분쇄 커피가 떨어질 때까지 핸들을 위아래로 움직입니다. 자세한 동영상 지침은 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 에서 자세한 동영상 지침을 참조하십시오. |
| 03    | 추출기가 더럽거나 윤활유가 제대로 도포되지 않았습니다. | 머신의 전원을 끄십시오. 추출기를 깨끗한 물로 행구고 자연 건조 후 윤활유를 도포합니다. '추출기 세척' 장을 확인하거나 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 에서 자세한 동영상 지침을 참조하십시오. 그런 다음 커피 머신을 다시 켵니다.                              |
| 04    | 추출기 위치가 올바르지 않습니다.             | 머신의 전원을 끄십시오. 추출기를 분리했다 다시 삽입합니다. 삽입하기 전에 추출기가 올바른 위치에 있는지 확인합니다. '추출기 취급' 장을 확인하거나 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 에서 자세한 동영상 지침을 참조하십시오. 그런 다음 커피 머신을 다시 켵니다.              |

| 오류 코드 | 문제점                                       | 가능한 해결책                                                                                                                                                         |
|-------|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 05    | 물 배출구에 공기가 들어 있습니다.                       | 커피 머신의 전원을 껐다가 다시 켜서 재시작합니다. 이런 방식으로 작동하면 뜨거운 물을 2~3잔 배출합니다. 오랫동안 커피 머신의 석회질을 제거하지 않았으면 제거하십시오.                                                                 |
|       | 설치 전 AquaClean 필터가 제대로 준비되지 않았거나 막혀 있습니다. | AquaClean 필터를 빼내고 다시 시도한 후 커피를 추출합니다. 이런 방식으로 작동하면 다시 장착하기 전에 AquaClean 필터가 제대로 준비되었는지 확인합니다. AquaClean 필터를 물탱크에 다시 끼웁니다. 그래도 작동하지 않으면 필터가 막혔거나 필터를 다시 끼워야 합니다. |
| 11    | 커피 머신이 실온에 맞춰져야 합니다.                      | 커피 머신이 이동/실외 온도에서 실온으로 맞춰지도록 잠시 기다립니다. 커피 머신의 전원을 끄고 30분간 기다린 후 다시 켵니다. 그래도 작동하지 않으면 해당 국가의 필립스 고객 상담실에 문의하십시오. 연락처 정보는 보증서를 참조하십시오.                            |
| 14    | 머신이 과열됩니다.                                | 커피 머신을 끈 다음 30분 후에 다시 켵니다.                                                                                                                                      |
| 19    | 커피 머신이 벽면 콘센트에 올바르게 연결되어 있지 않습니다.         | 전원 코드의 작은 플러그가 커피 머신 뒷면의 소켓에 올바르게 연결되어 있는지 확인하십시오.                                                                                                              |

## 문제 해결 표

이 장에서는 커피 머신을 사용하면서 접할 수 있는 가장 일반적인 문제를 다룹니다. [www.philips.com/coffee-care](http://www.philips.com/coffee-care)에서 지원 동영상 및 전체 자주 묻는 질문(FAQ) 목록을 확인할 수 있습니다. 문제를 해결할 수 없으면 해당 국가의 고객 상담실로 문의하십시오. 연락처 정보는 보증서를 참조하십시오.

| 문제점                                               | 원인                                                                                | 해결책                                                                                                 |
|---------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| 새 커피 머신 안에 커피 찌꺼기가 있습니다.                          | 이 커피 머신은 커피를 사용하여 테스트를 거쳤습니다.                                                     | 꼼꼼히 세척하였으나 일부 커피 가루가 남아 있을 수 있습니다. 하지만 커피 머신은 완전히 새 제품입니다.                                          |
| 물받이가 금방 차거나 물받이 안에 항상 약간의 물이 있습니다.                | 이는 일반적인 현상입니다. 커피 머신의 내부 추출관 및 추출기가 물로 헹구집니다. 이때 약간의 물이 내부 시스템을 통해 물받이로 직접 떨어집니다. | 물받이에서 빨간색 '물받이 가득 참' 표시등이 켜지는 즉시 또는 매일 물받이 커버를 비웁니다. 도움말: 나오는 행궁 물을 받을 수 있도록 우유 거품 배출구 아래에 잔을 놓습니다. |
| '커피 찌꺼기 통 비우기' 아이콘이 계속 켜져 있습니다.                   | 커피 머신이 꺼져 있는 상태에서 커피 찌꺼기 통을 비웠거나 너무 빨리 다시 장착했습니다.                                 | 커피 찌꺼기 통은 항상 커피 머신의 전원을 켜 상태에서 비웁니다. 커피 찌꺼기 통을 분리하고 최소 5초 기다린 다음 다시 삽입합니다.                          |
| 커피 머신이 용기가 가득 차있지 않은데도 커피 찌꺼기 통을 비운다는 메시지를 표시합니다. | 커피 찌꺼기 통을 마지막으로 비운 후 카운터가 리셋되지 않았습니다.                                             | 커피 찌꺼기 통을 다시 끼울 때 항상 약 5초 동안 기다립니다. 그러면 커피 찌꺼기 통 카운터가 0으로 리셋되고 커피가 제대로 계수됩니다.                       |
|                                                   |                                                                                   | 커피 찌꺼기 통은 항상 커피 머신의 전원을 켜 상태에서 비웁니다. 커피 머신의 전원을 끈 상태에서 커피 찌꺼기 통을 비우면 커피 가루 카운터가 리셋되지 않습니다.          |

| 문제점                                                     | 원인                                                                                                                | 해결책                                                                                                                                                                                                                           |
|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 커피 찌꺼기 통이 가득 차있는데 '커피 찌꺼기 통 비우기' 아이콘이 디스플레이에 나타나지 않습니다. | 커피 찌꺼기 통을 비우지 않고 물받이를 분리한 것입니다.                                                                                   | 물받이를 분리할 때는 커피가 몇 개만 들어있더라도 커피 찌꺼기 통도 비웁니다. 그러면 커피 카운터가 0으로 리셋되고 커피가 제대로 계수됩니다.                                                                                                                                               |
| 추출기를 빼낼 수 없습니다.                                         | 추출기 위치가 올바르지 않습니다.                                                                                                | 다음 방법으로 머신을 리셋합니다. 서비스 도어를 닫고 물탱크를 다시 끼웁니다. 커피 머신 전원을 껐다가 다시 켜고 음료 아이콘의 표시등이 다시 켜질 때까지 기다립니다. 다시 시도해 추출기를 분리합니다. 단계별 방법은 '추출기 분리 및 장착' 장을 참조하십시오.                                                                             |
| 추출기를 끼울 수 없습니다.                                         | 추출기 위치가 올바르지 않습니다.                                                                                                | 다음 방법으로 머신을 리셋합니다. 서비스 도어를 닫고 물탱크를 다시 끼웁니다. 추출기는 끼우지 말고 뚫니다. 커피 머신 전원을 끄고 전원 코드를 뽑습니다. 30초간 기다린 후 커피 머신 플러그를 다시 연결하고 전원을 켜 후 음료 아이콘 표시등이 다시 켜질 때까지 기다립니다. 그런 다음 추출기를 제자리에 놓고 커피 머신에 다시 끼웁니다. 단계별 방법은 '추출기 분리 및 장착' 장을 참조하십시오. |
| 커피가 너무 묽습니다.                                            | 추출기가 더럽거나 윤활유를 도포해야 합니다.                                                                                          | 추출기를 분리하여 (보기 '커피 머신에서 추출기 분리하기') 흐르는 사용할 물에 행구고 자연 건조합니다. 그런 다음 움직이는 부품에 윤활유를 도포합니다 (보기 '추출기 윤활').                                                                                                                           |
|                                                         | 커피 머신이 자율 조절 과정을 수행하고 있습니다. 이 절차는 처음으로 커피 머신을 사용할 때, 다른 유형의 커피 원두로 변경할 때 또는 오랜 기간 동안 사용하지 않다가 사용하는 경우 자동으로 시작됩니다. | 처음에 5잔 정도 커피를 추출해 커피 머신에서 자율 조절 절차를 완료하게 해야 합니다.                                                                                                                                                                              |
|                                                         | 분쇄기가 너무 굵게 설정되어 있습니다.                                                                                             | 분쇄기를 미세(낮음) 설정으로 맞춥니다. 2~3잔의 음료를 추출해야 전체적인 차이를 맞출 수 있습니다.                                                                                                                                                                     |
| 커피가 충분히 뜨겁지 않습니다.                                       | 설정 온도가 너무 낮습니다.                                                                                                   | 온도를 최대 설정으로 맞춥니다. 온도를 조절하려면 '설정'  아이콘을 누릅니다.                                                                                               |
|                                                         | 자동 행굼 과정이 비활성화되어 있습니다.                                                                                            | '설정'을 눌러 자동 행굼 과정을 활성화합니다.  아이콘을 누릅니다. 이 설정이 활성화되면 커피 머신 전원을 켜면 머신이 가열되면서 자동으로 행굼 과정을 수행합니다.                                               |
|                                                         | 잔이 차가우면 음료의 온도가 내려갑니다.                                                                                            | 뜨거운 물로 행굼 잔을 예열합니다.                                                                                                                                                                                                           |
|                                                         | 우유를 넣으면 음료의 온도가 내려갑니다.                                                                                            | 뜨거운 우유를 넣든 찬 우유를 넣든 관계없이 우유를 넣으면 항상 커피 온도가 내려갑니다. 뜨거운 물로 행굼 잔을 예열합니다.                                                                                                                                                         |

| 문제점                           | 원인                                    | 해결책                                                                                                                                      |
|-------------------------------|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 커피가 나오지 않거나 느리게 나옵니다.         | 설치 시 AquaClean 정수 필터가 제대로 준비되지 않았습니다. | AquaClean 필터를 분리하고 온수를 약간 배출합니다. 배출되면 AquaClean 필터가 제대로 설치되지 않은 것입니다. AquaClean 필터를 다시 설치한 후 활성화하고 'AquaClean 정수 필터' 장에 나오는 모든 단계에 따릅니다. |
|                               |                                       | 오랫동안 사용하지 않다가 사용하는 경우에는 AquaClean 정수 필터를 다시 사용할 수 있도록 준비하고 온수를 2~3잔 배출합니다.                                                               |
|                               | AquaClean 정수 필터가 막혀 있습니다.             | AquaClean 정수 필터는 3개월마다 교체하십시오. 3개월 이상 사용한 필터는 막힐 수 있습니다.                                                                                 |
|                               | 분쇄기가 너무 곁게 설정되어 있습니다.                 | 분쇄기를 좀더 굵은(높음) 설정으로 맞춥니다. 이로 인해 커피의 맛에 영향이 있을 수 있습니다.                                                                                    |
|                               | 추출기가 더럽습니다.                           | 추출기를 분리하여 흐르는 수도물 에 헹굽니다 (보기 '수돗물로 추출기 세척').                                                                                             |
|                               | 커피 배출구가 더럽습니다.                        | 커피 배출구와 구멍을 파이프 세척제 또는 바늘로 세척합니다.                                                                                                        |
|                               | 분쇄커피 투입구 막힘                           | 커피 머신의 전원을 끄고 추출기를 분리합니다. 분쇄 커피함 뚜껑을 열고 그 안에 스푼 손잡이를 삽입합니다. 막힌 분쇄 커피가 떨어질 때까지 핸들을 위아래로 움직입니다 (그림 28).                                    |
|                               | 커피 머신 추출관이 석회질로 막혔습니다.                | Philips 석회질 제거제로 커피 머신의 석회질을 제거합니다. 커피 머신에 메시지가 나타나면 항상 석회질을 제거합니다.                                                                      |
| 우유에 거품이 생기지 않습니다.             | LatteGo가 잘못 조립되었습니다.                  | 우유통이 LatteGo의 프레임에 제대로 조립되어 있는지 확인합니다 ('딸깍') 소리가 남) (보기 'LatteGo 조립').                                                                   |
|                               | LatteGo의 우유통 및/또는 프레임이 더럽습니다.         | LatteGo를 분해하고 수도물로 두 부품을 모두 헹구거나 식기세척기로 세척합니다.                                                                                           |
|                               | 사용한 우유가 거품을 내기에 적합하지 않습니다.            | 우유 종류에 따라 거품의 양과 질이 달라집니다. 테스트 결과 양질의 우유 거품을 내는 것으로 입증된 우유는 저지방 우유 또는 전유 및 무유당 우유입니다.                                                    |
| LatteGo 우유통 하단에서 우유가 새어 나옵니다. | 프레임과 우유 거품기가 올바르게 조립되어 있지 않습니다.       | 먼저 우유통의 상단을 프레임 상단의 홈 아래에 삽입합니다. 그런 다음 우유통 하단의 홈을 눌러 제자리에 끼웁니다. 제자리에 고정할 때 딸깍 소리가 납니다.                                                   |
|                               | LatteGo의 우유통 및/또는 프레임이 더럽습니다.         | LatteGo를 분해하고 수도물로 두 부품을 모두 헹구거나 식기세척기로 세척합니다.                                                                                           |

| 문제점                                                         | 원인                                                                                     | 해결책                                                                                                              |
|-------------------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| 머신에서 물이 샙니다.                                                | 커피 머신의 내부 추출관 및 추출기가 물로 행귀집니다. 이때 이 물이 내부 시스템을 통해 물받이로 직접 떨어집니다. 이는 일반적인 현상입니다.        | 물받이 커버 에서 '물받이 가득 참' 표시등이 켜지는 즉시 또는 매일 물받이를 비웁니다.<br>도움말: 행궁 물을 받고 물받이에 있는 물의 양을 줄일 수 있도록 우유 거품 배출구 아래에 잔을 놓습니다. |
|                                                             | 물받이가 가득 차 커피 머신이 새는 것처럼 흘러 넘칩니다.                                                       | 물받이 커버 에서 '물받이 가득 참' 표시등이 켜지는 즉시 또는 매일 물받이를 비웁니다.                                                                |
|                                                             | 물탱크가 끝까지 삽입되지 않고 물탱크에서 물이 조금씩 새며 커피 머신에 공기가 유입됩니다.                                     | 물탱크가 올바른 위치에 있는지 확인합니다. 분리했다가 다시 삽입하고 최대한 끝까지 밀니다.                                                               |
|                                                             | 추출기가 더럽습니다/막혀 있습니다.                                                                    | 추출기를 행굽니다.                                                                                                       |
|                                                             | 커피 머신을 평평한 곳에 놓지 않았습니니다.                                                               | 물받이가 넘치지 않고 '물받이 가득 참' 표시등이 제대로 작동하도록 커피 머신을 평평한 곳에 놓습니다.                                                        |
| AquaClean 정수 필터를 활성화할 수 없고 커피 머신에 석회질 제거가 필요하다는 메시지가 나타납니다. | AquaClean 알림이 화면에 나타난 후 제때에 필터를 설치하거나 교체하지 않았습니니다. 그러면 커피 머신의 석회질이 더 이상 완전히 제거되지 않습니다. | 먼저 커피 머신의 석회질을 제거한 다음 AquaClean 정수 필터를 끼웁니다.                                                                     |
| 새 물 필터가 잘 들어맞지 않습니다.                                        | 필립스 AquaClean 정수 필터가 아닌 다른 필터를 끼우려고 합니다.                                               | 커피 머신에 꼭 맞는 필터는 필립스 AquaClean 정수 필터뿐입니다.                                                                         |
|                                                             | AquaClean 정수 필터의 고무 링이 제자리에 있지 않습니다.                                                   | AquaClean 정수 필터의 고무 링을 다시 끼웁니다.                                                                                  |
| 커피 머신에서 큰 소리가 납니다.                                          | 사용 중 커피 머신에서 소리가 조금씩 나는 것은 자연스러운 현상입니다.                                                | 커피 머신이 평소와 다른 소리를 내며 작동하는 경우 추출기를 세척하고 윤활유를 도포 합니다 (보기 '추출기 윤활').                                                |
|                                                             | AquaClean 정수 필터가 제대로 준비되지 않았고 지금은 커피 머신에 공기가 유입됩니다.                                    | 물탱크에서 AquaClean 정수 필터를 분리하고 다시 끼우기 전에 올바르게 사용 준비를 합니다. 단계별 방법은 'AquaClean 정수 필터' 장을 참조하십시오.                      |
|                                                             | 물탱크가 끝까지 삽입되지 않고 커피 머신에 공기가 유입됩니다.                                                     | 물탱크가 올바른 위치에 있는지 확인합니다. 분리했다가 다시 삽입하고 최대한 끝까지 밀니다.                                                               |

기술 사양

제조업체는 제품의 기술 사양을 개선할 권한이 있습니다. 사전 설정된 모든 수량은 대략적인 수치입니다.

| 설명            | 값                 |
|---------------|-------------------|
| 크기(W x H x D) | 246 x 377 x 434mm |
| 중량            | 7.5~8kg           |
| 전원 코드 길이      | 1,200mm           |

|                          |                                 |
|--------------------------|---------------------------------|
| 물탱크                      | 1.8리터                           |
| 커피 원두 컨테이너 용량            | 275g                            |
| 커피 찌꺼기 통 용량              | 12개                             |
| LatteGo(우유통) 용량          | 250ml                           |
| 조절 가능한 배출구 높이            | 88~145mm                        |
| 공칭 전압 - 전력 등급 - 전원 공급 장치 | 서비스 도어 안쪽에 있는 데이터 라벨 참조(그림 A11) |














































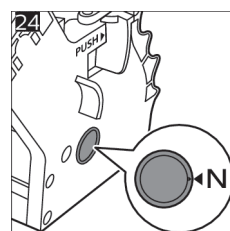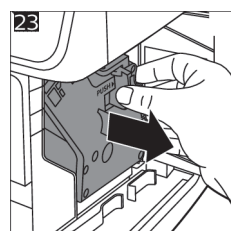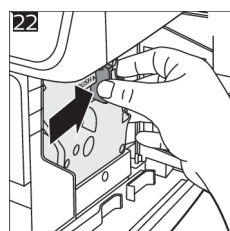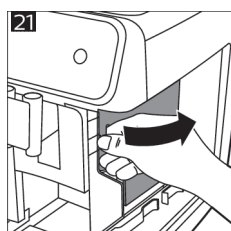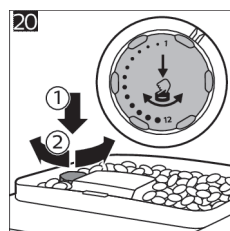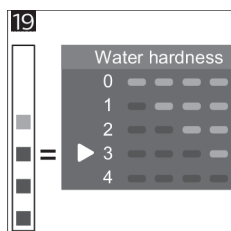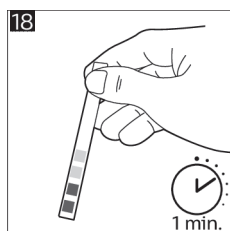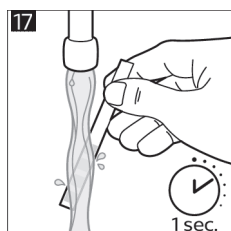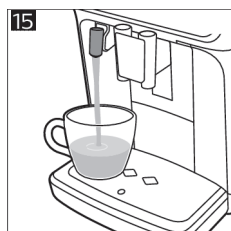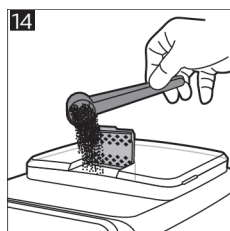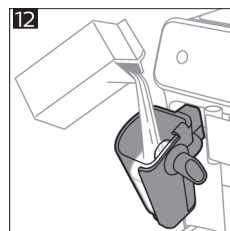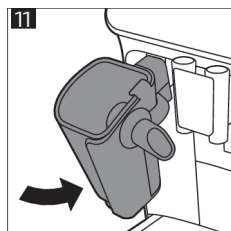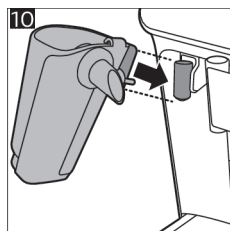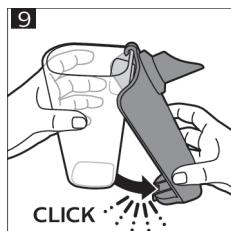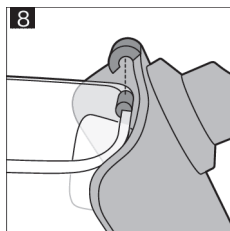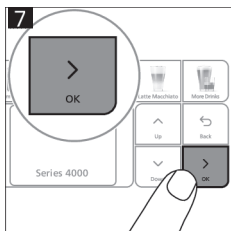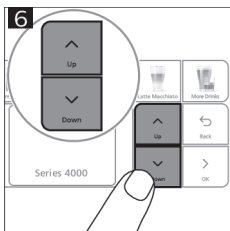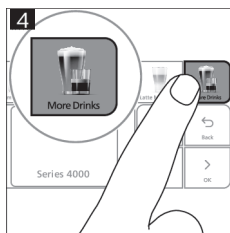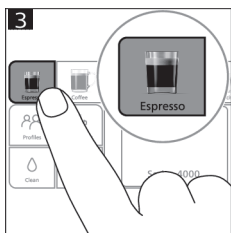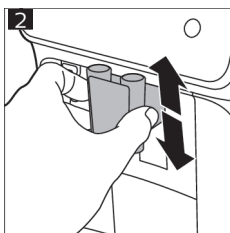

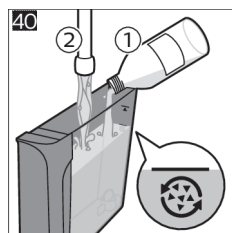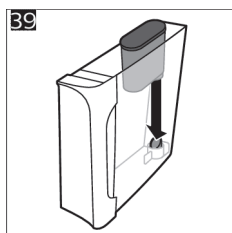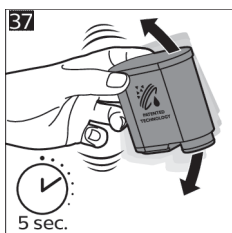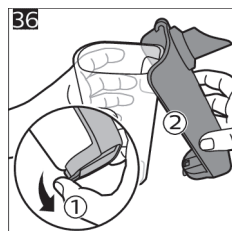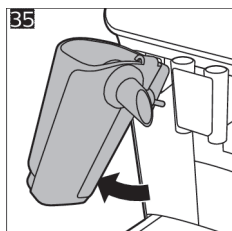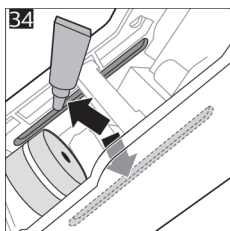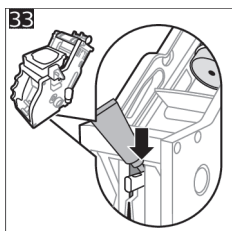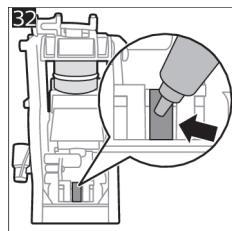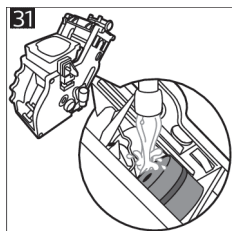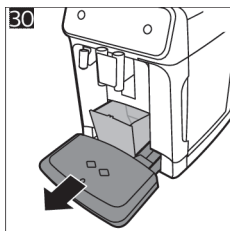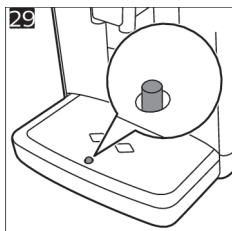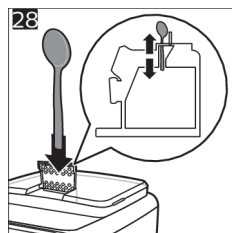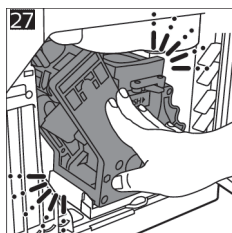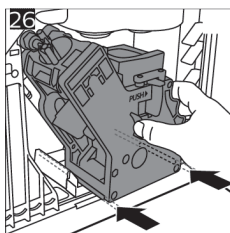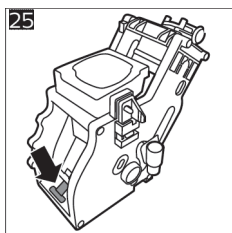




2025 © Versuni Holding B.V.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.



642001016700 (2/2025) rev.01



642001016700

[www.philips.com/coffee-care](http://www.philips.com/coffee-care)



100% recycled paper