

PHILIPS

AMF220



EN

User manual

1

22

دليل المستخدم

AR

This product is only suitable for well insulated spaces or occasional use.

لا يتوافق هذا المنتج إلا مع المساحات المعزولة جيداً أو الاستخدام العرضي.



Contents


1	Your 3-in-1: air purifier, fan and heater	2
	Product overview	2
	Display overview	3
	Controls overview	4
2	Getting started	5
	Installing the filter	5
	Setting up the remote control	5
3	Using the 3-in-1: air purifier, fan and heater	5
	Air quality light	5
	Turning on and off	6
	Heater and fan	6
	Oscillation	6
	Setting the timer	6
	Setting the child lock	6
	Sleep, turning light on/off	7
	Pairing your remote control	7
	Replacing the battery	7
4	Cleaning and maintenance	8
	Cleaning the body of the appliance	8
	Cleaning the filter surface	8
	Filter replacement	8
5	Troubleshooting	9

1 Your 3-in-1: air purifier, fan and heater

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Product overview

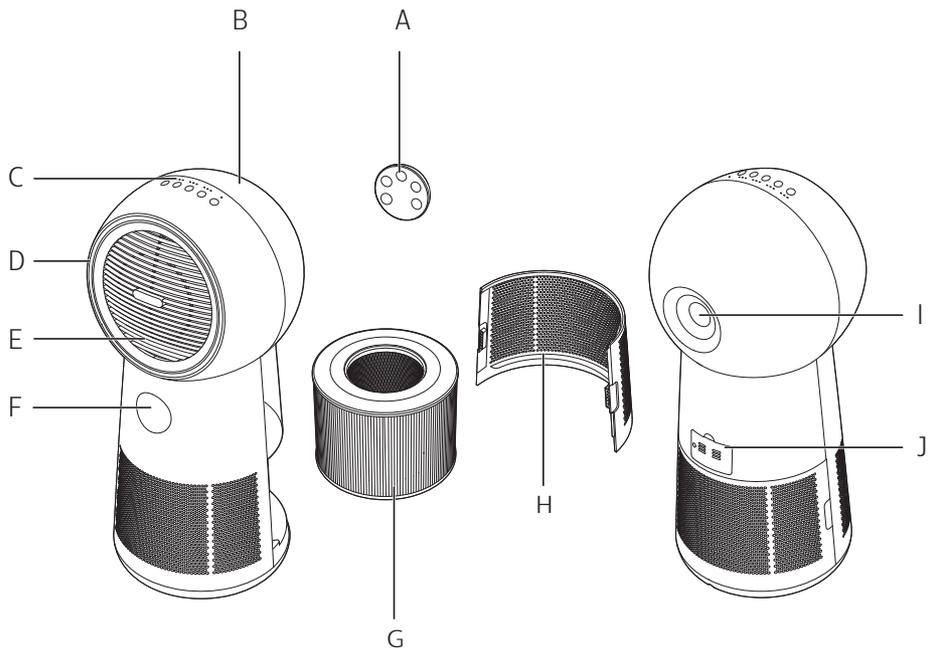

A Remote control

B Housing

C Control buttons

D Light strip

E Air outlet

F Display screen


G Philips filter (FYM220/30)

H Back cover

I Storage slot for remote control

J Air quality sensor

Display overview

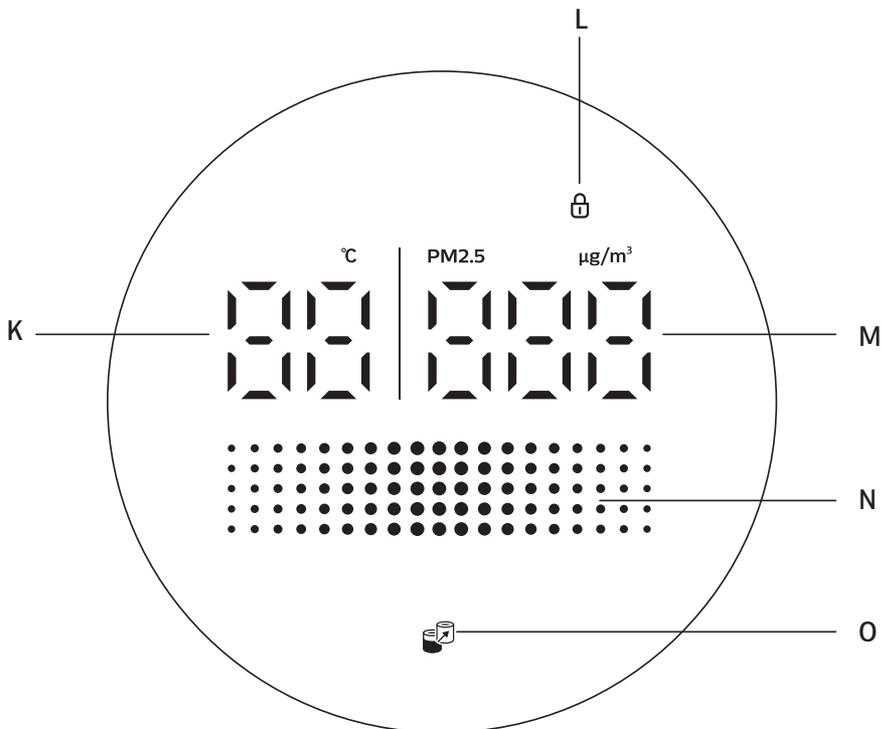

K Temperature display



N Air quality indicator

L Child lock indicator

O Filter replacement alert

M PM2.5 display

Controls overview

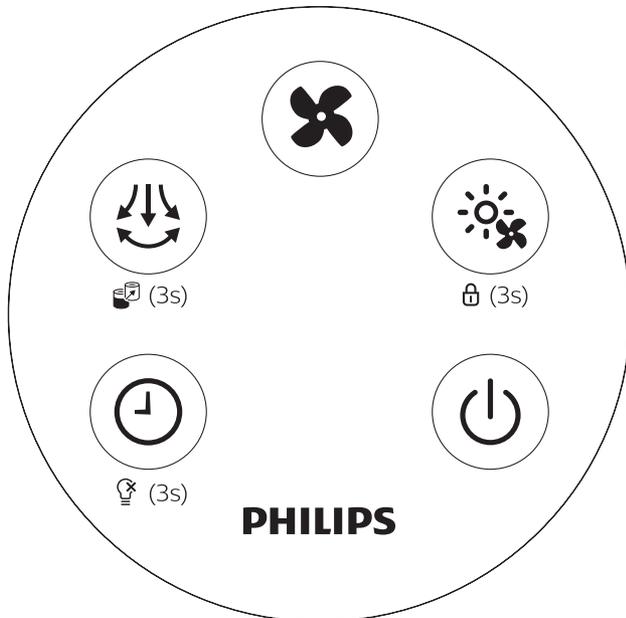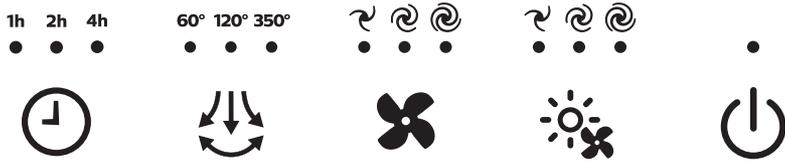


Short press	Timer	Oscillation	Fan setting	Heater setting	On/off
Press for 3 seconds	Sleep Light on/off	Reset filter lifetime		Child lock	

2 Getting started

Installing the filter


Note: Make sure the appliance is unplugged from the electrical outlet before installing the filter.

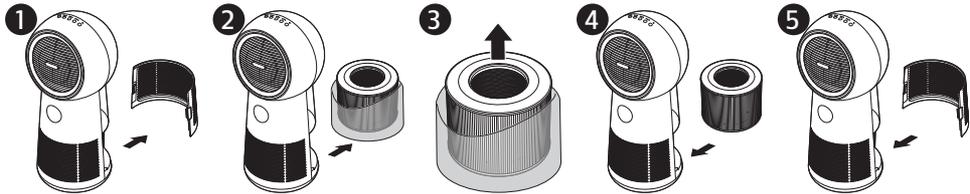

- 1 To remove the back cover, hold the side of it with both hands and pull.
- 2 Pull the filter from the appliance.
- 3 Remove all packaging materials from the filter.
- 4 Put the filter back into the appliance.
- 5 Reattach the back cover.

Setting up the remote control

- 1 Pull out the plastic film on the remote control to activate the battery.
- 2 Pair the remote control with the appliance if you have multiple devices in one house (see the chapter "Pairing your remote control").

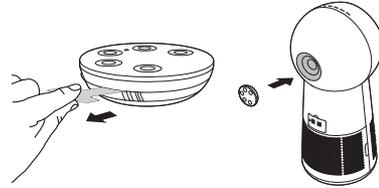

Note: Place the remote control in the slot and it snaps in place automatically.

3 Using the 3-in-1: air purifier, fan and heater

Air quality light


PM2.5 level	Air quality light color	Air quality level
≤ 35	Blue	Good
36-75	Blue-purple	Fair
76-115	Purple-red	Poor
> 115	Red	Very poor

Turning on and off

Note:

- Plug the appliance into the power outlet; do not use a power strip.
- If the appliance is running in heating mode when you turn it off, it continues working for a few seconds to exhaust the remaining heat.

- 1 Press  to switch on the appliance.
- 2 The display panel lights up, and appliance shows the PM2.5 level and temperature.
- 3 Press  to switch off the appliance.

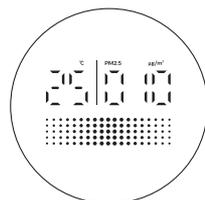

Heater and fan

				Light strip
Heater ()	Low	Medium	High	Red
Fan ()	Low	Medium	High	Blue

Oscillation

Press the  button, the appliance can oscillate at three angles: 60°, 120° and 350°.

Setting the timer


Press the  button repeatedly to set operating hours of the appliance. The timer is available from 1 to 7 hours.

1 hour	2 hours	3 hours	4 hours	5 hours	6 hours	7 hours
1h 2h 4h						
● ○ ○	○ ● ○	● ● ○	○ ○ ●	● ○ ●	○ ● ●	● ● ●

To deactivate the timer, press the  button repeatedly until all the hour indicators are off.


Setting the child lock

- 1 Press and hold the  button for 3 seconds to activate the child lock.
 - ↳  appears on the screen.
 - ↳ All the other buttons are unresponsive except on/off.
- 2 Press and hold the  button for 3 seconds to deactivate child lock.
 - ↳  disappears.

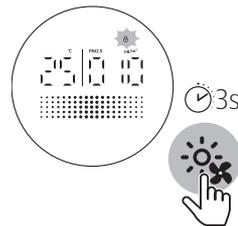


Sleep, turning light on/off

- 1 Press and hold the  button for 3 seconds.
↳ The display screen dims, rest lights will turn off.
- 2 Press any button to turn all lights on.

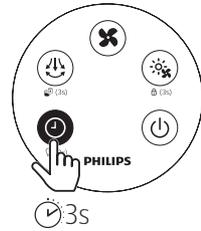


Pairing your remote control

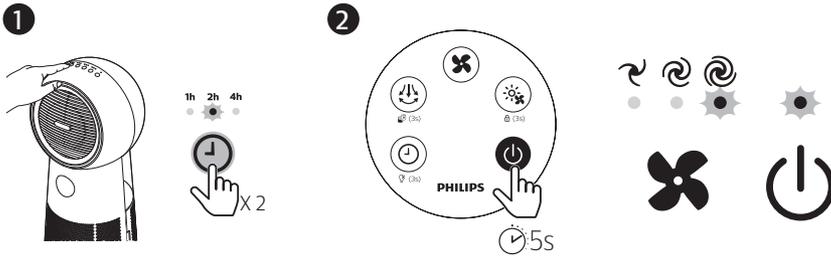

- 1 Unplug the appliance from the power outlet and wait for 10 seconds. Plug in the appliance, then within 5 seconds, press the  button on the appliance twice.
↳ The 2h indicator lights up.
- 2 Long press the  button for 5 seconds on the remote control within 5 seconds.
↳ The  and  indicator of fan button on the appliance lights up, and the appliance operates in the fan mode, indicating that the pairing is successful.

Note: If the "2h" indicator is blinking, you must repeat the pairing.

Replacing the battery

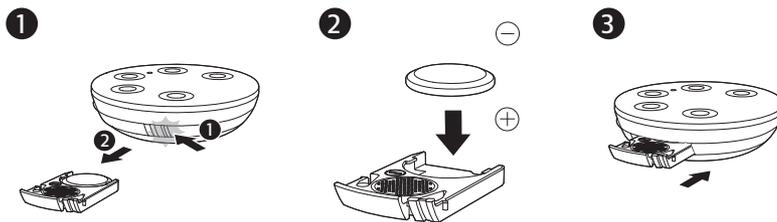

- 1 Push the battery bracket edge gently and pull it out of the remote control.
- 2 Insert the new battery with correct polarities as indicated.
- 3 Put the battery bracket back into the remote control.

4 Cleaning and maintenance

Note: Switch off the appliance and unplug it from the power outlet before continuing.

Cleaning the body of the appliance


Use a soft, dry cloth to clean the appliance surface, including air inlet and outlet.

Clean particle sensor surface. Do not open particle sensor cover.




Cleaning the filter surface

Clean the filter surface with a vacuum cleaner or brush every two weeks.

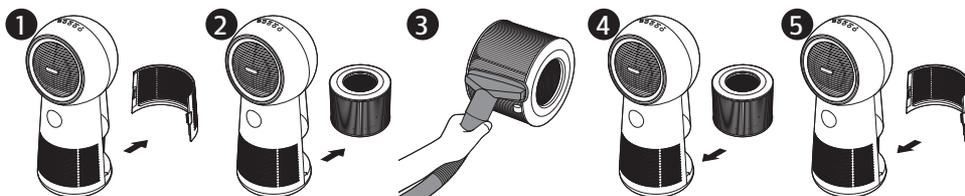

- 1 Pull the back cover and remove it from the appliance.
- 2 Pull the filter from the appliance.
- 3 Clean the surface of the filter with a vacuum cleaner.
- 4 Put the filter back into the appliance.
- 5 Reattach the back cover.
- 6 Wash your hands thoroughly after cleaning the filter.

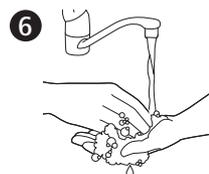

Filter replacement


When the filter replacement alert lights up

Note:

- The filter is not washable or reusable.
- Do not smell the filter because it contains air pollutants.

Replace the filter when  lights up on the screen.


- 1 Replace the filter with Philips filter (FYM220/30). Follow the instructions in the chapter “Installing the filter”.
- 2 Press  to switch on the appliance.

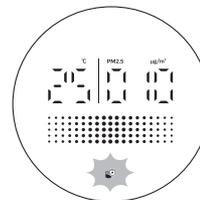

- 3 Press and hold the  button for 3 seconds to reset the filter replacement time.

↳ The filter replacement alert  disappears from the screen.


- 4 Wash your hands thoroughly after replacing the filter.

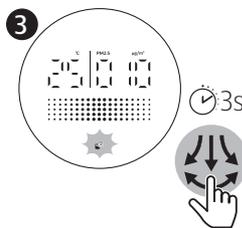

Before the filter replacement alert lights up

You can replace the filter before the filter replacement alert () lights up. If you do this, you need to reset the filter lifetime counter manually.

- 1 Unplug the appliance from the power outlet and wait 10 seconds.
- 2 Plug the appliance into the power outlet.
- 3 Within 15 seconds after power on, press and hold the  button for 3 seconds to reset the filter lifetime counter.
 - ↳ The filter replacement alert  blinks once after successfully resetting the filter.

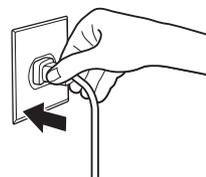

5 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The airflow from the air outlet is significantly weaker than before.	<ul style="list-style-type: none"> • The surface of the filter is dirty. Clean the surface of the filter (see the chapter “Cleaning and maintenance”).

Problem	Possible solution
The air quality does not improve even though the appliance has been operating for a long time.	<ul style="list-style-type: none"> • Check whether the packing material is removed from the filter. • Check whether the filter is installed in the appliance. • Clean the sensor cover surface with mop or vacuum cleanser; Do not open sensor cover or touch inside. • Room size is too large, or the outdoor air quality is poor. For optimum purification performance, close the doors and windows when operating the appliance. • There are indoor pollution sources. Examples include cigarette smoke, cooking fumes, incense, perfume and alcohol. • Filter has reached end of life. Replace the filter with a new one.
The appliance produces a strange smell.	<ul style="list-style-type: none"> • The first few times you use the appliance, it may produce a plastic smell. This is normal. • If the appliance produces a burning smell, immediately unplug it and turn it upside down to check whether any foreign objects have fallen into the appliance. If nothing is found, please contact your Philips dealer or an authorized Philips service center. • The filter may produce an odor after being used for a while because of the absorption of indoor gases. It's recommended that you reactivate the filter by putting it in direct sunlight for repeated use. If the odor remains, replace the filter.
The appliance is too loud.	<ul style="list-style-type: none"> • The noise level is higher if you select high speed. • If anything drops into air outlet, it may also cause abnormal loud sound. Immediate turn off the appliance and turn it upside down to remove foreign objects. • If there is an abnormal sound, contact the Consumer Care Center in your country.
The appliance still indicates that I need to replace a filter, but I already did.	<ul style="list-style-type: none"> • Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then press and hold the  button for 3 seconds.
The heating function is not working.	<ul style="list-style-type: none"> • Check whether the air inlet or air outlet is blocked. • Check whether the filter surface is excessively dirty and blocking airflow. If so, the heating function may stop working for protection.


Information requirements for electric local space heaters

Model identifier(s): AMF220					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2,1	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P_{min}	1,2	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	$P_{max,c}$	1,8	kW	electronic heat charge control with room and/or outdoor temperature feedback	[yes]
Auxiliary electricity consumption				fan assisted heat output	[no]
At nominal heat output	$e_{l,max}$	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	$e_{l,min}$	N/A	kW	single stage heat output and no room temperature control	[no]
In standby mode	$e_{l,SB}$	0	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				with electronic room temperature control	[yes]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[yes]
				with black bulb sensor	[no]
Contact details	Philips Consumer Lifestyle B.V. Building TC, Tussendiepen 4, 9206 AD Drachten, The Netherlands				

متطلبات المعلومات لأجهزة تدفئة المساحة المحلية الكهربائية

معرف (معرفات) المنتج: AMF220						
الوحدة	العنصر		الوحدة	القيمة	الرمز	العنصر
						نوع إدخال الحرارة، لأجهزة تدفئة المساحات المحلية ذات التخزين الكهربائي فقط (تحديد خيار واحد)
[لا]	تحكم يدوي بشحن الحرارة، مع منظم حرارة مضمّن		كيلوواط	2,1	P_{nom}	إخراج الحرارة الاسمي
[لا]	تحكم إلكتروني بشحن الحرارة مع معلومات حول درجة حرارة الغرفة و/أو في الخارج		كيلوواط	1,2	P_{min}	إخراج الحرارة الأدنى (إرشادي)
[نعم]	تحكم إلكتروني بشحن الحرارة مع معلومات حول درجة حرارة الغرفة و/أو في الخارج		كيلوواط	1,8	$P_{max,C}$	إخراج الحرارة المستمر الأقصى
[لا]	إخراج الحرارة بمساعدة المروحة					استهلاك الكهرباء المساعدة
	نوع التحكم بإخراج الحرارة/درجة حرارة الغرفة (تحديد خيار واحد)		كيلوواط	غير مطبقة	el_{max}	عند إخراج الحرارة الاسمي
[لا]	إخراج حرارة مرحلة واحدة بدون تحكم بدرجة حرارة الغرفة		كيلوواط	غير مطبقة	el_{min}	عند إخراج الحرارة الأدنى
[لا]	مرحلتان يدويتان أو أكثر، بدون تحكم بدرجة الحرارة		كيلوواط	0	el_{SB}	في وضع الاستعداد
[لا]	مع منظم حرارة ميكانيكي للتحكم بدرجة حرارة الغرفة					
[نعم]	مع تحكم إلكتروني بدرجة حرارة الغرفة					
[لا]	تحكم إلكتروني بدرجة حرارة الغرفة مع مؤقت لليوم					
[لا]	تحكم إلكتروني بدرجة حرارة الغرفة مع مؤقت للأسبوع					
	خيارات التحكم الأخرى (يمكن تحديد خيارات متعددة)					
[لا]	تحكم بدرجة حرارة الغرفة مع الكشف عن الحضور					
[لا]	تحكم بدرجة حرارة الغرفة مع الكشف عن النوافذ المفتوحة					
[لا]	مع خيار التحكم بالمسافة					
[لا]	مع التحكم بالبده التكيّفي					
[نعم]	مع حدود وقت التشغيل					
[لا]	مع مستشعر للبهمة السوداء					


المشكلة	الحل المحتمل
تنبعث رائحة غريبة من الجهاز.	<ul style="list-style-type: none"> قد تنبعث رائحة البلاستيك من الجهاز في المرات الأولى لاستخدامه. هذا أمر طبيعي. إذا أصدر الجهاز رائحة حريق، فافصله عن مصدر الطاقة على الفور واقلب رأساً على عقب للتحقق مما إذا سقطت أي أجسام غريبة في الجهاز. إذا لم يتم العثور على أي شيء، فُرجى الاتصال بوكيل Philips أو مركز خدمة معتمد من Philips. قد تصدر رائحة كريهة من الفلتر بعد استخدامه لفترة محددة بسبب امتصاص الغازات الداخلية. يوصى بإعادة تنشيط الفلتر من خلال وضعه تحت أشعة الشمس المباشرة للاستخدام المتكرر. إذا استمرت الرائحة الكريهة، فاستبدل الفلتر.
يصدر الجهاز صوتاً عالياً جداً.	<ul style="list-style-type: none"> يكون مستوى الضجيج أعلى إذا اخترت السرعة العالية. في حال سقوط أي غرض في مخرج الهواء، قد يؤدي ذلك أيضاً إلى إصدار صوت عالٍ وغريب. أوقف تشغيل الجهاز على الفور واقلب رأساً على عقب لإزالة أي غرض غريب منه. في حال سماع صوت غريب، اتصل بمركز خدمة المستهلك في بلدك.
لا يزال الجهاز يشير إلى وجوب استبدال الفلتر، على الرغم من أنني قد استبدلته.	<ul style="list-style-type: none"> من الممكن أنك لم تعد تعيين عدّاد فترة استهلاك الفلتر. قم بتشغيل الجهاز. ثم اضغط باستمرار على الزر لمدة 3 ثوانٍ.
لا تعمل وظيفة التدفئة.	<ul style="list-style-type: none"> تحقق مما إذا كان مدخل الهواء أو مخرج الهواء مسدوداً. تحقق مما إذا كان سطح الفلتر متسخاً جداً ويعيق تدفق الهواء. في حال كانت هذه هي الحال، قد تتوقف وظيفة التدفئة عن العمل للحماية.

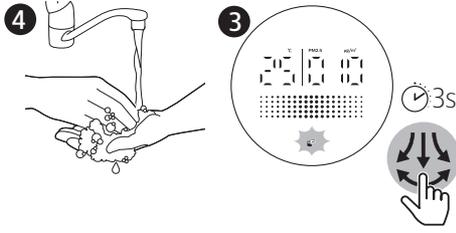

- 3 اضغط باستمرار على الزر لمدة 3 ثوانٍ لإعادة تعيين وقت استبدال الفلتر.
لم يختفي منبه استبدال الفلتر عن الشاشة.
- 4 اغسل يديك جيدًا بعد استبدال الفلتر.

قبل أن يضيء منبه استبدال الفلتر

يمكنك استبدال الفلتر قبل أن يضيء منبه استبدال الفلتر (). إذا قمت بذلك، فيجب إعادة تعيين عدّاد فترة استهلاك الفلتر يدويًا.

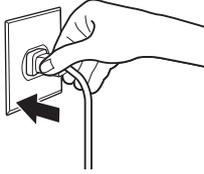

- 1 افصل الجهاز عن مأخذ الطاقة وانتظر لمدة 10 ثوانٍ.
- 2 قم بتوصيل الجهاز بمأخذ الطاقة.
- 3 في غضون 15 ثانية بعد التشغيل، اضغط باستمرار على الزر لمدة 3 ثوانٍ لإعادة تعيين عدّاد فترة استهلاك الفلتر.
لم يومض منبه استبدال الفلتر مرة واحدة بعد إعادة تعيين الفلتر بنجاح.

5 استكشاف الأخطاء وإصلاحها

يلخّص هذا الفصل المشاكل الأكثر شيوعاً التي قد تصادفها عند استخدام الجهاز. إذا لم تساعدك المعلومات التالية على حل مشكلتك، فيمكنك الاتصال بمركز خدمة المستهلك في بلدك.

المشكلة	الحل المحتمل
يكون تدفق الهواء من مخرج الهواء أضعف بكثير من قبل.	<ul style="list-style-type: none"> • سطح الفلتر متسخ. نظّف سطح الفلتر (راجع فصل "التنظيف والصيانة").
ليس هناك أي تحسّن في جودة الهواء على الرغم من أن الجهاز يعمل منذ فترة طويلة.	<ul style="list-style-type: none"> • تحقق مما إذا تمت إزالة مواد التغليف عن الفلتر. • تحقق مما إذا تم تثبيت الفلتر في الجهاز. • نظّف سطح غطاء المستشعر باستخدام ممسحة أو مكنسة كهربائية؛ لا تفتح غطاء المستشعر أو تلمس الجهة الداخلية منه. • مساحة الغرفة كبيرة جدًا أو جودة الهواء في الخارج رديئة. • للاستفادة من أقصى درجات التنقية، أغلق الأبواب والنوافذ أثناء تشغيل الجهاز. • تحتوي الأماكن الداخلية على مصادر لتلوث. تشمل الأمثلة دخان السجائر وروائح الطهو والبخور والعطور والكحول. • انتهت فترة استهلاك الفلتر. استبدل الفلتر بأخر جديد.

4 التنظف والصيانة

ملاحظة: أوقف تشغيل الجهاز وافصله عن مأخذ الطاقة قبل المتابعة.




تنظف هيكل الجهاز

استخدم قطعة قماش ناعمة وجافة لتنظيف سطح الجهاز، بما في ذلك مدخل الهواء ومخرجه. نظف سطح مستشعر الجسيمات. لا تفتح غطاء مستشعر الجسيمات.

العربية

تنظف سطح الفلتر

نظف سطح الفلتر بواسطة مكنسة كهربائية أو فرشاة كل أسبوعين.

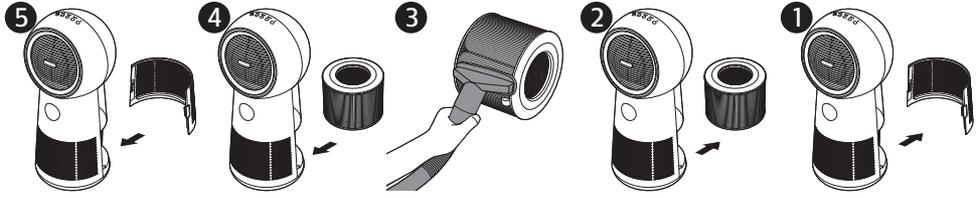

- 1 انزع غطاء الجهة الخلفية وأخرجه من الجهاز.
- 2 أخرج الفلتر من الجهاز.
- 3 نظف سطح الفلتر بواسطة مكنسة كهربائية.
- 4 أعد الفلتر إلى الجهاز.
- 5 أعد تركيب غطاء الجهة الخلفية.
- 6 اغسل يديك جيدًا بعد تنظيف الفلتر.

استبدال الفلتر


عندما يضيء منبّه استبدال الفلتر

ملاحظة:


- لا يمكن غسل الفلتر أو إعادة استخدامه.
- لا تقم بشمّ الفلتر، فهو يحتوي على مواد ملوّثات الهواء.

استبدل الفلتر عندما يضيء منبّه على الشاشة.

- 1 استبدل الفلتر بفلتر Philips (FYM220/30). اتبع الإرشادات الواردة في فصل "تركيب الفلتر".
- 2 اضغط على  لتشغيل الجهاز.

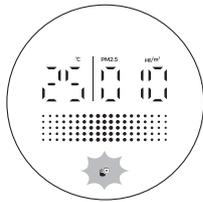


النوم، تشغيل/إيقاف تشغيل الضوء

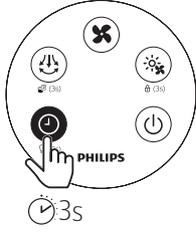


- 1 اضغط باستمرار على الزر  لثلاث ثوانٍ.
لـ يخفت ضوء شاشة العرض، وتتطفئ الأضواء الأخرى.
- 2 اضغط على أي زر لتشغيل كل الأضواء.

إقران جهاز التحكم عن بُعد

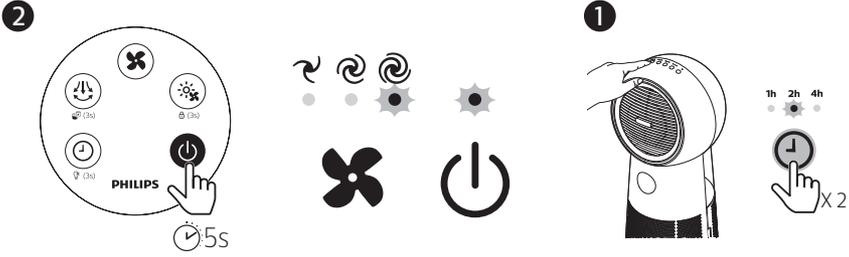

- 1 افصل الجهاز عن مأخذ الطاقة وانتظر لمدة 10 ثوانٍ. قم بتوصيل الجهاز، ثم في غضون 5 ثوانٍ، اضغط على الزر  الموجود على الجهاز مرتين.
لـ يضيء مؤشر الساعتين.
 - 2 اضغط مطولاً على الزر  لمدة 5 ثوانٍ على جهاز التحكم عن بُعد في غضون 5 ثوانٍ.
لـ يضيء  ومؤشر  لزر المروحة على الجهاز، ويعمل الجهاز في وضع المروحة، للإشارة إلى نجاح عملية الإقران.
- ملاحظة: إذا كان مؤشر "الساعتين" يومض، فيجب تكرار عملية الإقران.

استبدال البطارية

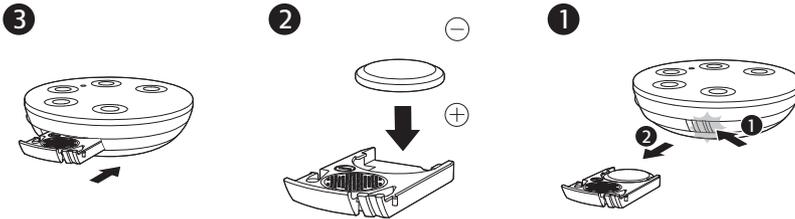


- 1 ادفع حافة حامل البطارية برفقٍ واسحبها من جهاز التحكم عن بُعد.
- 2 أدخل البطارية الجديدة مع التقيد بالقطبية الصحيحة كما هو مبين.
- 3 أعد حامل البطارية إلى جهاز التحكم عن بُعد.

التشغيل وإيقاف التشغيل

ملاحظة:

- قم بتوصيل الجهاز بمأخذ الطاقة؛ لا تستخدم شريط طاقة.
- إذا كان الجهاز يعمل في وضع التدفئة عندما تقوم بإيقاف تشغيله، فسيبقى قيد التشغيل لبضع ثوانٍ لاستنفاد الحرارة المتبقية.

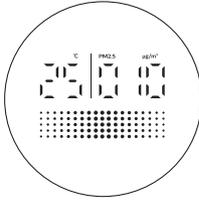

- 1 اضغط على لتشغيل الجهاز.
- 2 تُضيء لوحة الشاشة، ويظهر الجهاز مستوى PM2.5 ودرجة الحرارة.
- 3 اضغط على لإيقاف تشغيل الجهاز.

جهاز التدفئة والمروحة

شريط الإضاءة				
أحمر	مرتفع	متوسط	منخفض	جهاز التدفئة (☀️)
أزرق	مرتفع	متوسطة	منخفضة	المروحة (🌀)

التأرجح

اضغط على الزر ، يمكن للجهاز أن يتأرجح على ثلاث زوايا: 60 درجة و120 درجة و350 درجة.

تعيين المؤقت


اضغط على الزر بشكل متكرر لتعيين ساعات تشغيل الجهاز. يتوفر المؤقت من ساعة إلى 7 ساعات.

ساعات 7	ساعات 6	ساعات 5	ساعات 4	ساعات 3	ساعتان	ساعة واحدة
1h 2h 4h						
● ● ●	○ ● ●	● ○ ●	○ ○ ●	● ● ○	○ ● ○	● ○ ○

لإلغاء تنشيط المؤقت، اضغط على الزر بشكل متكرر حتى يتم إيقاف تشغيل كل مؤشرات الساعة.

إعداد قفل الأطفال


- 1 اضغط باستمرار على الزر لمدة 3 ثوانٍ لتنشيط قفل الأطفال.
 - يظهر على الشاشة.
 - لا تستجيب كل الأزرار الأخرى باستثناء زر التشغيل/إيقاف التشغيل.
- 2 اضغط باستمرار على الزر لمدة 3 ثوانٍ لإلغاء تنشيط قفل الأطفال.
 - يختفي.

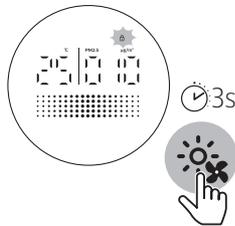

2 بدء الاستخدام


تركيب الفلتر

ملاحظة: تأكد من فصل الجهاز عن المأخذ الكهربائي قبل تركيب الفلتر.

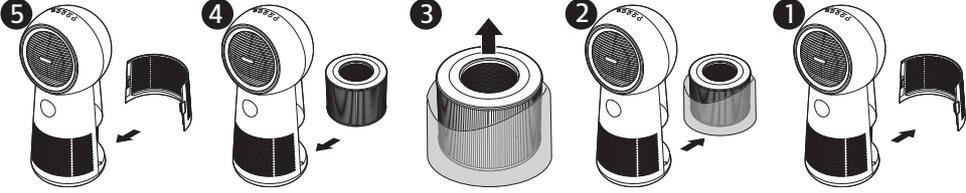

- 1 لإزالة غطاء الجهة الخلفية، امسك جانبه بيدك واسحبه.
- 2 أخرج الفلتر من الجهاز.
- 3 قم بإزالة كل مواد التغليف عن الفلتر.
- 4 أعد الفلتر إلى الجهاز.
- 5 أعد تركيب غطاء الجهة الخلفية.

إعداد جهاز التحكم عن بُعد

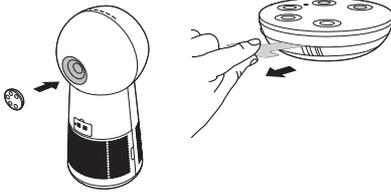

- 1 انزع الغلاف البلاستيكي عن جهاز التحكم عن بُعد لتنشيط البطارية.
- 2 قم بإقران جهاز التحكم عن بُعد بالجهاز إذا كانت لديك أجهزة متعددة في منزل واحد (راجع الفصل "إقران جهاز التحكم عن بُعد").



ملاحظة: ضَع جهاز التحكم عن بُعد في الفتحة وسيثبت في مكانه تلقائيًا.

3 استخدام الجهاز 3 في 1: جهاز تنقية الهواء ومروحة وجهاز تدفئة

ضوء جودة الهواء


مستوى جودة الهواء	لون ضوء جودة الهواء	مستوى PM2.5
جيد	أزرق	$35 \geq$
معتدل	أزرق-أرجواني	36-75
رديء	أرجواني-أحمر	76-115
رديء جدًا	أحمر	$115 <$

نظرة عامة على جهاز التحكم

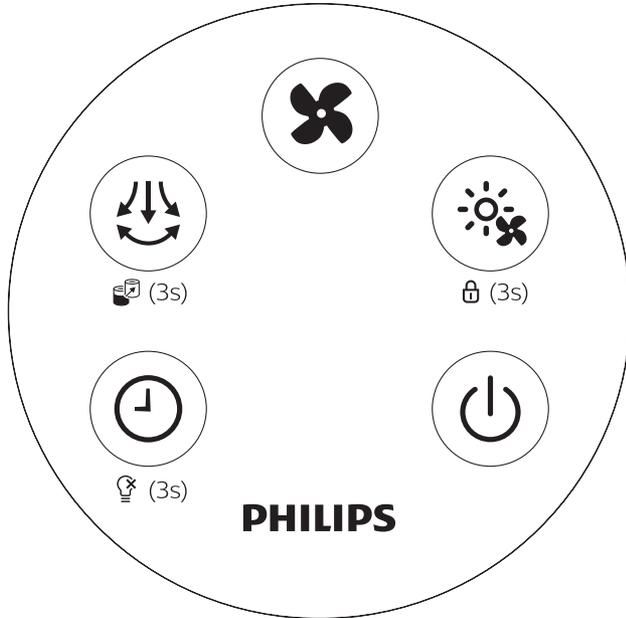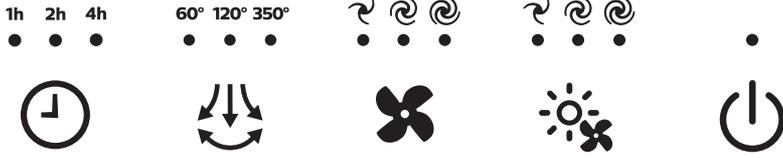

تشغيل/إيقاف تشغيل	إعداد جهاز التدفئة	إعداد المروحة	التأرجح	المؤقت	الضغط بشكل موجز
	قفل الأطفال		إعادة تعيين فترة استهلاك الفلتر	النوم تشغيل/إيقاف تشغيل الضوء	ضغط لمدة 3 ثوانٍ

نظرة عامة حول الشاشة

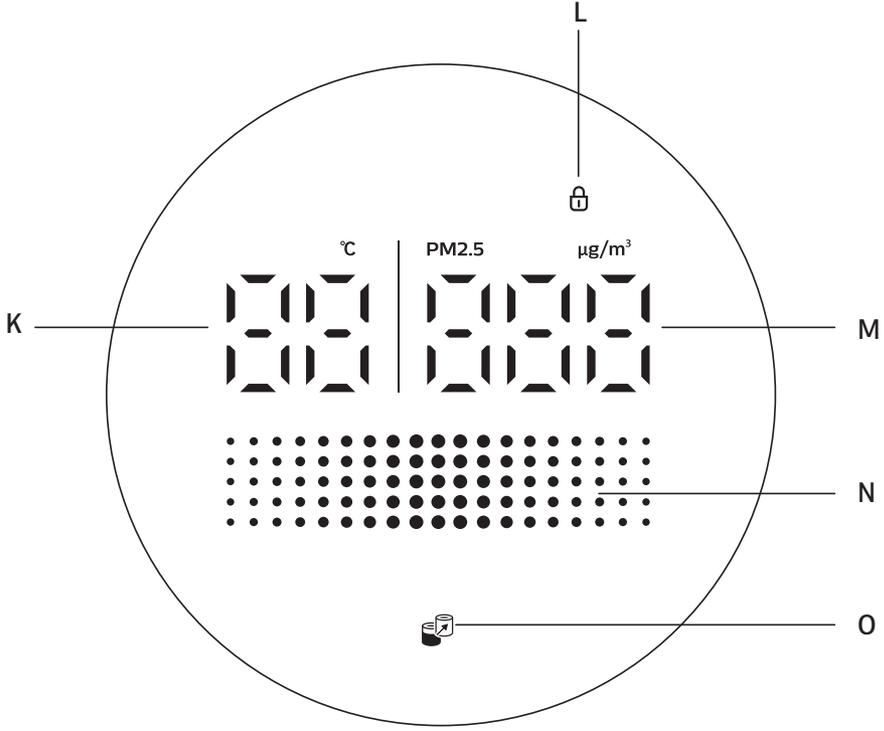


مؤشر جودة الهواء	N	عرض درجة الحرارة	K
منبه استبدال الفلتر	O	مؤشر قفل الأطفال	L
		عرض PM2.5	M

1 جهاز 3 في 1: جهاز تنقية الهواء ومروحة وجهاز تدفئة

تهانينا على شرائك المنتج، ومرحباً بك في Philips!
للاستفادة بالكامل من الدعم الذي تقدّمه Philips، سجّل منتجك على www.philips.com/welcome

نظرة عامة حول المنتج

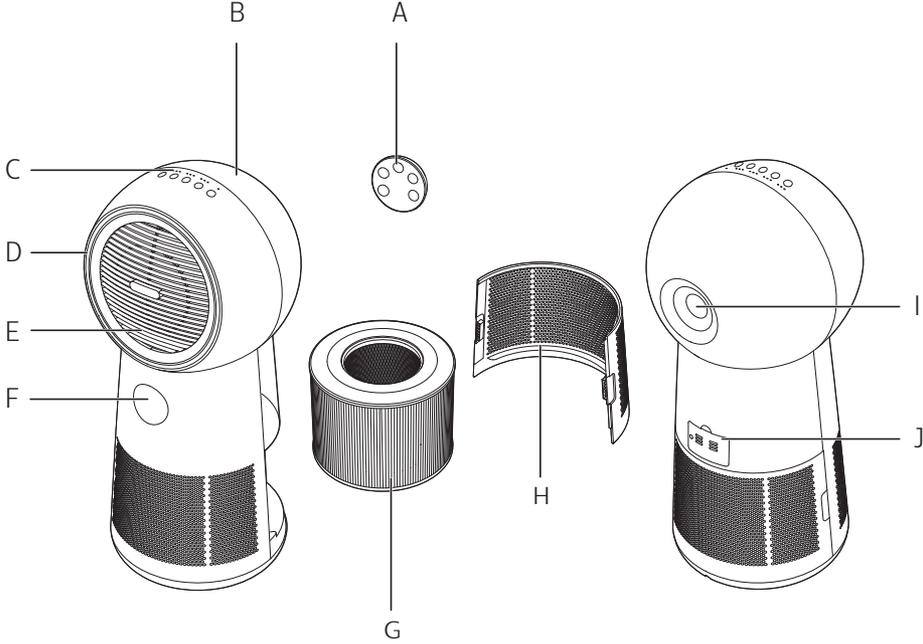

A	جهاز التحكم عن بعد	F	شاشة العرض
B	الهيكل	G	فلتر (FYM220/30) Philips
C	أزرار التحكم	H	غطاء الجهة الخلفية
D	شريط الإضاءة	I	فتحة تخزين لجهاز التحكم عن بُعد
E	مخرج الهواء	J	مستشعر جودة الهواء

المحتويات

- 1 جهاز 3 في 1: جهاز تنقية الهواء ومروحة وجهاز تدفئة 21
- 21..... نظرة عامة حول المنتج
- 19..... نظرة عامة على جهاز التحكم
- 20..... نظرة عامة حول الشاشة
- 2 بدء الاستخدام 18
- 18..... تركيب الفلتر
- 18..... إعداد جهاز التحكم عن بُعد
- 3 استخدام الجهاز 3 في 1: جهاز تنقية الهواء ومروحة وجهاز تدفئة 18
- 18..... ضوء جودة الهواء
- 17..... التشغيل وإيقاف التشغيل
- 17..... جهاز التدفئة والمروحة
- 17..... التآرجح
- 17..... تعيين المؤقت
- 17..... إعداد قفل الأطفال
- 16..... النوم، تشغيل/إيقاف تشغيل الضوء
- 16..... إقران جهاز التحكم عن بُعد
- 16..... استبدال البطارية
- 4 التنظيف والصيانة 15
- 15..... تنظيف هيكل الجهاز
- 15..... تنظيف سطح الفلتر
- 15..... استبدال الفلتر
- 5 استكشاف الأخطاء وإصلاحها 14









© 2020 Koninklijke Philips N.V.
All rights reserved.

3000 063 30331

