

PHILIPS

WALITA



ENGLISH **2**

PORTUGUÊS DO BRASIL **3**

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference.

This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.
- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage or if the appliance has been dropped or leaks.
- If the mains cord or the steam supply hose is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance must not be left unattended while it is connected to the supply mains.
- This appliance can be used by children aged from 8 years or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years of age when the appliance is switched on or cooling down.
- Do not let the mains cord and steam supply hose come into contact with the hot steamer head.
- The appliance must be used and placed on a flat, stable, heat resistant surface.
- Steam may damage or cause discolouration of certain wall, door finishes or furniture.
- Care should be taken when using the appliance due to the emission of steam.
- Your appliance gives off steam which can cause burns. Handle your steamer carefully. Never direct the steam towards persons or animals.
- Do not use your bare hand as a supporting surface when you steam. Pull the sides of the garment to stretch it.
- If the appliance has a hot air outlet, it can be extremely hot and may cause burns when touched.

CAUTION: Hot surface

- Surfaces are liable to get hot during use (for steamer with hot symbol marked on the appliance).



Caution

- This appliance is intended for household use only.
- Only connect the appliance to an earthed wall socket.
- Check the mains cord and the supply hose regularly for possible damage
- Fully unwind the mains cord before you plug it in the wall socket.
- Do not use the appliance when the water tank is empty.
- Do not add perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water leakage, brown staining or damage to your appliance.
- Do not place the steamer base on top of table or chair but rather keep the steamer base on the floor during usage duration. If the hose forms a U shape, steam condenses in the hose. This causes irregular steam or water droplets to come out of the steamer head.
- Unplug the appliance during filling and cleaning.
- When you have finished steaming, clean the appliance, fill or empty the water tank, perform cleaning and rinsing, attach or detach the brush attachment, or leave the appliance even for a short while, switch off the appliance and remove the mains plug from the wall socket.
- Make sure that the steamer has been unplugged for at least 1 hour and has completely cooled down, before you use De-Calc function (if the function is available).
- Do not pour water, vinegar, descaling agents or other chemicals into the opening of the De-Calc function (if the function is available).

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

India E-Waste statement

The product is in conformance with the restriction of hazardous substances requirement as per the India E-Waste Rule 2022.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Português do Brasil

Introdução

Parabéns pela sua compra e seja bem-vindo à Philips! Para utilizar ao máximo o suporte que a Philips oferece, registre seu produto em www.philips.com/welcome.

Importante

Leia o folheto de informações importantes separado e o manual do usuário atentamente antes de usar o aparelho. Salve ambos os documentos para consultas futuras. Esse aparelho foi projetado somente para uso doméstico. O fabricante não se responsabilizará e a garantia não será aplicada em caso de uso comercial, inadequado ou por não seguir as instruções.

Perigo

- Nunca mergulhe o aparelho na água nem em outro líquido e não lave-o sob a pia.

Aviso

- Antes de ligar o aparelho, verifique se a voltagem indicada é a mesma da tomada.
- O plugue deve ser conectado à uma tomada com as mesmas especificações técnicas dele.
- Não utilize o aparelho se o plugue, o cabo de energia, a mangueira de fornecimento de vapor ou o próprio aparelho apresentar danos visíveis, tiver sofrido queda ou estiver vazando.
- Se o cabo de energia ou a mangueira de fornecimento de vapor apresentar danos, a peça deverá ser substituída pela Philips, por uma das assistências técnicas autorizadas da Philips ou por técnicos igualmente qualificados a fim de evitar situações de risco.
- O aparelho tem que ser supervisionado enquanto estiver conectado ao sistema elétrico com fio.
- Este aparelho pode ser usado por crianças a partir de 8 anos e por pessoas com capacidades físicas, mentais ou sensoriais reduzidas ou com pouca experiência e conhecimento, desde que sejam supervisionadas ou instruídas sobre o uso e seus riscos.
- Não deixe o aparelho ao alcance de crianças.
- Crianças não devem realizar limpeza ou manutenção sem a supervisão de um adulto.
- Mantenha o aparelho e seu fio fora do alcance de crianças menores de 8 anos enquanto o aparelho estiver ligado ou esfriando.
- Não permita que o cabo de energia e a mangueira de fornecimento de vapor toquem o bocal quente do vaporizador.
- O aparelho deve ser usado em uma superfície plana, estável e resistente ao calor.
- O vapor pode danificar ou causar descoloração de certos acabamentos de paredes, portas ou móveis.
- Deve-se ter cuidado ao usar o aparelho devido à emissão de vapor.
- O aparelho libera vapor, o que pode causar queimaduras. Manuseie o vaporizador com cuidado. Nunca direcione o vapor para pessoas ou animais.
- Não use a mão nua como superfície de apoio ao usar o vapor. Puxe as laterais da peça de roupa para esticá-la.
- Se o aparelho tiver uma saída de ar quente, poderá estar extremamente quente e causar queimaduras quando tocado.

CUIDADO: superfície quente


- As superfícies tendem a esquentar durante o uso (para vaporizadores com o símbolo de calor marcado no aparelho).




Atenção

- Este aparelho destina-se somente a uso doméstico.
- Conecte o aparelho somente a uma tomada elétrica aterrada.
- Sempre verifique se há possíveis danos no cabo de energia e na mangueira de fornecimento.
- Desenrole completamente o cabo de energia antes de ligá-lo na tomada.
- Não use o aparelho quando o reservatório de água estiver vazio.

- Não use água perfumada, água da secadora, vinagre, goma, agentes descalcificadores, produtos para passar roupas, água quimicamente descalcificada ou outros produtos químicos, pois eles podem causar vazamentos de água, manchas escuras ou danos ao aparelho.
- Não coloque a base do vaporizador sobre uma mesa ou cadeira, mas mantenha a base no chão durante o período de utilização. Se a mangueira estiver dobrada, o vapor condensa nela. Isso reduz o desempenho ou gera respingo de gotículas de água do bocal do vaporizador.
- Desligue o aparelho durante o enchimento e a limpeza.
- Ao concluir a vaporização, limpe o aparelho, encha ou esvazie o reservatório de água, faça a limpeza e a lavagem, prenda ou remova o acessório da escova (caso esteja disponível para este modelo) ou deixe o aparelho nivelado por um curto período, desligue-o e remova o plugue da tomada.
- Certifique-se de que o vaporizador esteja desligado da tomada há pelo menos 1 hora e deixe-o esfriar por completo antes de usar a função De-Calc (se estiver disponível).
- Não despeje água, vinagre, agentes de remoção de impurezas ou outras substâncias químicas na abertura da função De-Calc (se estiver disponível).
- Para garantir a máxima eficiência de seu produto, não recomendamos o uso de adaptadores. Procure adequar sua tomada às especificações da norma Inmetro NBR 14.136 para produtos com corrente acima de 10 ampères.
- Caso opte por usar um adaptador, assegure-se de que seja certificado pelo Inmetro.

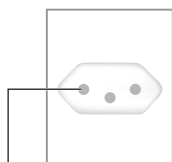

4 mm – Para aparelhos que operam com amperagem até 10 ampères

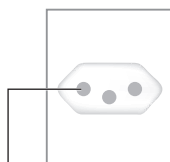

4.8 mm – Para aparelhos que operam com amperagem entre 10 e 20 ampères

■ Campos eletromagnéticos (EMF)

Este aparelho está em conformidade com os padrões e regulamentos aplicáveis relacionados à exposição a campos eletromagnéticos.

■ Reciclagem

- Não descarte o produto com o lixo doméstico normal ao final de sua vida útil. Leve-o a um posto de coleta oficial para que ele possa ser reciclado. Ao fazer isso, você ajuda a preservar o meio ambiente.
- Siga a regulamentação do seu país para a coleta seletiva de produtos elétricos e eletrônicos. O descarte correto ajuda a prevenir consequências negativas para o meio ambiente e para a saúde humana.

■ Garantia e suporte

A Versuni oferece garantia de dois anos após a compra deste produto. Esta garantia não é válida se um defeito for devido ao uso incorreto ou à falta de manutenção. Nossa garantia não afeta seus direitos por lei como consumidor. Para obter mais informações ou para solicitar a garantia, visite nosso site www.philips.com/support.



PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2023 © Versuni Holding B.V.

642001007645 (21/12/2023)

