

PHILIPS

AC6678



ZH-S 用户手册 1

EN User manual 22



目录

1 重要事项	2
安全	2
2 您的空气净化器	4
产品概述	4
控件概览	5
3 使用入门	6
安装过滤网	6
Wi-Fi 指示灯	7
Wi-Fi 连接	7
4 使用空气净化器	8
了解空气质量指示灯	8
打开和关闭	8
更改自动模式设置	9
更改风扇速度	10
使用灯光开/关功能	11
设置童锁	11
5 清洁	12
清洁计划	12
清洁空气净化器的机身	12
清洁出风口盖	12
清洁空气质量传感器	13
清洁预过滤网	13
6 更换过滤网	15
过滤网更换指示灯	15
更换滤网	15
过滤网强制重置	16
更换过滤网类型	17

7 存放	18
8 故障排除	19
9 保修与服务	21
订购部件或附件	21
10 注意事项	21
电磁场 (EMF)	21
回收	21

1 重要事项

安全

使用本产品之前，请仔细阅读本用户手册，并妥善保管以备日后参考。

危险

- 切勿让水或任何其它液体或易燃性清洁剂进入产品，以免发生触电和/或火灾。
- 切勿用水或任何其它液体或（易燃性）清洁剂来清洁产品，以免发生触电和/或火灾。
- 切勿在产品周围喷洒杀虫剂或香水等任何可燃材料。

警告

- 在将产品连接电源之前，请先检查产品所标电压与当地的供电电压是否相符。
- 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。
- 如果插头、电源线或产品本身受损，请勿再使用本产品。
- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使

用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。请勿让儿童在无人监督的情况下清洁和保养产品。

- 请勿堵塞进风和出风口，例如不要将物体放置在出风口上或进风口前方。
- 确保异物未通过出风口进入产品内部。

小心


- 本产品不能替代正常通风、日常吸尘或者在烹饪时使用的抽油烟机。
- 如果连接产品的电源插座接触不良，则产品的插头可能会变得很热。确保所连接的电源插座接触良好。
- 一定要在干燥、稳固、平整且水平的表面上放置和使用本产品。
- 产品的后侧及两侧均要留出至少 20 厘米的空间，产品上方至少要留出 30 厘米的空间。
- 切勿在本产品上放置任何物品。
- 请勿坐在或站在产品上面。坐在或站在产品上面可能导致潜在的人身伤害。
- 切勿将产品直接放在空调下方，以防冷凝水滴到产品中。

- 打开产品电源之前，务必确保已经正确安装所有过滤网。
- 只能使用飞利浦专门为本产品设计的原装过滤网。切勿使用任何其它过滤网。
- 燃烧滤网可能会造成不可逆转的人体危害和/或危及其他生命。请勿将滤网用作燃料或类似用途。
- 请勿用硬物敲击本产品（尤其是进风口和出风口）。
- 始终通过产品背面的手柄提起或移动产品。
- 请勿将手指或物体插入出风口或进风口，以防止产品出现物理损坏或发生故障。
- 当您使用室内喷雾式驱虫剂或在充满油污、易燃气体或化学烟雾的地方时，请勿使用本产品。
- 请勿在气体用具、加热装置或火炉附近使用本产品。
- 使用之后和清洁产品或执行其他维护或更换滤网之前，请务必先拔掉产品的电源插头。
- 请勿在温度变化较大的房间内使用本产品，因为这可能导致产品内部的冷凝。
- 为防止产生干扰，产品与使用无线电波的电器（例如电视机、收音机和无线电控制时钟）之间至少应保持 2 米距离。
- 本产品仅限于家用并在正常运行条件下使用。
- 请勿在潮湿环境或高温环境中（例如浴室、卫生间或厨房）使用本产品。
- 本产品不能去除一氧化碳 (CO) 或氡 (Rn)，因此在发生燃烧和危险化学品事故时，不能作为安全设备使用。
- 如果需要移动产品，请先断开产品的电源。
- 请勿通过拉扯电源线来移动产品。
- 更换滤网后，请务必清洗双手。

2 您的空气净化器

感谢您的惠顾，欢迎光临飞利浦！
为了您能充分享受飞利浦提供的支持，请在以下网站注册您的产品：
www.philips.com/welcome。

产品概述

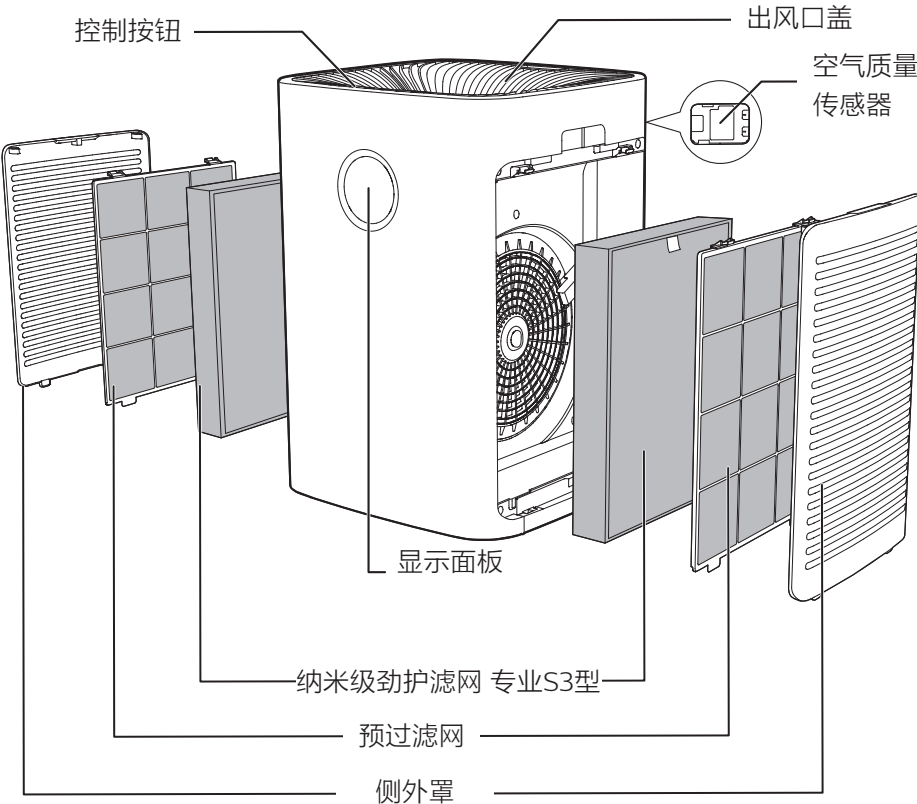

型号	过滤器
FY6177	纳米级劲护滤网 专业S3型*


*在下文统称为“空气净化滤网”。

控件概览

控制按钮



显示面板

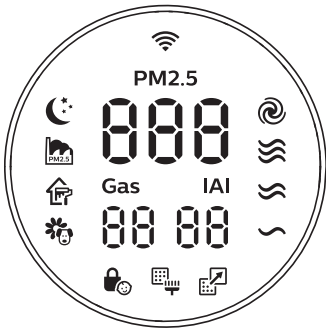

控制按钮

	电源开/关按钮		风速按钮
	光线开/关按钮		童锁按钮
	自动模式按钮		过滤网重置按钮

显示面板

	PM2.5 显示		预滤网清洁提醒
	气态污染物读数		过滤网更换提醒
	室内过敏原指数		速度 1
	睡眠模式		速度 2
	去污染原模式		速度 3
	去甲醛模式		劲速
	去过敏原模式		Wi-Fi 指示灯
	童锁指示灯		

3 使用入门


安装过滤网

在使用本产品之前，先拆掉过滤网的所有包装。请按以下所述拆掉过滤网的包装，然后将其放入产品中：


注意

- 确保先从电源插座上拔下空气净化器的插头，然后再安装过滤网。
- 产品的两侧各有一组滤网。每侧均配备一个预过滤网和一个空气净化滤网。
- 确保先在产品内放入空气净化滤网，然后再放置预过滤网。
- 确保在安装过滤网时带拉片的一面朝向您。


1 拆掉空气净化滤网的所有包装材料。

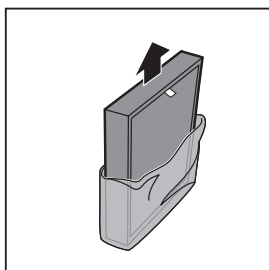


2 拉出侧面板的上半部分以将其从产品上卸下。

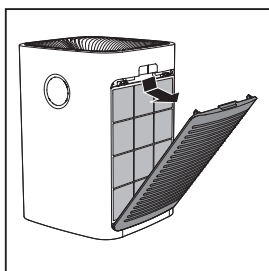


3 向下按两个固定夹，然后朝您自己的方向拉动预过滤网。

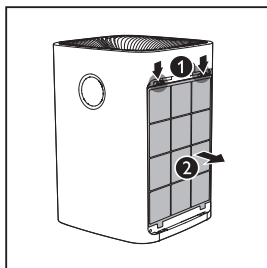

4 将无包装的空气净化滤网放回产品内。

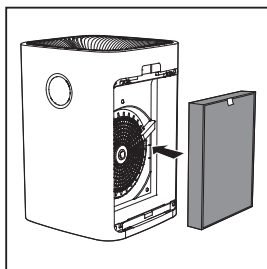


5 将预过滤网放回产品内部。

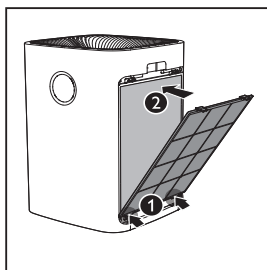

注意

- 确保带两个固定夹的一面朝向自己，并确保预过滤网的所有挂钩均已正确连接到空气净化器上。

- 6 要重新安装侧面板，请先将面板安装到产品的底部 (1)。然后，朝产品机身方向轻推面板 (2)。

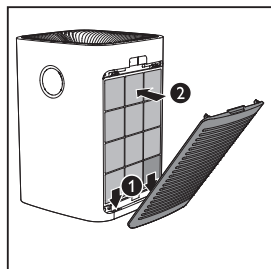

- 7 重复上述步骤，组装产品另一侧的滤网。

Wi-Fi 指示灯

颜色	状态
橙色 (闪烁)	添加设备
白色	已连接服务器
白色 (闪烁)	正在连接服务器
关	Wi-Fi 功能已禁用


Wi-Fi 连接

注意



- 如果您想要将多个空气净化器连接到您的智能设备，则必须逐一执行这些步骤。先完成对一个产品的设置，然后再打开其他产品。
- 确保您的空气净化器与 Wi-Fi 路由器之间的距离小于 10 米，且两者之间不存在任何障碍物。
- 如果空气净化器安装在房间角落 Wi-Fi 信号较弱的位置，建议设置 Wi-Fi 信号增强器，以便远程使用。


- 1 扫描以下二维码，或从应用程序市场下载京东智能助手“小京鱼”App，然后将该应用程序安装到您的智能设备上。



- 2 确保您的智能设备已经连接至 Wi-Fi 网络。启动应用程序。
- 3 轻击“+”，扫描用户手册或包装盒上的二维码。
- 4 确保 Wi-Fi 指示灯  呈橙色闪烁。轻击“下一步”。

注意

- 如果 Wi-Fi 指示灯  不是橙色，请轻触并按住  和  按钮进入配对模式。

- 5 填入 Wi-Fi 信息，然后轻击“下一步”以添加新设备。
- 6 在配对并且连接成功后，轻击完成。Wi-Fi 指示灯  会呈白色亮起。
- 7 如果要添加多台便携式设备与本空气净化器连接，请轻击应用程序右上角的“设置”，再点击“共享给家人”，扫描生成的二维码。
- 8 在要连接到本产品的设备上，下载并安装“小京鱼”，扫描该二维码，然后按照步骤 1-6 添加更多设备。
- 9 如果连接失败或 Wi-Fi 信息已变更，按照步骤 1-6 重新连接 Wi-Fi 网络。

4 使用空气净化器

了解空气质量指示灯

空气质量指示灯颜色	空气质量级别
蓝色	良好
蓝紫色	一般
紫红色	较差
红色	非常差

空气净化器打开后，空气质量指示灯将自动亮起，并按顺序亮起所有颜色。大约 30 秒后，空气质量传感器将选择与环境空气悬浮颗粒质量相对应的颜色。

空气质量指示灯的颜色取决于 PM 2.5、IAI(室内过敏原指数)，Gas (气态污染物读数) 中值最高的那个参数。

PM2.5

即使是空气中最细微的颗粒变化，AeraSense 灵智感应技术也可精确地检测并快速响应。它提供实时的 PM2.5 反馈，让您安枕无忧。

大多数室内空气污染物属于 PM2.5 – 它是指小于 2.5 微米的悬浮颗粒污染物。常见的室内微粒源有烟草烟雾、烹饪、点燃的蜡烛等。此外，一些悬浮细菌、最小的霉菌芽孢、宠物过敏原和尘螨过敏原颗粒也属于 PM2.5。

PM2.5 水平	空气质量指示灯颜色
≤12	蓝色
13-35	蓝紫色
36-55	紫红色
>55	红色

IAI

专业级 AeraSense 传感器可检测室内空气过敏原的级别，然后用 1 至 12 之间的数字进行级别反馈，显示室内空气过敏原的潜在风险级别。1 表示最佳空气质量。

IAI 级别	空气质量指示灯颜色
1-3	蓝色
4-6	蓝紫色
7-9	紫红色
10-12	红色

气态污染物显示

使用高级气体传感器，范围为 L1 至 L4 的显示值可显示检测到的潜在有害气体（包括 VOC、异味等）变化情况。L1 表示最佳空气质量。

Gas 水平	空气质量指示灯颜色
L1	蓝色
L2	蓝紫色
L3	紫红色
L4	红色


打开和关闭


注意


- 务必将空气净化器置于稳固、水平且平坦的表面上，使装置的正面背向墙壁或家具。
- 为了获得出色的净化性能，请关闭门窗。
- 使窗帘远离进风口或出风口。

- 1 将空气净化器的插头插入电源插座。

2 轻触 可打开空气净化器。

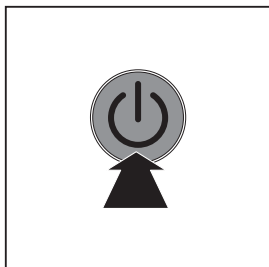

- ↳ 空气净化器将发出蜂鸣音。
- ↳ 默认情况下，空气净化器将以去污染原模式运行。
- ↳ 空气净化器预热时，屏幕上会显示“---”。在仅测量空气中的可吸入颗粒物后，空气净化器会显示 PM2.5/IAI/空气等级，空气质量传感器会自动选择相应的空气质量指示灯颜色。
- ↳ 空气净化器将在自动模式下工作，并且屏幕上会显示  图标。

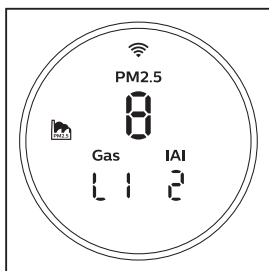




3 轻触并按住 3 秒可关闭空气净化器。

注意



- 如果空气净化器关闭后仍与电源插座连接，则再次打开后，其将以之前的设置运行。


更改自动模式设置

您可以选择去污染原模式 ()、去甲醛模式 () 或去过敏原模式 ()。

去污染原模式



专门设计的去污染原模式可有效去除 PM2.5 等空气污染物。

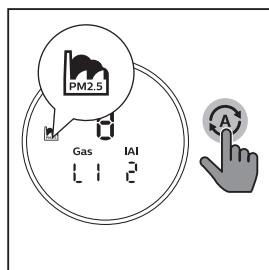
- 轻触自动模式按钮  以选择去污染原模式。
- ↳  图标将显示在屏幕上。



去甲醛模式


独特的去甲醛模式旨在快速去除室内甲醛，并将该物质在空气中的含量保持在安全级别。

- 轻触自动模式按钮  可选择去甲醛模式。
- ↳  图标将显示在屏幕上。

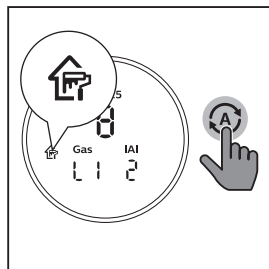


去过敏原模式

超敏感的去过敏原模式经过精心设计，旨在对周围空气中的微小过敏原等级变化作出反应。

- 轻触自动模式按钮  以选择去过敏原模式。

→  图标将显示在屏幕上。

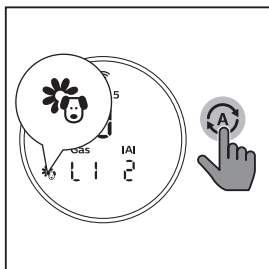


更改风扇速度

除了自动模式，还有其他几种风速可供选择。

使用手动风速设置时，空气净化器仍将监控空气质量，但如果检测到空气质量变化，它不会自动调节风速。


手动

- 反复轻触风速按钮  选择所需的风速。

~ (速度 1)

≡ (速度 2)

≡ (速度 3)

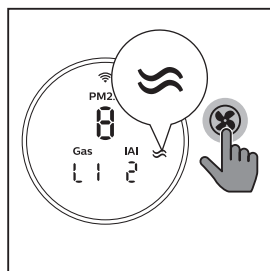


* 提示


- 如果空气质量环形指示灯呈蓝色亮起，表明空气质量良好，您可以选择较低的风速。另一方面，如果空气质量环形指示灯呈红紫色或红色亮起，则表明空气质量不健康，您可以选择较高的风速，以便更快地净化空气。

睡眠模式 (☾)

在睡眠模式下，空气净化器将以非常低的速度安静地运行。

- 轻触风速按钮  以选择睡眠模式。


→ 睡眠模式指示灯  将亮起。

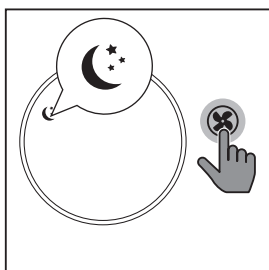


劲速

在劲速模式下，空气净化器会以劲速速度运行。


- 轻触风速按钮  以选择劲速模式。


→ 劲速指示灯  将亮起。

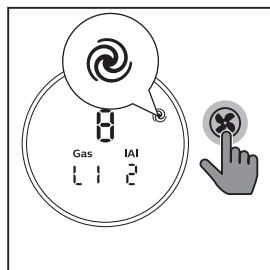


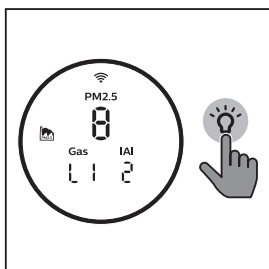
使用灯光开/关功能

借助灯光开/关按钮，您可以打开或关闭空气质量指示灯、显示屏和功能指示灯（如果需要）。



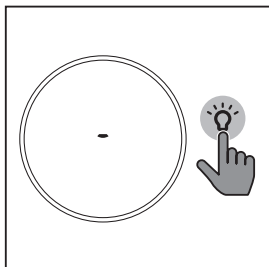- 1 轻触灯光开/关按钮  一次，空气质量指示灯将熄灭，显示面板将会变暗并显示 -。






- 2 再次轻触灯光开/关按钮 ，所有指示灯都会亮起。



设置童锁

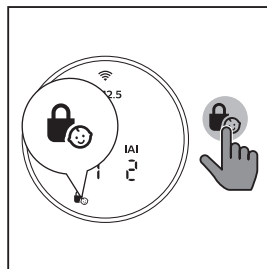- 1 轻触并按住童锁按钮  3 秒可激活童锁。
 - ↳ 童锁图标  将显示在屏幕上。
 - ↳ 打开童锁时，其他所有按钮均将没有反应。



- 2 再次轻触并按住童锁按钮  3 秒可禁用童锁。
 - ↳ 童锁图标  消失。



注意


- 即使已启用童锁功能，您仍可通过该应用程序控制本产品。

5 清洁

注意

- 清洁产品前，务必先将电源插头拔掉。
- 切勿将本产品浸入水中或任何其它液体中。
- 切勿使用研磨性、腐蚀性或易燃性清洁剂（例如漂白剂或酒精）清洁本产品的任何部件。
- 只有预过滤网可以用水清洗。空气净化滤网不可水洗，也不可用吸尘器清洁。
- 请勿尝试用吸尘器清洁滤网或空气质量传感器。

清洁计划

频率	清洁方法
必要时	使用干软布擦拭产品表面
	清洁出风口盖
每两个月	使用干棉签清洁空气质量传感器
预过滤网清洁指示灯  会亮起，屏幕上会显示 F0	清洁预过滤网


清洁空气净化器的机身

定期清洁空气净化器的内侧和外侧，以防止灰尘积聚。


- 1 使用柔软的干布清洁空气净化器的内部和外部。
- 2 出风口也可用柔软的干布进行清洁。

清洁出风口盖


- 1 要解锁出风口盖，请握住盖子上的手柄，然后向上拉动。

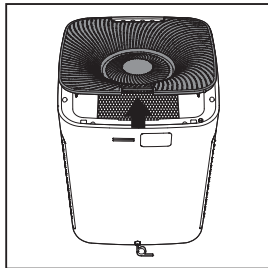

- 2 用刷子清洁出风口盖。

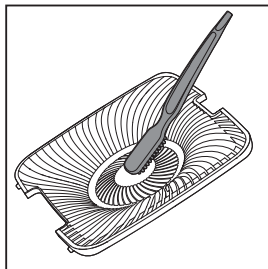

- 3 以正确的方式重新安装此盖板。

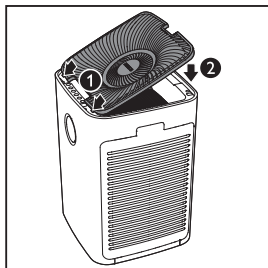


清洁空气质量传感器

每 2 个月清洁一次空气质量传感器，确保产品以最佳性能运行。


注意

- 如果将空气净化器用于多尘环境，则可能需要更频繁地进行清洁。
- 如果室内的湿度非常高，则空气质量传感器上可能会形成冷凝水，即使空气质量确实很好，空气质量指示灯也可能会指示空气质量较差。如出现此情况，请清洁空气质量传感器或以手动速度设置使用空气净化器。


- 1 关闭空气净化器，从电源插座上拔下插头。
- 2 使用软刷清洁空气质量传感器的进风口和出风口。

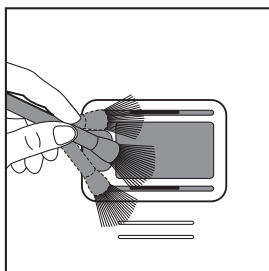


- 3 打开空气质量传感器保护盖。

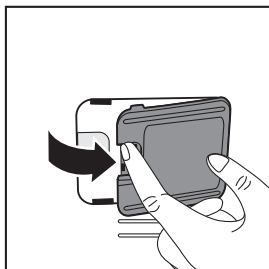

- 4 使用湿棉签清洁空气质量传感器、进风口和出风口。

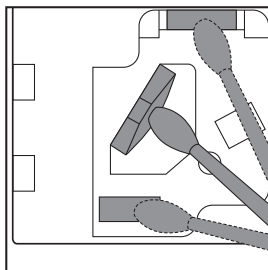


- 5 使用干棉签彻底擦干所有部件。
- 6 重新装上空气质量感应器的保护盖。

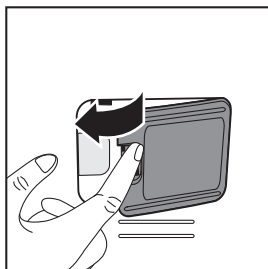


清洁预过滤网


当屏幕上显示 F0 且预过滤网清洁提示图标亮起时，请清洁预过滤网。

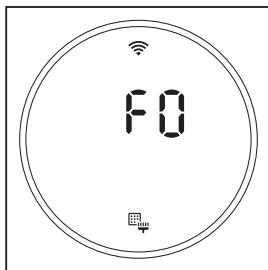


- 1 关闭空气净化器，从电源插座上拔下插头。
- 2 拉出侧面板的上半部分以将其从空气净化器上卸下。

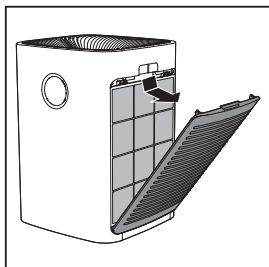


- 3 向下按两个固定夹，然后朝您自己的方向拉动预过滤网。

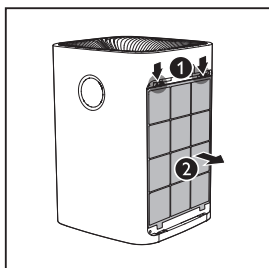

- 4 如果很脏，请使用软刷清除上面的灰尘。然后，在水龙头下清洗预过滤网。

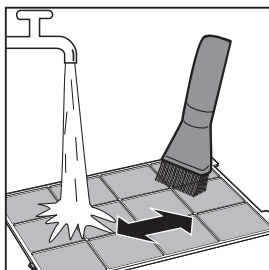


- 5 待预过滤网完全晾干后再将其装回空气净化器中。
- 6 将预过滤网装回空气净化器中。

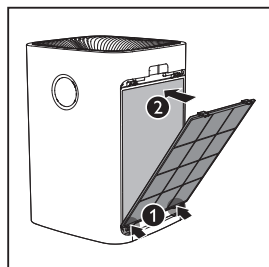



注意

- 要优化预滤网的使用寿命，请确保清洁后将其完全晾干。
- 拆装滤网后，请清洗双手。
- 确保带两个固定夹的一面朝向自己，并确保预过滤网的所有挂钩均已正确连接到空气净化器上。

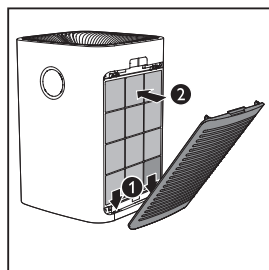
- 7 要重新安装侧面板，请先将面板安装到产品的底部 (1)。然后，朝产品机身方向轻推面板 (2)。



- 8 将空气净化器的插头插入墙上插座。
- 9 轻触  按钮启动产品。
- 10 轻触并按住重置按钮  3 秒可重置预过滤网清洁时间。
- 11 安装滤网后，彻底洗净双手。

6 更换过滤网

过滤网更换指示灯


该空气净化器配有滤网更换指示灯，旨在确保空气净化器运行时，空气净化滤网处于最佳工作状态。当需要更换过滤网时，屏幕上会显示过滤网代码（请参阅过滤网提示图），且过滤网更换提醒（）指示灯将呈红色亮起。


如果未及时更换过滤网，则空气净化器将停止运行并自动锁定，以保护房间中的空气质量。应尽快根据过滤网代码更换过滤网。

更换滤网


注意

- 过滤网不可水洗，也不可重复使用。
- 在更换过滤网之前，务必先关闭空气净化器并从电源插座上拔下插头。
- 请勿用吸尘器清洁滤网。
- 如果预滤网已损毁、磨损或损坏，请勿使用。请访问 www.philips.com/support 或联系您所在国家/地区的客户服务中心。

滤网提示灯状态	动作
屏幕上显示 A3，且过滤网更换提醒  会亮起。	更换纳米级劲护滤网 专业S3型 (FY6177)

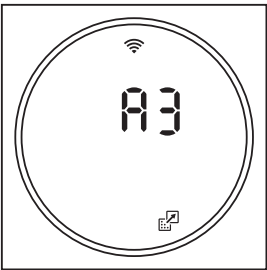


- 1 关闭空气净化器，从电源插座上拔下插头。
- 2 取出产品两侧的预过滤网。
- 3 取出已过期的过滤网。丢弃用过的过滤网。

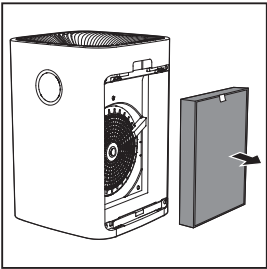

注意

- 请勿接触滤网的褶皱面，或闻滤网的气味，因为其包含从空气中收集的污染物。

4 拆掉新滤网上的所有包装材料。

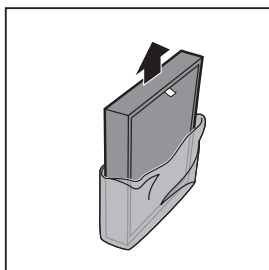

5 将新过滤网装入空气净化器。

6 将空气净化器的插头插入电源插座。

7 轻触 按钮启动产品。



8 轻触并按住重置按钮 3 秒可重置过滤网使用寿命计数器。


注意


- 更换滤网后，请洗净双手。
- 本空气净化器不含其他可供用户维修的部件。如需获取帮助，请与您所在国家/地区的客户服务中心联系。


过滤网强制重置

即使屏幕上没有显示过滤网更换代码，您也可以更换过滤网。在更换过滤网后，您需要手动重置过滤网使用寿命计数器。


- 1 同时轻触  和  3 秒钟，即可进入过滤网重置模式。
↳ 纳米级劲护滤网 专业S3型的代码 (A3) 会显示在屏幕上。

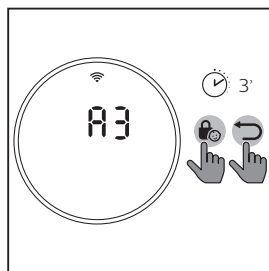


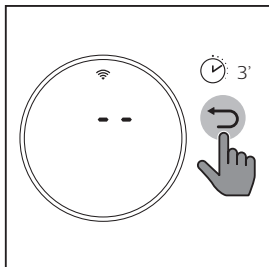
- 2 轻触并按住  3 秒可强行重置过滤网使用寿命计数器。

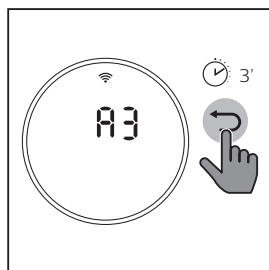


- 3 重置过滤网后，屏幕上将显示 -- 。

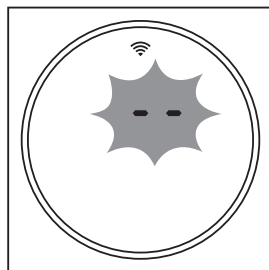



- 4 轻触并按住  3 秒钟可退出过滤网重置模式。

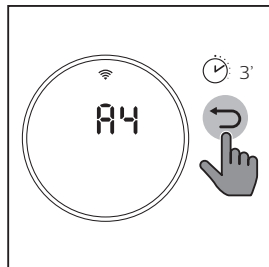



- 3 轻触并按住  3 秒即可确认新过滤网的过滤网代码。




更换过滤网类型


- 1 同时触摸  和  3 秒钟即可进入过滤网类型更改模式。
 ↳ 纳米级劲护滤网 专业S3型的代码 (A3) 会显示在屏幕上。

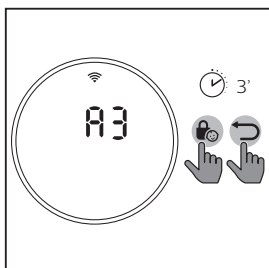


- 2 轻触  即可为您要使用的新过滤网选择过滤网代码。

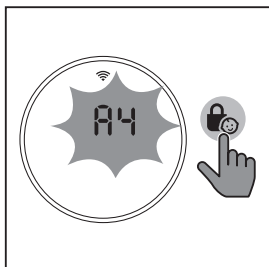





注意


- 当您使用  按钮选择了新过滤网的过滤网代码之后，若您在 10 秒钟内未轻触任何其他按钮，产品将自动确认新过滤网的过滤网代码。

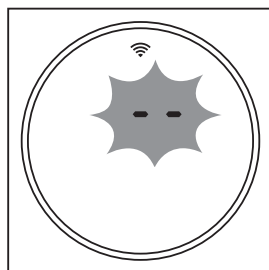
- 4 一旦确认新过滤网代码，-- 将显示在屏幕上。



- ↳ 如果您另外还有一个需要更改过滤网类型的过滤网, 请先轻击  选择新过滤网代码, 接下来轻击并按住  3 秒钟以确认选择, 然后退出过滤网类型更改模式。

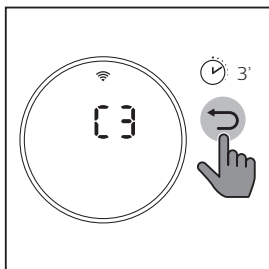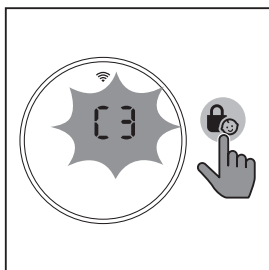

- ↳ 如果您没有第二个过滤网, 则只需轻击并按住  3 秒钟确认过滤网代码, 然后退出过滤网类型更改模式。

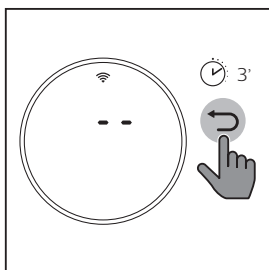

注意

- 如需详细了解适合您产品的不同过滤网组合, 请参阅过滤网包装内随附的单独手册。

7 存放

- 1 关闭空气净化器, 从电源插座上拔下插头。
- 2 清洁空气滤网、空气质量传感器和预过滤网 (请参阅“清洁”一章)。
- 3 待所有部件完全晾干后再进行存放。
- 4 将滤网和预过滤网分别装入密封的塑料袋中。
- 5 将空气净化器、滤网和预过滤网存放在阴凉干燥处。
- 6 拆装滤网后, 务必彻底洗净双手。

8 故障排除

本章归纳了您在使用产品时最常遇到的问题。如果您无法根据下面的信息解决问题，请与您所在国家/地区的客户服务中心联系。

问题	可能的解决方法
产品即使接通电源也无法工作。	<ul style="list-style-type: none"> 检查上盖是否安装正确。 滤网更换指示灯持续亮起，但您未更换相应的滤网。结果是本产品现在已被锁定。在此情况下，更换过滤网并重置过滤网使用寿命计数器。
出风口排出的气流比之前明显减弱。	<ul style="list-style-type: none"> 预过滤网变脏。清洁预过滤网（请参阅“清洁”一章）。
即使在产品已经运行很长时间以后，空气质量也未见显著改善。	<ul style="list-style-type: none"> 检查滤网包装材料是否已去除。 某一过滤网可能没有放在产品内部。确保按照以下顺序安装所有滤网，先从最里面的滤网开始： <ol style="list-style-type: none"> 1) 纳米级劲护滤网 专业S3型 (FY6177); 2) 预过滤网。 空气质量感应器是湿的。室内湿度过高，因此形成了冷凝水。确保空气质量传感器清洁干燥（请参阅“清洁”一章）。
空气质量指示灯的颜色始终保持不变。	<ul style="list-style-type: none"> 空气质量感应器变脏。清洁空气质量传感器（请参阅“清洁”一章）。
产品散发出一种奇怪的味道。	<ul style="list-style-type: none"> 前几次使用产品时，其可能会产生塑料味。这是正常的。但是，如果产品在取出过滤网后依然发出烧焦的气味，请联系飞利浦经销商或经授权的飞利浦服务中心。由于吸收室内气体，该过滤网可能会在使用后发出气味。过滤网经过日晒之后即可重复使用，建议您采用这种方式再次激活过滤网。如果异味仍然存在，建议更换过滤网。
产品声音过大。	<ul style="list-style-type: none"> 如果产品声音过大，您可以将风速更改为较低的风速级别。当夜间在卧室使用本产品时，可选择静音低速。

问题	可能的解决方法
我已经更换过了过滤网，但是产品还是一直指示需要更换滤网。	<ul style="list-style-type: none"> 可能是您未重置滤网使用寿命计数器。启动产品。然后轻触并按住重置按钮 (↶) 3 秒钟。
屏幕上显示错误代码“E1”。	<ul style="list-style-type: none"> 马达出现故障。请与您所在国家/地区的客户服务中心联系。
屏幕上显示“E2”、“E3”、“E4”或“E5”错误代码。	<ul style="list-style-type: none"> 传感器出现故障。请与您所在国家/地区的客户服务中心联系。
Wi-Fi 设置不成功。	<ul style="list-style-type: none"> 如果您的净化器连接到的路由器为双频段且当前未连接到 2.4GHz 网络，请切换至同一路由器 (2.4GHz) 的另一频段并尝试再次将净化器配对。不支持 5GHz 网络。 不支持 Web 验证网络。 检查净化器是否在 Wi-Fi 路由器的范围内。您可以尝试使空气净化器更靠近 Wi-Fi 路由器。 检查网络名称是否正确。网络名称区分大小写。 检查 Wi-Fi 密码是否正确。密码区分大小写。 使用“Wi-Fi 连接”部分中的说明重试设置。 Wi-Fi 连接可能被电磁或其他干扰中断。使本产品远离可能造成干扰的其他电子设备。 检查移动设备是否处于飞行模式。确保在连接 Wi-Fi 网络时禁用飞行模式。 参阅应用程序中的帮助部分，以获得广泛和最新的故障排除技巧。

9 保修与服务

如果您需要了解信息或有任何疑问，请访问飞利浦网站 www.philips.com 或联系您所在国家/地区的飞利浦客户服务中心（可在全球保修卡中找到飞利浦客户服务中心的电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

订购部件或附件

如果您必须更换部件或需要购买额外的部件，请联系您的飞利浦经销商或访问 www.philips.com/support。

如果获取部件有问题，请与您所在国家/地区的飞利浦客户服务中心联系（可在全球保修卡中找到其电话号码）。

10 注意事项

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

弃置产品时，请不要将它与一般生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。

请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

Contents

1 Important	23
Safety	23
2 Your air purifier	26
Product Overview	26
Controls overview	27
3 Getting started	28
Installing filters	28
Wi-Fi indicator	29
Wi-Fi connection	29
4 Using the air purifier	31
Understanding the air quality light	31
Turning on and off	32
Changing the Auto mode setting	33
Changing the fan speed	34
Using the light on/off function	35
Setting the child lock	35
5 Cleaning	36
Cleaning schedule	36
Cleaning the body of the air purifier	36
Cleaning the air outlet cover	36
Cleaning the air quality sensor	37
Cleaning the pre-filter	38

6 Replacing the filters	39
Filter replacement indicator	39
Replacing the filters	40
Filter force reset	41
Changing filter type	42
7 Storage	43
8 Troubleshooting	44
9 Guarantee and service	46
Order parts or accessories	47
10 Notices	47
Electromagnetic fields (EMF)	47
Recycling	47

1 Important

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have

it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.

- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Child shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not sit or stand on the appliance. Sitting or standing on the appliance may lead to potential injury.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause irreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle on back side of the appliance.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.


- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before cleaning, or carrying out other maintenance or replacing the filters.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2 meters away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.
- If you need to move the appliance, disconnect the appliance from the power supply first.
- Do not move the appliance by pulling its power cord.
- Always cleanse your hands after changing the filters.

2 Your air purifier

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Product Overview

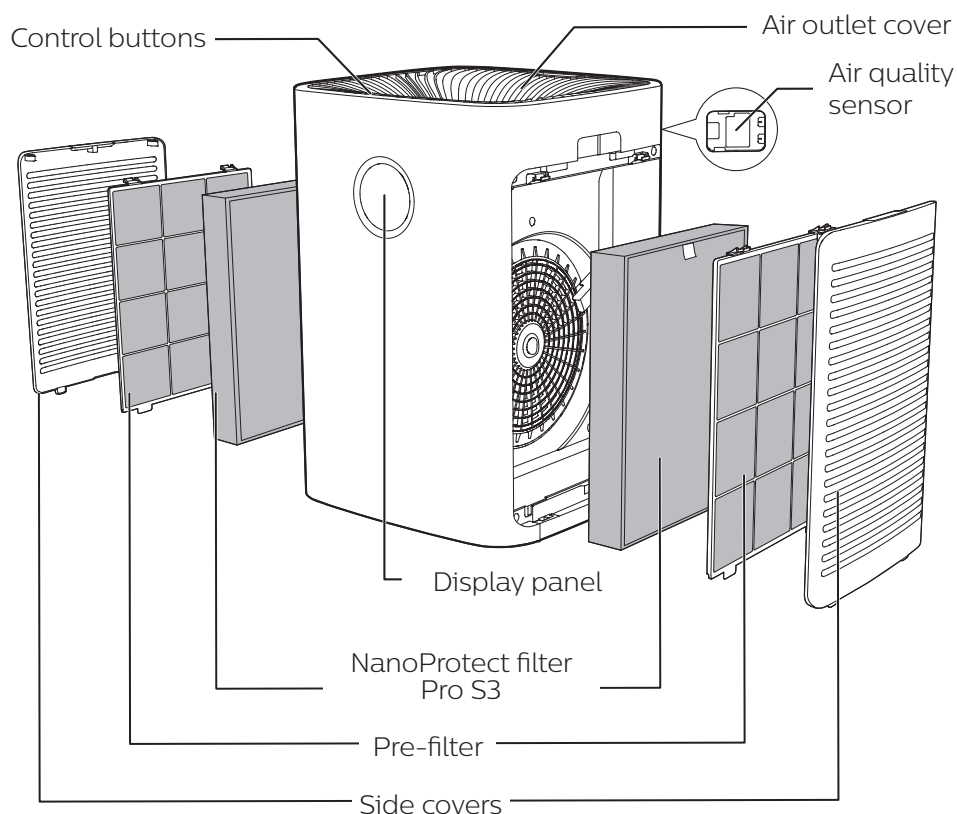

Type number	Filter
FY6177	NanoProtect filter Pro S3*


*Hereinafter referred to as "air purification filter".

Controls overview

Control buttons



Display panel

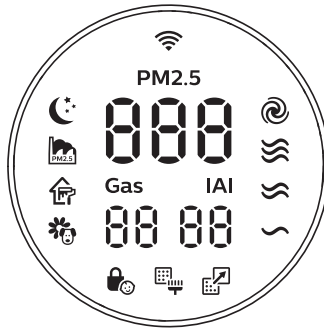

Control buttons

	Power on/off button		Fan speed button
	Light on/off button		Child lock button
	Auto mode button		Filter reset button

Display panel

PM2.5	PM2.5 display		Pre-filter cleaning alert
Gas	Gas display		Filter replacement alert
IAI	Indoor Allergen Index display		Speed 1
	Sleep mode		Speed 2
	Pollution mode		Speed 3
	Formaldehyde mode		Turbo speed
	Allergen mode		Wi-Fi indicator
	Child lock indicator		

3 Getting started


Installing filters

Remove all packaging of the filters before using the appliance. Unpack them and place them into the appliance described as follows:


Note

- Make sure the air purifier is unplugged from the electrical outlet before installing the filters.
- There is one set of filters on each side of the appliance. Each side is equipped with one pre-filter and one air purification filter.
- Make sure that you place the air purification filter in the appliance first and then the pre-filter.
- Make sure that the side with the tag is pointing towards you when installing filters.


- 1 Remove all packaging materials of the air purification filters.

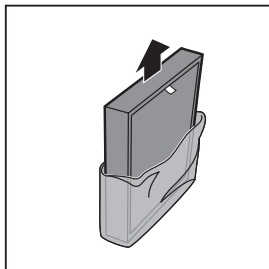


- 2 Pull the top part of the side panel to remove it from the appliance.

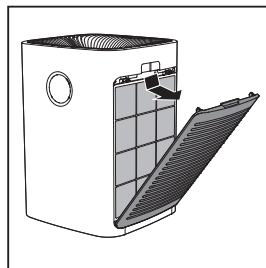


- 3 Press the two clips down and pull the pre-filter towards you.

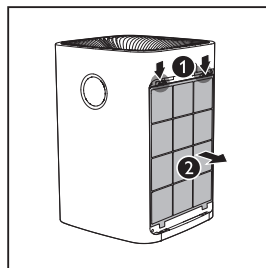

- 4 Put the unpacked air purification filter back into the appliance.

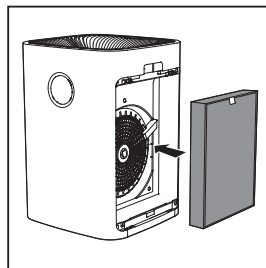


- 5 Put the pre-filter back into the appliance.

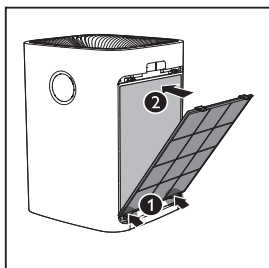

Note

- Make sure the side with the two clips is pointing towards you, and that all hooks of the pre-filter are properly attached to the purifier.

- 6 To reattach the side panel, mount the panel onto the bottom of the appliance first (1). Then, gently push the panel against the body of the appliance (2).

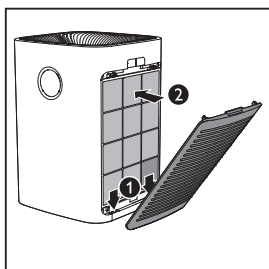

- 7 Repeat the above steps and assemble the filter for the other side of the appliance.

Wi-Fi indicator

Color	Status
Orange (blinking)	Adding a device
White	Connected to the server
White (blinking)	Connecting to the server
Off	Wi-Fi function disabled

English


Wi-Fi connection

Note

- If you want to connect more than one air purifier to your smart device, you have to do this one by one. Complete the set up of one appliance before you turn on the other appliance.
- Make sure the distance between your air purifier and Wi-Fi router is less than 10m without any obstruction.
- If the air purifier installed at room corner has a weak Wi-Fi signal, it's recommended to set Wi-Fi booster for remote usage.




- 1 Scan the below QR code, or download the "JD Whale" App from App market, and then install the App in your smart device.




- 2 Make sure your smart device is connected to your Wi-Fi network. Launch the App.
- 3 Tap "+", scan the QR code from the user manual or packing box.
- 4 Make sure that the Wi-Fi indicator  blinks orange. Tap **Next**.



Note

- If the Wi-Fi indicator  is not in orange, touch and hold the  and  button to enter pairing mode.

- 5 Fill the Wi-Fi information and tap **Next** to add a new device.
- 6 After the successful pairing and connection, tap **Finish**. The Wi-Fi indicator  will light up white.

- 7 If you want to add more smart device to connect with this air purifier, tap **Settings** on the top right of the App. Tap **Share with family** to scan the generated QR code.
- 8 On the device which you want to connect to this appliance, download and install the "JD Whale" App, scan this QR code and follow step 1-6 to add more device.
- 9 If the connection fails or Wi-Fi information is changed, follow step 1-6 to reconnect the Wi-Fi network.

4 Using the air purifier

Understanding the air quality light

Air quality light color	Air quality level
Blue	Good
Blue-purple	Fair
Purple-red	Poor
Red	Very poor

The air quality light automatically goes on when the air purifier is switched on, and lights up all colors in sequence. After approximately 30 seconds, the air quality sensors select the color that corresponds to the surrounding air quality of airborne particles.

The color of the air quality light is determined by the highest level among PM2.5, IAI and Gas readings.

PM2.5

AeraSense sensing technology accurately detects and quickly responds to even the slightest particle change in the air. It provides you with reassurance with real-time PM2.5 feedback.

Most of the indoor air pollutants fall under PM2.5 – which refers to airborne particle pollutants smaller than 2.5 micrometers. Common indoor sources of fine particles are tobacco smoke, cooking, burning candles. Some airborne bacteria and the smallest mold spores, pet allergen and dust mite allergen particles also fall under PM2.5.

PM2.5 level	Air quality light color
≤12	Blue
13-35	Blue-purple
36-55	Purple-red
>55	Red

IAI

The professional-grade **AeraSense** sensor detects the level of indoor air allergen and with numerical feedback from 1 to 12 the potential risk level of indoor air allergens can be displayed. 1 indicates best air quality.

IAI level	Air quality light color
1-3	Blue
4-6	Blue-purple
7-9	Purple-red
10-12	Red

GAS


With an advanced gas sensor, a display ranging from L1 to L4 shows the level change of potential harmful gases (incl. VOC, odor, etc.) detected. L1 indicates best air quality.


Gas level	Air quality light color
L1	Blue
L2	Blue-purple
L3	Purple-red
L4	Red


Turning on and off


Note


- Always place the air purifier on a stable, horizontal, and level surface with the front of the unit facing away from walls or furniture.
- For optimum purification performance, close doors and windows.
- Keep curtains away from the air inlet or air outlet.

- 1 Put the plug of the air purifier in the power socket.
- 2 Touch  to switch on the air purifier.

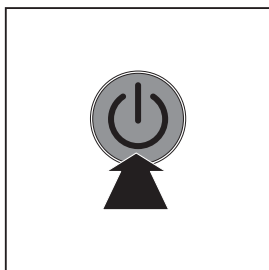

- ➔ The air purifier beeps.
- ➔ The air purifier operates under the Pollution mode by default.
- ➔ When the air purifier is warming up, "----" displays on the screen. After measuring the particulate matter only in the air, the air purifier shows the PM2.5/IAI/Gas level, the air quality sensor automatically selects the appropriate air quality light color.
- ➔ The air purifier operates in the auto mode with  displayed on the screen

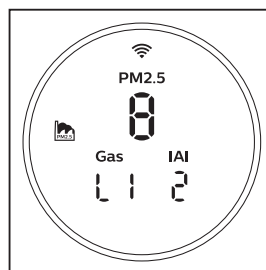




- 3 Touch and hold the  button for 3 seconds to switch off the air purifier.

Note



- If the air purifier stays connected to the electrical outlet after turning OFF, the air purifier will operate under the previous settings when turned ON again.


Changing the Auto mode setting

You can choose the Pollution mode (), the Formaldehyde mode () or the Allergen mode ().

Pollution mode



The specially designed pollution mode can effectively remove airborne pollutants such as PM2.5.

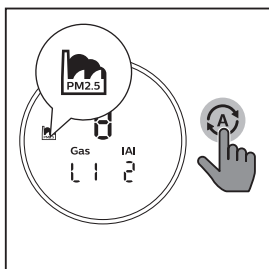
- Touch the Auto mode button  to select Pollution mode .
↳ The  icon displays on the screen.



Formaldehyde mode



The unique Formaldehyde mode is designed to quickly remove your indoor formaldehyde and maintain it at safe level.

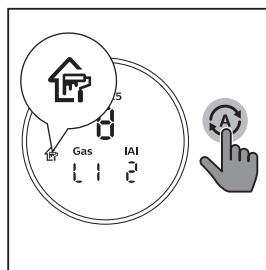
- Touch the Auto mode button  to select the Formaldehyde mode.
↳ The  icon displays on the screen.



Allergen mode

The extra-sensitive allergen mode is designed to react to even a small change in allergen levels in the surrounding air.

- Touch the Auto mode button  to select Allergen mode.
↳ The  icon displays on the screen.

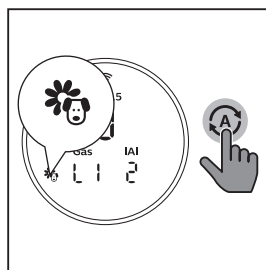

Changing the fan speed


In addition to the Auto modes, there are several fan speeds available.

When using the manual fan speed settings, the air purifier will still monitor the air quality, but it will not automatically adjust the fan speed if it detects changes in the air quality.

Sleep mode (☾)

In sleep mode, the air purifier operates quietly at a very low speed.

- Touch the fan speed button (⊗) to select the sleep mode.
 - ↳ The sleep mode indicator (☾) goes on.

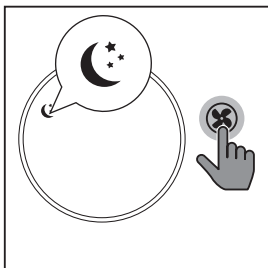


Manual

- Touch the fan speed button (⊗) repeatedly to select the fan speed you need:

~ (Speed 1)

≡ (Speed 2)

≡ (Speed 3)

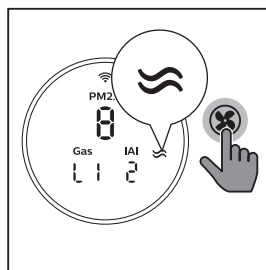




Tip

- If the air quality ring lights up blue, it indicates that the air quality is good, and you can select a lower fan speed. On the other hand, if the air quality ring lights up purple-red or red, it indicates that the air quality is unhealthy, and you can select a higher fan speed to purify the air more quickly.

Turbo


In Turbo mode, the air purifier operates on the highest speed.


- Touch the fan speed button  to select the Turbo mode.
 - ↳ The turbo speed indicator  goes on.

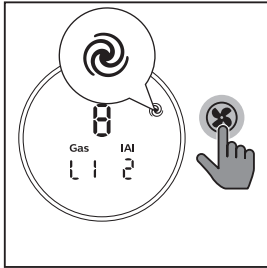


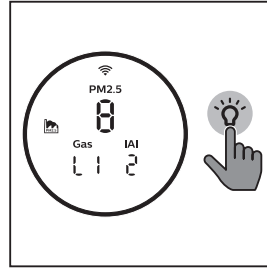
Using the light on/off function

With the light on/off button, you can switch on or off the air quality light, the display screen and the function indicator if desired.

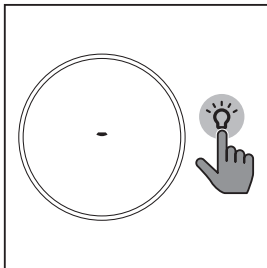

- 1 Touch the light on/off button  once, the air quality light will be off, the display panel will be dimmed with - displayed.






- 2 Touch the light on/off button  again, all lights will be on.



Setting the child lock

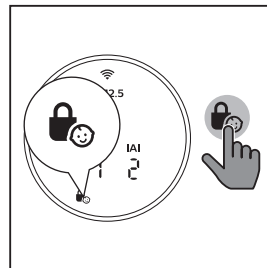- 1 Touch and hold the child lock button  for 3 seconds to activate child lock.
 - ↳ The child lock icon  displays on the screen.
 - ↳ When the child lock is on, all the other buttons are not responsive.



- 2 Touch and hold the child lock button  for 3 seconds again to deactivate child lock.
 - ↳ The child lock icon  disappears.



Note


- You can still control the appliance through the App even child lock is activated.

5 Cleaning

Note

- Always unplug the appliance before you clean it.
- Never immerse the appliance in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.
- Only the pre-filter is washable. The air purification filter is not washable nor vacuum cleanable.
- Do not attempt to clean the filters or air quality sensor with a vacuum.

Cleaning schedule

Frequency	Cleaning method
When necessary	Wipe the surface of the appliance with a soft dry cloth
	Clean the air outlet cover
Every two months	Clean the air quality sensor with a dry cotton swab
When the pre-filter cleaning indicator  lights up and FO displays on the screen	Clean the pre-filter


Cleaning the body of the air purifier

Regularly clean the inside and outside of the air purifier to prevent dust from collecting.


- 1 Use a soft, dry cloth to clean both the interior and exterior of the air purifier.
- 2 The air outlet can also be cleaned with a dry, soft cloth.

Cleaning the air outlet cover


- 1 To unlock the air outlet cover, grab the handle on the cover and pull the cover up.

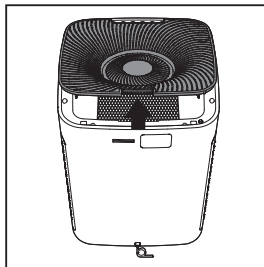

- 2 Clean the cover with a brush.

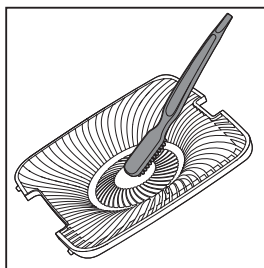

- 3 Reattach the cover properly.

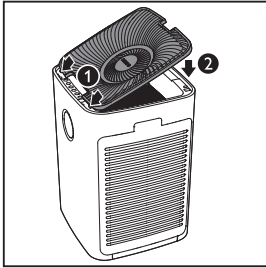


Cleaning the air quality sensor

Clean the air quality sensor every two months for optimal functioning of the appliance.


Note

- If the air purifier is used in a dusty environment, it may need to be cleaned more often.
- If the humidity level in the room is very high, condensation may develop on the air quality sensor and the air quality light may indicate a more poor air quality even though the air quality is actually good. If this occurs, clean the air quality sensor or use the air purifier on a manual speed setting.


- 1 Switch off the air purifier and unplug from the power socket.
- 2 Clean the inlet and outlet of the air quality sensor with a soft brush.

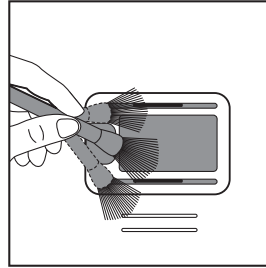

- 3 Open the air quality sensor cover.

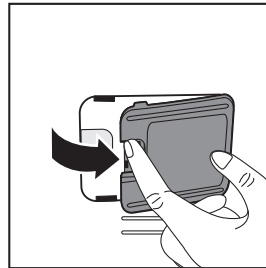


- 4 Clean the air quality sensor, the dust inlet and the dust outlet with a damp cotton swab.

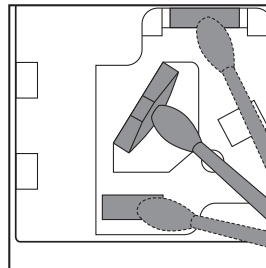


- 5 Dry all parts thoroughly with a dry cotton swab.


- 6 Reattach the air quality sensor cover.

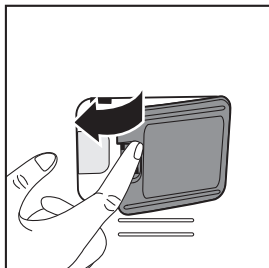


- 3 Press the two clips down and pull the pre-filter towards you.

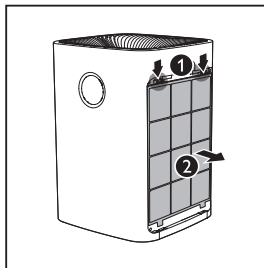


Cleaning the pre-filter


Clean the pre-filter when **F0** is displayed on the screen and the pre-filter cleaning alert  is on

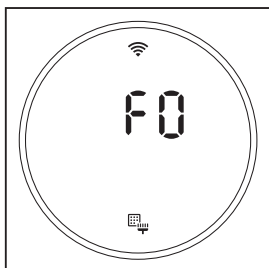


- 1 Switch off the air purifier and unplug from the power socket.
- 2 Pull the top part of the side panel to remove it from the air purifier.

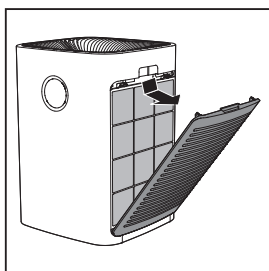

- 4 If the pre-filter is very dirty, use a soft brush to brush away the dust. Then wash the pre-filter under running tap water.

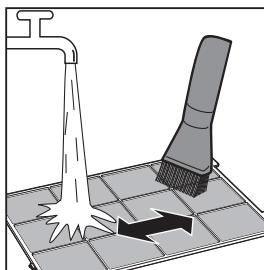

- 5 Allow the pre-filter to air dry thoroughly before placing back in the air purifier.
- 6 Put the pre-filter back into the air purifier.

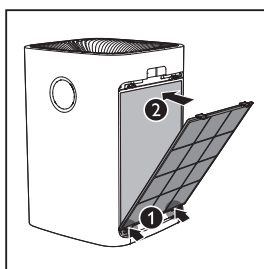






Note

- To optimize the lifetime of the pre-filter, make sure it air dries completely after cleaning.
- Wash your hands after handling the filter.
- Make sure the side with the two clips is pointing towards you, and that all hooks of the pre-filter are properly attached to the air purifier.

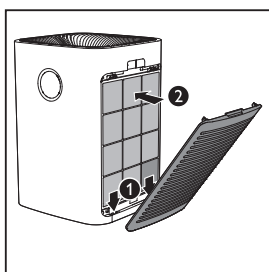
- 7 To reattach the side panel, mount the panel onto the bottom of the appliance first (1). Then, gently push the panel against the body of the appliance (2).



- 8 Put the plug of the air purifier in the wall outlet.
- 9 Touch the  button to switch on the appliance.
- 10 Touch and hold the reset button  for 3 seconds to reset the pre-filter cleaning time.
- 11 Wash your hands thoroughly after installing filters.

6 Replacing the filters

Filter replacement indicator


This air purifier is equipped with a filter replacement indicator to make sure that the air purification filter is in optimal condition when the air purifier is operating. When the filters need to be replaced, the filter code displays on the screen (see Filter alert chart) and the filter replacement alert () lights up.


If the filters are not replaced in time, the air purifier will stop operating and automatically lock to protect the air quality in the room. Replace the filters as soon as possible according to the filter code.

Replacing the filters

Note


- The filters are not washable or reusable.
- Always turn off the air purifier and unplug from the electrical outlet before replacing the filters.
- Do not clean the filters with a vacuum.
- If the pre-filter is damaged, worn or broken, do not use. Visit www.philips.com/support or contact the Consumer Care Center in your country.

Filter alert light status	Action
A3 displays on the screen and the filter replacement alert  goes on.	Replace the NanoProtect filter Pro S3 (FY6177)

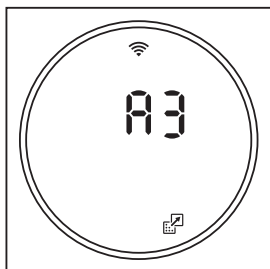

- 1 Turn off the air purifier and unplug from the power socket.
- 2 Take out the pre-filters on both sides of the appliance.


- 3 Take out the expired filters. Discard used filters.

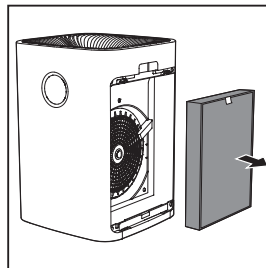


Note



- Do not touch the pleated filter surface, or smell the filter as it has collected pollutants from the air.

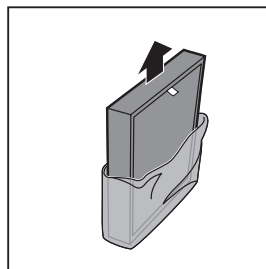- 4 Remove all packaging material of the new filters.

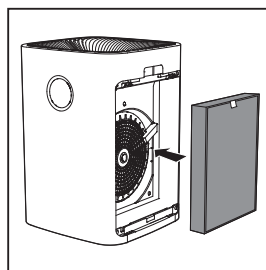

- 5 Place the new filters into the air purifier.



- 6 Put the plug of the air purifier in the power socket.
- 7 Touch the  button to switch on the appliance.
- 8 Touch and hold the reset button  for 3 seconds to reset the filter lifetime counter






Note


- Wash your hands after changing a filter.
- This air purifier has no other user-serviceable parts. For assistance, contact the Consumer Care Center in your country.


Filter force reset

You can replace filters even if there is no filter replacement code displayed on the screen. After replacing a filter, you need to reset the filter lifetime counter manually.


- 1 Touch  and  simultaneously for 3 seconds to enter the filter reset mode.
↳ Code (A3) of the NanoProtect filter Pro S3 displays on the screen.

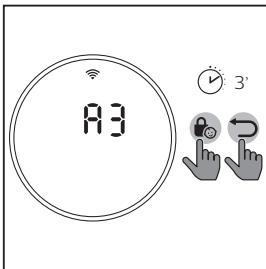


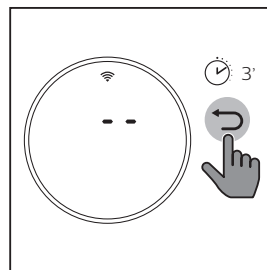
- 2 Touch and hold  for 3 seconds to force reset the filter lifetime counter.

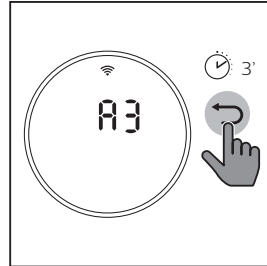



- 3 After the filter is reset, -- displays on the screen.

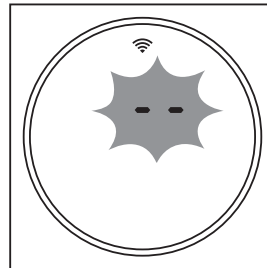



- 4 Touch and hold  for 3 seconds to exit the filter reset mode.




Changing filter type


- 1 Touch  and  simultaneously for 3 seconds to enter the filter type change mode.
↳ Code (A3) of the NanoProtect filter Pro S3 displays on the screen.

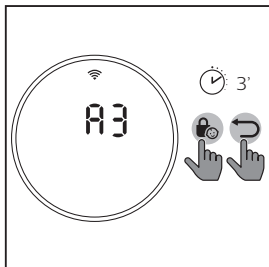


- 2 Touch  to select filter code of the new filter you will use.

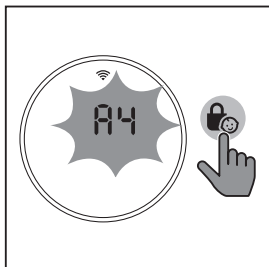


- 3 Touch and hold  for 3 seconds to confirm the filter code of the new filter.

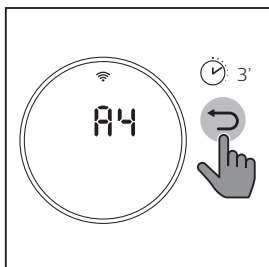




Note


- After you have selected the filter code of the new filter using the  button, if you do not touch any other buttons in 10 seconds, the appliance will automatically confirm the filter code of the new filter.

- 4 After the new filter code is confirmed, -- displays on the screen.

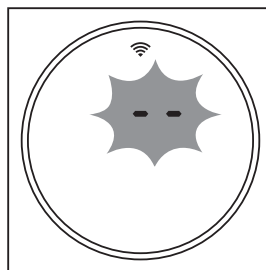


- ↳ If you have the second filter to change the filter type, tap  first to choose the new filter code, and then tap and hold  for 3 seconds to confirm the selection and exist the filter type change mode.

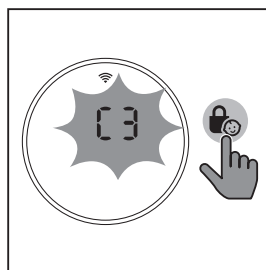

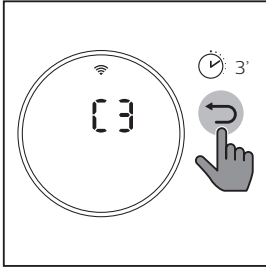

- ↳ if you don't have the second filter, just tap and hold for 3 seconds to confirm the filter code and exist the filter type change mode.

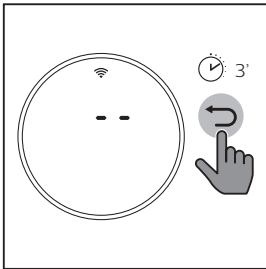

Note

- Refer to the separate leaflet that comes with the filter for more information on different filter combinations for your choice.

7 Storage

- 1 Turn off the air purifier and unplug from the power socket.
- 2 Clean the air purifier, air quality sensor and pre-filter (see chapter 'Cleaning').
- 3 Let all parts air dry thoroughly before storing.
- 4 Wrap the filters and pre-filter separately in air tight plastic bags.
- 5 Store the air purifier, filters and pre-filters in a cool, dry location.
- 6 Always thoroughly wash hands after handling filters.

8 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The appliance does not work even though it is plugged in.	<ul style="list-style-type: none">• Check if the top cover is properly installed.• The filter replacement light has been on continuously but you have not replaced the corresponding filter. As a result, the appliance is now locked. In this case, replace the filter and reset the filter lifetime counter.
The airflow that comes out of the air outlet is significantly weaker than before.	<ul style="list-style-type: none">• The pre-filter is dirty. Clean the pre-filter (see the chapter "Cleaning").
The air quality does not improve, even though the appliance has been operating for a long time.	<ul style="list-style-type: none">• Check if the packing material is removed from the filters.• One of the filters has not been placed in the appliance. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) NanoProtect filter Pro S3 (FY6177); 2) pre-filter.• The air quality sensor is wet. The humidity level in your room is high and causes condensation. Make sure that the air quality sensor is clean and dry (see the chapter "Cleaning").
The color of the air quality light always stays the same.	<ul style="list-style-type: none">• The air quality sensor is dirty. Clean the air quality sensor (see the chapter "Cleaning").

Problem	Possible solution
The appliance produces a strange smell.	<ul style="list-style-type: none"> The first few times you use the appliance, it may produce a plastic smell. This is normal. However, if the appliance produces a burnt smell even if removing filters, contact your Philips dealer or an authorized Philips service center. The filter may produce smell after being used for a while because of the absorption of indoor gases. It's recommended that you reactivate the filter by putting it in direct sunlight for repeated use. If odor still exists, replace the filter.
The appliance is extra loud.	<ul style="list-style-type: none"> If the appliance is too loud, you can change the fan speed to a lower fan speed level. When using the appliance in a bedroom at night, choose the silent speed.
The appliance still indicates that I need to replace a filter, but I already did.	<ul style="list-style-type: none"> Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then touch and hold the reset button (↶) for 3 seconds.
Error code "E1" displays on the screen.	<ul style="list-style-type: none"> The motor has malfunctions. Contact the Consumer Care Center in your country.
Error codes "E2", "E3", "E4" or "E5" displays on the screen.	<ul style="list-style-type: none"> The sensor has malfunctions. Contact the Consumer Care Center in your country.

Problem	Possible solution
The Wi-Fi setup is not successful.	<ul style="list-style-type: none"> • If the router your purifier is connected to is dual – band and currently it is not connecting to a 2.4GHz network, please switch to another band of the same router (2.4GHz) and try to pair your purifier again. 5GHz networks are not supported. • Web authentication networks are not supported. • Check if the purifier is within range of the Wi-Fi router. You can try to locate the air purifier closer to the Wi-Fi router. • Check if the network name is correct. The network name is case-sensitive. • Check if the Wi-Fi password is correct. The password is case-sensitive. • Retry the setup with the instructions in section "Wi-Fi connection". • The Wi-Fi connectivity can be interrupted by electromagnetic or other interferences. Keep the appliance away from other electronic devices that may cause interferences. • Check if the mobile device is in airplane mode. Make sure to have the airplane mode deactivated when connecting to the Wi-Fi network. • Consult the help section in the App for extensive and up-to-date troubleshooting tips.

9 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Center in your country, go to your local Philips dealer.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet).

10 Notices

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

产品 : 飞利浦智能空气净化器 AC6678
型号 : KJ700F-F05
额定电压 : 220V ~
额定频率 : 50Hz
额定输入功率 : 85 W
生产日期 : 请见产品本体
产地 : 中国广东广州



本设备包含型号EMW3080, 核准代码
CMIIT ID: 2017DP1516的无线发射模块

飞利浦家电(中国)投资有限公司
上海市静安区灵石路728弄20号201室
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.45-2008, 信部无【2002】353号制造

能源效率标识见机身能效标识。

具体性能指标参考机器铭牌。

产品中有害物质的名称及含量

部件名称 (parts name)	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电源电路板	×	×	×	○	○	○
主控制电路板	×	○	○	○	○	○
按键电路板	×	○	○	○	○	○
Wi-Fi 电路板	×	○	○	○	○	○
<p>本表格依据SJ/T 11364的规定编制。</p> <p>○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。</p> <p>× 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。</p>						

*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

保留备用

出版日期：2023-02-08



© 2023 Philips Domestic Appliances Holding B.V.
保留所有权利。

3000.082.9811.2 (08/02/2023)

